

# INDEX

## INDEX - Alphabetical Listing of Electrical Circuits

	SCHEMATIC	COMPONENT LOCATION
Air Conditioning .....	122	201
Automatic Antenna .....	127	202
Auxiliary Fan .....	122	201
Charging System .....	108	202
Cigar Lighter .....	127	202
Clock .....	119	206
Cruise Control .....	112	205
Fuse Information .....	102	
Gauges .....	118	206
Ground Distribution .....	129	
Heated Seats .....	128	203
Heater .....	122	201
Horns .....	125	203
Lights		
—Backup .....	115	201
—Center Console .....	117	201
—Courtesy .....	116	202
—Fog Lights .....	109	202
—Glove Box .....	115	201
—Hazard .....	114	205
—Headlights .....	109	202

	SCHEMATIC	COMPONENT LOCATION
Lights (continued)		
—Instrument Cluster .....	119	206
—License .....	111	203
—Marker .....	111	203
—Park .....	110	203
—Stop .....	112	205
—Tail .....	110	203
—Turn Signal .....	114	205
—Trunk .....	111	203
Power Distribution .....	104	204
Power Windows .....	126	204
Pre-Glow System .....	106	204
Radio .....	127	202
Rear Defogger .....	124	204
Sliding Roof .....	125	203
Start/Stop (Ignition Switch) .....	107	205
Transmission Kickdown .....	115	201
Warning Indicators .....	118	206
Warning System .....	120	206
Wiper/Washer .....	121	206


## FUSE-CIRCUIT LIST

Fuse		Circuits Protected	Page
No.	Amps (Color)		
1	8(WT)	Center Console Illumination	117
		Instrument Cluster Illumination	119
		Lights: Marker/License	111
		Lights: Park/Tail (RH)	110
		Warning System	120
2	8(WT)	Automatic Antenna	127
		Clock	119
		Courtesy Lights	116
		Hazard Lights	114
		Trunk Light	111
		Warning System	120
3	8(WT)	Lights: Park/Tail (LH)	110
4	8(WT) 16(PK)*	Cigar Lighter	127
		Glove Box Light	115
		Radio	128
		*With Heated Seats (Front)	
5		Not Used	
6	16(PK)	Headlights	109
		Wiper/Washer	121
7	8(WT)	Headlights (RH High Beam)	109
8	16(PK)	Air Conditioning/Heater	124
			128
9	8(WT)	Headlights (LH High Beam)	109
10	16(PK) 25(BU)*	Rear Defogger	
		*With Heated Seats (Rear)	122
11	16(PK)	Headlights (RH Low Beam)/Fog Lights	109

Fuse		Circuits Protected	Page
No.	Amps (Color)		
12	8(WT)	Auxiliary Fan	122
		Lights: Turn Signal/Hazard	114
		Power Windows	126
		Stoplights/Cruise Control	112
		Warning Indicators/Gauges	118
13	8(WT)	Headlights (LH Low Beam)	109
14	8(WT)	Backup Lights/Transmission Kickdown	115
		Horns	125
		Warning System	120
a	16(PK)	Power Windows	126
b	16(PK)	Power Windows	126
c	16(PK)	Auxiliary Fan	122
d	16(PK)	Sliding Roof	125
	2(GLASS)	Radio (Part of Radio)	127
	80	Pre-Glow System (Part of Pre-Glow Relay)	106

102  
240  
D

# FUSE BOX

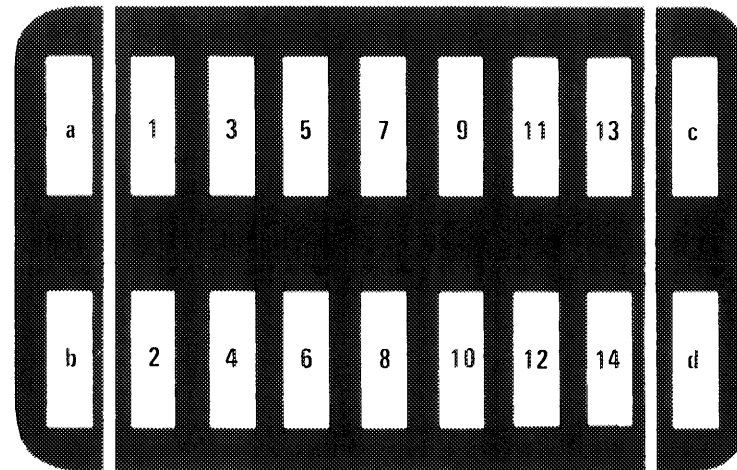

## FUSE BOX


(AS MOUNTED NEAR BRAKE BOOSTER)

RELAY CODE	RELAY USE
10	Window Relay
12	A/C Relay
6	Auxiliary Fan Relay

# POWER DISTRIBUTION

(For Component Locations See Page 204)


104  
240  
0

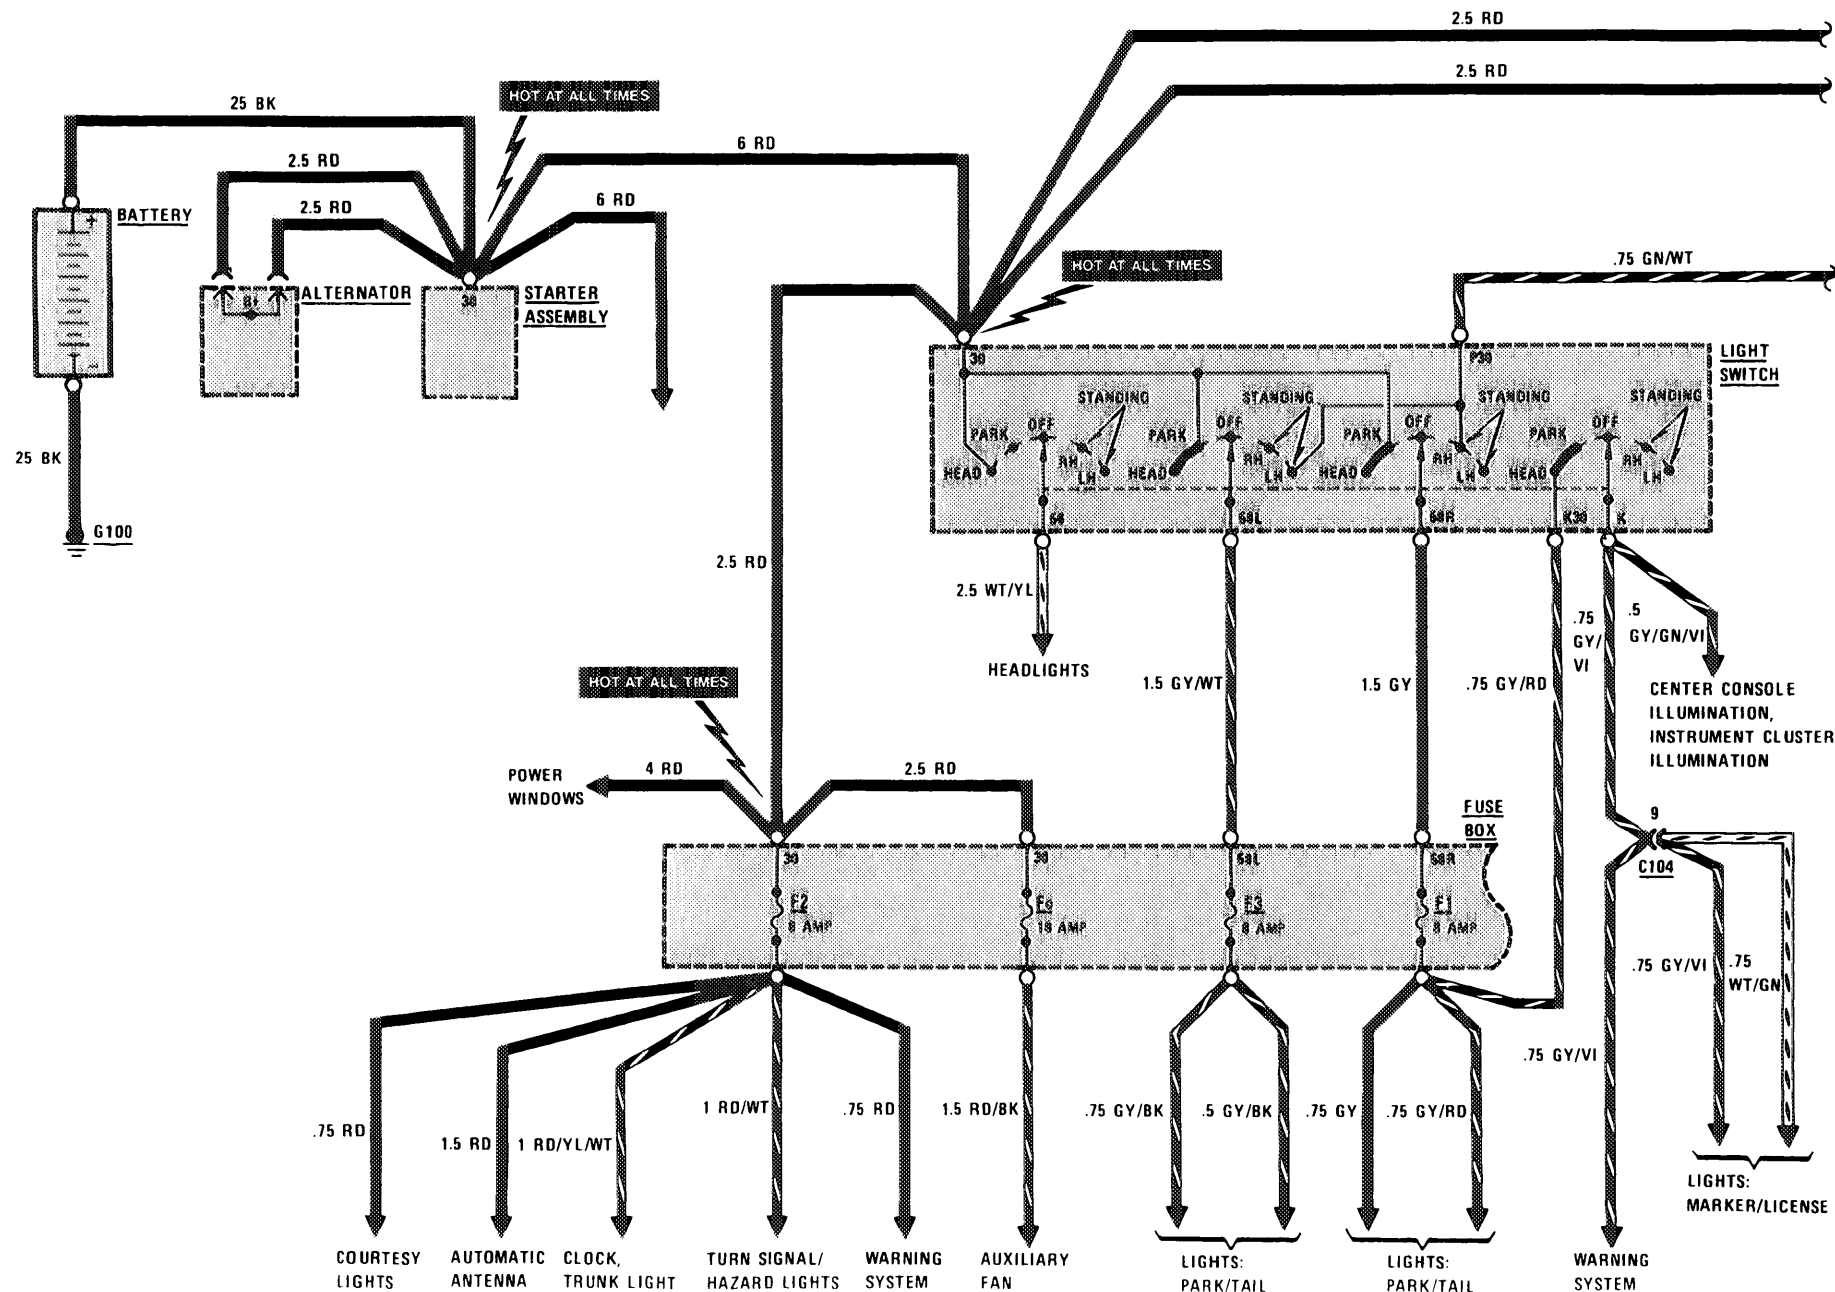

# POWER DISTRIBUTION

(For Component Locations See Page 204)


105  
240  
D

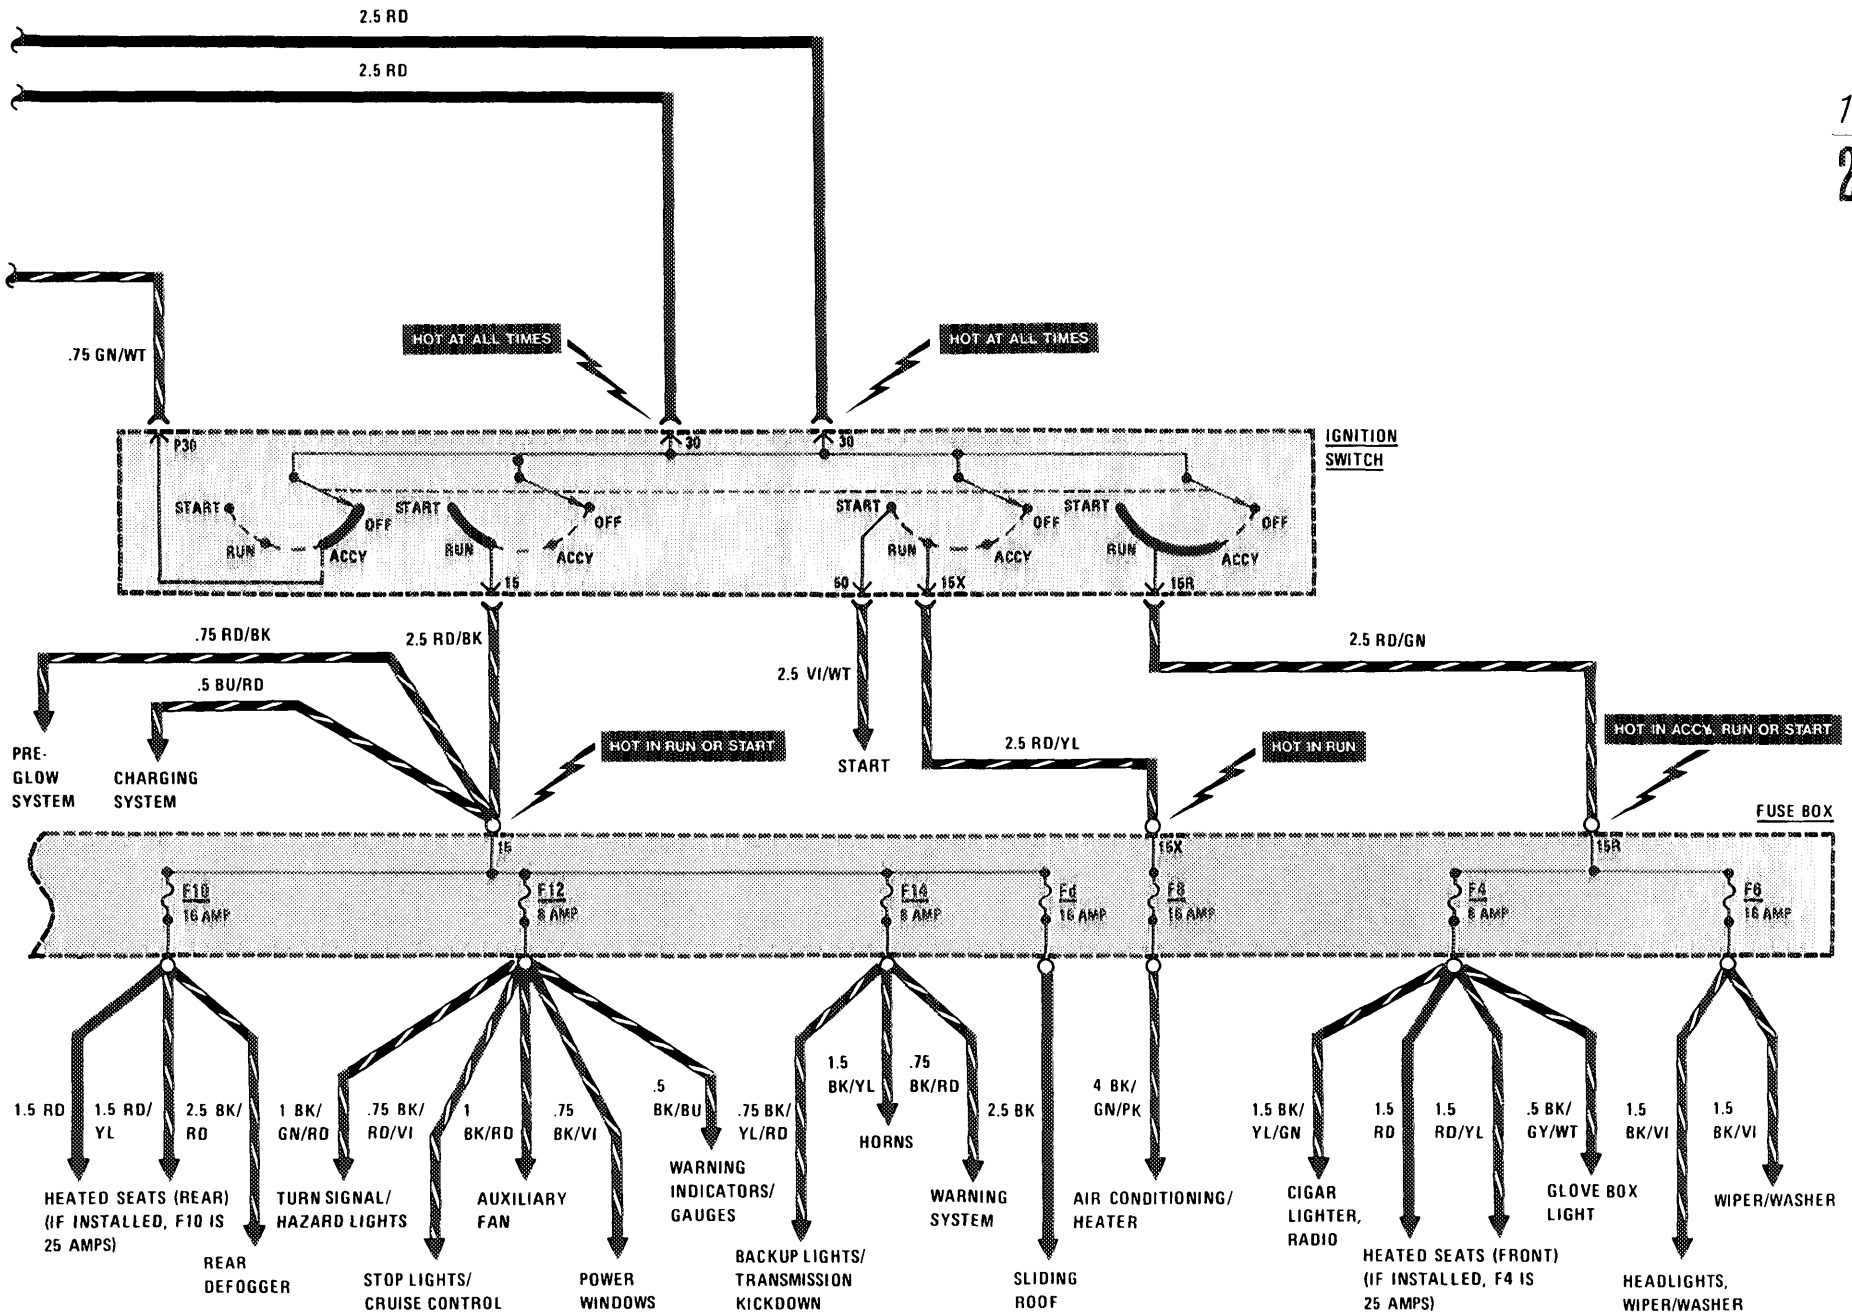

# PRE-GLOW SYSTEM

(For Component Locations See Page 204)

106  
240  
0

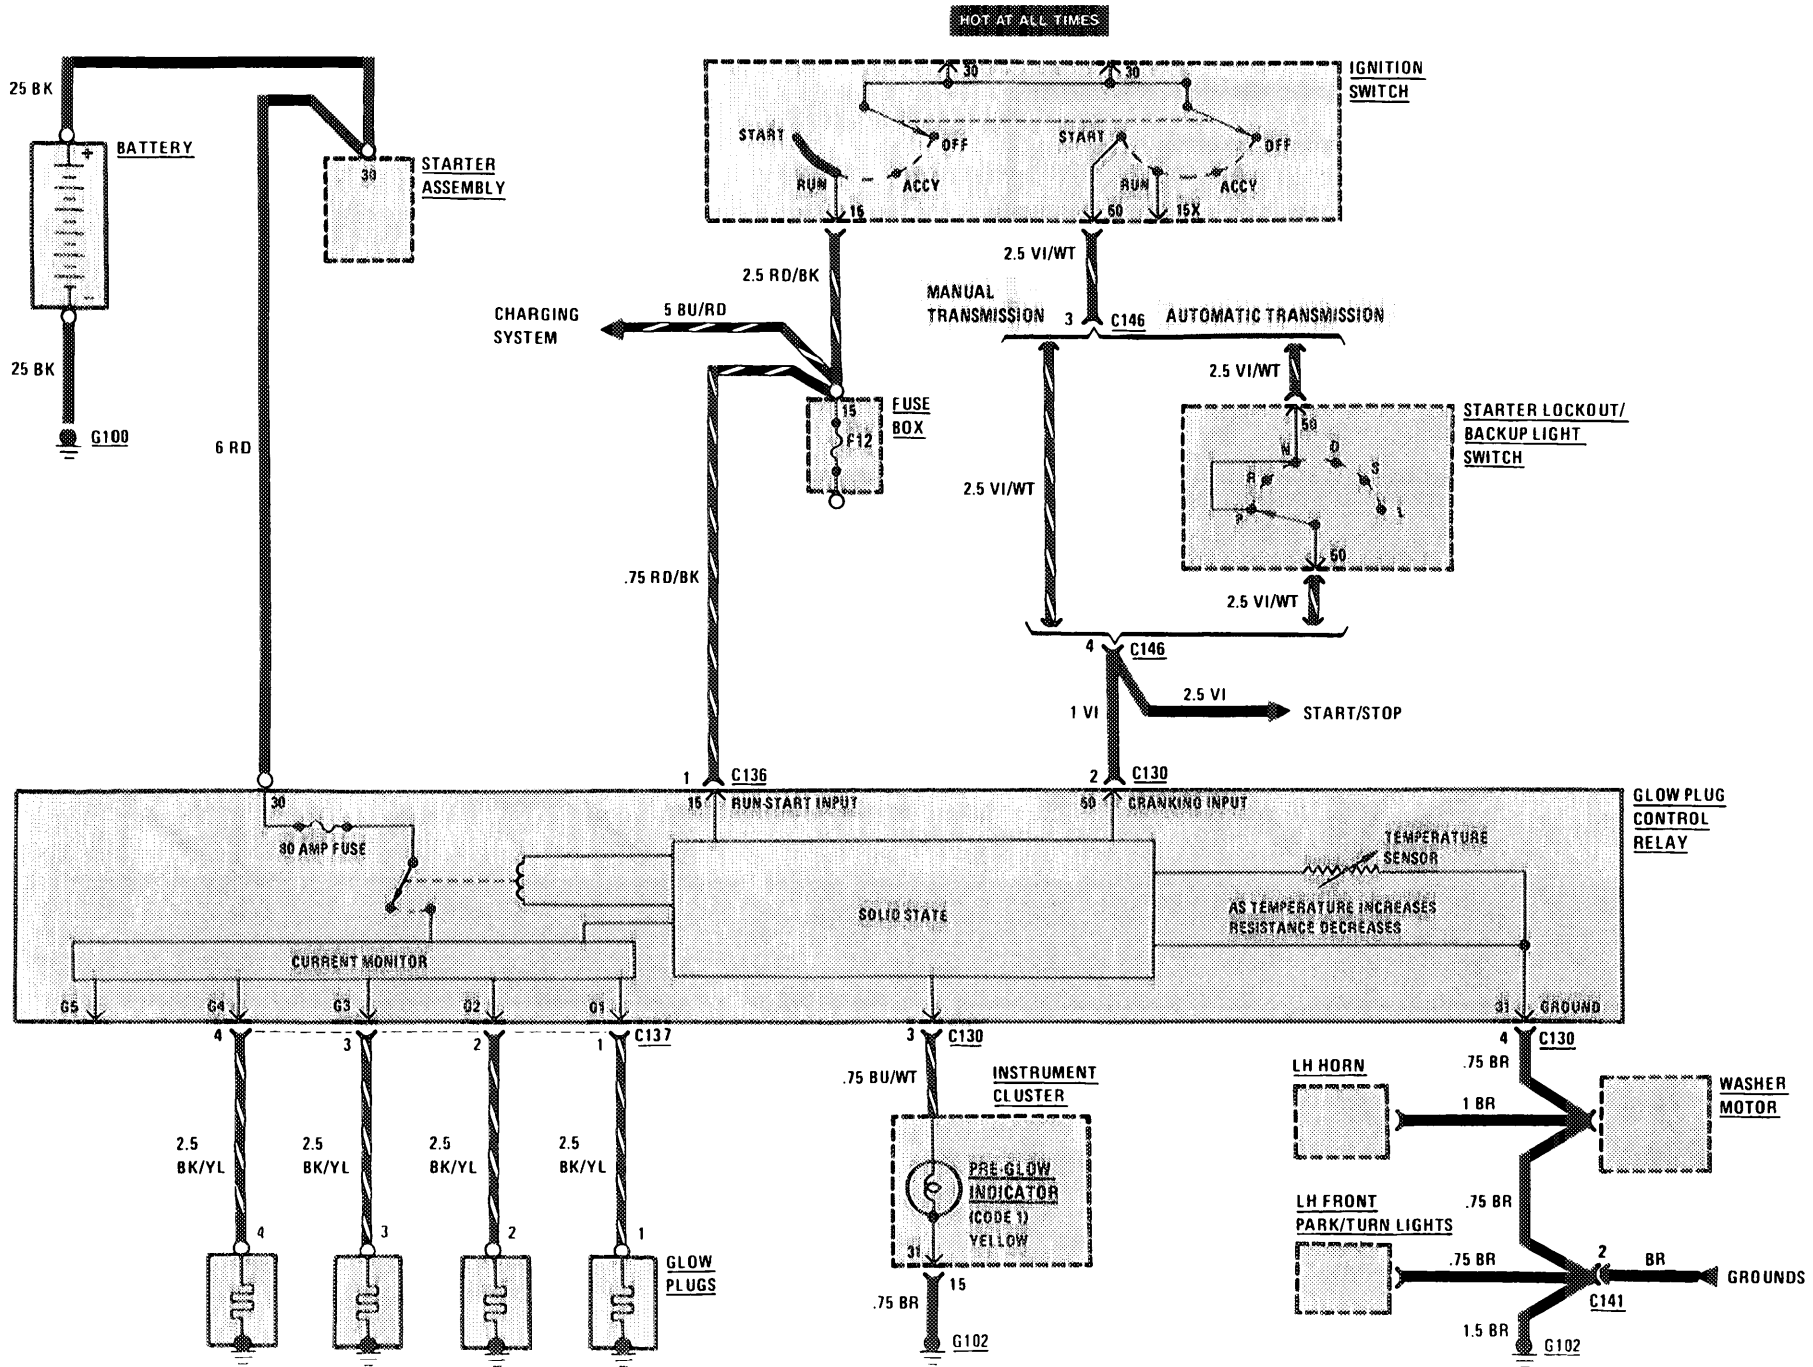




# CHARGING SYSTEM

(For Component Locations See Page 202)


108  
240  
0

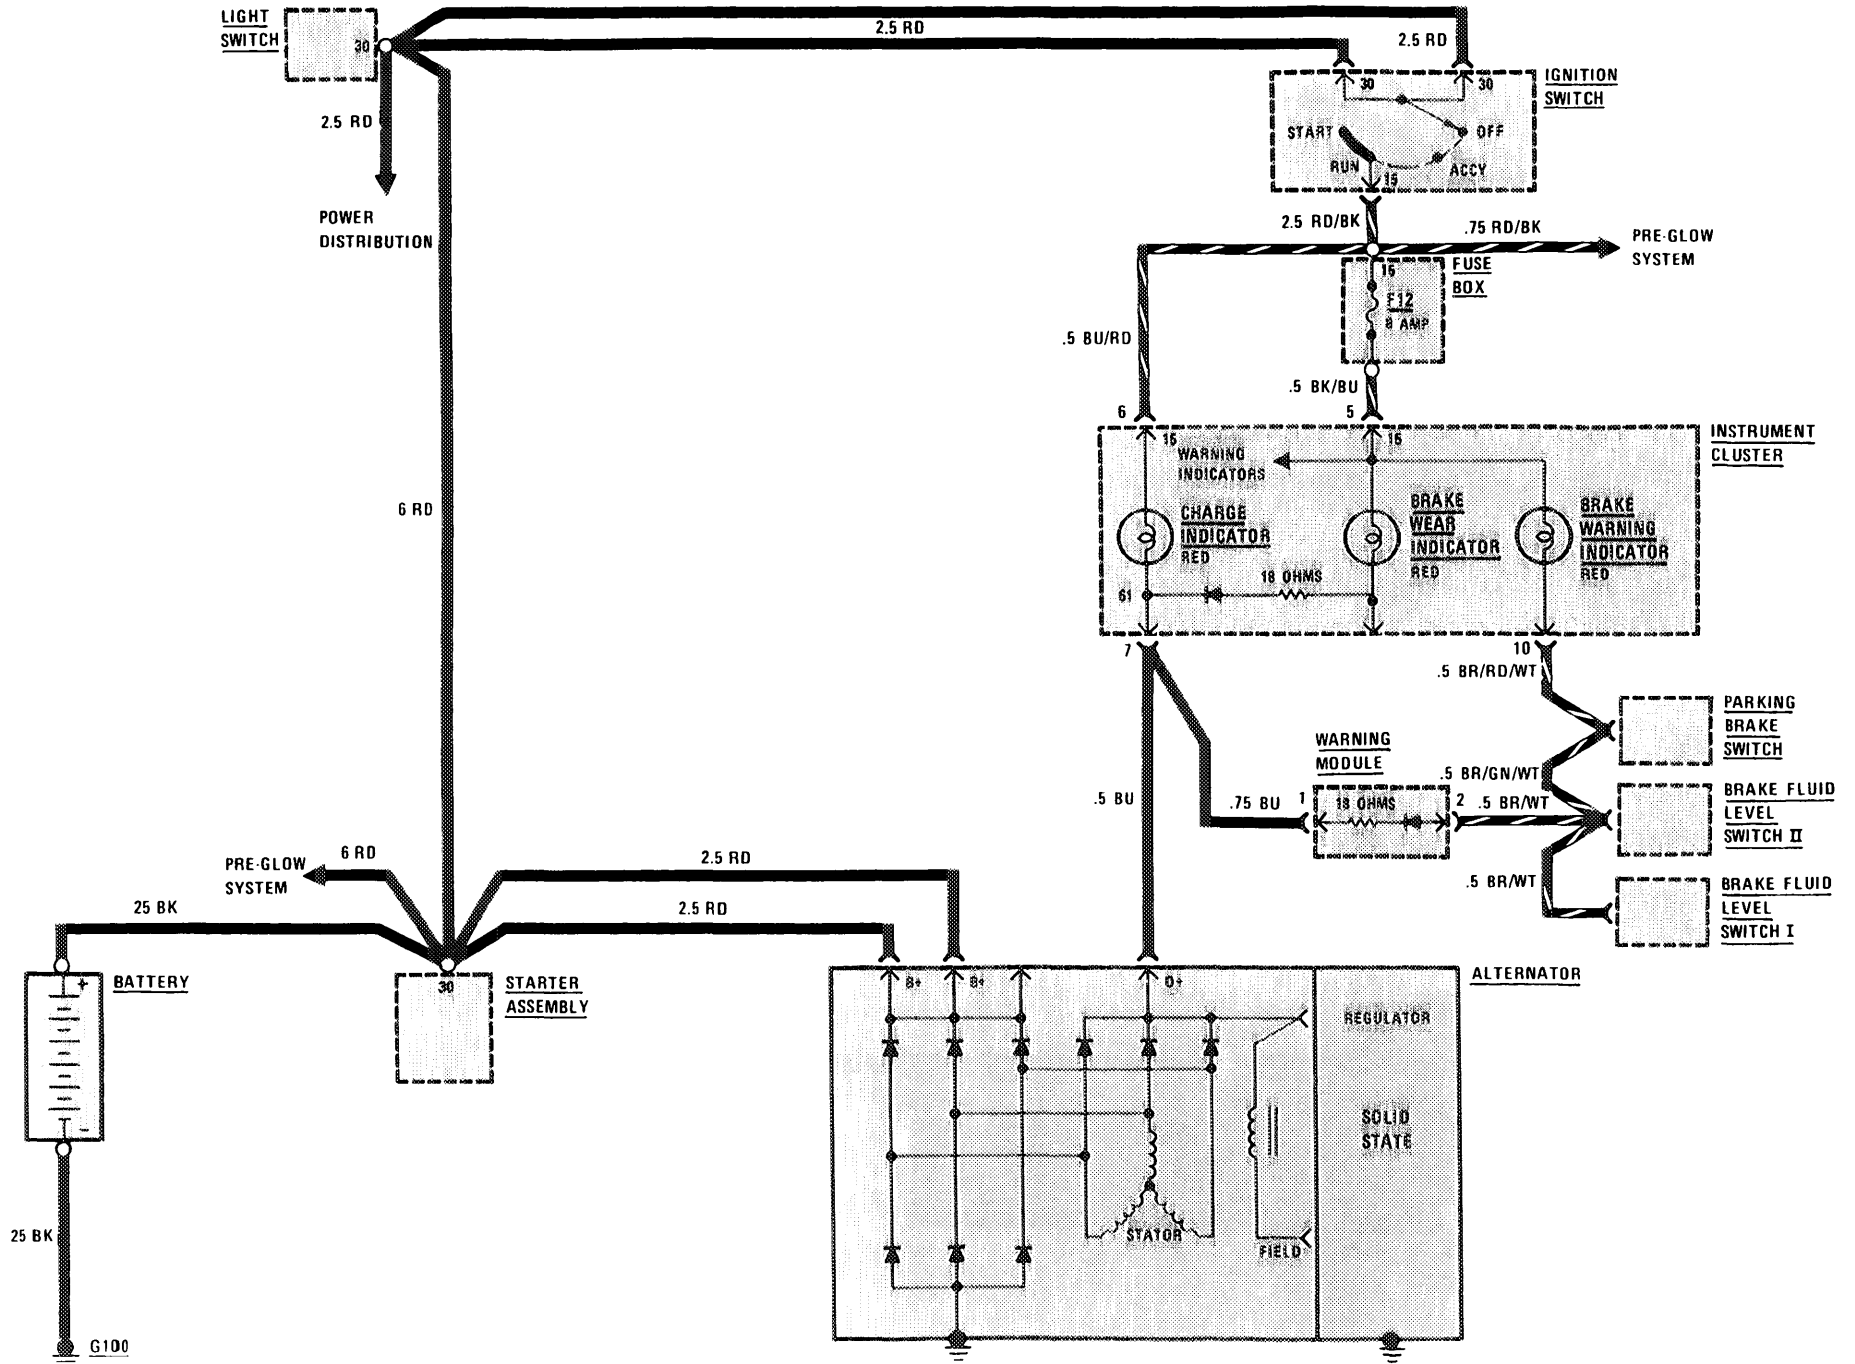



# HEADLIGHTS/FOG LIGHTS

(For Component Locations See Page 202)

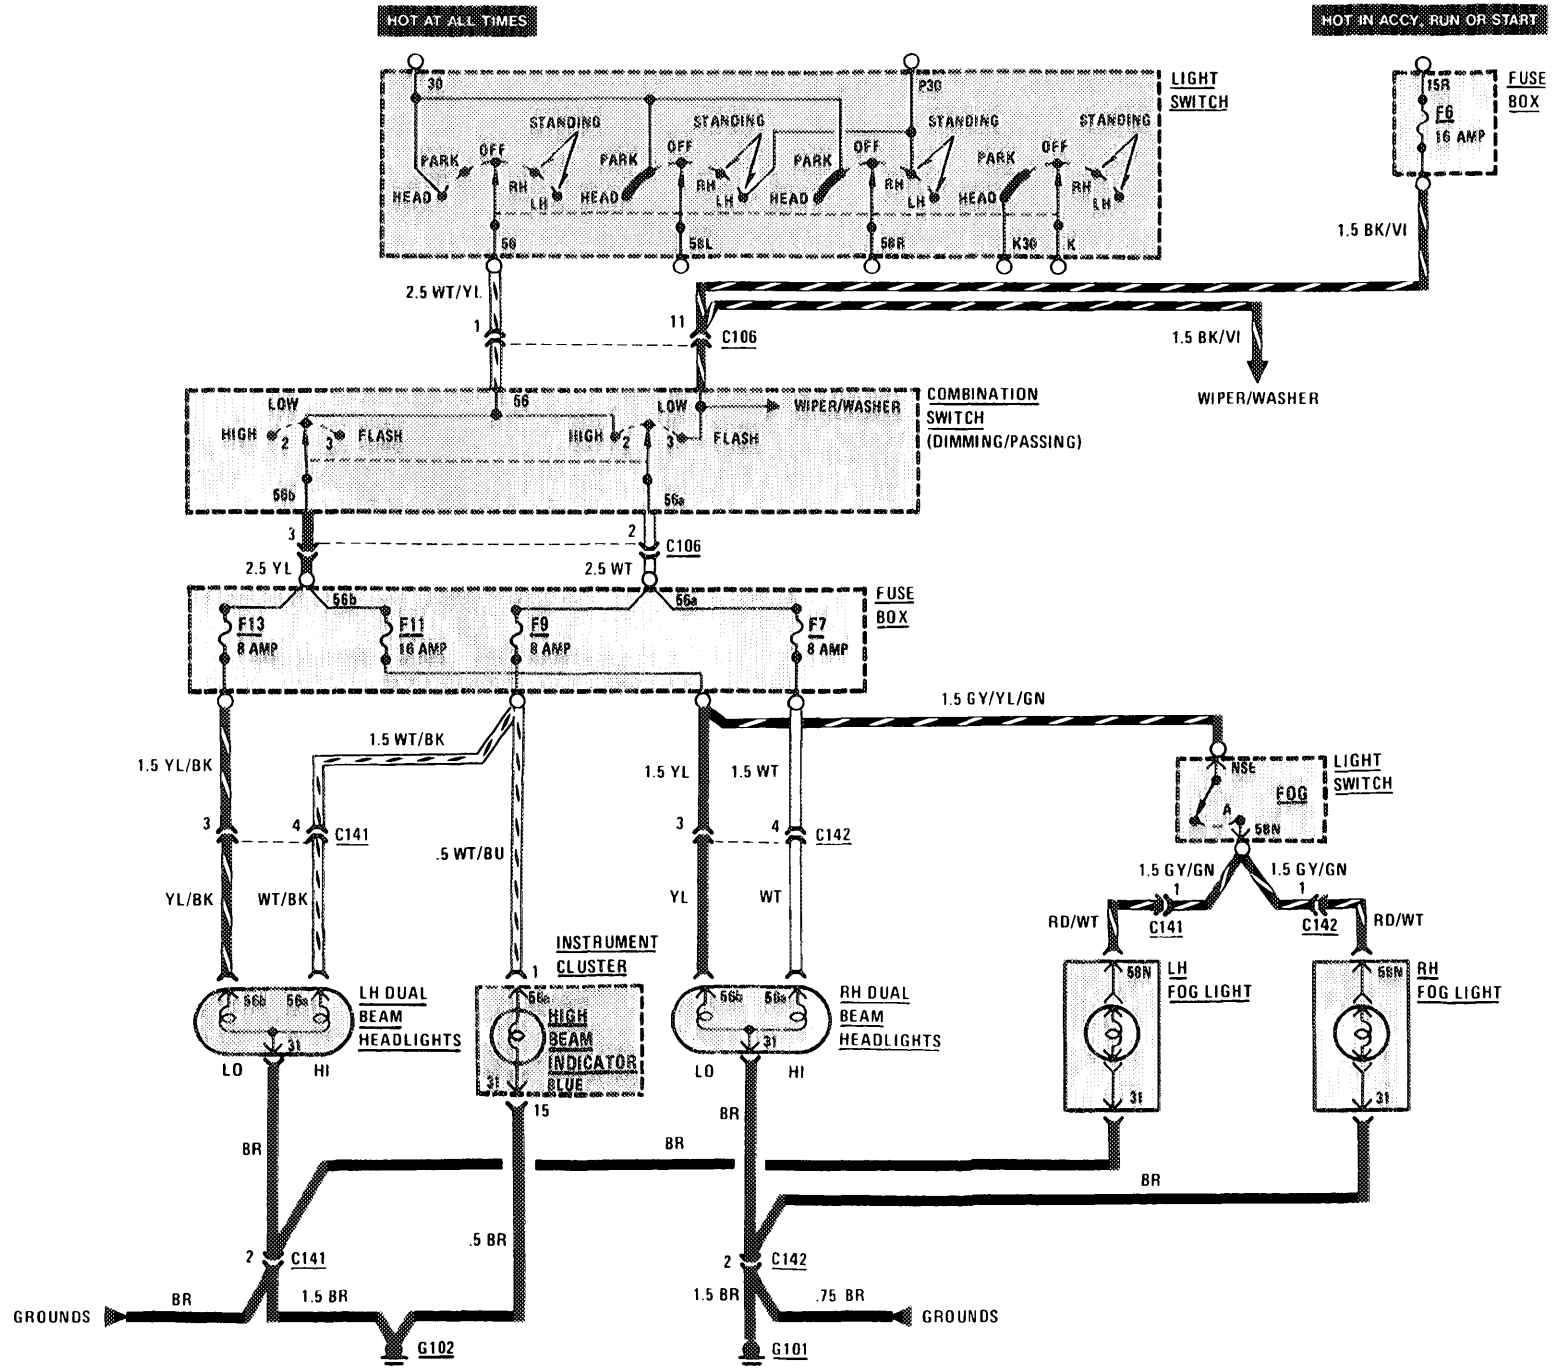


109  
240  
D

# LIGHTS: PARK/TAIL


(For Component Locations See Page 203)

110  
240  
0

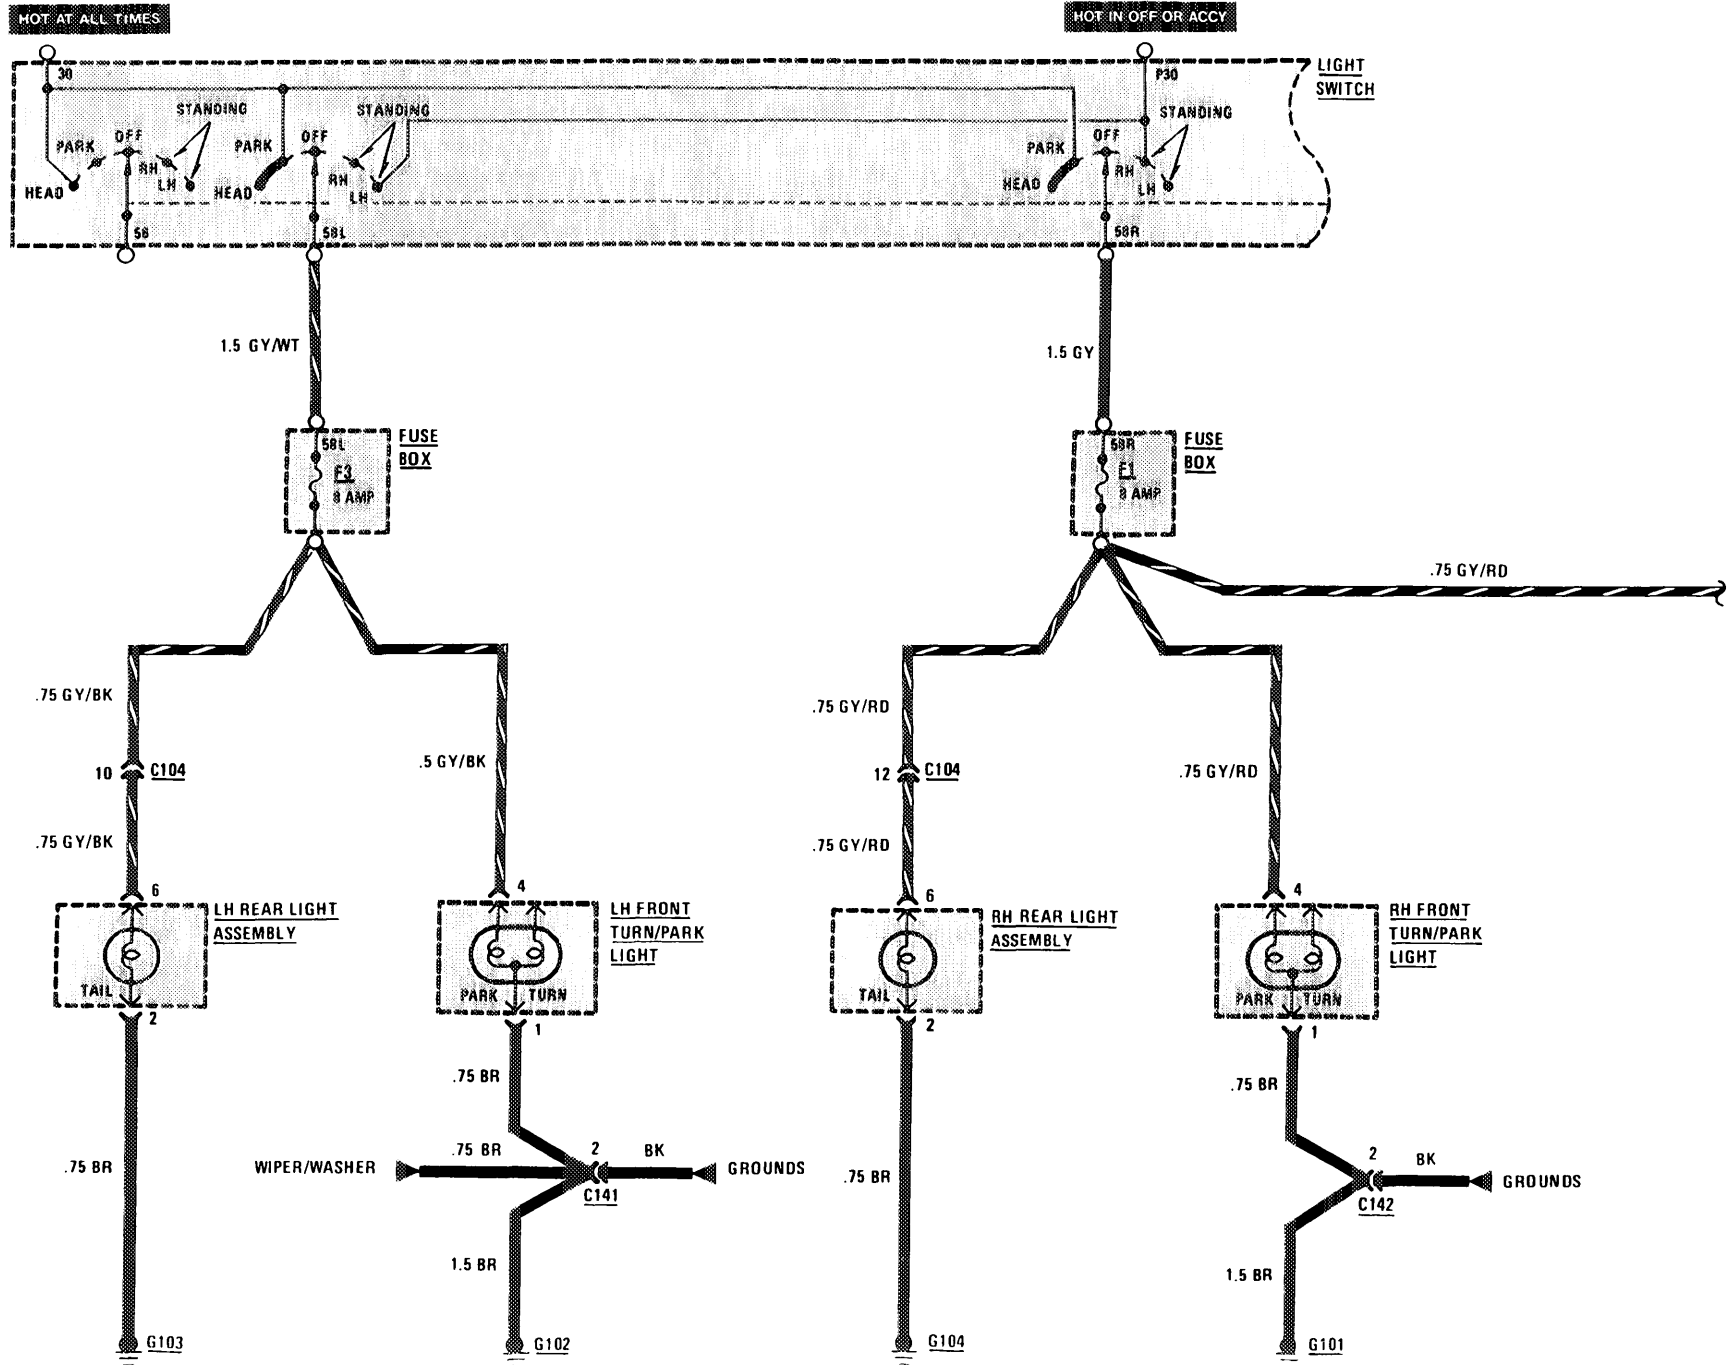

# LIGHTS: MARKER/LICENSE/TRUNK

(For Component Locations See Page 203)

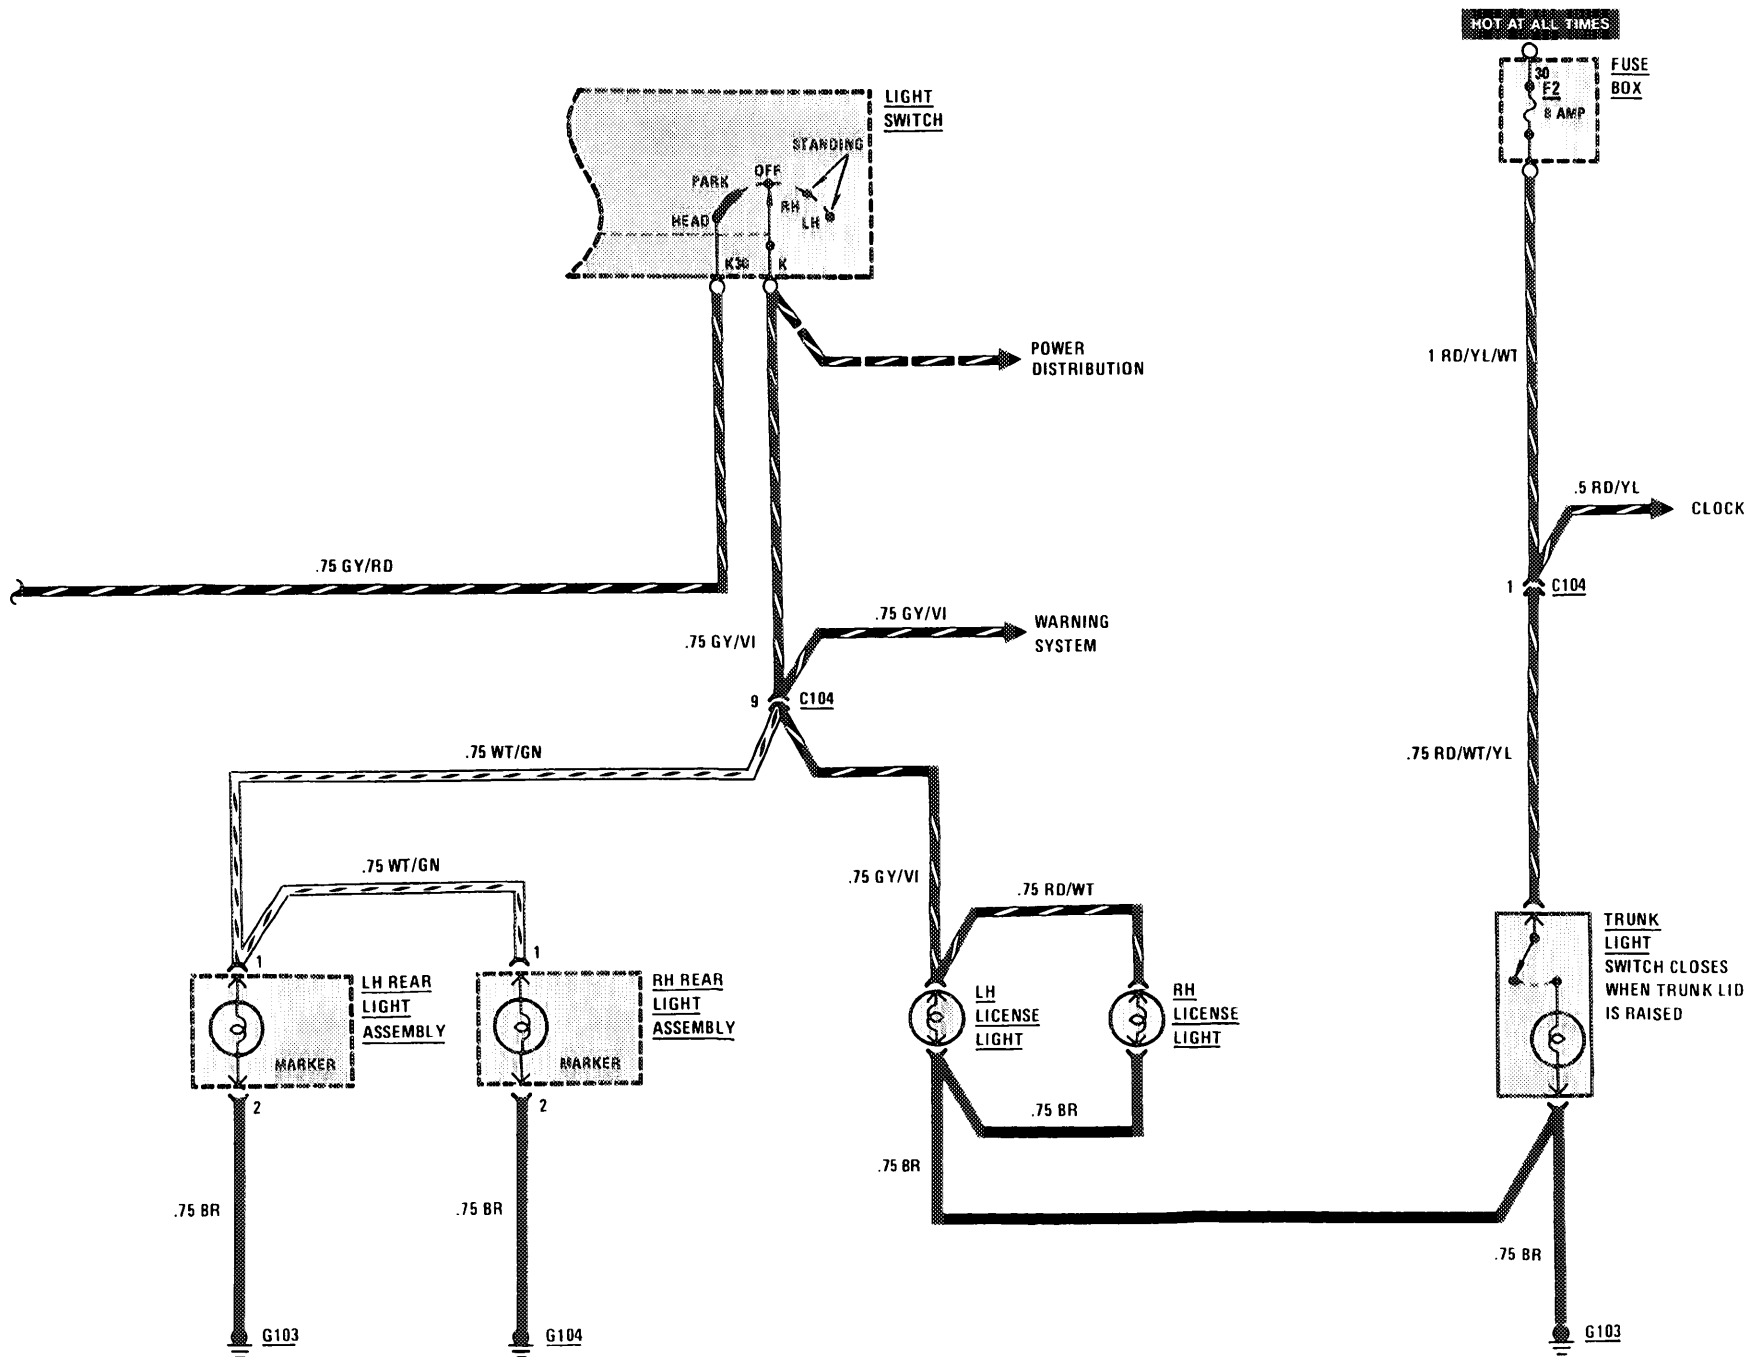

111  
240  
D






# TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 205)

114  
240  
0

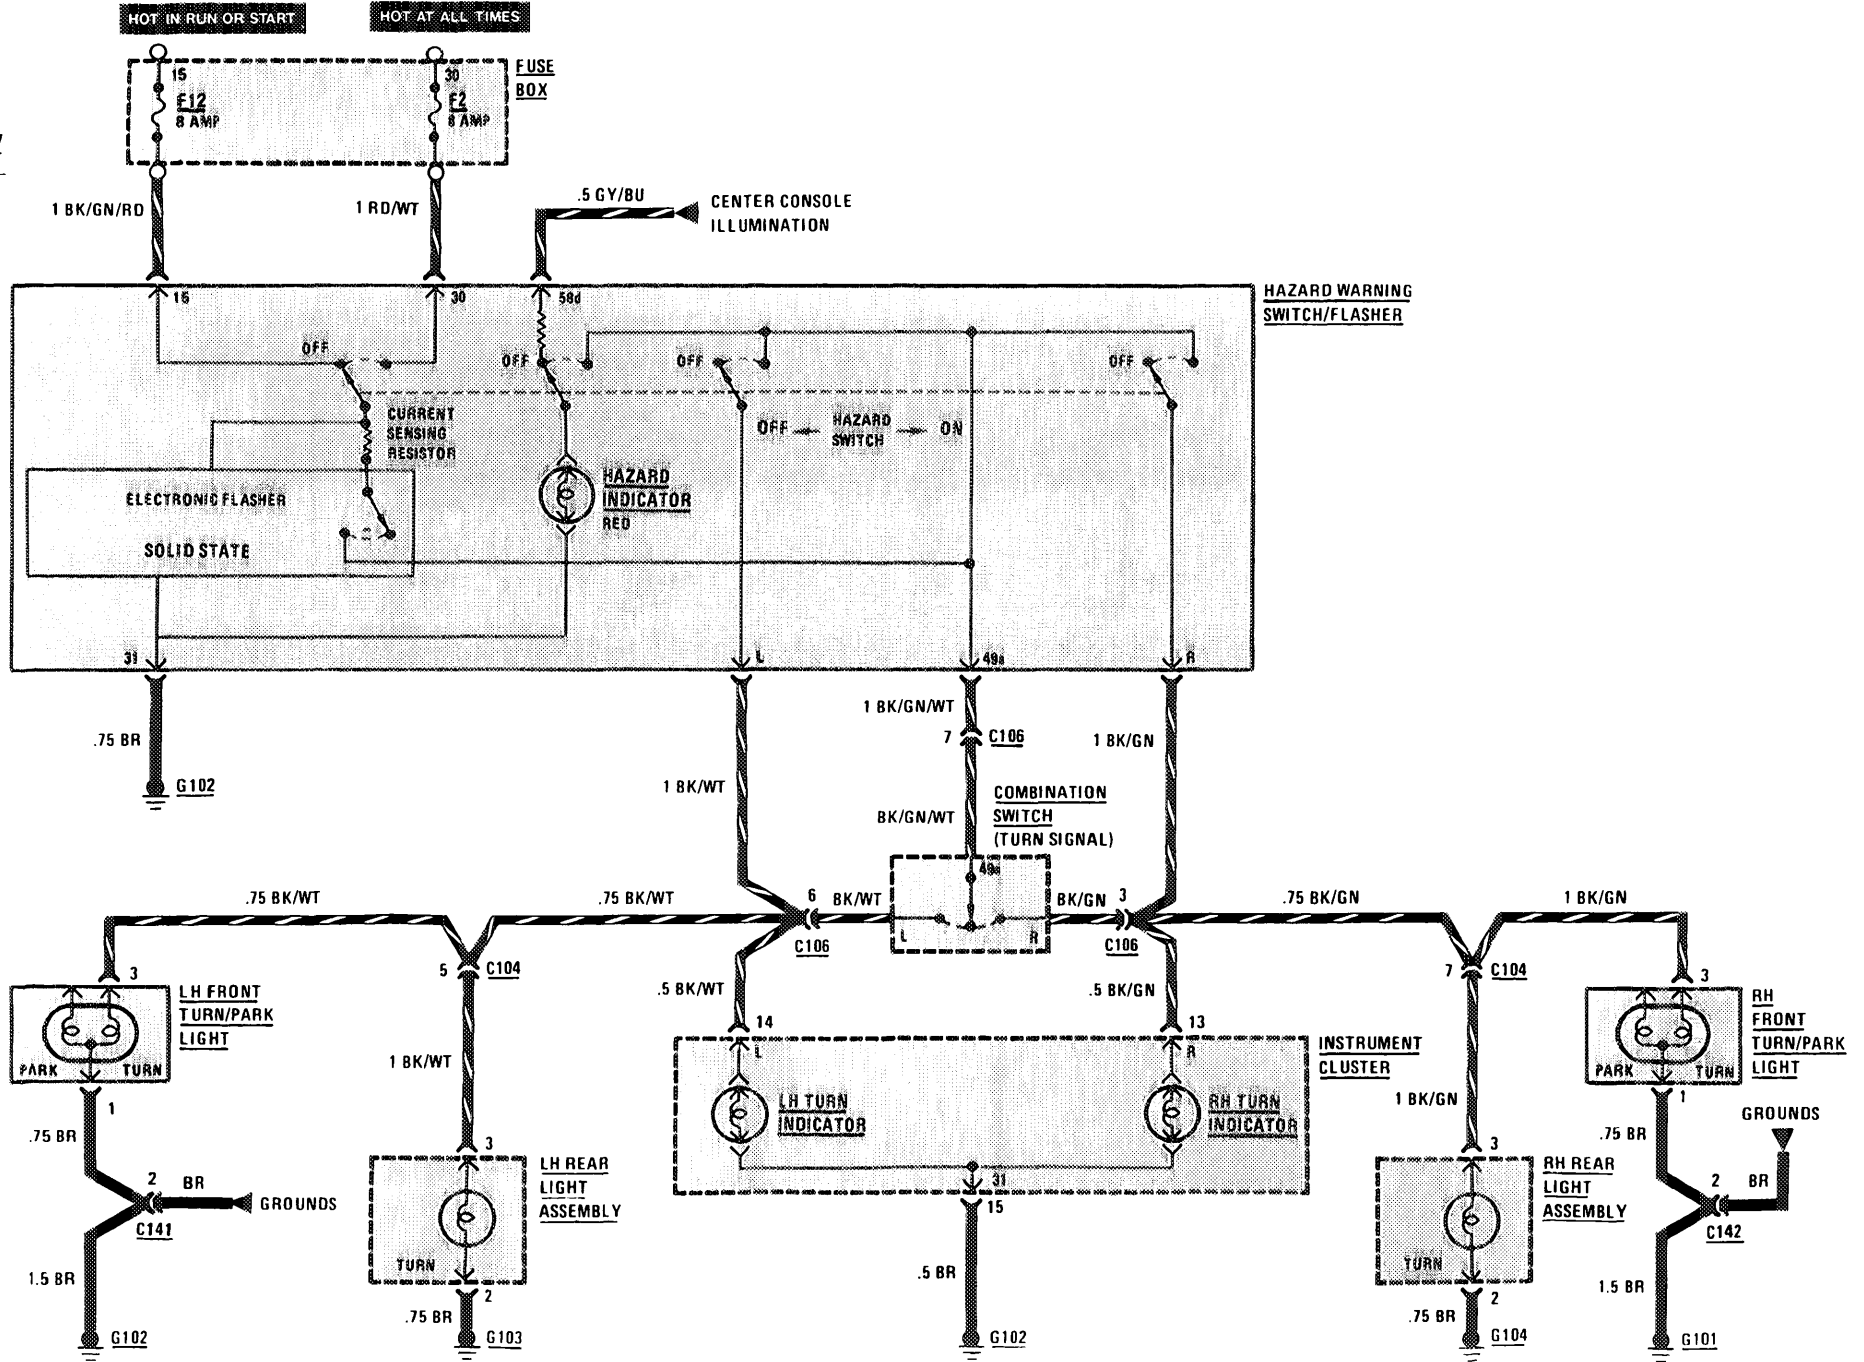




# COURTESY LIGHTS

(For Component Locations See Page 202)


116  
240  
D

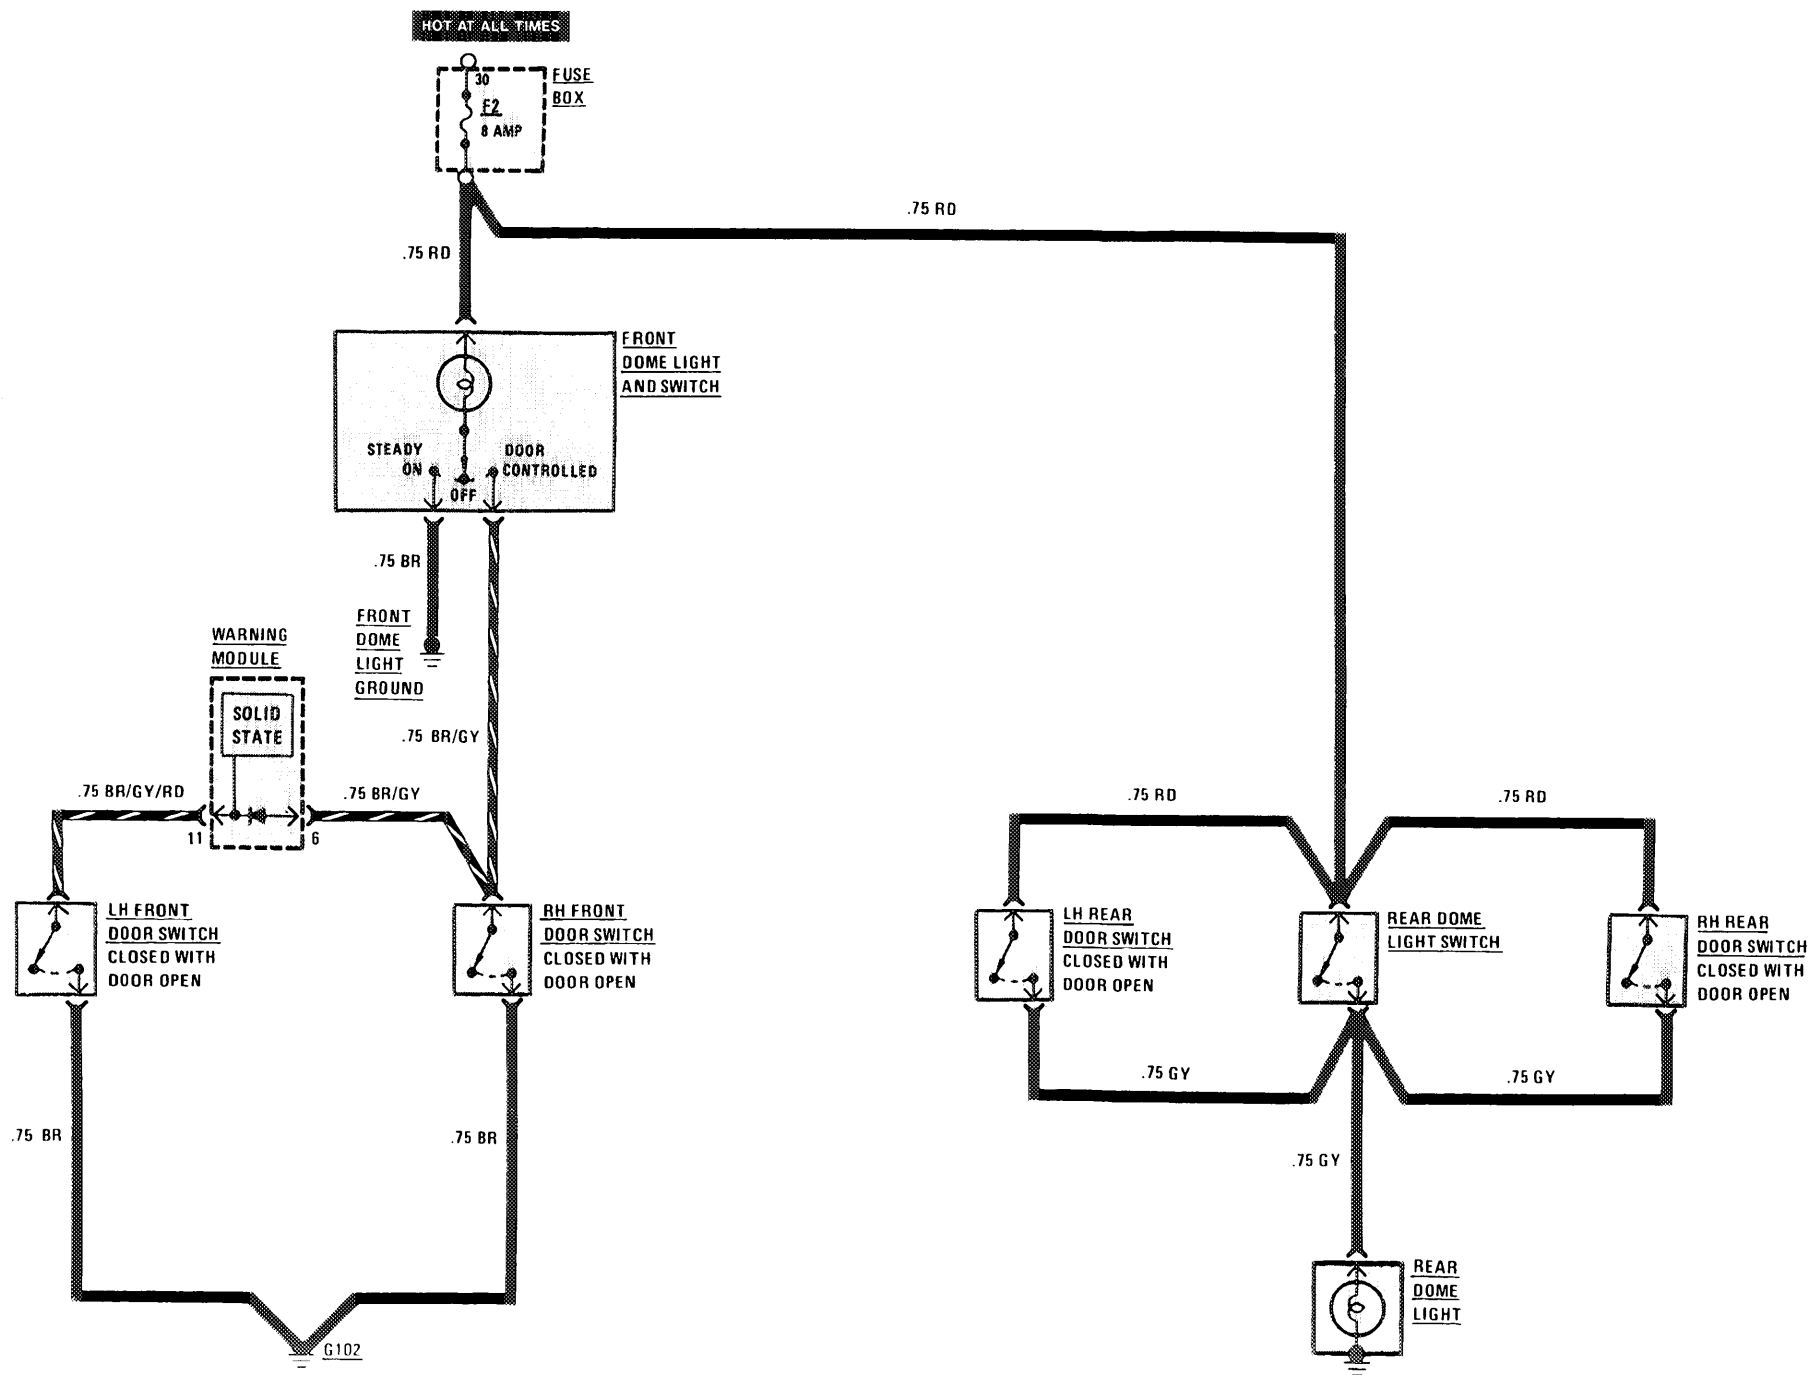



# CENTER CONSOLE ILLUMINATION

(For Component Locations See Page 201)

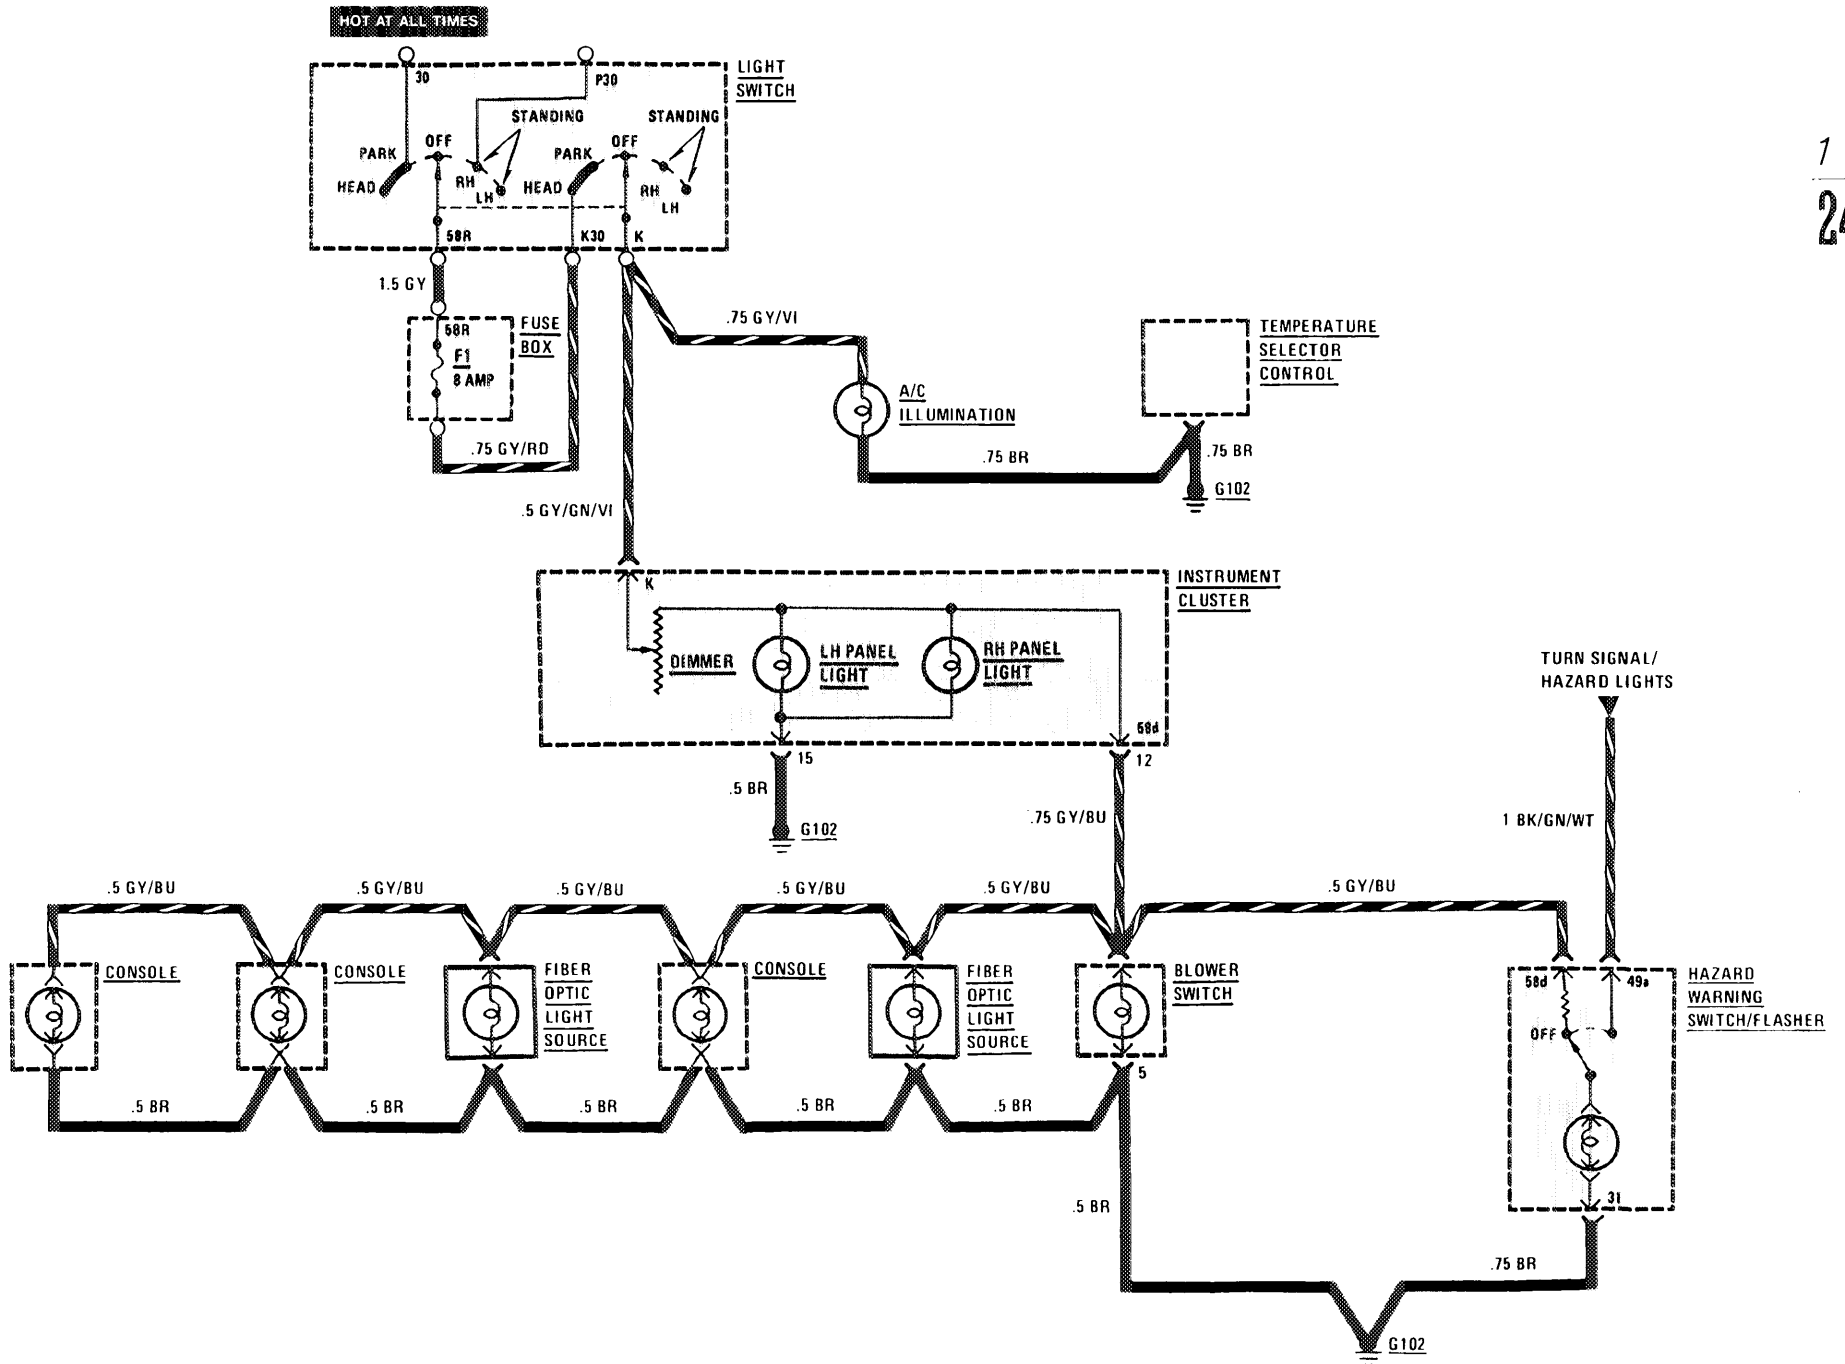


117  
240  
D

# WARNING INDICATORS/GAUGES/CLOCK/ INSTRUMENT CLUSTER ILLUMINATION


(For Component Locations See Page 206)

118  
240  
0

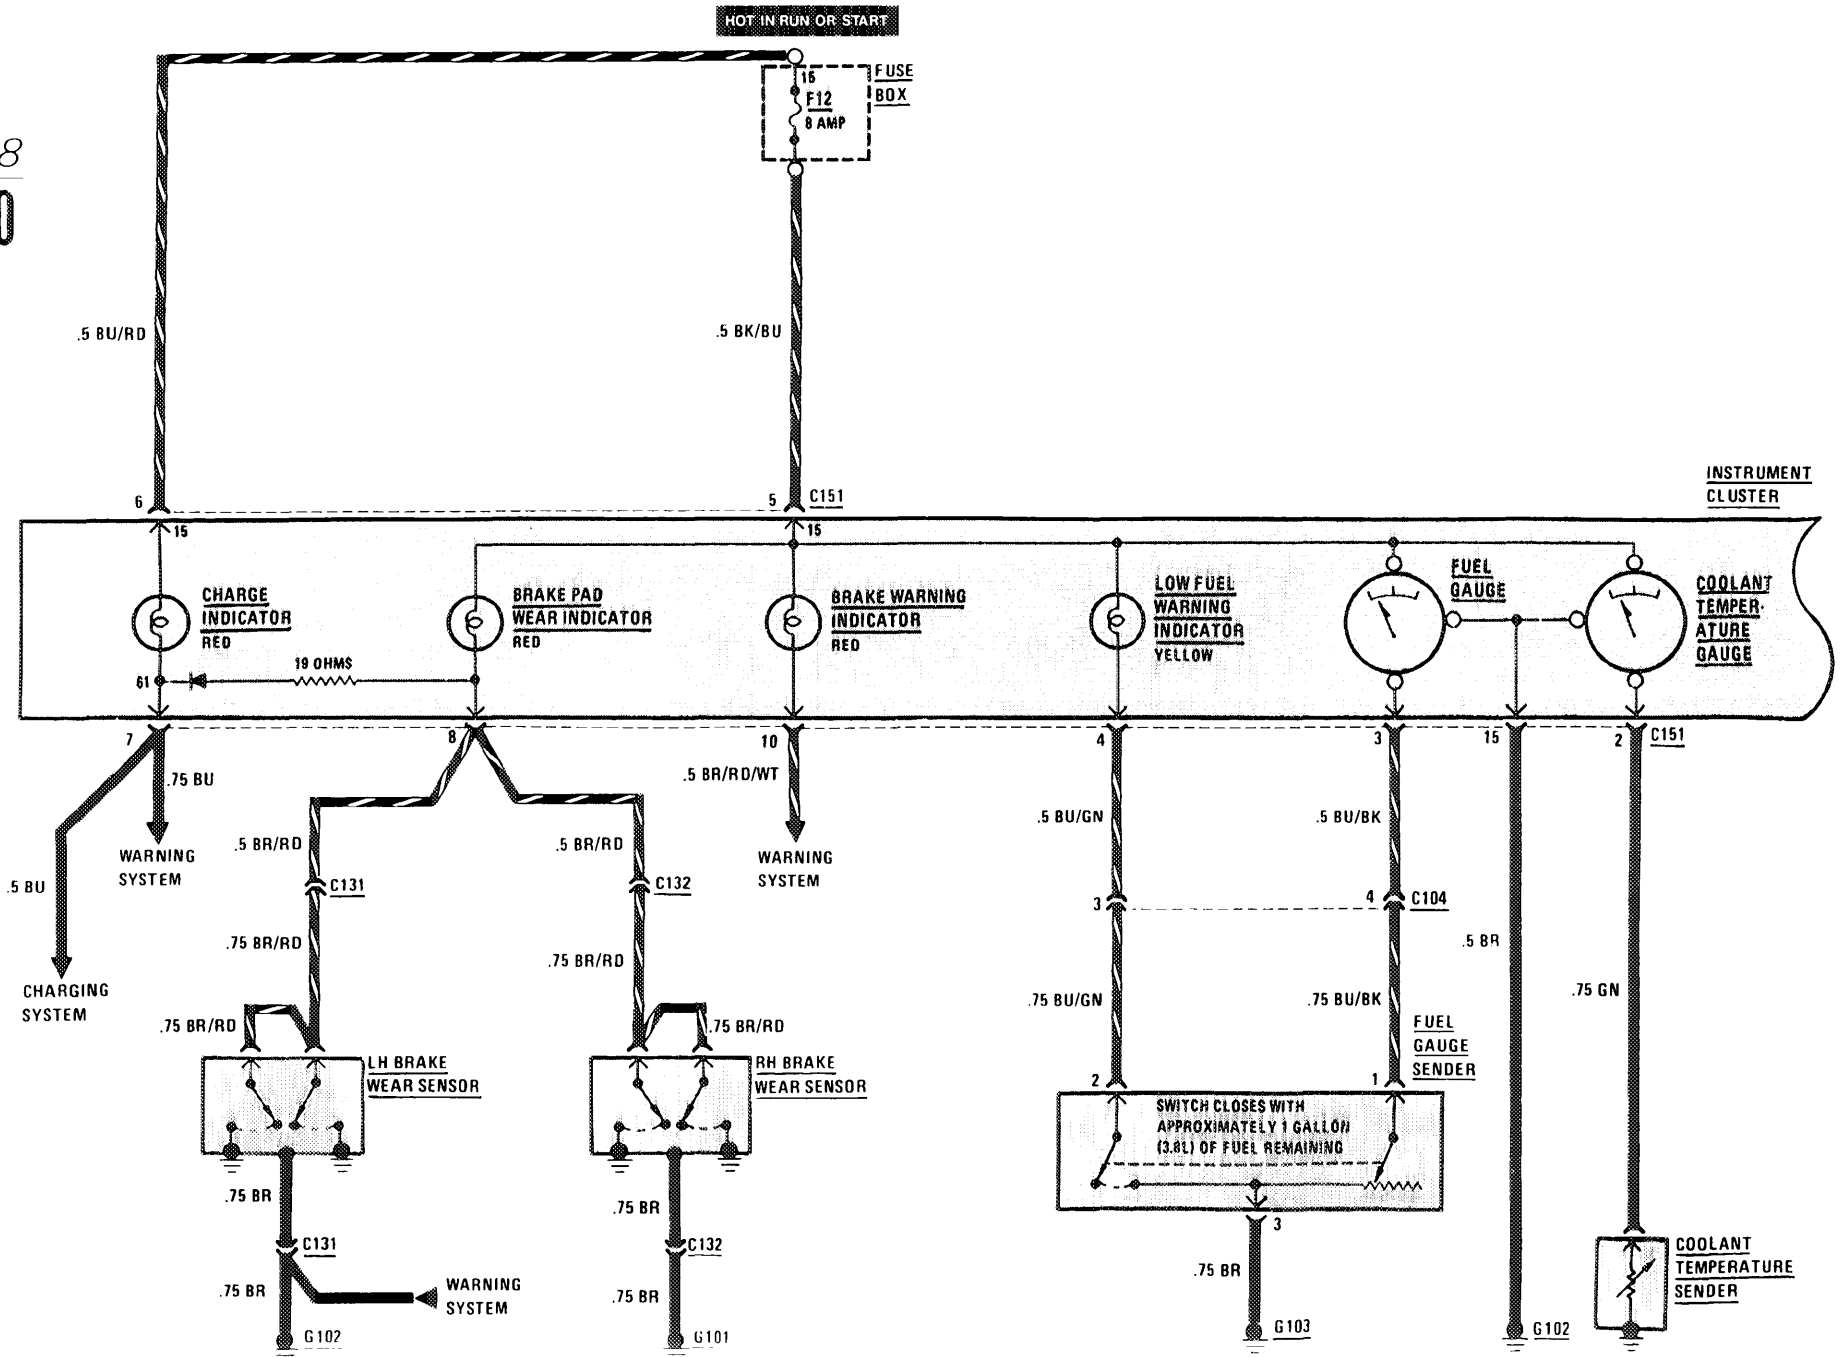

# WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 206)

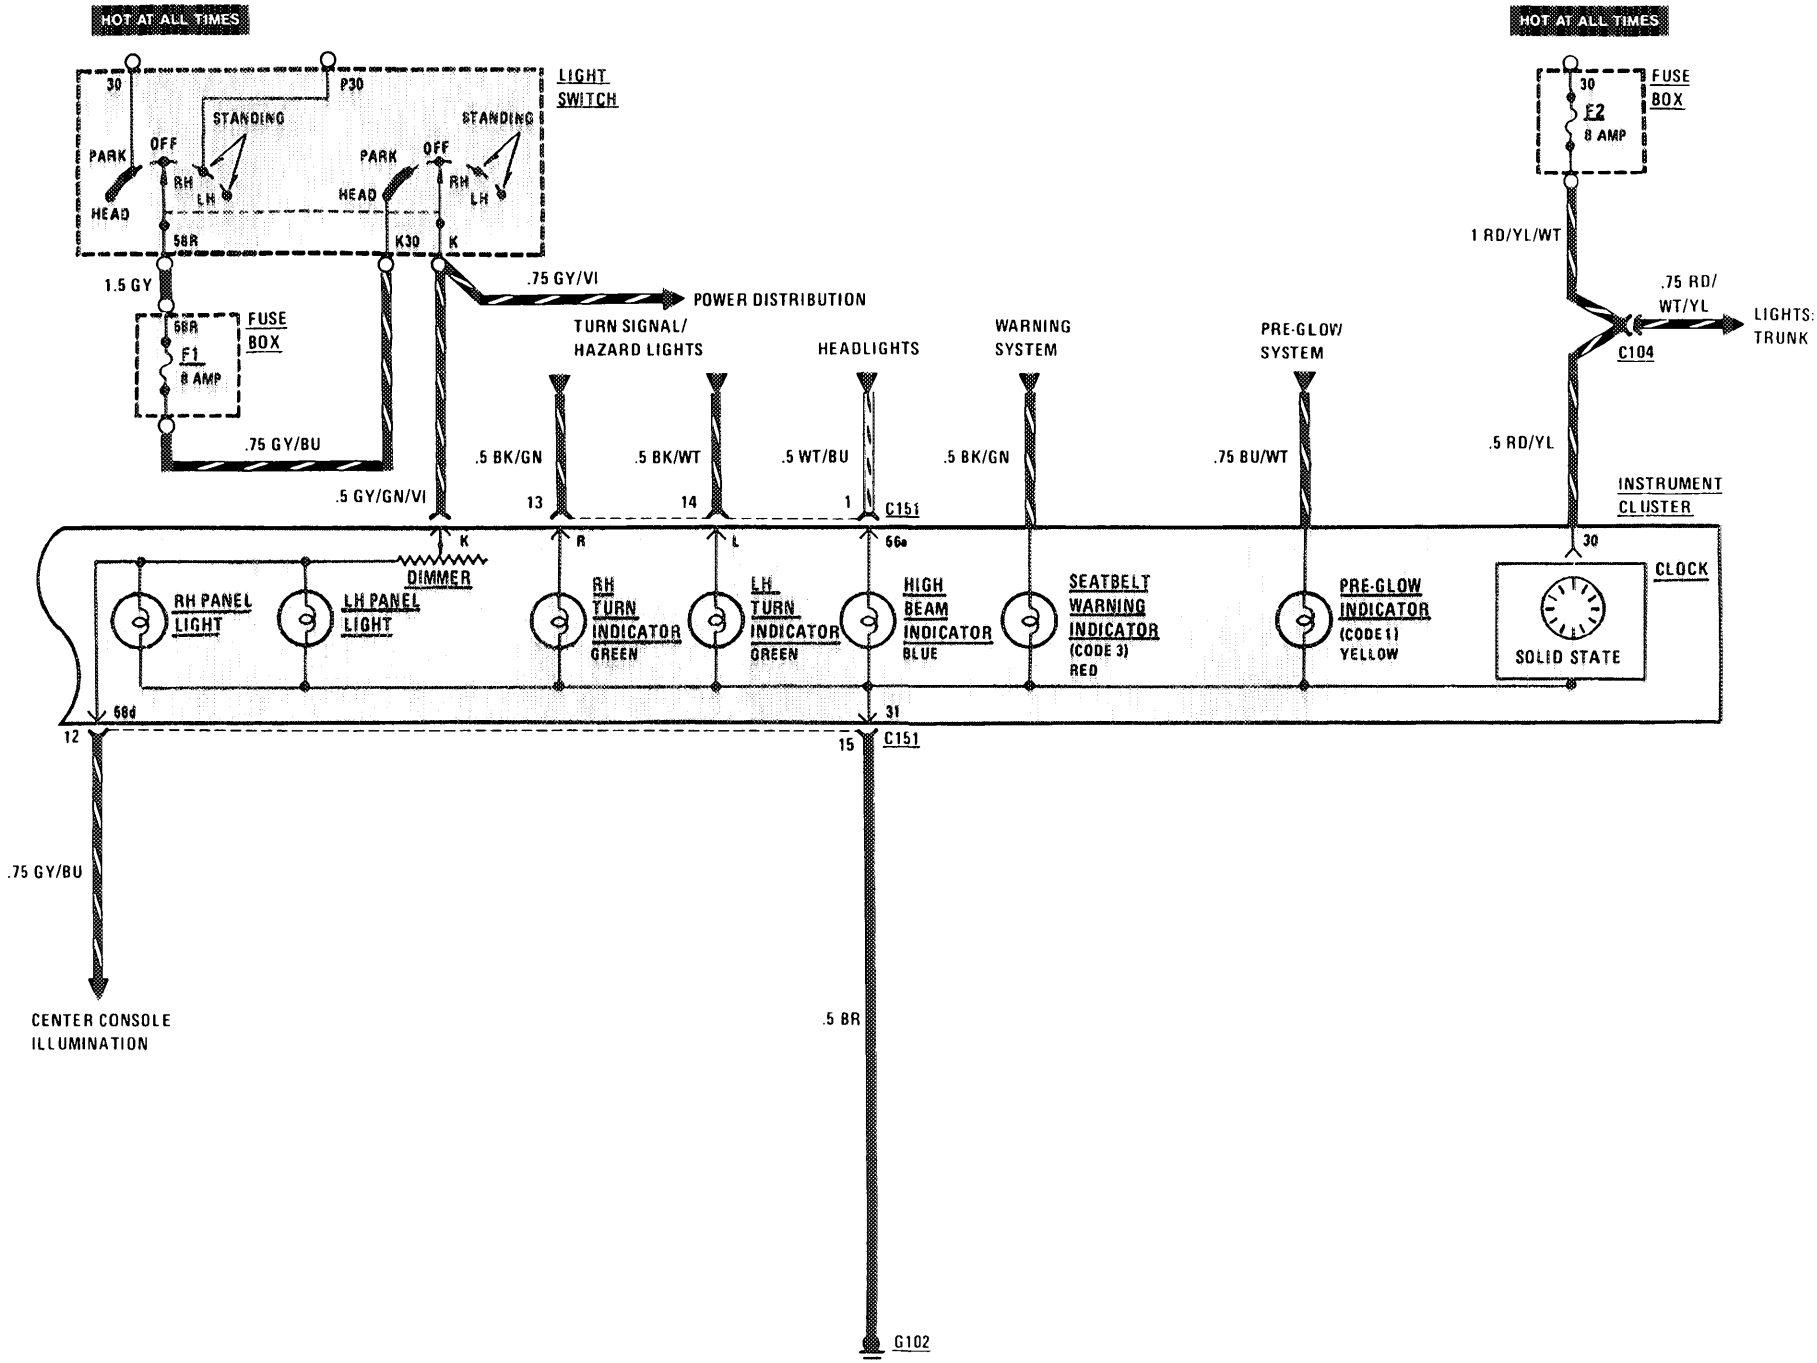


119  
240  
D



# WIPER/WASHER

(For Component Locations See Page 206)


HOT IN ACCY. RUN OR START

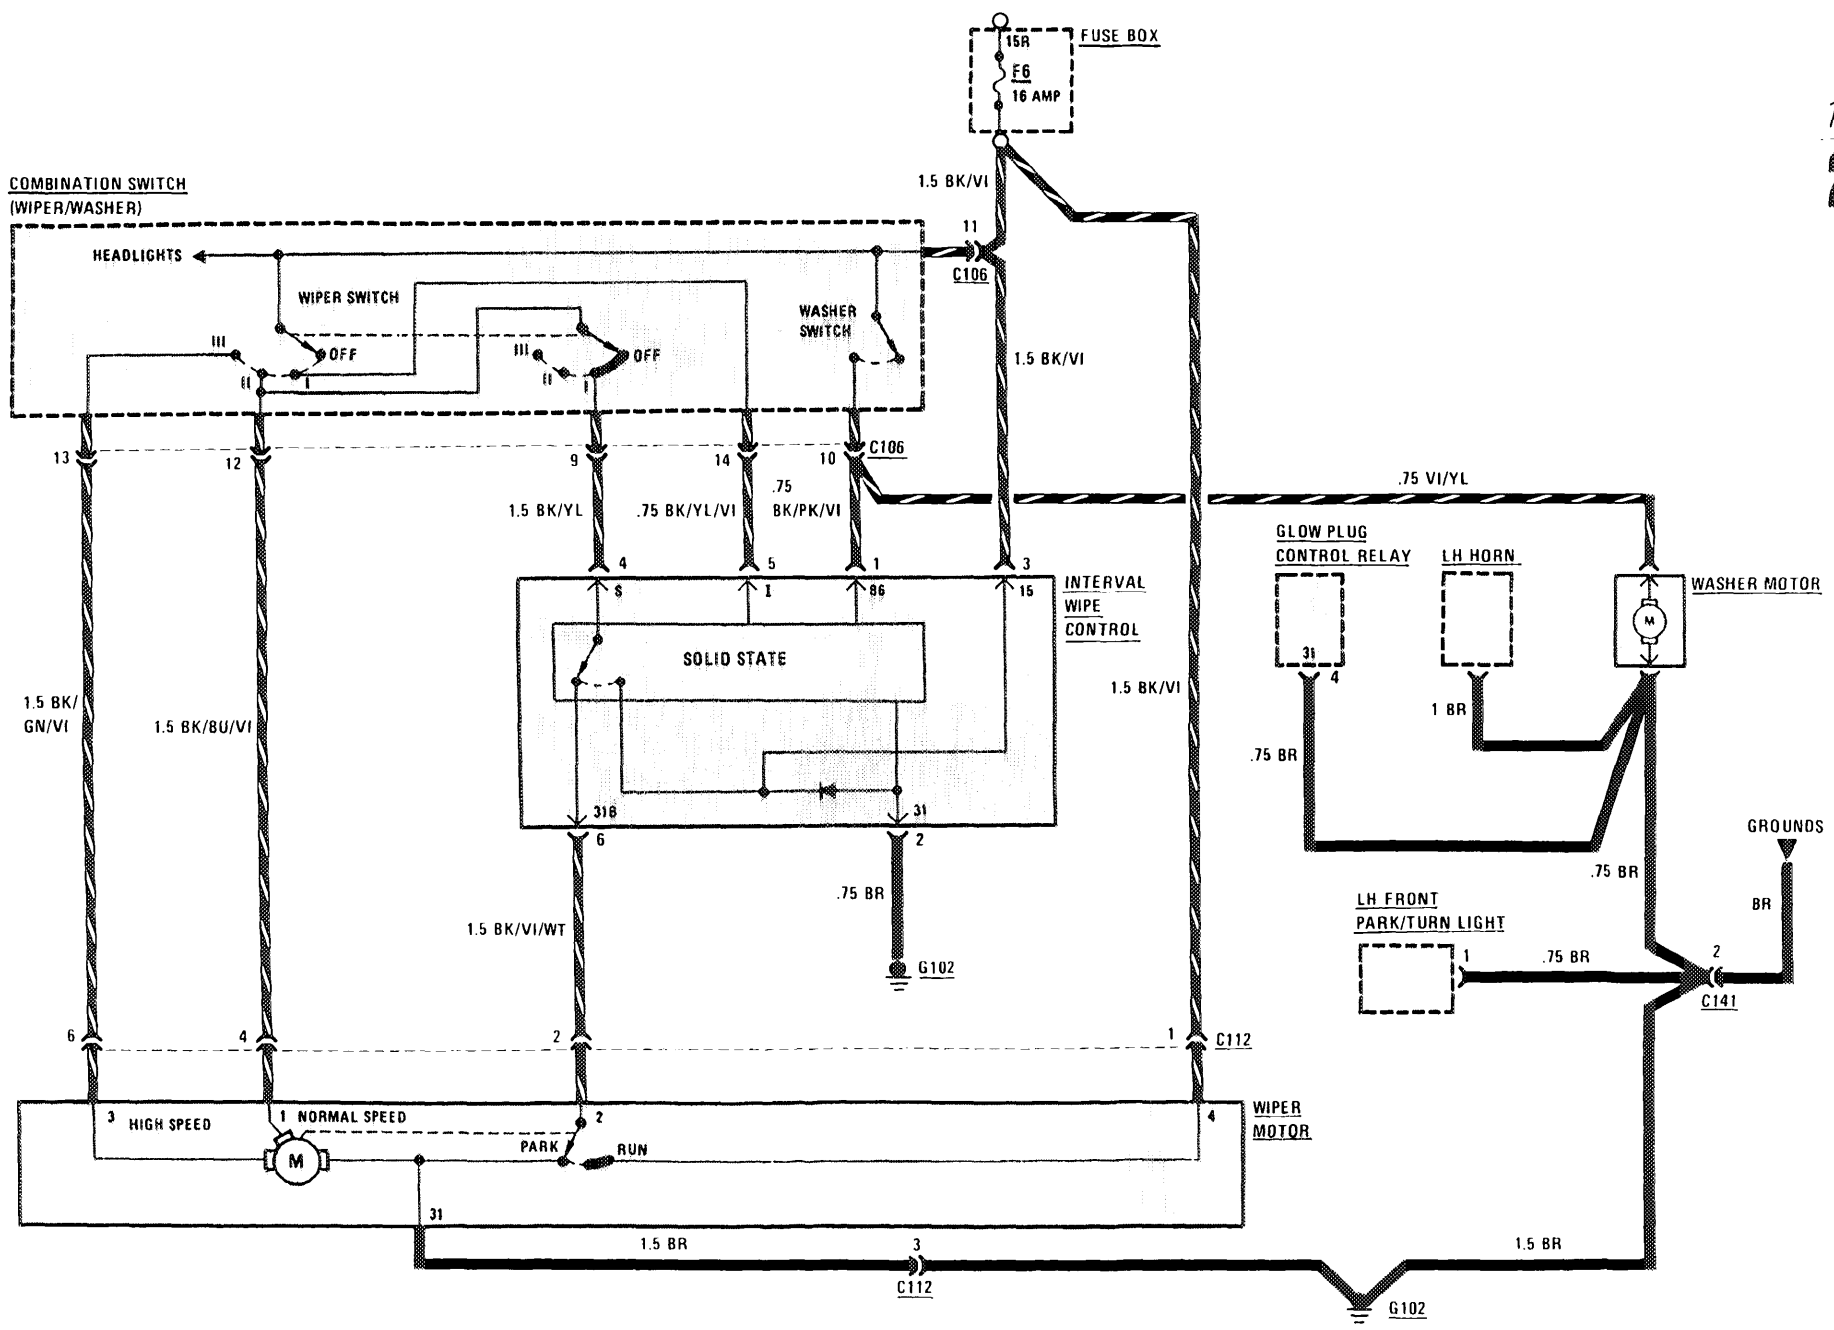

121  
240  
D

# AIR CONDITIONING/HEATER/AUXILIARY FAN


(For Component Locations See Page 201)

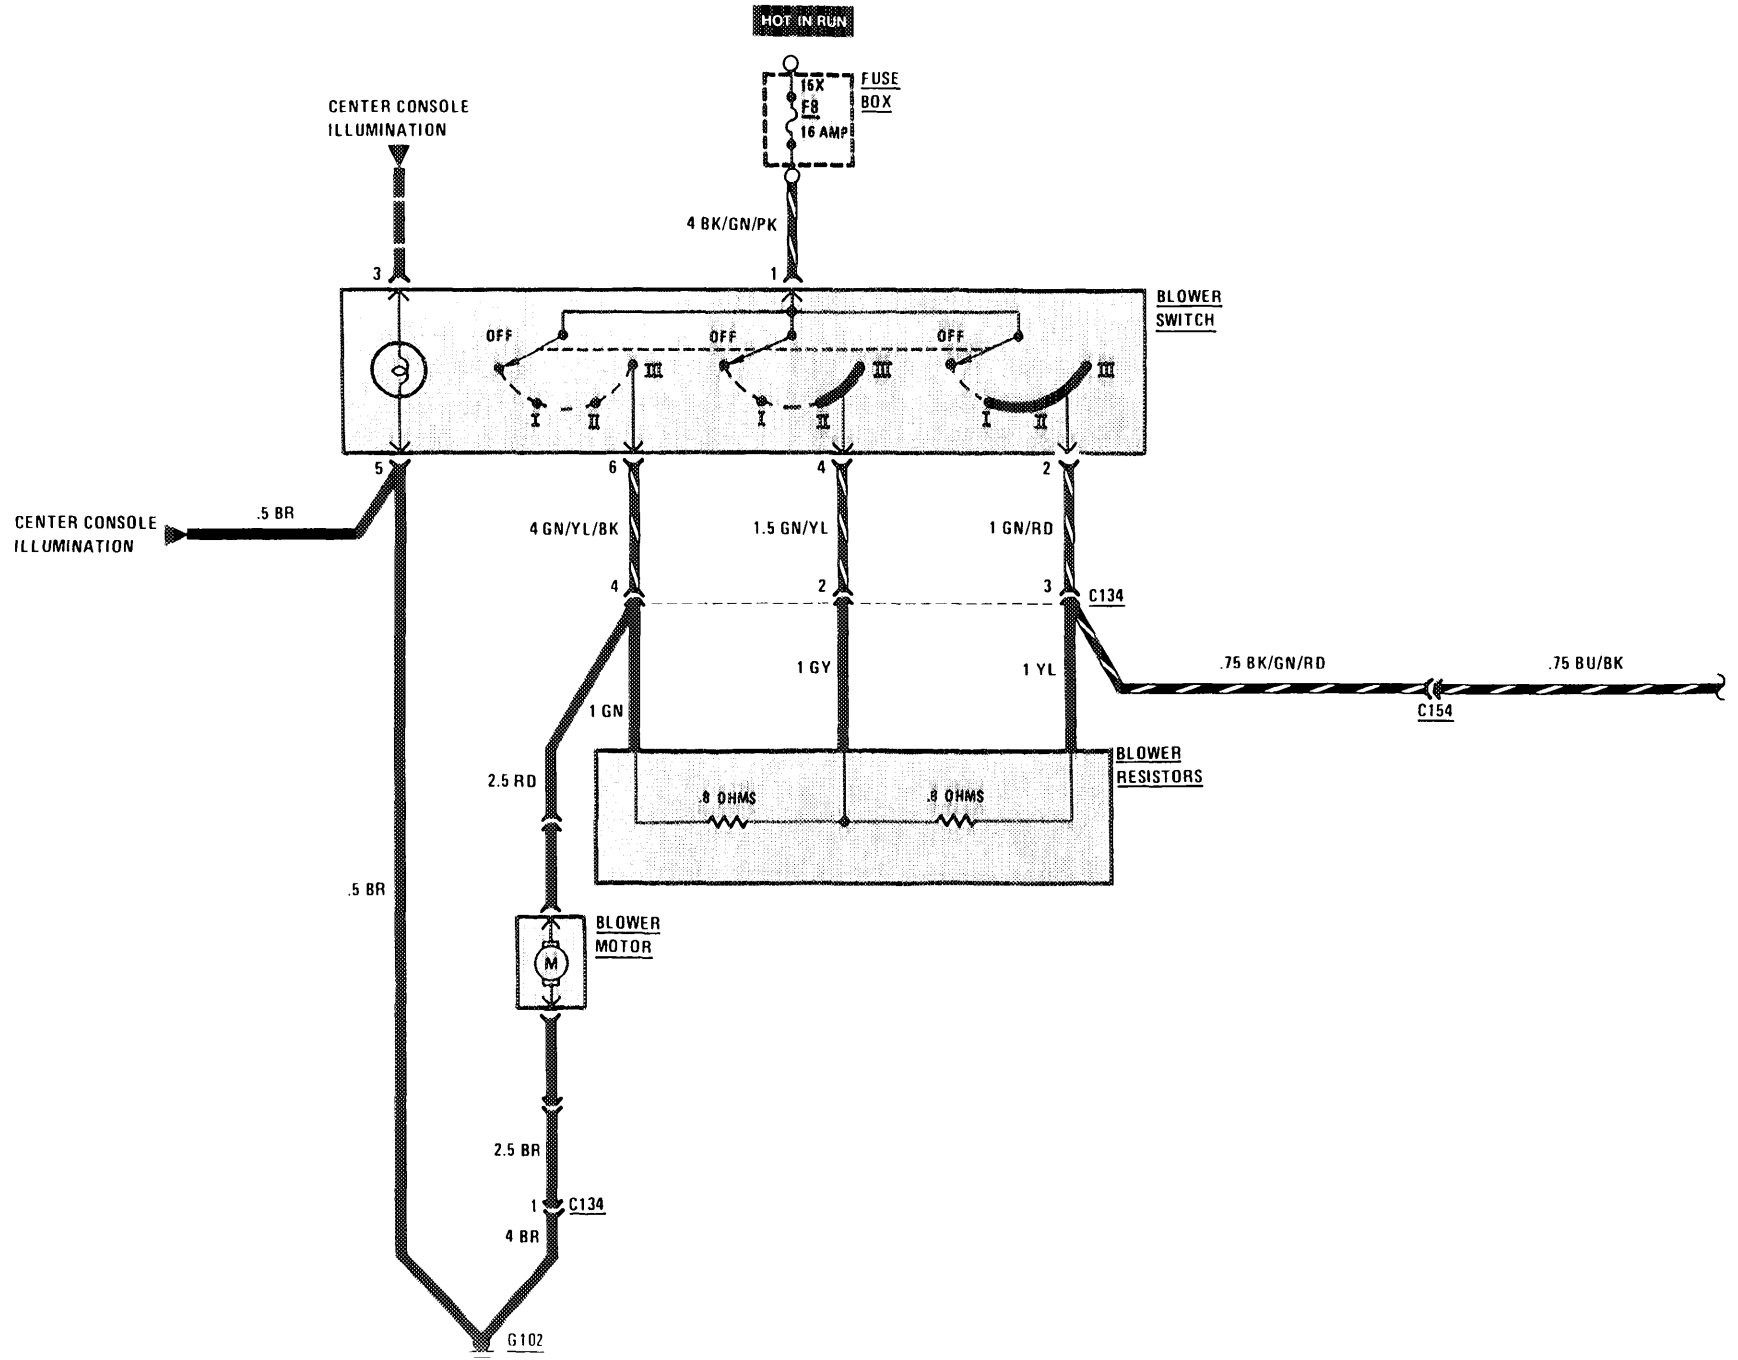

122  
240  
0

# AIR CONDITIONING/HEATER/AUXILIARY FAN

(For Component Locations See Page 201)

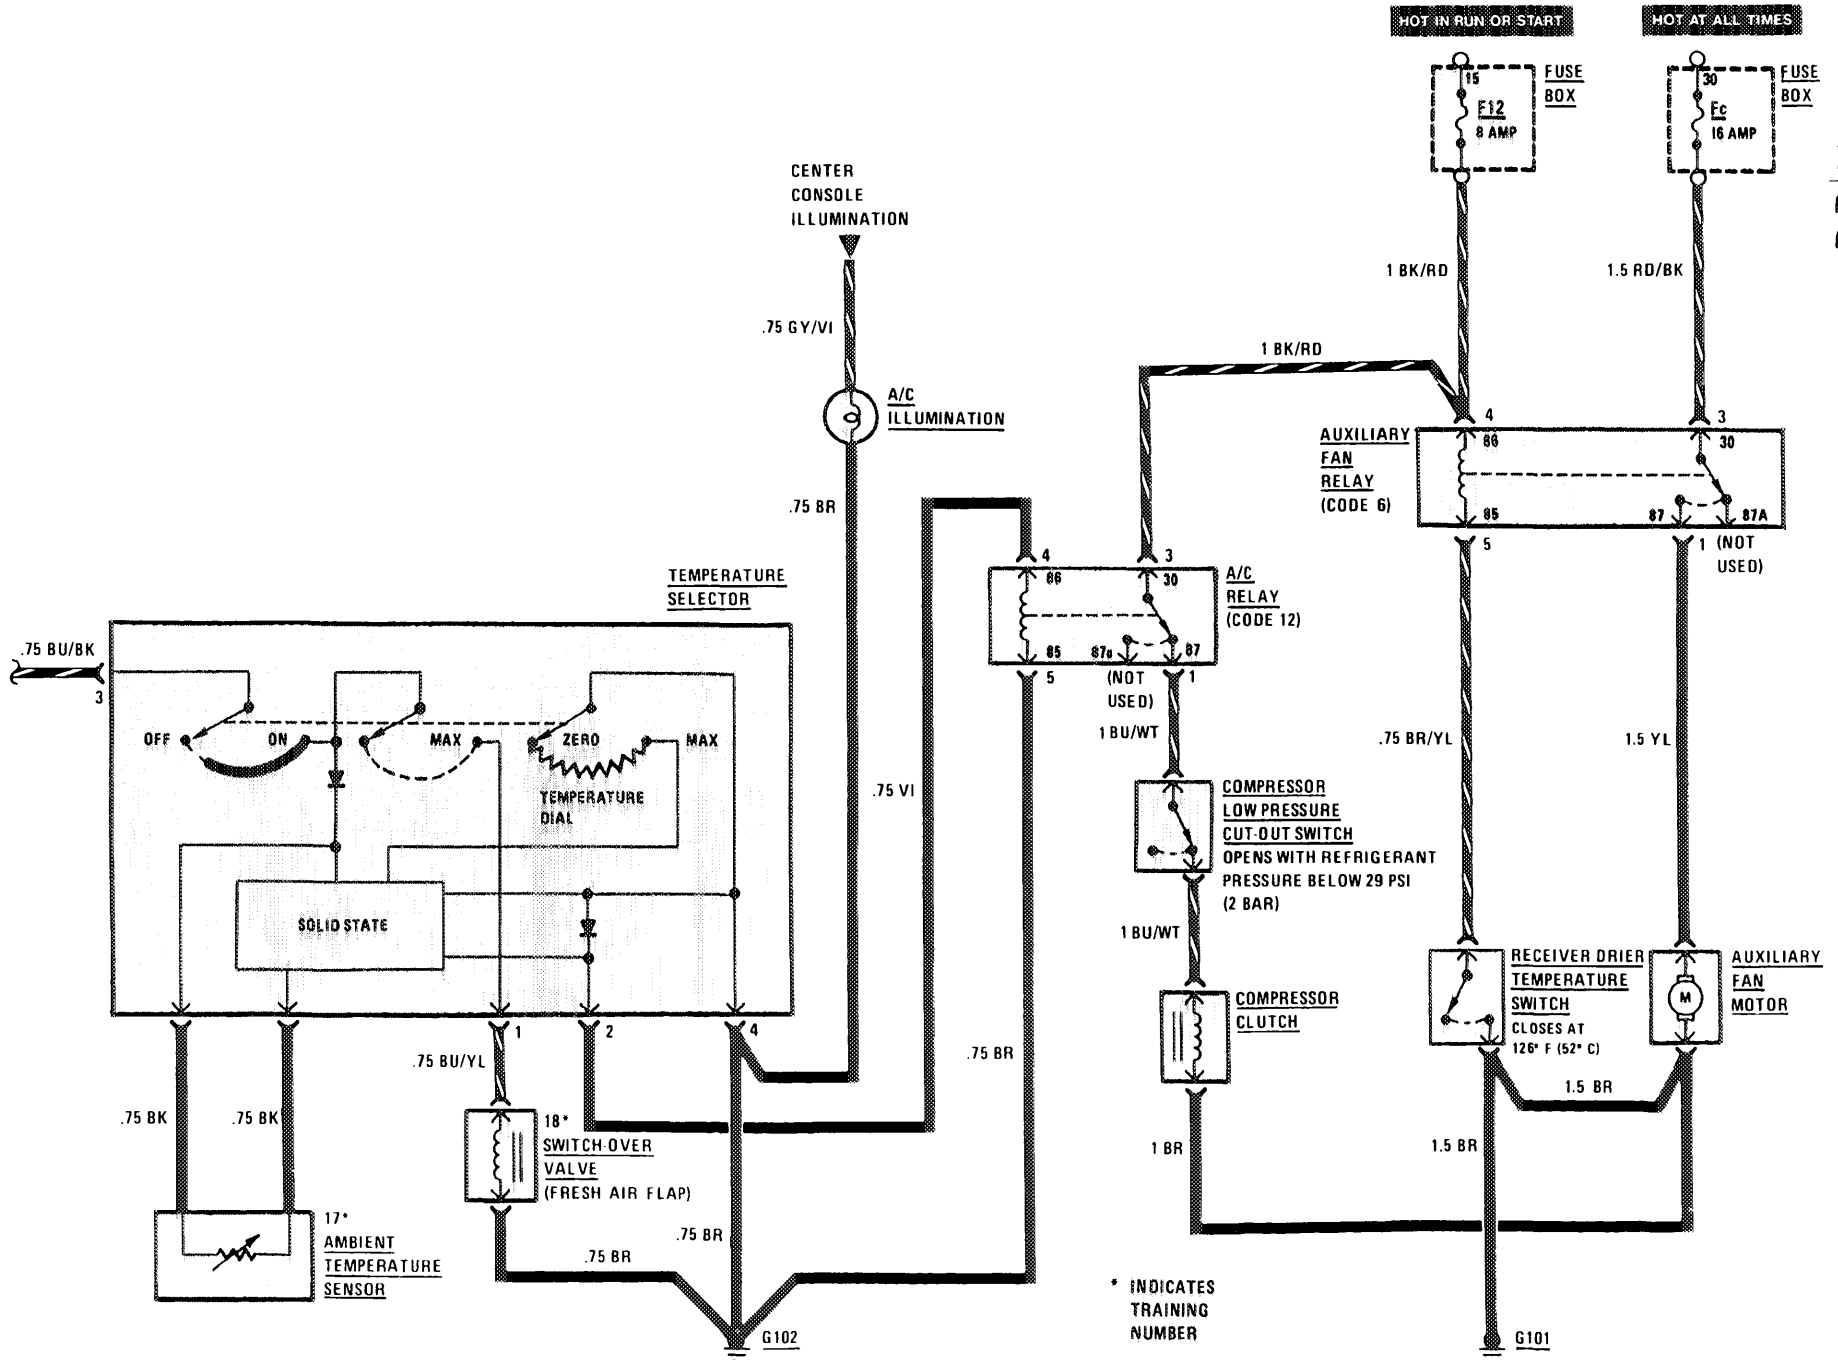


# REAR DEFOGGER

(For Component Locations See Page 204)

124



240  
0

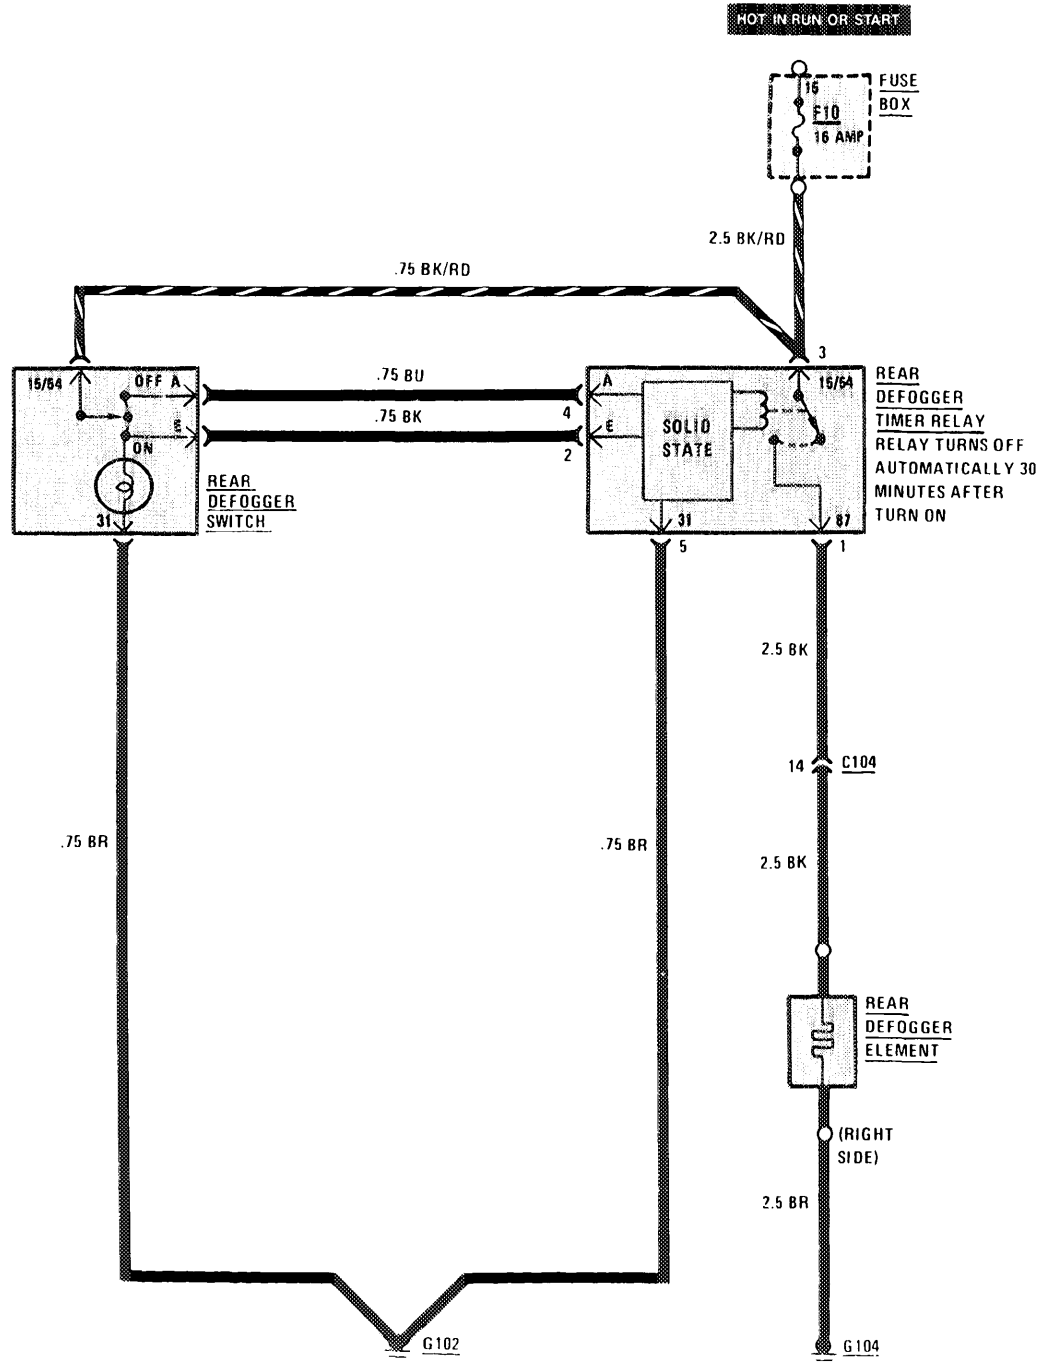



# HORNS/SLIDING ROOF

(For Component Locations See Page 203)

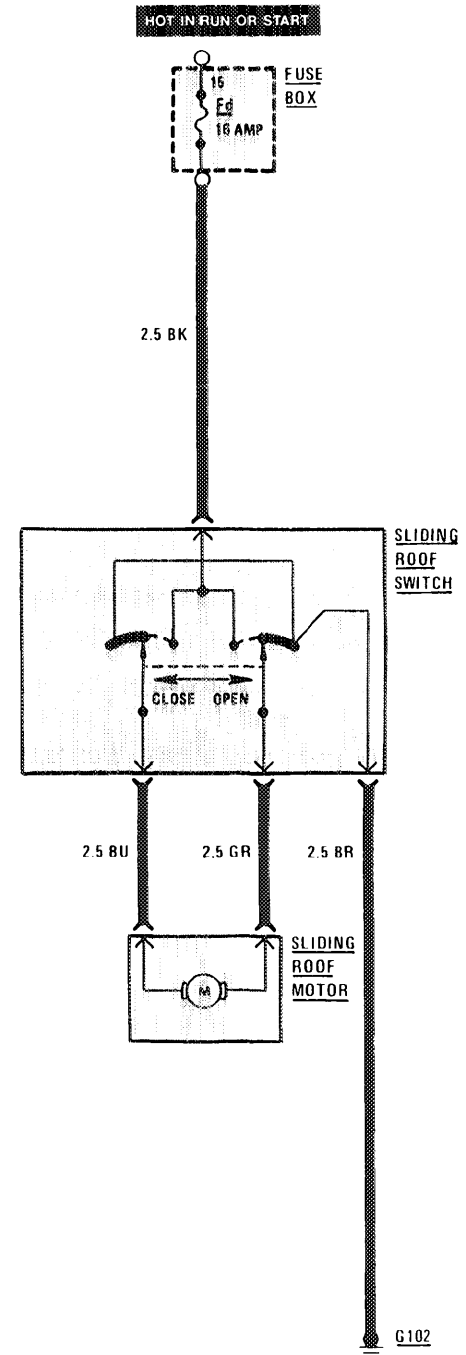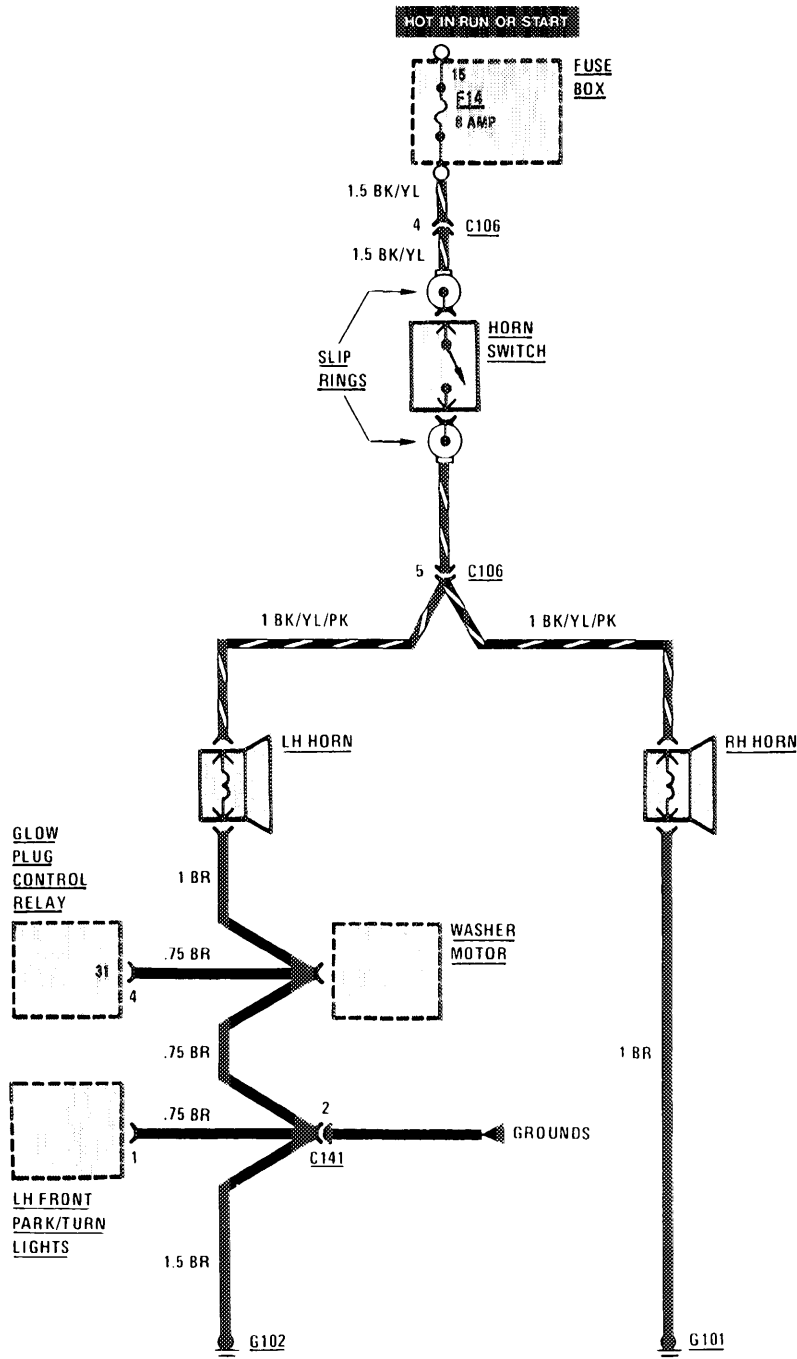


125  
240  
0

# POWER WINDOWS

(For Component Locations See Page 204)

126  
240  
0

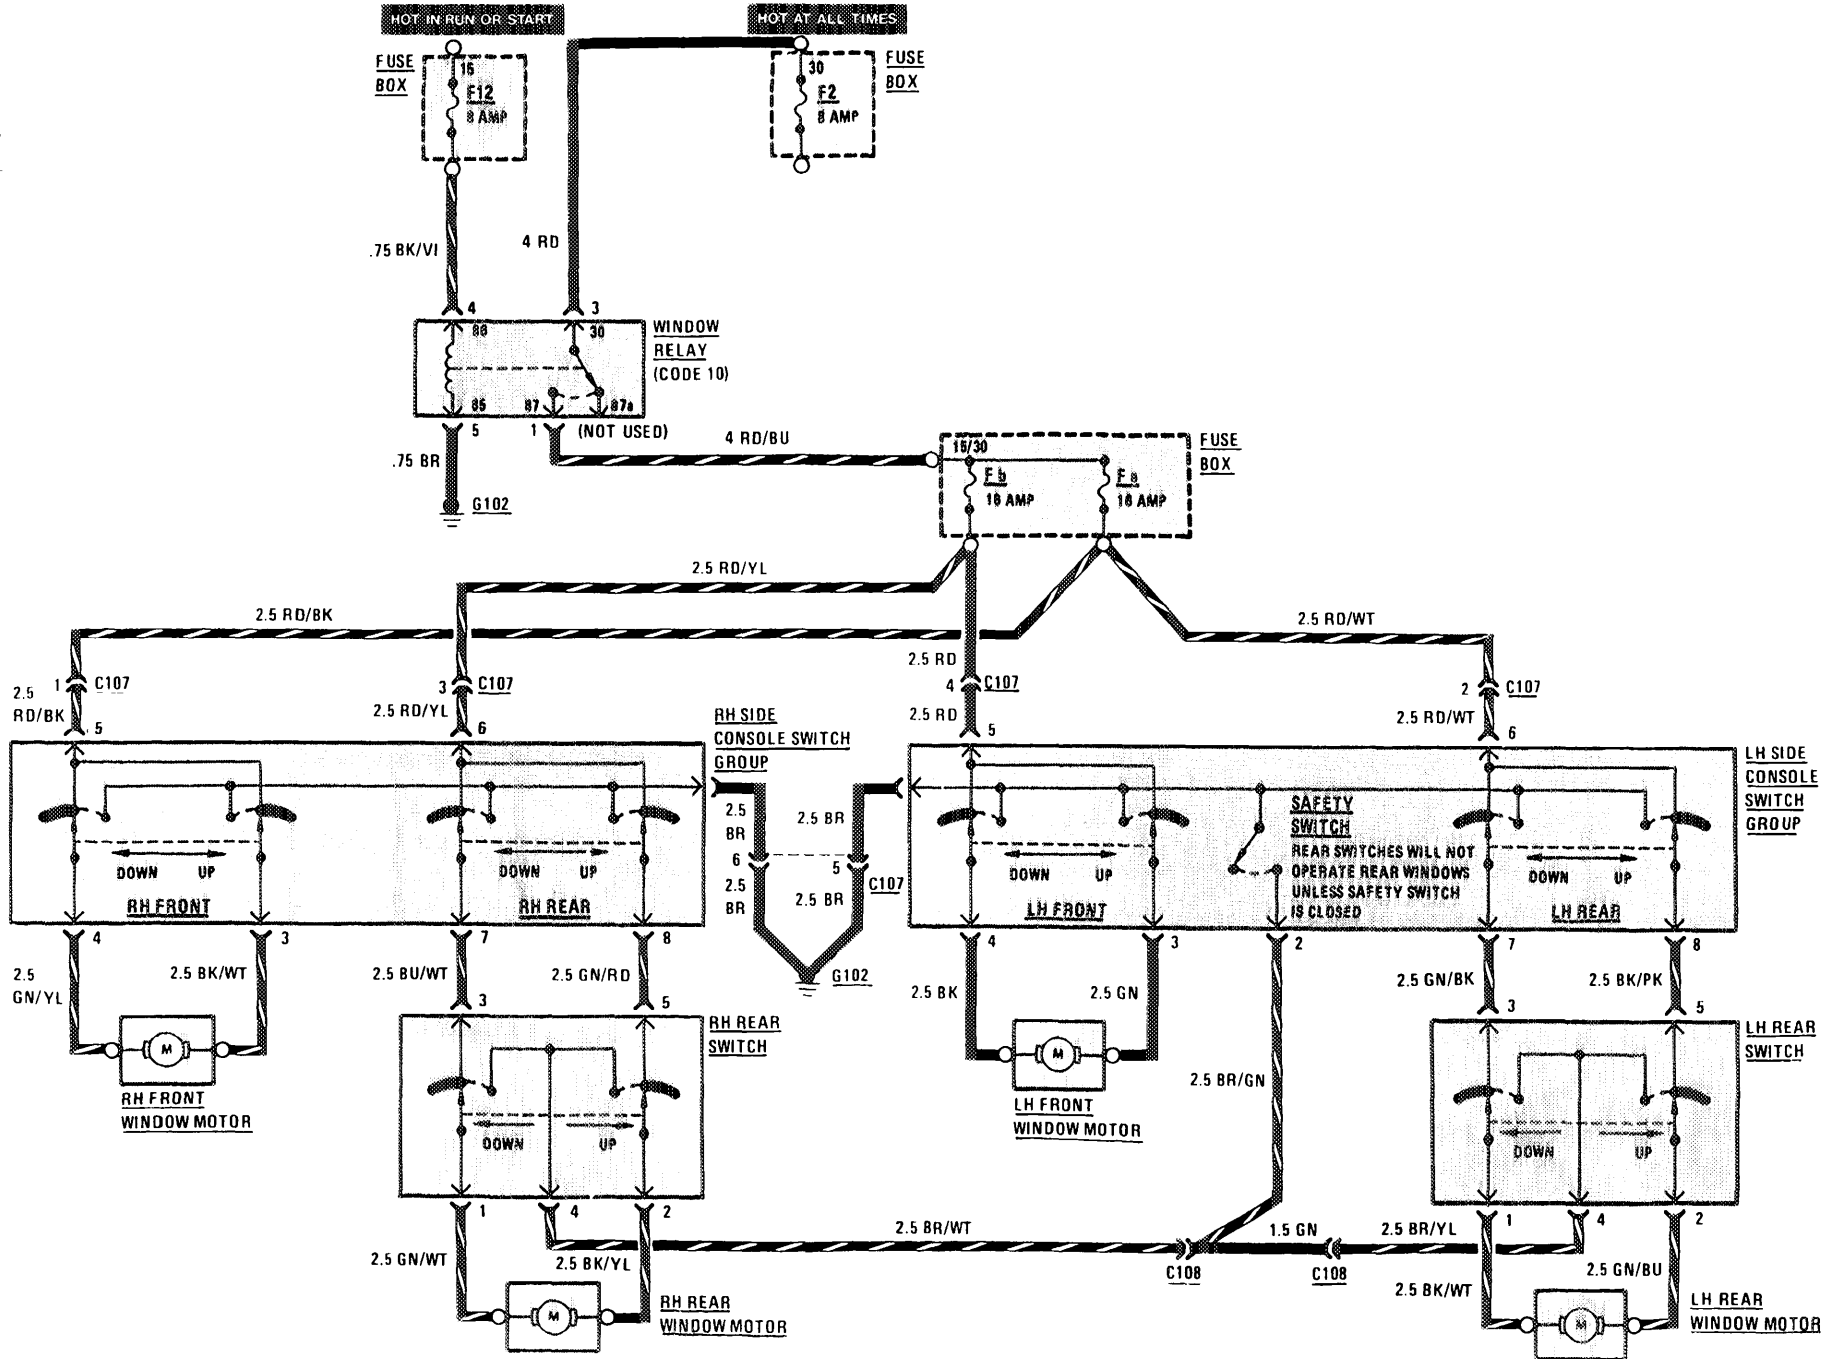




# HEATED SEATS



(For Component Locations See Page 203)

128  
240  
0

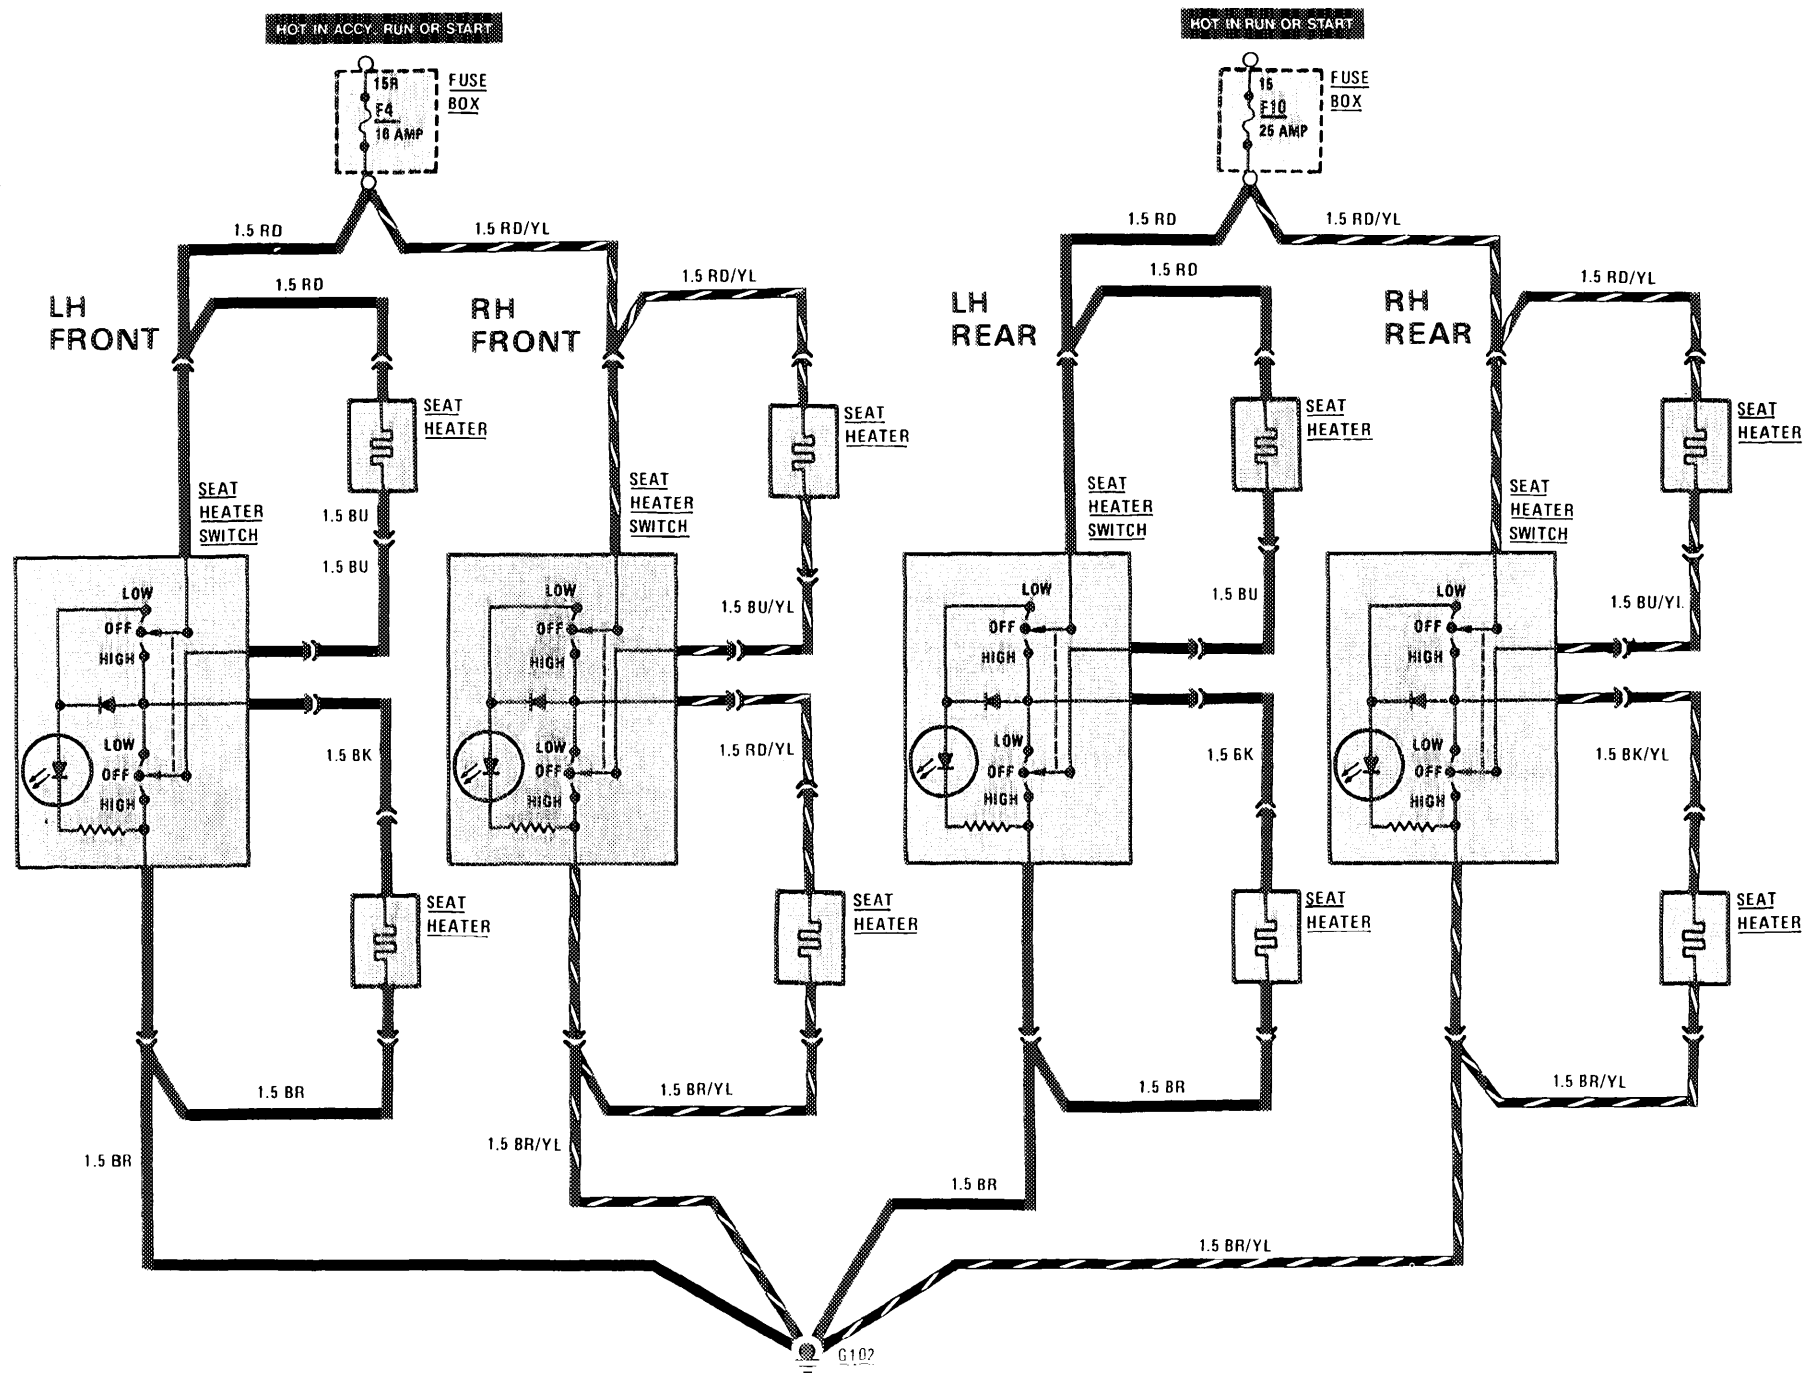


HOT IN ACCY. RUN OR START


HOT IN RUN OR START

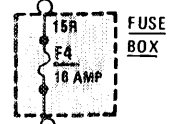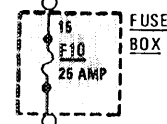

# GROUND DISTRIBUTION

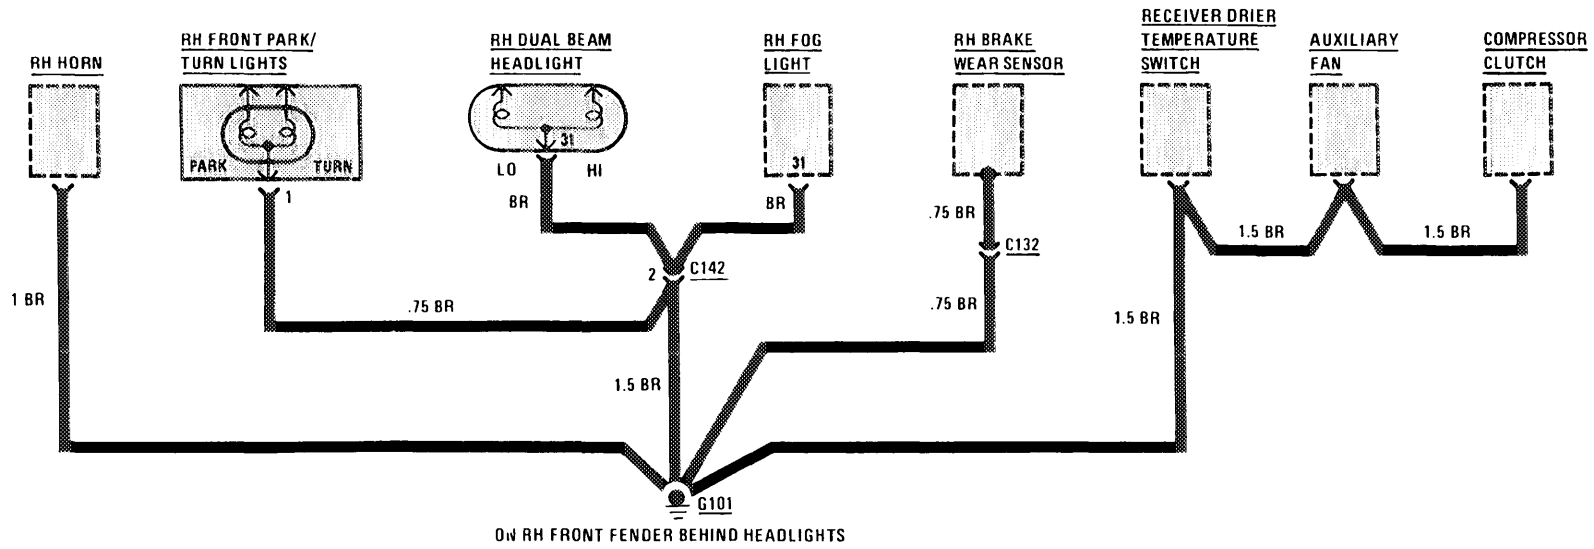


129  
 240  
 0

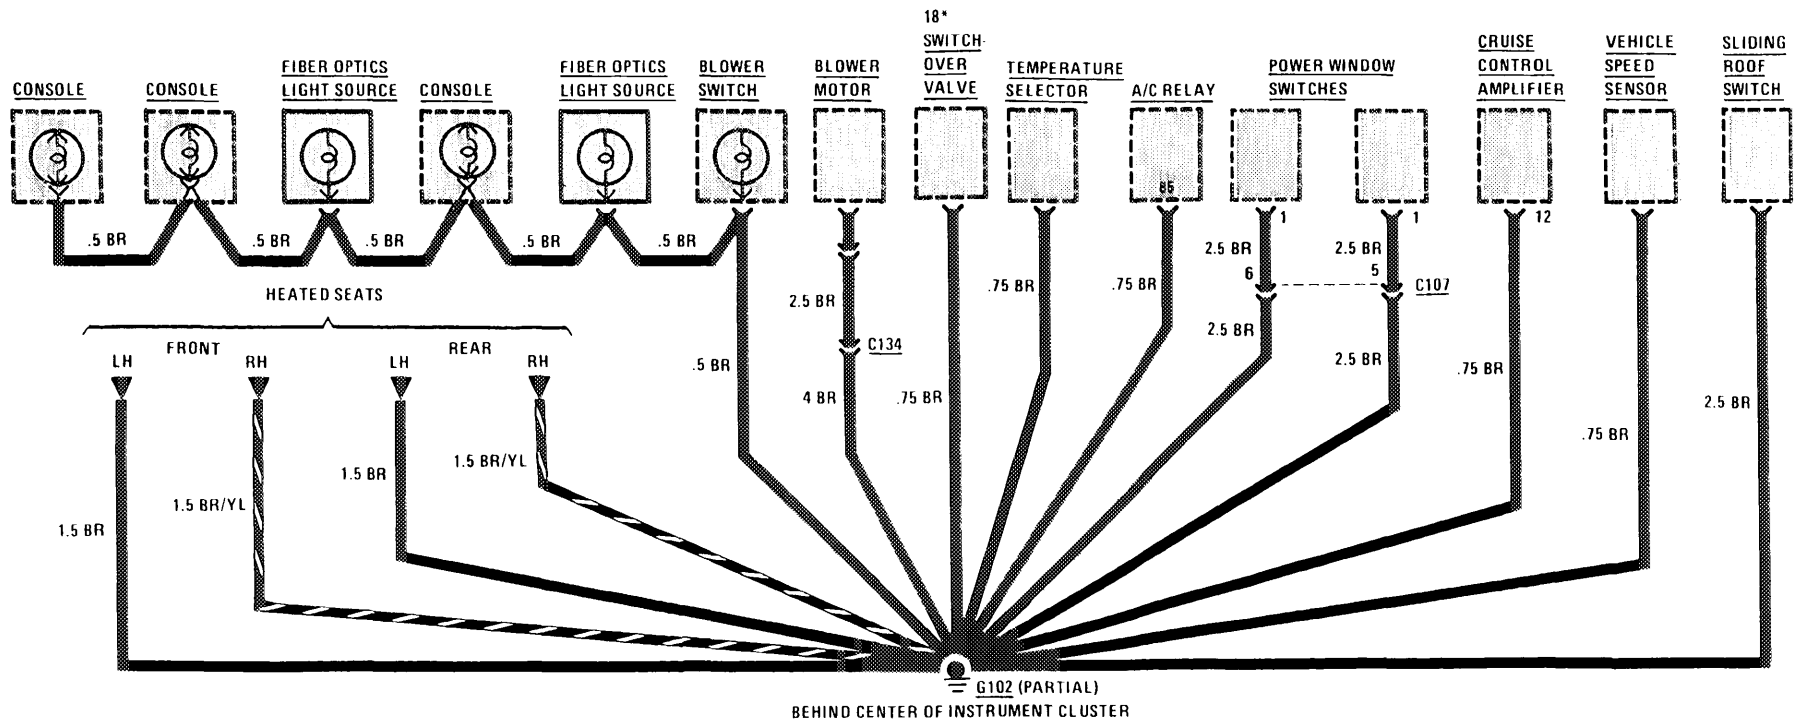


# GROUND DISTRIBUTION

130  
240  
0

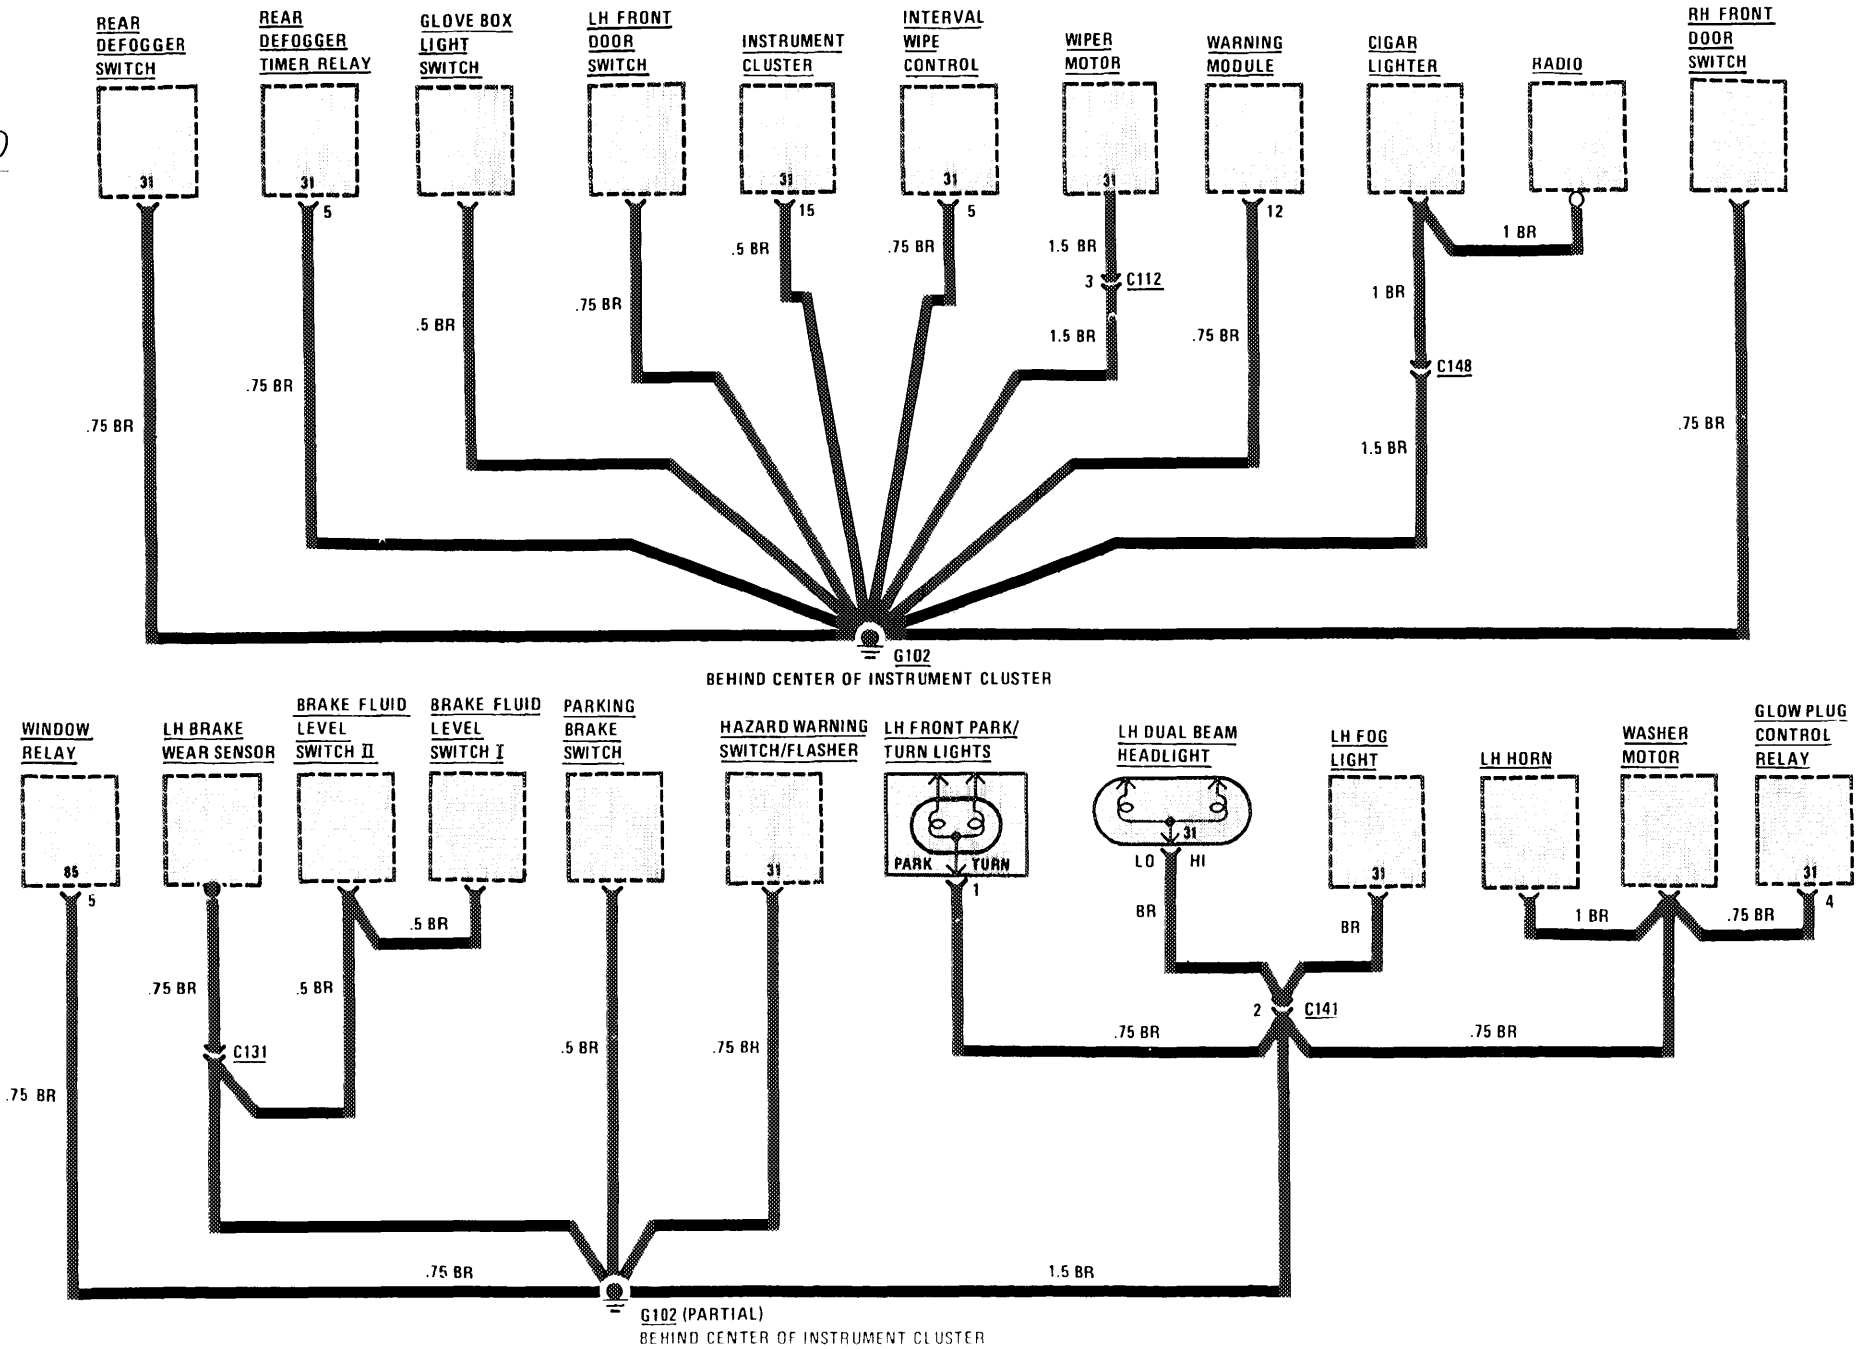

# GROUND DISTRIBUTION

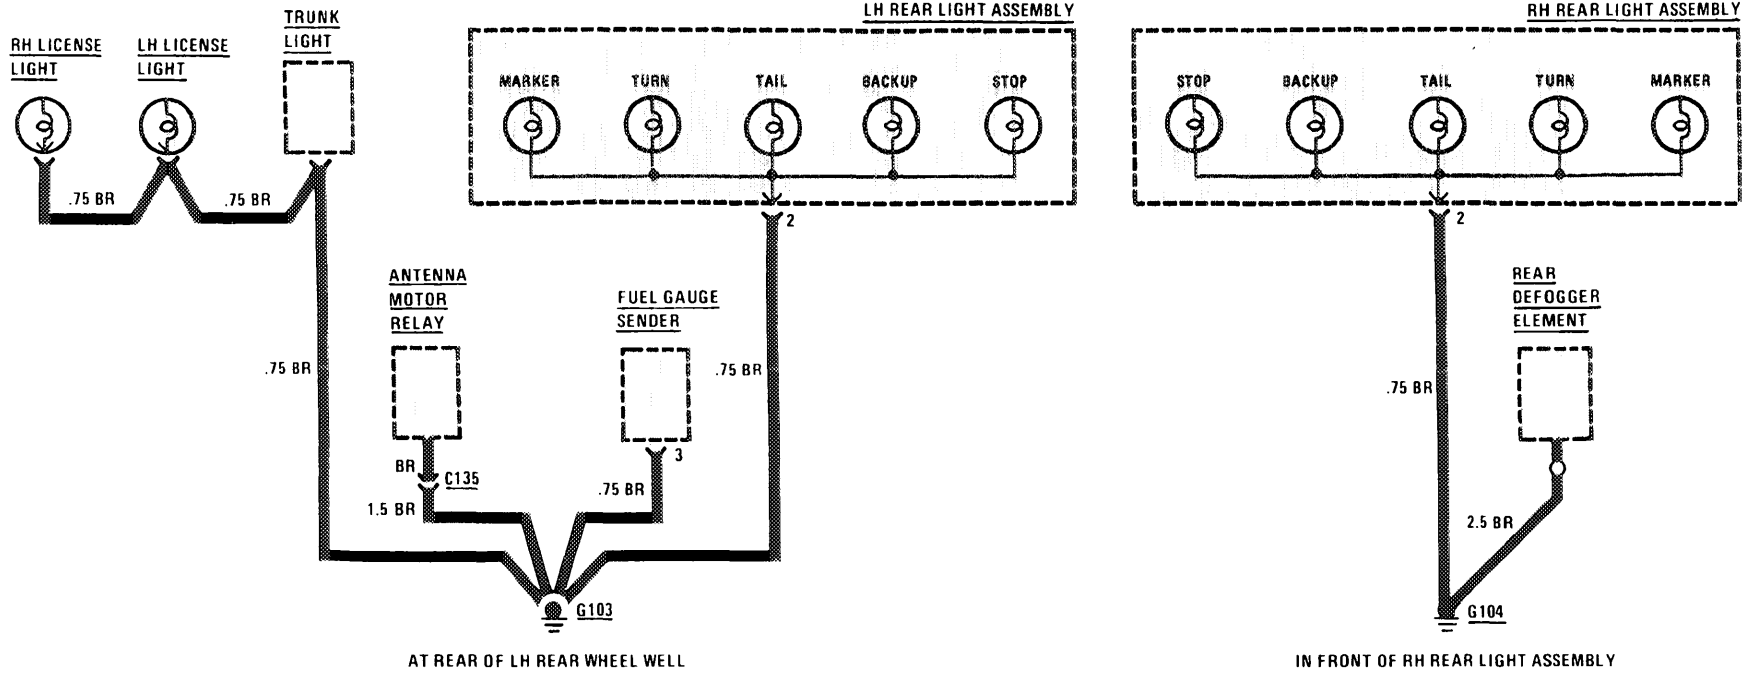

131  
240  
D