


15–510 Removal and installation of ignition distributor

Note


Turn crankshaft in direction of engine rotation at fastening screw of V-belt pulley only.

Removal

- 1 Remove ignition distributor cap, cable plug connections and vacuum lines.
- 2 Set engine to ignition TDC of 1st cylinder. For this purpose, the markings on the distributor rotor and on distributor housing should be in alignment.

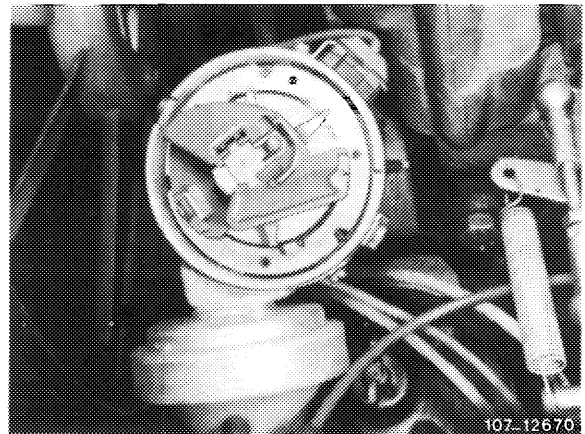

- 3 In addition, the pointer on crankcase should be above TDC mark of vibration damper.
- 4 Loosen ignition distributor attachment and pull out ignition distributor.

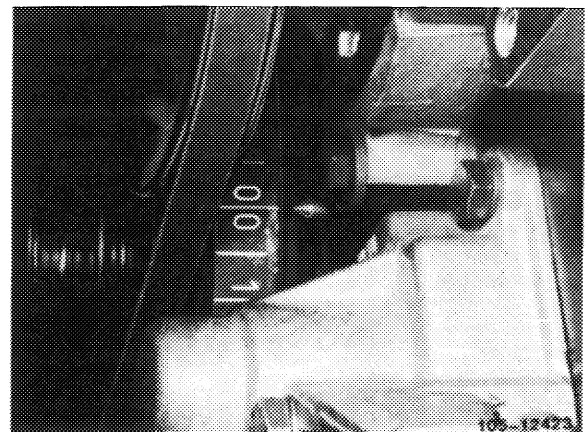

Installation

- 5 For installation proceed vice versa. Pay special attention to ignition TDC of 1st cylinder and to markings on distributor housing and vibration damper.
- 6 Adjust firing point (15–501).