

## 14–250 Removal and installation of air pump


---

Federal and California version model year 1977/78/79


### Removal

---

- 1 Loosen fastening screw (1) and screw out.
- 2 Swivel air pump inwards and remove V-belt.

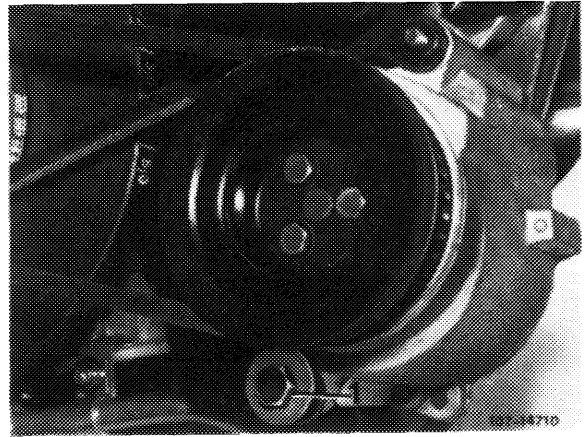

- 3 Compress hose clamp (arrow) on contour hose with combination pliers and push approx. 2 cm to the rear.
- 4 Pull contour hose from air pump connection.
- 5 Loosen fastening screw (2) and unscrew, remove air pump in downward direction.

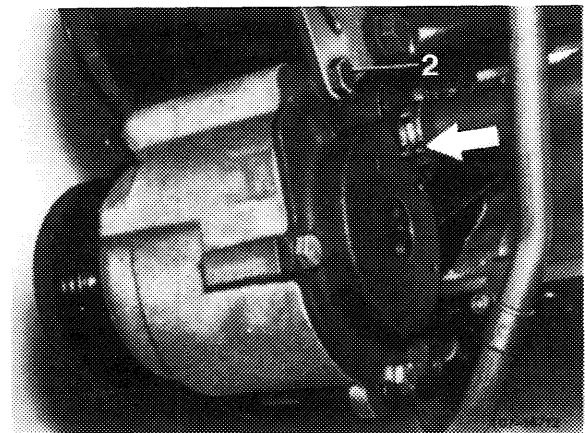

### Installation

---

- 6 For installation proceed vice versa.

**Note:** V-belt is correctly tensioned if it will resiliently yield under energetic thumb pressure.