

14–455 Renewing intake manifold (intake manifold removed)

Renewing

- 1 Remove and install intake manifold (09–400).
- 2 Remove and install mixture controller with air guide housing (07.3–230).
- 3 Unscrew all unscrewable parts on removed intake manifold and mount to new intake manifold together with new gaskets.