

### Removal

---

- 1 Disconnect regulating rod (5).
- 2 Remove lock (1) and remove longitudinal regulating shaft toward the rear.

### Installation

---

- 3 For installation proceed vice versa. Grease bearing points as well as ball sockets of regulation with Molykote-Longterm 2.
- 4 Adjust regulating linkage (30–300).

