


07.2–104 Removal and installation of idle speed shutoff valve

Note


Carburetor need not be removed for this job.

A. Model 115


- 1 Remove warm air hose.
- 2 Separate electric single-plug connection (2).

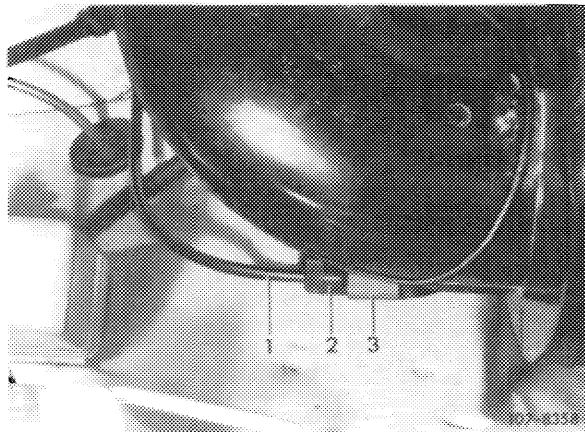

- 3 Loosen hex. nut (83) on idle speed shutoff valve (38) and unscrew shutoff valve.

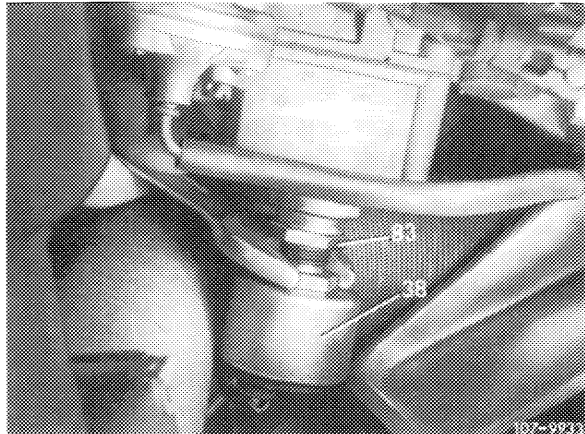

- 4 Prior to installation of idle speed shutoff valve, remove rubber sleeve (1) from carburetor.
- 5 Screw in idle speed shutoff valve until air piston is just lifted (visual checkup), then screw idle speed shutoff valve out again by two turns (basic adjustment).
- 6 Fasten rubber sleeve (1) to carburetor.
- 7 Adjust idle speed (07.2–100).

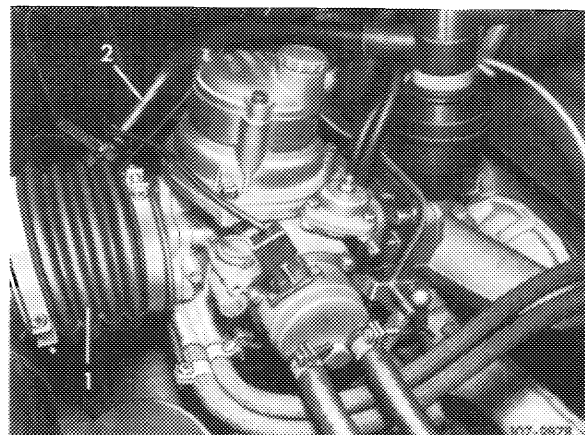

B. Model 123

- 1 Pull electric plug connection from idle speed shutoff valve (38).
- 2 Remove idle speed shutoff valve (38).
- 3 For installation proceed vice versa.

