


Removal

- 1 Completely remove intake manifold with exhaust manifold (14-415).
- 2 Unscrew fastening nuts for exhaust manifold on intake manifold and remove exhaust manifold from intake manifold.

Arrows = intake manifold fastening nuts

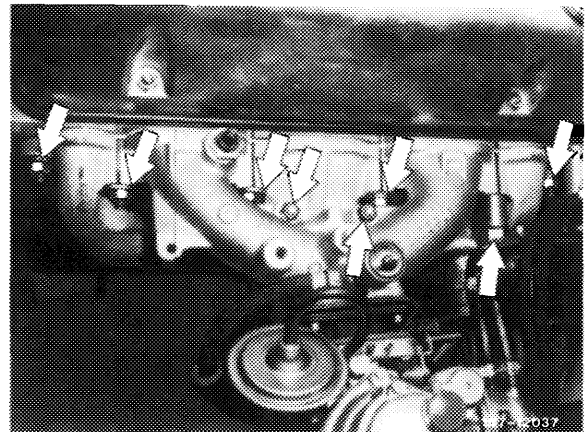

Installation

- 3 For installation proceed vice versa. Use new gaskets.