
# A. Model 115

# Removal

- 1 Remove spare wheel and plastic cover strip for vent lines (2).
- 2 Pull vent lines (2) out of connecting hoses (4).
- 3 Remove fuel expansion tank (1) complete with positive and negative vent lines.

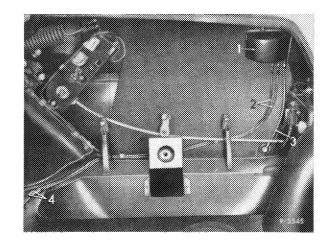

- Fuel expansion tank
- Vent lines to fuel tank Vent line to atmosphere
- 4 Connecting hoses

# Installation

4 For installation proceed vice versa.

# Attention!

Avoid sharp bends (kinks) in positive and negative vent lines and pay attention to perfect sealing of fuel system.

# B. Model 115 special vehicles with special body

On these vehicles, the fuel expansion tank (2) is installed in rear righthand fender. Vent line (6) leads directly into the open air (item 3 and 7 no longer applicable).

