

A. Model 115


Tightening torque	Nm
Nuts for immersion tube transmitter	3.5-4

---

**Removal**

---


- 1 Take trunk floor mat from trunk and remove closing cover from floor of trunk.
- 2 Pull coupling (1) from immersion tube transmitter (2).
- 3 Unscrew fastening nuts and pull out immersion tube transmitter.
- 4 Remove gasket from fuel tank, making sure that no remains of gasket are dropping into tank.

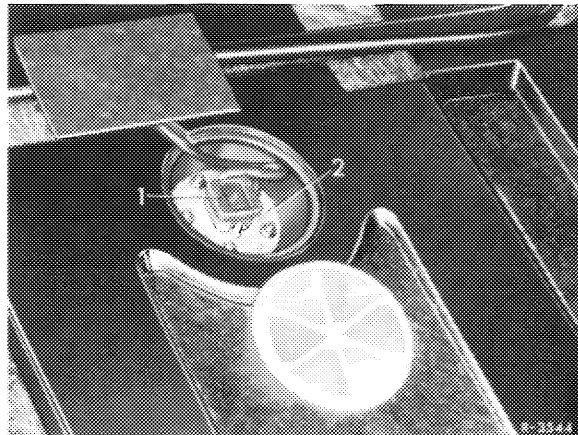

**Installation**

---

- 5 For installation proceed vice versa as follows:
  - a) Use new gasket.
  - b) Prior to installing immersion tube transmitter, remove locking pin (arrow).
  - c) Plug on coupling and check operation of fuel readout.
  - d) Tighten nuts crosswise to 3.5-4 Nm.
  - e) Insert plug for fuel readout.
  - f) Check for leaks.

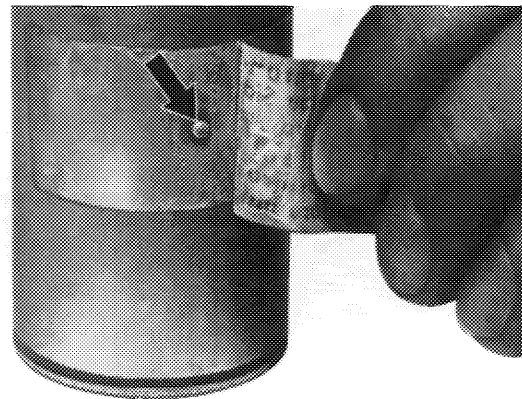

107-10702

## B. Model 123 sedan and coupe

### Tightening torque


Nm

Immersion tube transmitter


35–43

### Removal

1 Remove first aid kit and first aid kit holding tray (arrow).

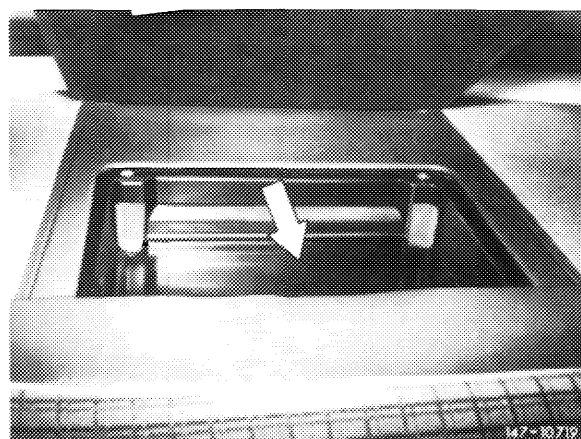

2 Pull off coupling (66) for fuel gage (fuel readout) on immersion tube transmitter (65) and protect with a wire against slipping off.

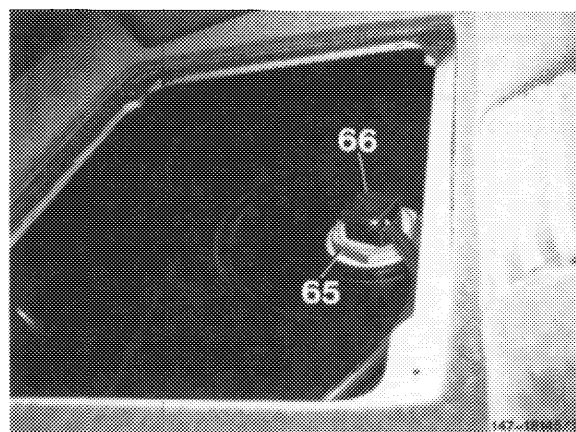


3 Unscrew immersion tube transmitter.


### Installation

4 For installation proceed vice versa as follows:

a) Use new rubber sealing ring.

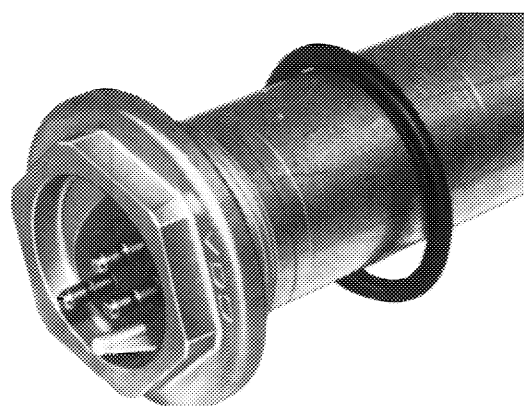

- b) Prior to inserting immersion tube transmitter, remove locking pin (arrow).
- c) Insert coupling and check operation of fuel gage (fuel readout).
- d) Install immersion tube transmitter and tighten to 35–43 Nm.
- e) Insert coupling for fuel gage (fuel readout).
- f) Check for leaks.

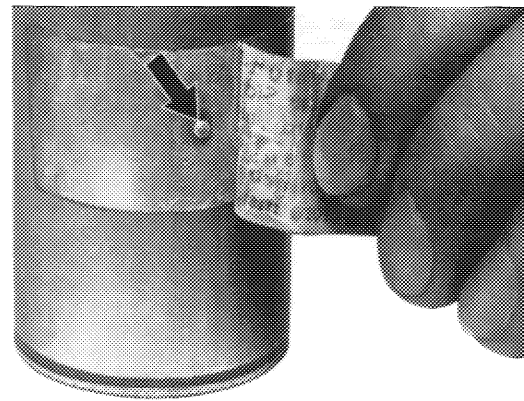


107-10702

### C. Model 123 T-sedan and special vehicles with special body

#### Removal


---

- 1 Loosen cargo room floor by turning tommy lock and remove.

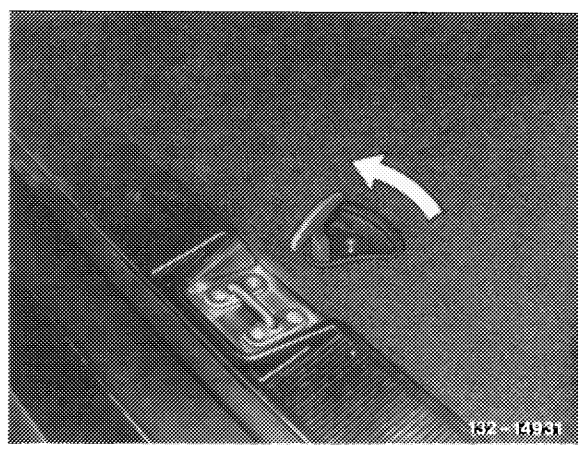

132-14931

- 2 Remove tray.

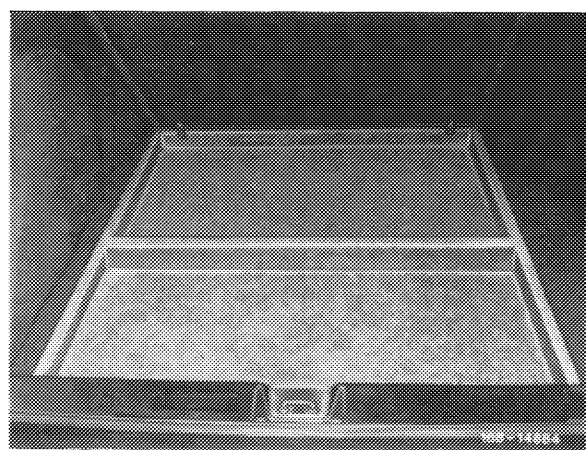

100-14685