


A. Models 107, 114, 115, 116 and 123

The steel plate wheel cover (5) is fastened by means of four holding springs (4) on steel plate and light alloy rim.

- 1 Rim
- 2 Balancing weight
- 3 Holding spring for balancing weight
- 4 Holding spring for wheel cover
- 5 Wheel cover

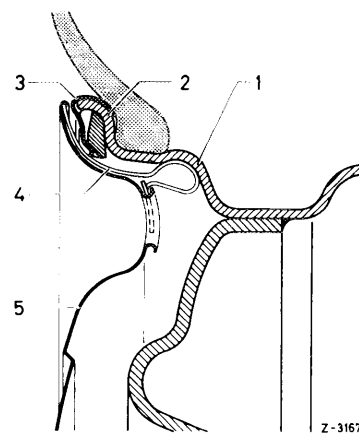


Z-3167

**Removing wheel cover**

Pull off wheel cover manually or by lever action by means of combination wrench for wheel assembly or push off outside on rim flange by means of a screwdriver.

- 1 Combination wrench for wheel assembly

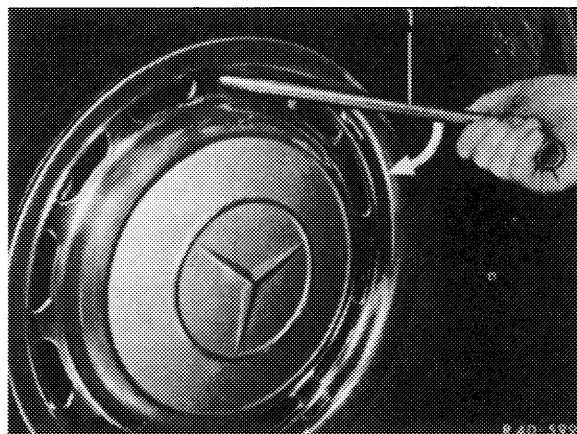

**Mounting wheel cover**

When mounting wheel cover, position cover against rim in such a manner that the valve is between two holding springs.

Then push-on ornamental wheel cover at first **vertically** to valve (*refer to arrow*) and then push-on at opposite side.

