

## 42–260 Cleaning of brake discs

---

### Special tools

---

Cleaning pads (4 each), 90 mm wide,  
for brake discs of front axle



116 589 00 28 00

---

Cleaning pads (4 each) for brake  
discs of rear axle

11004-7233

115 589 01 28 00

---

- 1 Remove brake pads (42–160).
- 2 Install cleaning pads (050).
- 3 Clean brake discs of front axle. **Cleaning pads installed on front wheel brake only.**
  - a) Drive pertinent wheel with a suitable drive unit (e.g. Finish-Balancer made by Hoffmann) and press cleaning pad several times quickly against brake disc by applying slight foot pressure against brake pedal.
  - b) Drive vehicle at a speed of approx. 30 km/h for a distance of 300 m and press cleaning pads quickly against brake discs by applying slight foot pressure of approx. 50 N against brake pedal.
- 4 Clean brake discs of rear axle. **Cleaning pads are installed on rear wheel brake only.** Drive vehicle at a speed of approx. 30 km/h for a distance of 300 m and press cleaning pads several times quickly against brake discs by applying slight foot pressure of approx. 50 N against brake pedal.


#### Attention!

**Do not operate brake in jerks, since it may tear the emery cloth from the cleaning pads.**

With the vehicle jacked up, do not drive rear wheels by means of engine or any other drive unit.

Due to the low speed and the resulting insufficient cleaning action, dynamometers and brake test benches are **not** suitable for cleaning brake discs.

- 5 Remove cleaning pads.
- 6 Install brake pads (42–160).

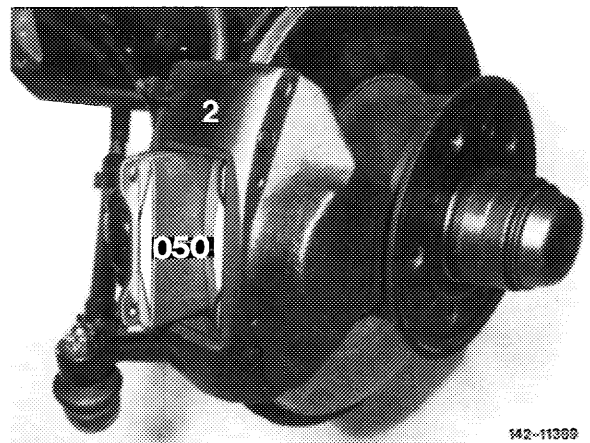

142-11389