

## Removal

1 Slightly raise instrument panel and introduce pulling hook, part No. 110 589 00 59 00 via instrument cluster center.

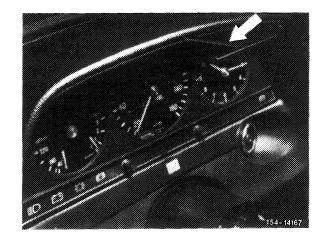


2 Move pulling hook to the right.

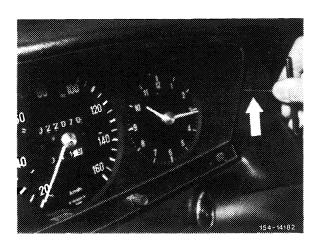

3 Engage at recess (arrow) and pull out slightly.


If tightly seated, the instrument cluster can be pushed out from the rear manually after removing cover below left (68–150).

The instrument cluster is held in instrument panel by means of rubber profile strip and suction effect.

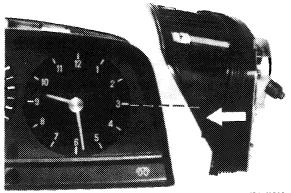


154-1153

4 Loosen tachometer shaft in engine compartment from holder.

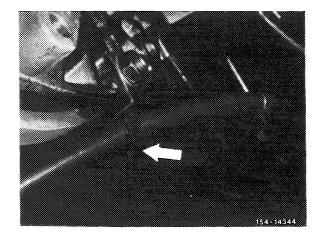


5 Unscrew knurled nut (1) of tachometer shaft. Pull off electric connections (2).

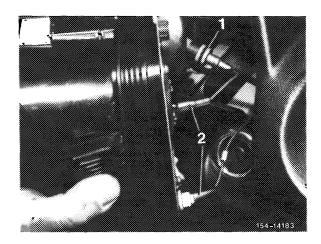

6 Disconnect line for oil pressure gauge (1), (apply counterhold with 2nd open-end wrench and remove instrument cluster toward the right).

## Installation

7 For installation proceed vice versa.

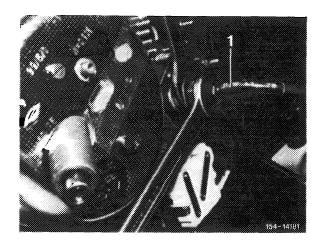

## Line-up of coupler

1 white/blue 10 brown/red/white 2 green 11 grey/green/purple 3 blue/black 12 grey/blue 13 black/green

14 black/white15 brown

6 blue/red 7 blue

8 brown/red

5 black/blue

9 brown/grey

