


Removal


- 1 Remove instrument cluster (54–250).
- 2 Pull off electrical connection.
- 3 Unscrew the 4 fastening screws (1).
- 4 Remove time clock.

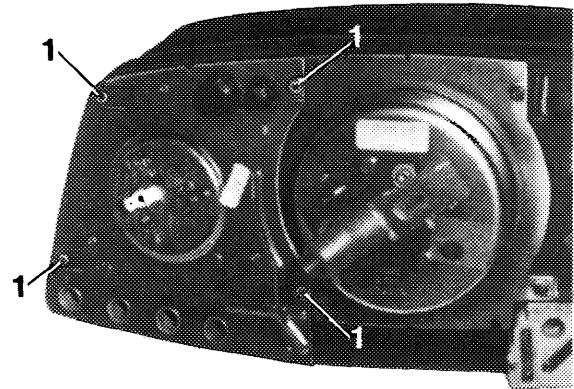

154-23199

Installation

- 5 For installation proceed vice versa.

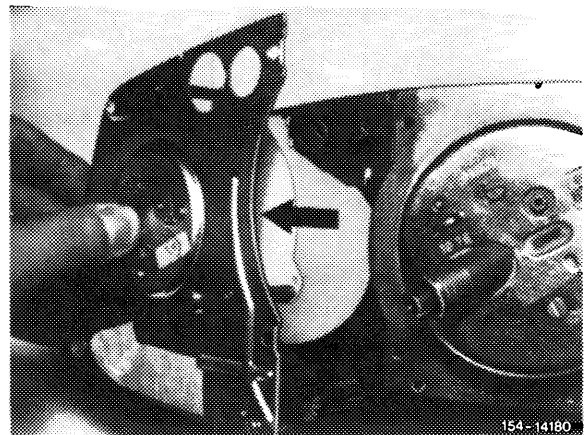

154-14160