


Removal


- 1 Unclip switch and remove.

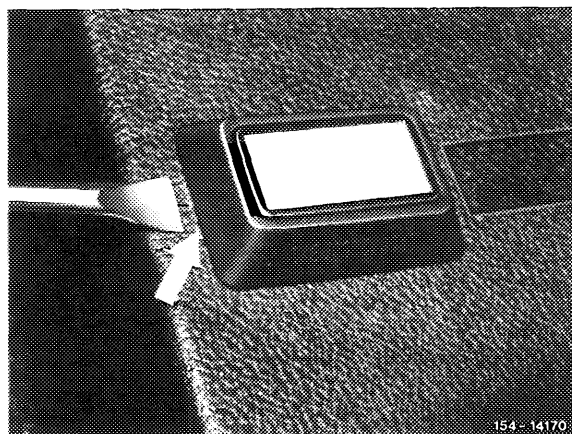

- 2 Pull off connecting coupler.

Installation

- 3 Plug on connecting coupler and push turnsignal lamp and warning flasher switch in recess.

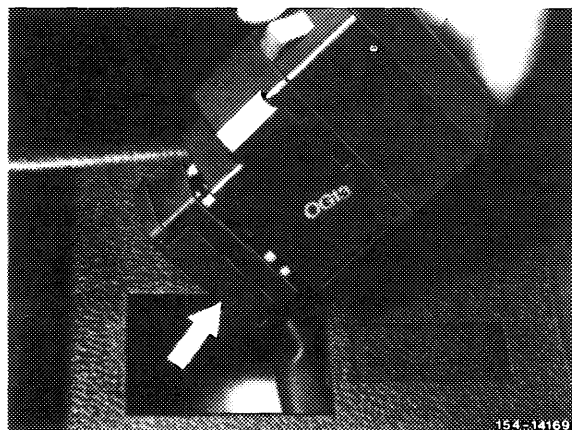

Renewing bulb for turnsignal lamp and warning flasher switch

- 4 Turn socket (1) counterclockwise by 90° and remove.
- 5 Replace bulb, insert socket into switch and turn clockwise by 90°.

