



Removal


1 Remove clipped-in cover (a screwdriver ground flat can be used as a tool).

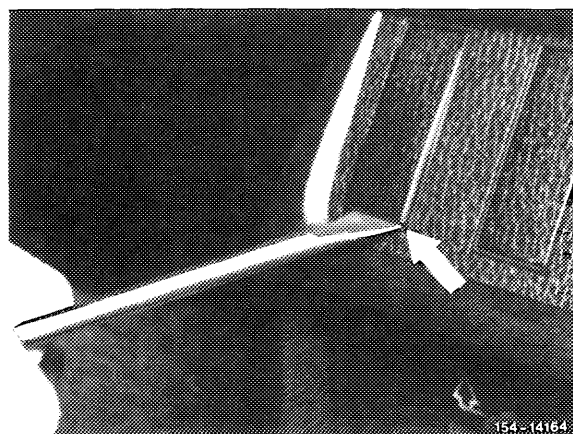

2 Remove switch of heatable rear window.

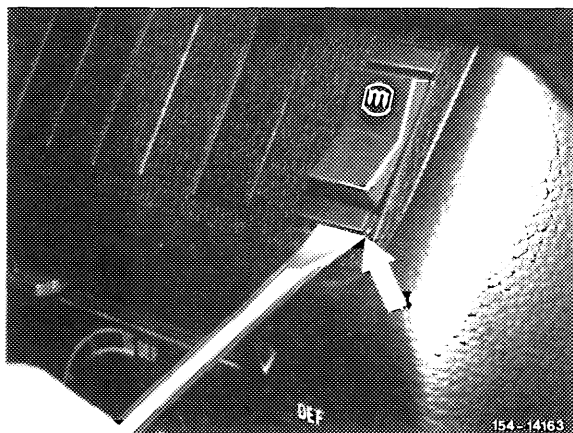

3 On 1st version the console is screwed on (arrows, Fig.), on 2nd version it is clipped in. Remove console canted in downward direction.

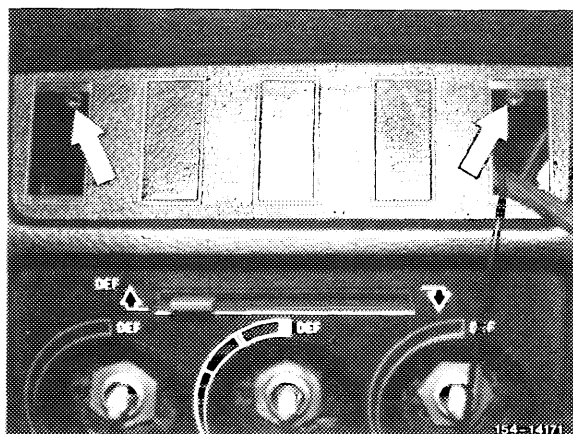

Installation

4 For installation proceed vice versa.