

## 54–391 Renewing bulb for ashtray light


---

1 Take ashtray out of holder.

2 Unscrew fastening screws (1) of ashtray top.

3 Pull off ashtray top.

4 Pull socket with bulb out of blade receptacle contact and exchange bulb.

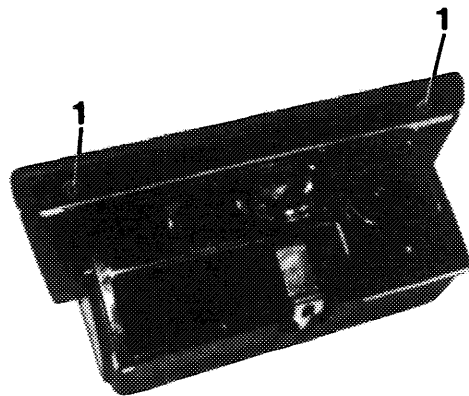

154–23321

5 For assembly of ashtray proceed vice versa.