



**Removal**

---

- 1 Press out rivet upper section with a screwdriver.

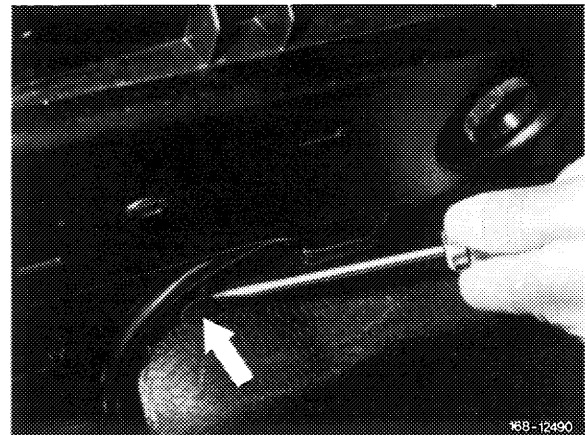


- 2 Press out rivet lower section with a screwdriver.

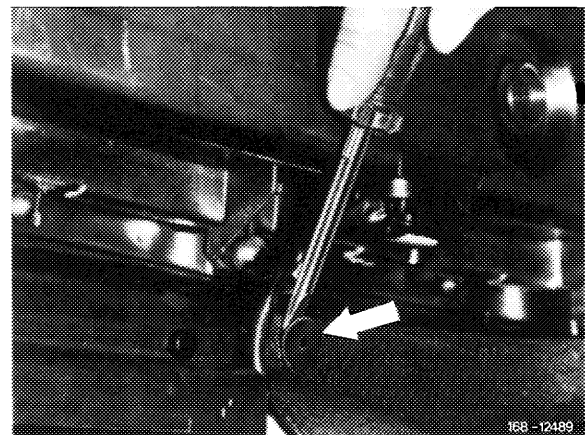


- 3 Remove front metal screw (only applicable to first models).


4 Detach cover at rear top.

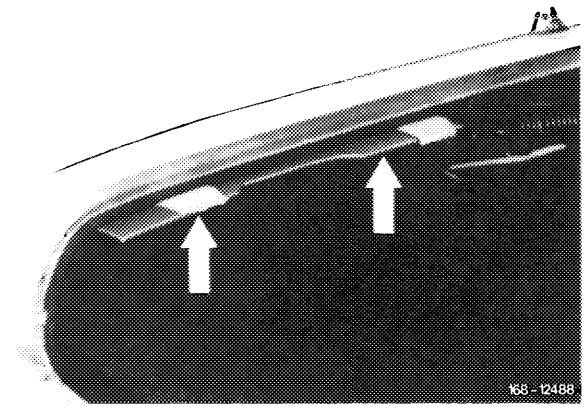

5 Pull down trunk lid a little and detach cover in area of hinge.

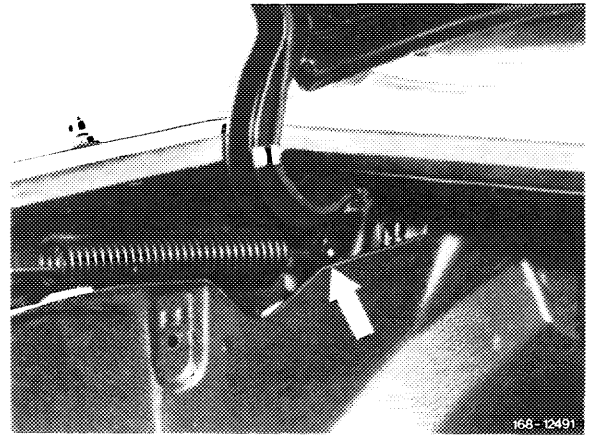

6 Pull cover out of partition, starting at top and then bottom.

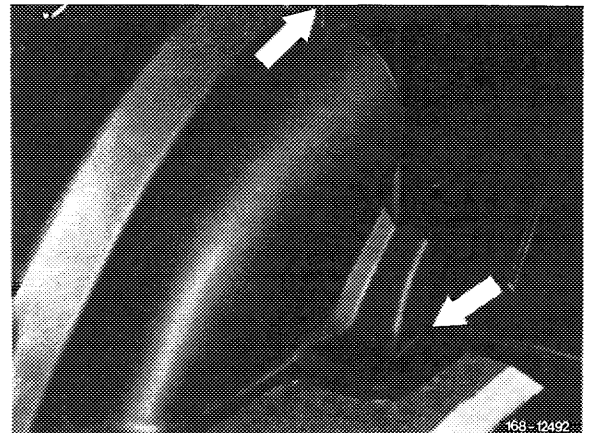

7 Tilt cover inward into trunk and remove.

### Installation

---

8 Install in reverse sequence.

