


72-160 Removal and installation of inner sealing rail

Removal

- 1 Remove door liner (72-100).
- 2 Press clips with sealing rail upward off of inside door panel.

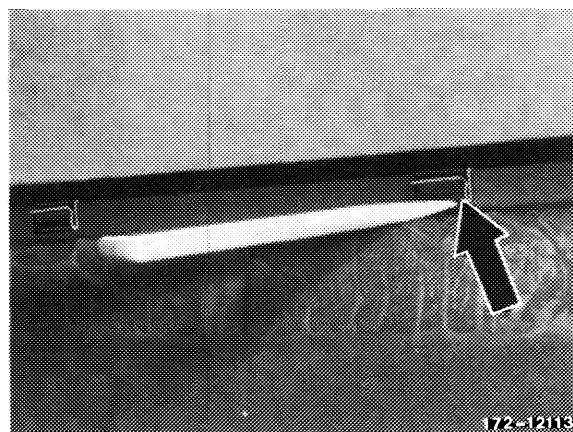

Installation

- 3 Install in reverse sequence.