


**Removal**

---

1 Remove crank operated window (72–190 or 72–191).

2 Pull window running rail out of seam on door frame and remove.

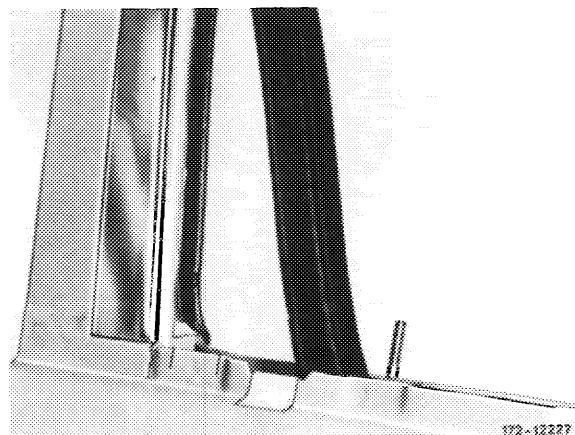

**Installation**

---

3 Install in reverse sequence.