

Note

Perform all jobs from inside vehicle.

- 1 Unscrew rosette of inside door handle and remove.
- 2 Unscrew upper fastening screw on back door lock.
- 3 On a welding wire of 2 mm dia, bend a right-angle hook of approx. 3 mm in length.

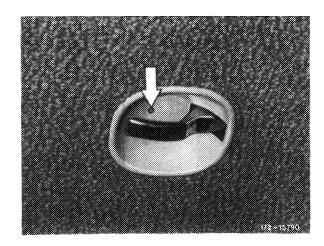

4 Slip welding wire with hook through tapped hole for upper fastening screw and attach to release lever. Pull back release lever with welding wire so that the trigger foot can snap back to its starting position.

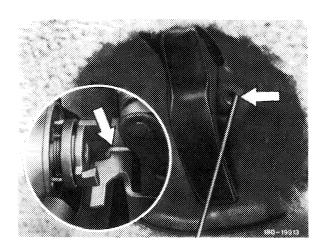

- 5 Pull key out of locking cylinder.
- 6 Screw in upper fastening screw on back door lock and tighten.
- 7 Check relief clearance and adjust, if required (72–255).

Note: If the relief clearance cannot be perfectly set, check back door lock and renew, if required.

8 Install rosette of inside door handle.