



Removal

1 Remove both license plate lights.

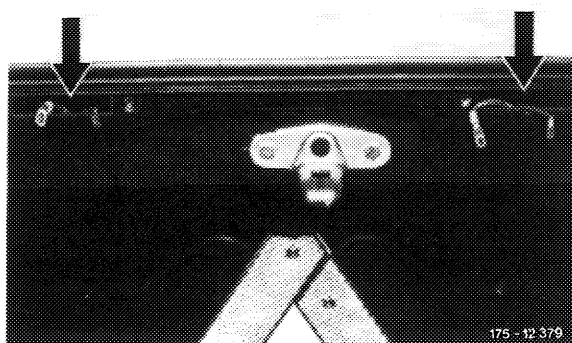


2 Remove trunk light with switch.


3 Unclip wires and pull out of trunk lid.

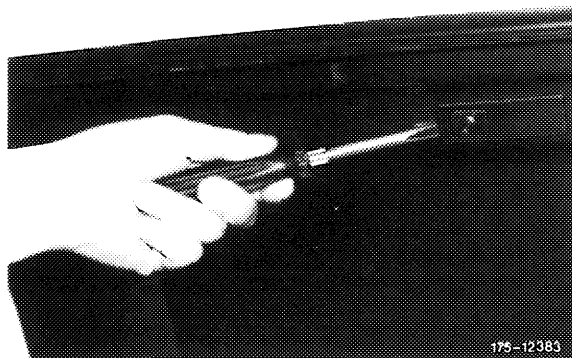

4 Place rags under both corners of trunk lid.

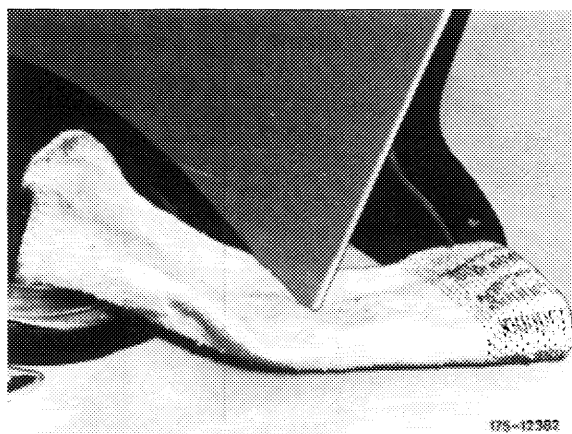


5 Unscrew both hinge screws on both sides and remove trunk lid.

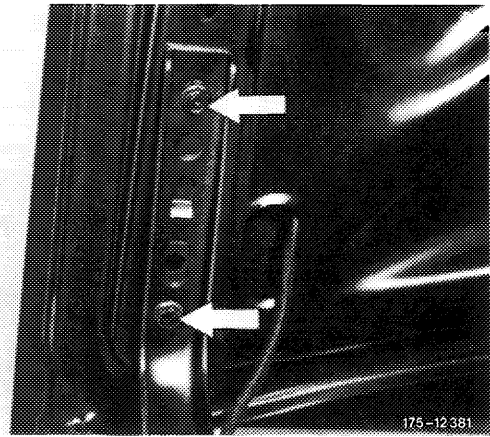

Installation

6 Bolt trunk lid to hinges and align lid before tightening screws.

7 Adjust lock upper section by installation of spacers, so that lid opens and closes correctly.

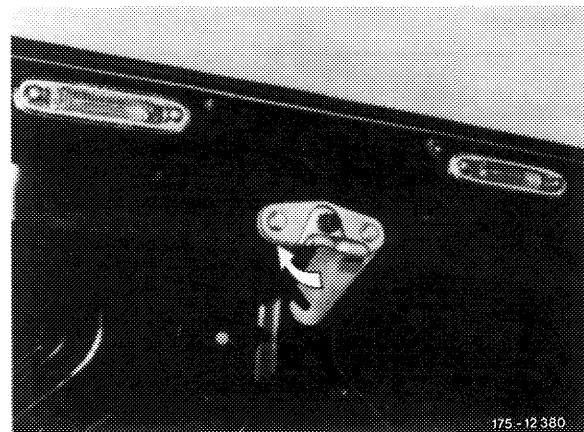

8 Continue installation in reverse sequence of removal.

Note: Check for leaks if trunk lid is replaced (97-830).