

80–250 Removal and installation of vacuum supply tank


A. Sedan and coupe

Color code of vacuum lines for central interlock

Vacuum line	color code	
	1st version	2nd version
Suction line from distributor in engine compartment to vacuum supply tank (96)	grey-yellow	yellow-grey

Removal


- 1 Pull suction line (96) out of seal (9).
- 2 Pull seal (9) out of vacuum supply tank (6).

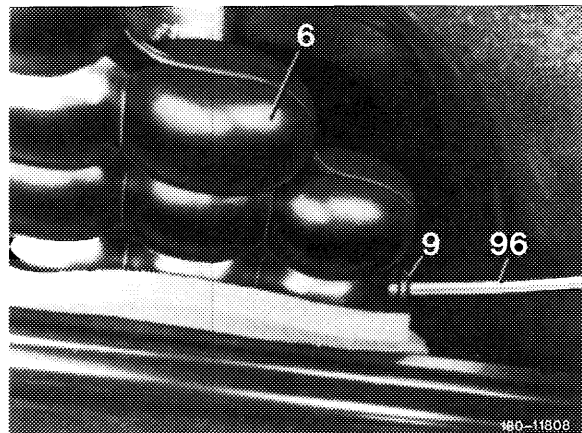

- 3 Pull out expanding rivet (14) and remove vacuum supply tank (6).
- 4 Pull off intermediate layer (20).

Installation

- 5 For installation proceed vice versa, while gluing on new intermediate layer.

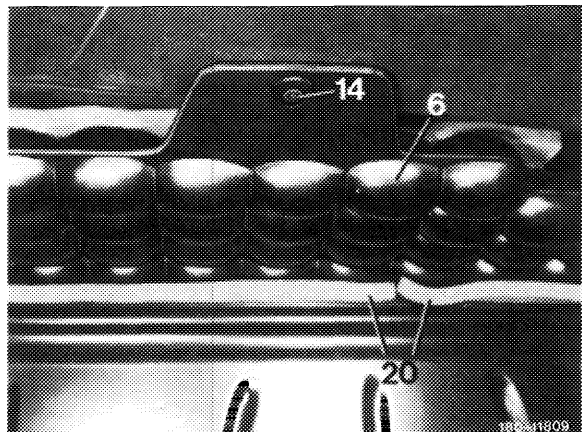


B. T-sedan

Color code of vacuum lines for central interlock

Vacuum line	color code
Suction line from distributor in engine compartment to vacuum reservoir (96)	yellow-grey


Removal

1 Remove trunk floor (44) and paneling (45) underneath.

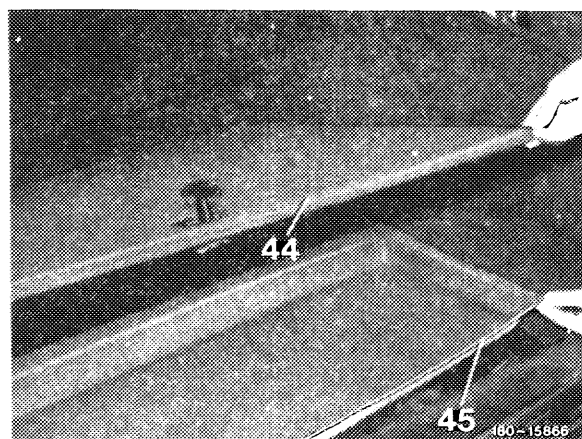


2 Pull suction line (96) out of connection (17).


3 Unscrew hex. nuts (68).

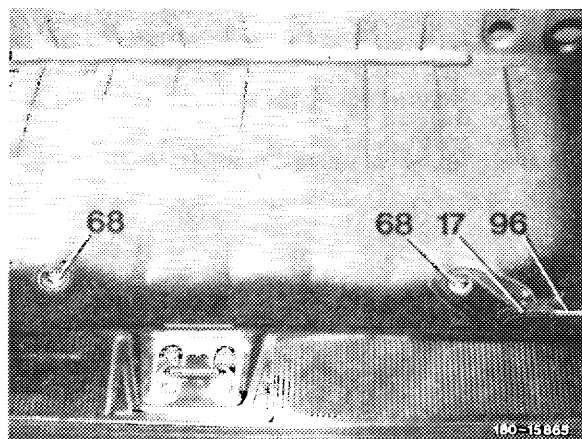

4 Remove vacuum reservoir (6) from below on body floor between fuel tank and rear cross member.

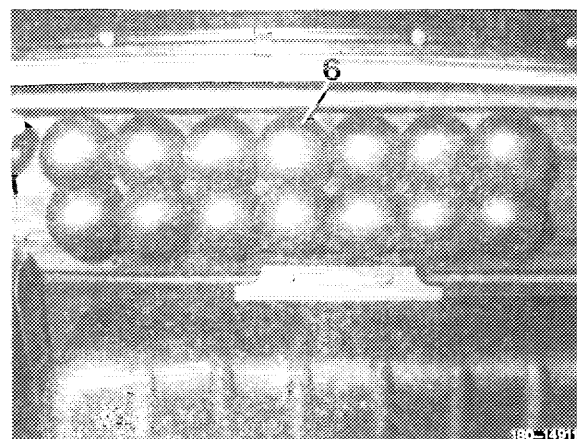

- 5 Remove spacing pipe (46) from stud (47).
- 6 Remove seal (48) and pull off connection (17).
- 7 Pull joint (49) and seal (9) out of vacuum reservoir (6).

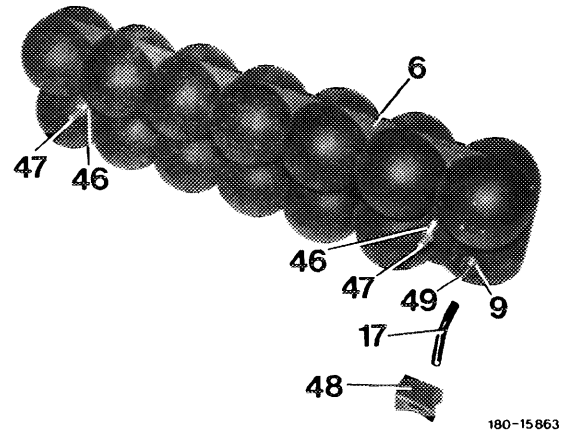

Installation

- 8 For installation proceed vice versa, using new seal (9) and seal (48).