


### Removal


---

- 1 Lift wiper arm from windshield glass.
- 2 Disengage lock of covering cap by a slight lifting of cap.

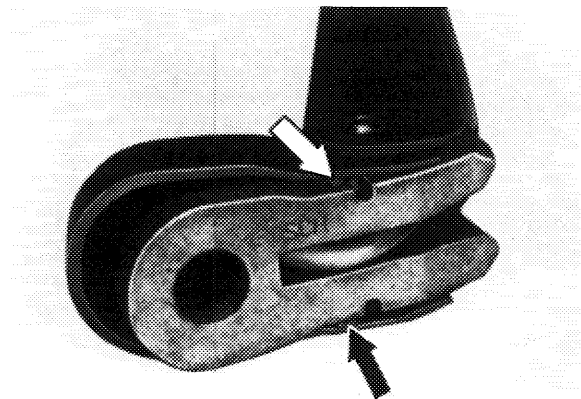

182-14189

- 3 Place wiper arm again against windshield glass while simultaneously completely lifting covering cap (1).
- 4 Unscrew fastening nut (2) and pull wiper arm from bearing shaft.

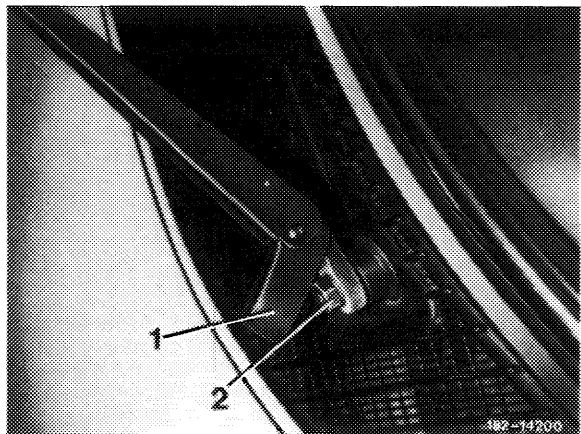

182-14200

### Installation

---

- 5 For installation proceed vice versa.