

### Removal

---

1 Set up wiper arm (8) together with wiper blade. Push down holding spring (11) on wiper blade (9) and remove wiper blade from wiper arm.

### Installation

---

2 Place wiper blade in reverse direction on wiper arm and push in until holding spring is audibly engaging.

