



Removal

- 1 Set engine hood vertically and put rag under corner of engine hood.
- 2 Secure engine hood with a rod.
- 3 Disconnect draw spring.
- 4 Remove hose for windshield washer from clips on engine hood.
- 5 Pull out safety device at bottom of hood support.

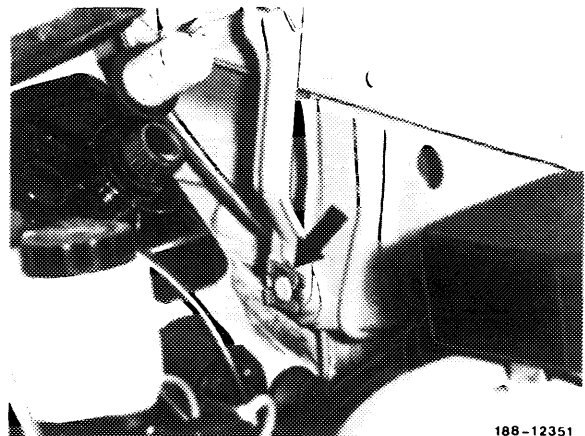

188-12351


- 6 Remove both screws from engine hood.

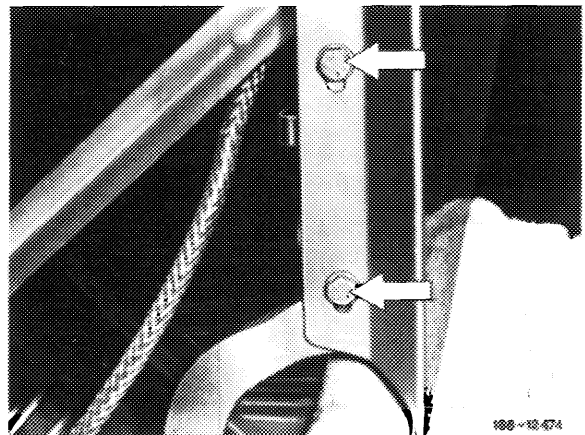

188-10-474


7 Pull engine hood support out of engine hood in forward direction and drill out rivet from below (drill 11 mm dia.).

8 Remove support.

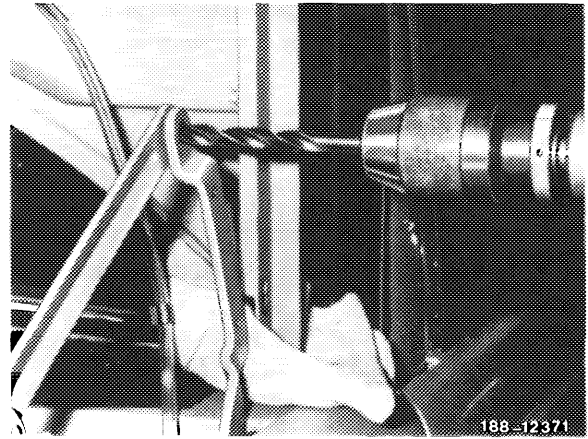

Installation

9 Attach hood support with collar screw part no. 120 948 00 33 and nut part no. 000 934 01 00 05 to hinge lever. Insert existing washer at the same spot in-between the hinge plate and the hood support.

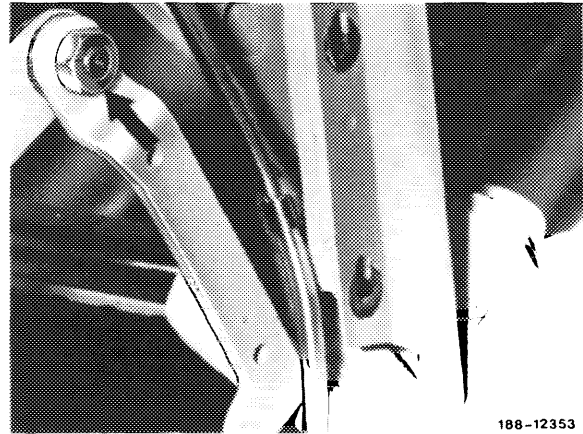

10 For further installation proceed vice versa.