


## 88-401 Removal and installation of radiator grille

---

### Removal

---


- 1 Remove radiator shell (88-400).
- 2 Unscrew sheet metal screw at bottom – center.
- 3 Unscrew both rubber buffers.

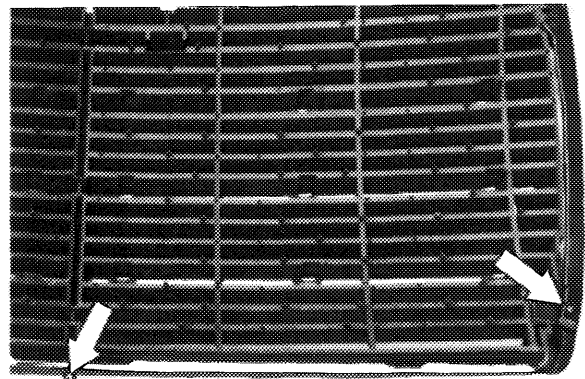

188-12782

- 4 Slide clip toward center, lift diagonally across web of radiator grille and push out.


**Attention!**  
Clips are under tension.

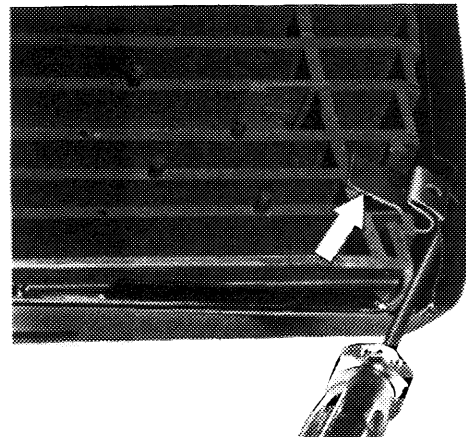

188-12781

- 5 Push both upper holding lugs of radiator grille out of radiator shell.


- 6 Lift radiator grille out of radiator shell and pull out in downward direction.

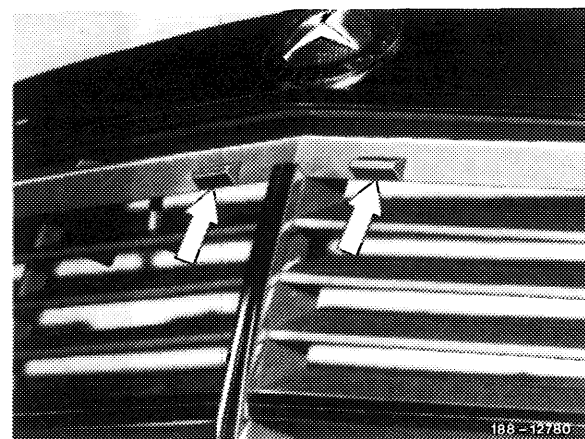

188-12780


7 Pull trim strips at radiator grille laterally out of cam.

Radiator grille 1st version

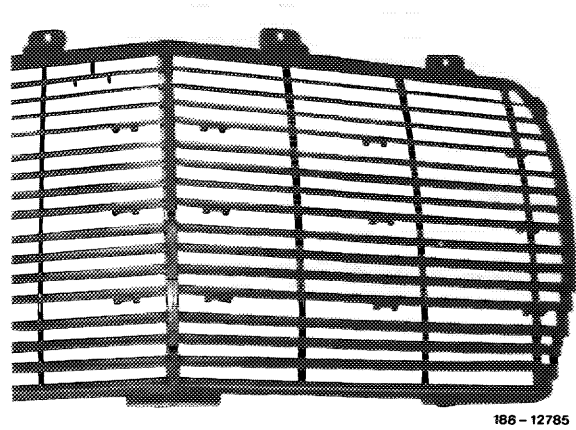

**Note:** Radiators grille 2nd version are provided with a bore adjacent to cam to which the trim strips are attached with clips during repairs. For this purpose, cut off cam (88-402).

Radiator grille 2nd version

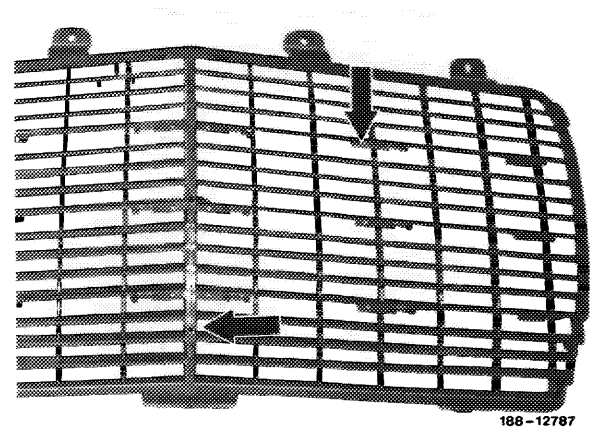

### Installation

---

For installation proceed vice versa.

**Note:** When installing radiator grille, make sure that the trim strips are not damaged.