

Radiator grille 1st version

Removal

- 1 Remove radiator grille (88—401) and pull out trim strip in lateral direction.

Installation


- 2 For installation proceed vice versa.

Note: Make sure that during installation of radiator grille the trim strips are not damaged.

Radiator grille 2nd version

Removal

- 1 Lift damaged trim strip with plastic wedge or the like from cam and remove.

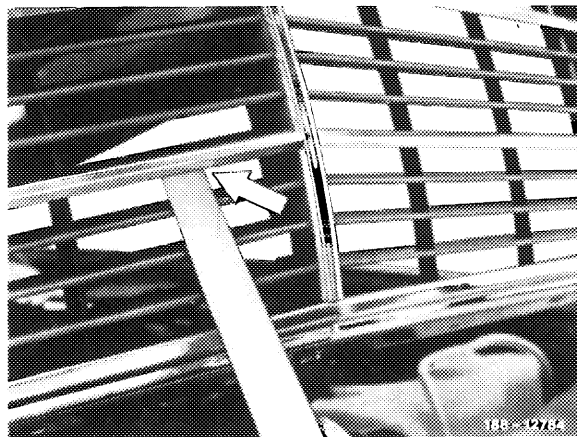

- 2 Cut off cam.

Installation

- 3 Install new trim strip with plastic clips.

