


### Removal


---

- 1 Unscrew both screws.

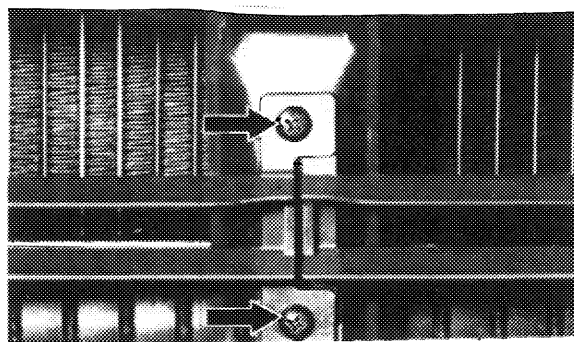

188 - 12370

- 2 Pull out respective grille half.

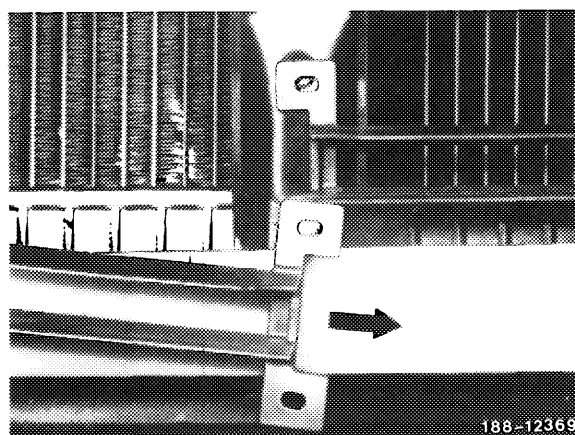


188 - 12369

### Installation

---

- 3 Attach air flow grille outside and reattach with both screws.

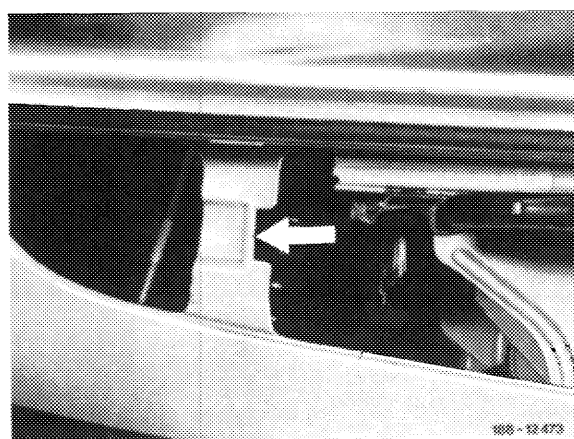

188 - 12473