

91–119 Remove and install vacuum switch of driver's seat back (coupe)


Color coding of the vacuum lines for seat back locking system

Control line


light blue

Remove


- 1 Remove tension part of the driver's seat back.
- 2 Pull connection piece (17) with control line off vacuum switch (46).
- 3 Remove clamp spring (114).

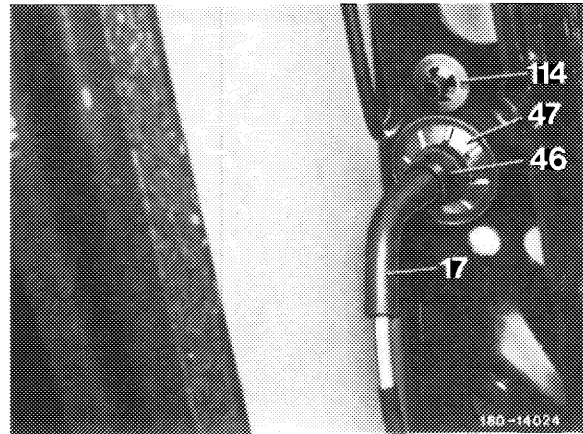

- 4 Remove clover (113) at the driver's seat back.

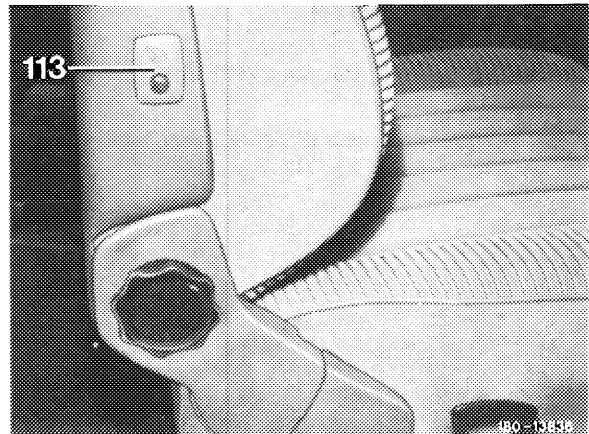


- 5 Cut clamp spring (47) and pull vacuum switch (46) out of driver's seat back.

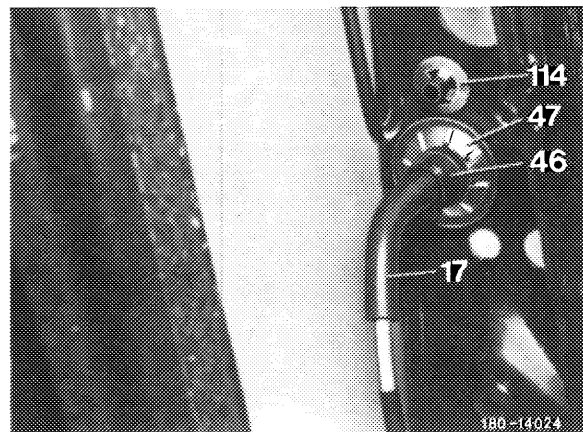


Install

- 6 Insert vacuum switch (46) into driver's seat back.
- 7 Fit new clamp spring (47) to vacuum switch (46).

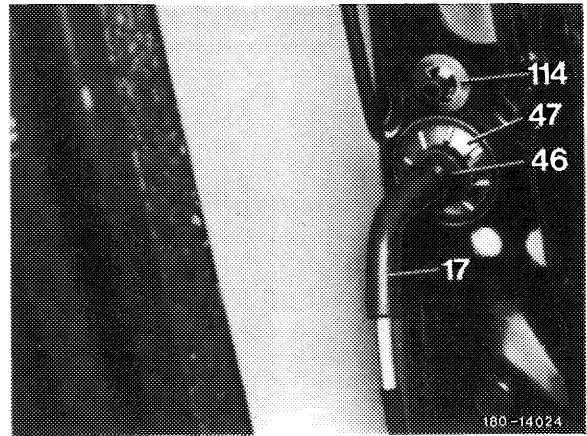

- 8 Fit cover (113) into driver's seat back.

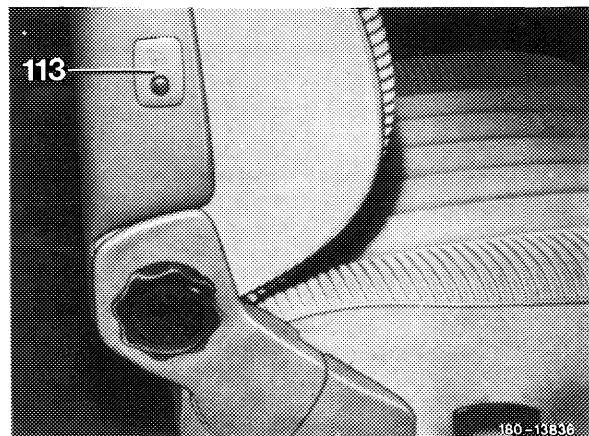

- 9 Fit clamp spring (114).
- 10 Push on connection piece (17) with control line.
- 11 Install tension piece of driver's seat back.

