


A. Sedan

**Removal**


---

1 Push safety hook up to stop toward the rear and lift rear seat at the front.

2 Lift rear seat cushion in upward direction (center armrest should not be folded out).

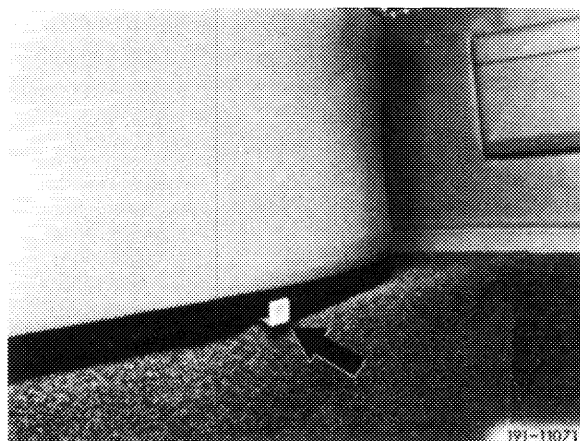


3 Remove screws at rear seat backrest left and right.

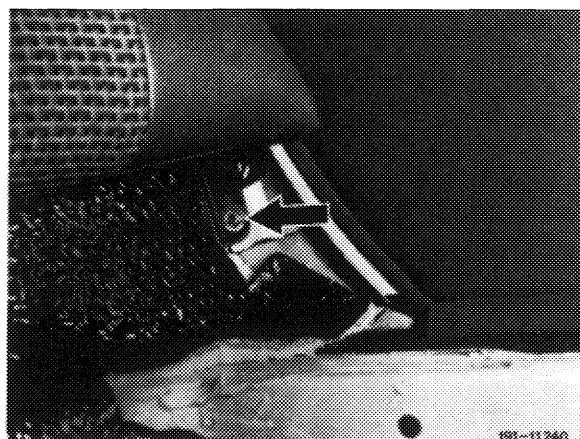

4 Pull out center armrest and remove screw behind.


5 Lift rear seat backrest in upward direction.

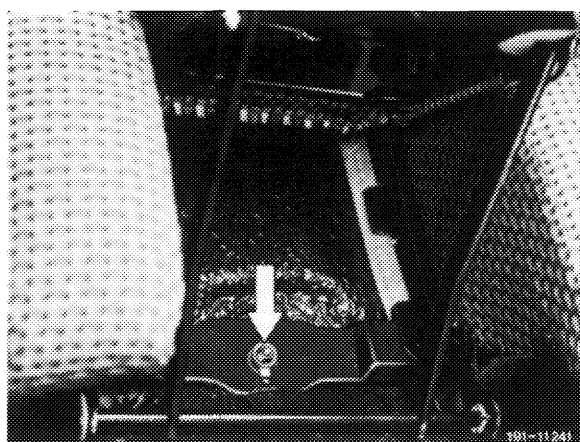


## Installation

---

6 For installation proceed vice versa, making sure that the rear seat backrest is attached to all the three loops.

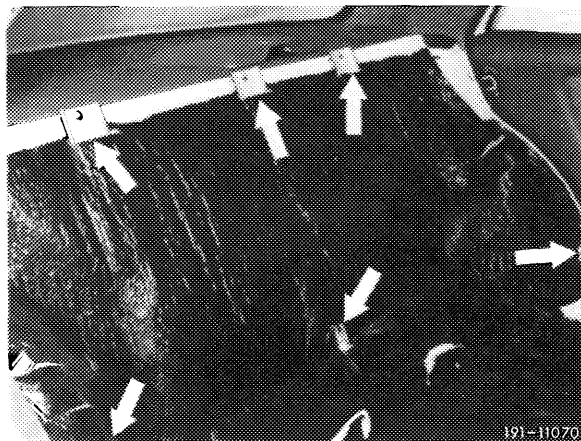

7 Slide rear seat cushion with rear edge up to stop under rear seat backrest and push down until seated at the front.


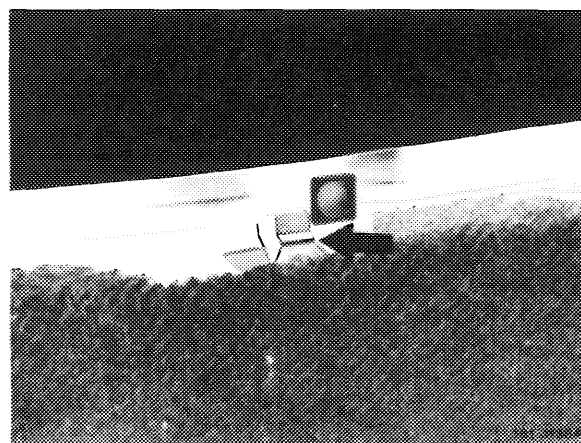


## B. T-Sedan


### Removal

---


- 1 Push locking lever down and fold rear cushion up.
- 2 Push red safety button at left and right on bottom of rear seat cushion in upward direction and remove cushion (arrow).

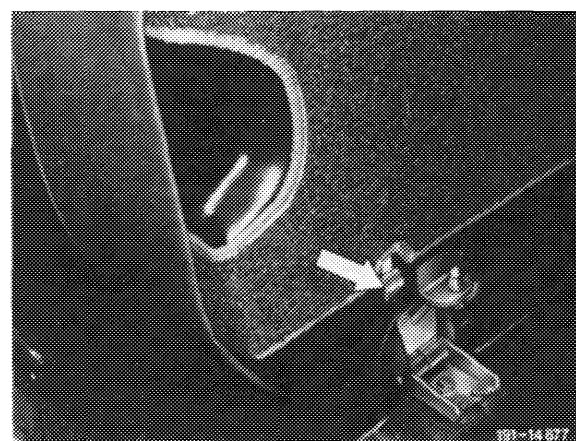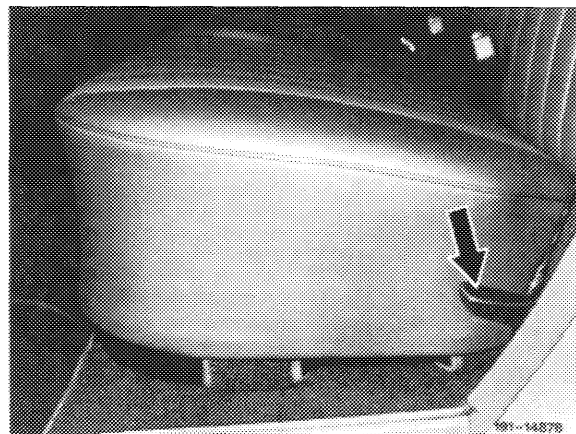

3 Push out cover at left and right adjacent to rear seat backrest by means of a plastic wedge.

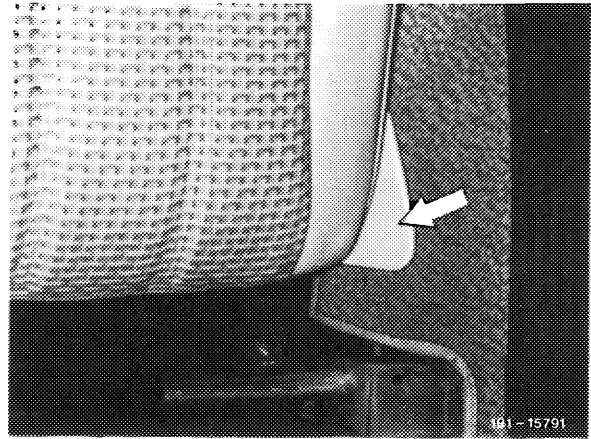

4 Unscrew fastening screws at left and right on rear seat backrest and pull out backrest in upward direction.

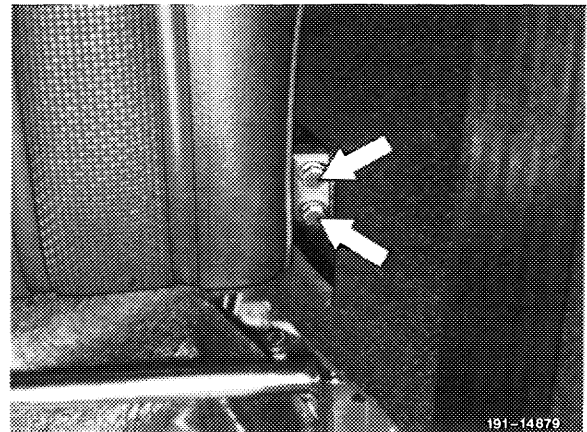

### Installation

---

5 Install rear seat backrest.

6 Push rear seat cushion into both folding hinges and engage.

