


83–115 Removal and installation of water valve for heater

Removal


1 Drain approx. 2 litres of cooling water.

2 Loosen all hose clips on water valve.

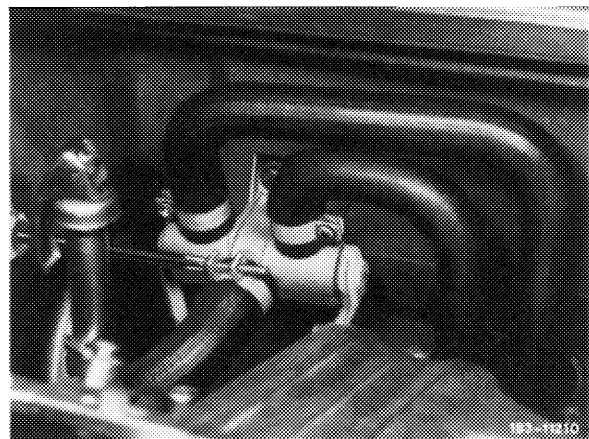

3 Pull off heater hoses and disconnect both wires.

4 Turn out screw and remove water valve from front wall.

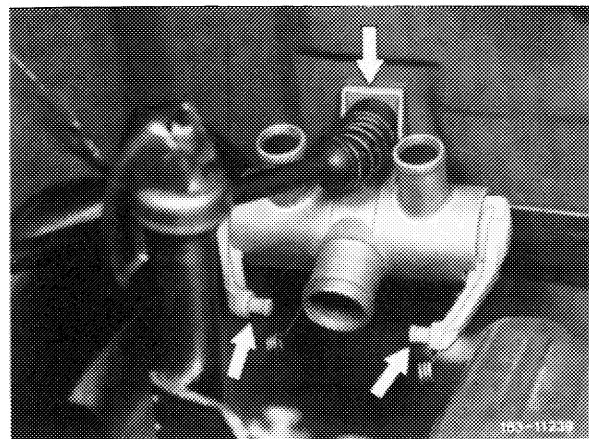

Installation

5 For installation proceed vice versa.