

## 83–645 Removal and installation of temperature sensor for heat exchanger

---

### Data

---


Resistance at + 15 °C ambient temperature	15.7 ± 0.5 kΩ
+ 25 °C	10.0 ± 0.5 kΩ
+ 35 °C	6.5 ± 0.5 kΩ
+ 80 °C	1.5 ± 0.5 kΩ

---

### Removal

---

- 1 Control unit (83–635).
- 2 Pull 2-point coupling from temperature sensor (6) and then pull temperature sensor out of heater box.

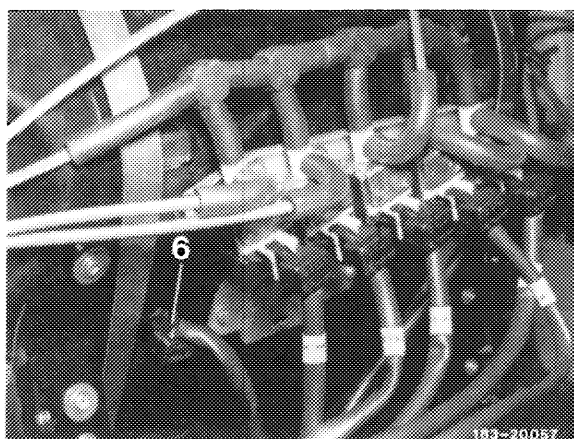

### Installation

---

- 3 Test temperature sensor (6) with ohmmeter. Then slip sensor into heater box and mount 2-point coupling.
- 4 Install control unit (83–635).
- 5 Check automatic climate control for function.

