

## 83–650 Removal and installation of ETR-switch

---

### Data

Shutoff point of refrigerant compressor

2 °C (36 °F)

---


### Note

Changing adjustment of ETR-switch in direction "colder" is not permitted. In the event of operational trouble or a wrongly adjusted shutoff point, always replace switch.

### Removal

---

- 1 Remove cover at the right under instrument panel.
- 2 Pull off electrical flat plug.

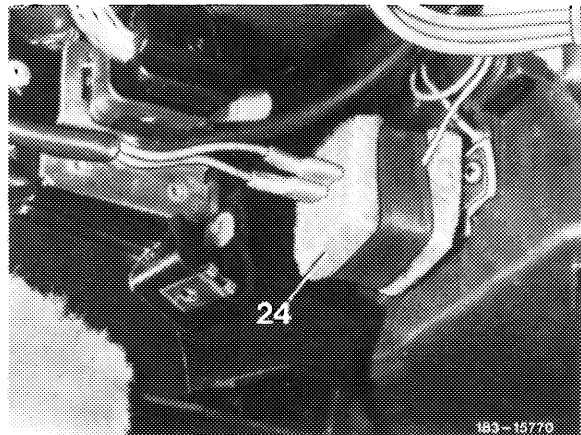

24 ETR-switch

- 3 Unscrew two screws at the right and left of ETR-switch (24).
- 4 Carefully pull ETR-switch (24) to the rear and then pull capillary of ETR-switch out of guide tube in air conditioner cabinet.

### Installation

---

- 5 Slip capillary of ETR-switch up to red mark into guide tube in air conditioner cabinet.
- 6 Screw ETR-switch (24) with two screws to air conditioner cabinet, then mount insulating housing on ETR-switch and attach with insulating tape.
- 7 Mount electrical flat plug.
- 8 Reinstall cover under instrument panel.
- 9 Check operation of automatic climate control (83–601).