

Data

Cutout temperature °C


0 ± 1

Note

Changing adjustment of ETR switch in direction of “colder” is not permitted. In the event of trouble or if the cutout point is not correctly set, always replace switch.

Removal

- 1 Remove righthand cover under instrument panel (68– 150).
- 2 Pull off electric flat plug and unscrew screws at the right and left from ETR switch (29).
- 3 Carefully pull ETR switch (29) toward the rear and then pull capillary from ETR switch out of guide tube in air conditioner housing, making sure that a counterhold is applied to guide tube.

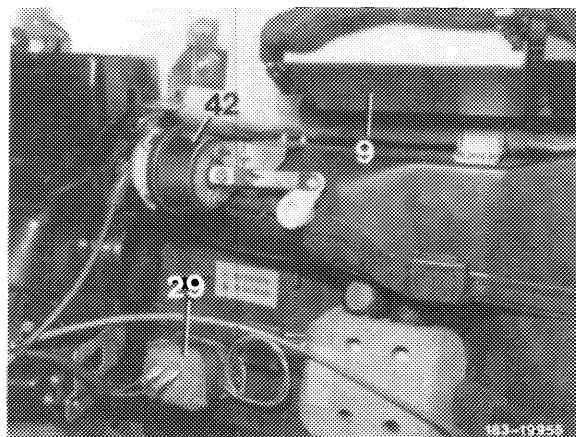

Installation

- 4 Slip capillary of ETR switch up to red mark into guide tube in air conditioner housing.
- 5 Screw ETR switch (29) to air conditioner housing by means of 2 screws.
- 6 Mount electric flat plug.
- 7 Install righthand cover under instrument panel.
- 8 Check automatic climate control for function (83–607).

