



Removal

- 1 Remove optional switch.
- 2 Remove cover for optional switch.
- 3 Pull off vacuum lines from switchover valve (13, 14, 15, 17, 18), check color code of vacuum lines first and mark, if required.

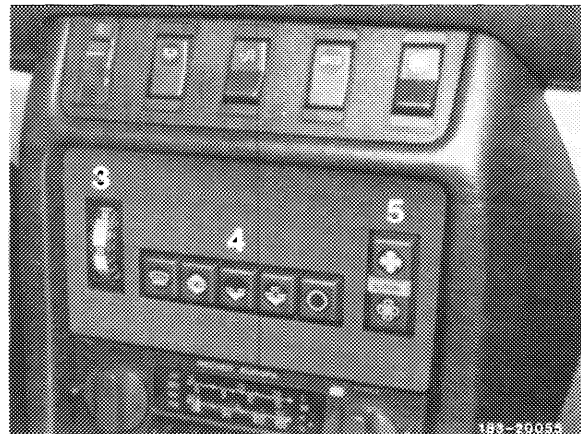

- 4 Pull off electric coupling (2-point) and unscrew switchover valve from holder on air conditioner housing.

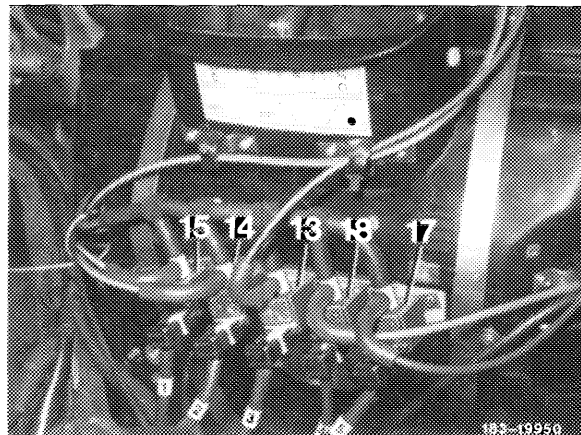

Switchover valves for
13 Center nozzle flap
14 Legroom flap
15 Defroster nozzle flap
17 Main air flap
18 Fresh air-recirculating air flap

Installation

- 5 Check switchover valves (83-628).
- 6 For installation proceed vice versa while paying attention to electric wiring diagrams and vacuum circuit diagrams.
- 7 Check automatic climate control for function.