

83–675 Removal and installation of electronic switching unit for temperature control

Removal

- 1 Remove glove box (68–140).
- 2 Unscrew electronic switching unit for temperature control (9) from holder and pull off electric coupling.
- 3 For installation proceed vice versa.
- 4 Check automatic climate control for function.

