

REAR WIPER/WASHER

		Page-Figure
Fuse Box	LH rear corner of engine compartment	103-1
Rear Interval Wipe Control	In lower RH side of tailgate	203-1
Rear Washer Motor	Behind fuel tank intake tube	207-2
Rear Wiper Motor	Lower middle of tailgate	203-1
C136 (8 terminals)	Top center of tailgate frame	208-2
C139 (4 pins)	Ahead of RH rear light assembly	207-2
C103	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

RH OUTSIDE MIRROR

Fuse Box	LH rear corner of engine compartment	103-1
G102	Behind instrument cluster	209-4

SEAT BACKREST LOCKING SYSTEM

Door Switches	In each door jamb	
Fuse Box	LH rear corner of engine compartment	103-1
Switchover Valve	Under LH side of I/P	
Warning Module	To right of parking brake support	207-1
C160 (1 pin)	In RH door of coupe	
C161 (1 pin)	In RH door of coupe	
G102	Behind instrument cluster	209-4

START/STOP (IGNITION SWITCH)

Fuel Shutoff Diaphragm	Rear of fuel injection pump	206-1
Ignition Switch	Instrument panel, right of steering column	208-1
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	204-1
C105 (3 terminals)	On RH fender well forward of battery	211-1
C146 (4 pins)	Beside upper console above accelerator pedal	210-6
G100	RH front fender, ahead of battery	211-1

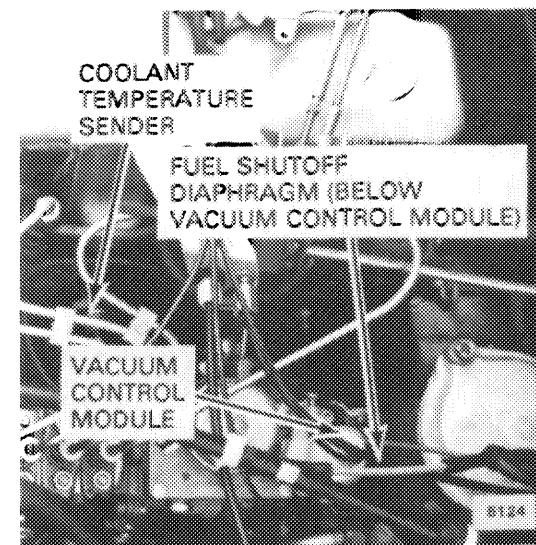


Figure 1 - LH Rear of Engine



Figure 2 - LH Front Wheel Well

REVISIONS:

COMPONENT LOCATIONS

2/83

STOPLIGHTS/CRUISE CONTROL

		Page-Figure
Brake Switch	Top of brake pedal support	
Cruise Control Actuator	LH front of engine	210-5
Cruise Control Amplifier	To right of parking brake support	207-1
Cruise Control Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	103-1
Vehicle Speed Sensor	Mounted on rear of speedometer	209-5
C104 (14 pins)	Under LH side of instrument panel	207-1
C138 (4 pins)	To left of spare tire	209-1
C139 (4 pins)	Ahead of RH rear light assembly	207-2
C140 (6 pins)	To left of brake pedal support	207-1
C164 (8 pins)	On LH front wheel well	206-2
G102	Behind instrument cluster	209-4
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104		
(300 D/CD)	Ahead of RH rear light assembly	209-3
(300 TD)	Ahead of RH rear light assembly	207-2

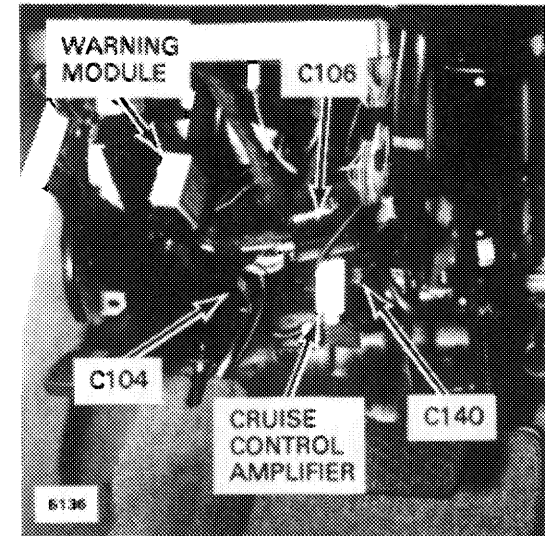


Figure 1 - Above Driver's Footwell

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH side of steering column	204-2
Flasher	In center console forward of shift lever	
Fuse Box	LH rear corner of engine compartment	103-1
Hazard Switch	On center console	
C104 (14 pins)	Under LH side of instrument panel	207-1
C106 (14 pins)	To left of brake pedal support	207-1
C138 (4 pins)	To left of spare tire	209-1
C139 (4 pins)	Ahead of RH rear light assembly	207-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	211-2
G102	Behind instrument cluster	209-4
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104		
(300 D/CD)	Ahead of RH rear light assembly	209-3
(300 TD)	Ahead of RH rear light assembly	207-2

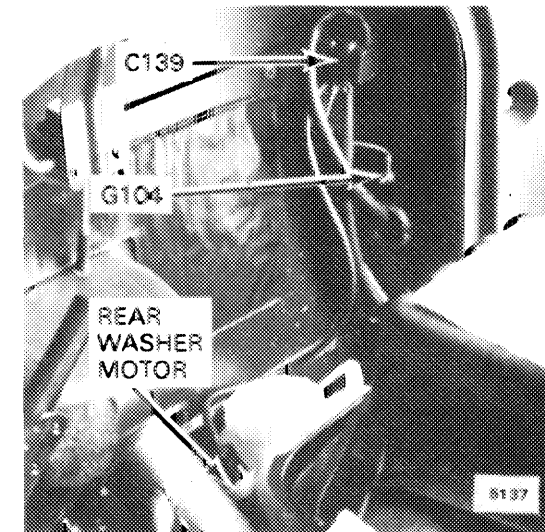


Figure 2 - In Front of RH Rear Lights (TD only)

123.133/.153/.193

REVISIONS:

207

**WARNING INDICATORS/GAUGES/CLOCK/
INSTRUMENT CLUSTER ILLUMINATION**

Page-Figure

Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	LH side of cylinder head	206-1
Diagnostic Socket	LH front wheel well	206-2
Engine Speed Sensor ①	On LH side of bell housing	212-1
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	103
TDC Sensor	Front of engine, above vibration dampener	
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box	201-2
C132 (2 pins)	Behind RH front wheel well, at battery	
C153 (2 pins)	LH front wheel well	206-2
C155 (2 pins)		
Federal	Left of brake booster	212-2
California	Center of firewall	211-3
G101	RH front fender, behind headlights	211-2
G102	Behind instrument cluster	209-4
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1

WARNING SYSTEM

Brake Fluid Level		
Switches	Brake fluid reservoir	201-2
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	LH rear corner of engine compartment	103
Key Warning Switch	Part of ignition switch	208-1
Parking Brake Switch	On parking brake support	
Warning Module	To right of parking brake support	207-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box	201-2
G102	Behind instrument cluster	209-4

WIPER/WASHER

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	103
Interval Wipe Control	Behind LH side of instrument cluster	209-4
Washer Motor	Bottom of washer fluid reservoir	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	207-1
C112 (6 pins)	To upper right of power brake booster	209-6
C141 (4 pins)	Behind LH headlight assembly	
G102	Behind instrument cluster	209-4

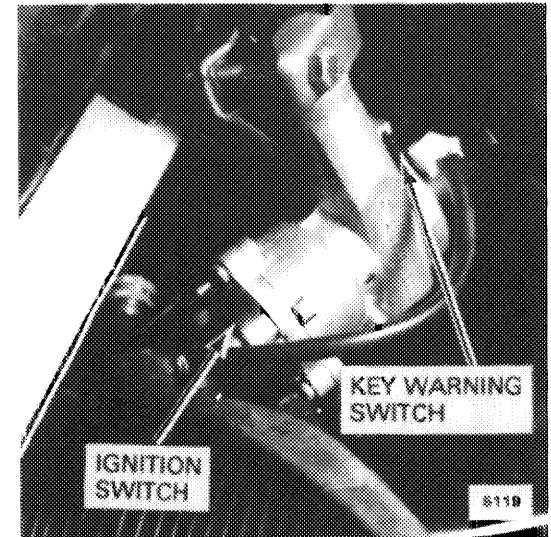


Figure 1 - Ignition Switch (As Seen From Below)

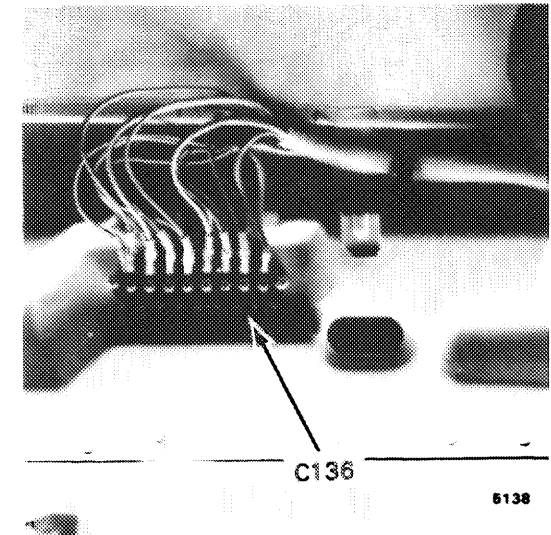


Figure 2 - Top of Tailgate Frame

REVISIONS: ① AS OF MODEL YEAR 1984

COMPONENT LOCATIONS

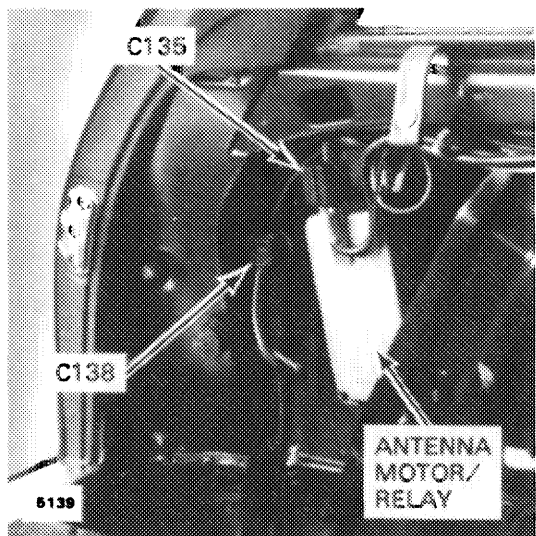


Figure 1 - Spare Tire Well (TD only)

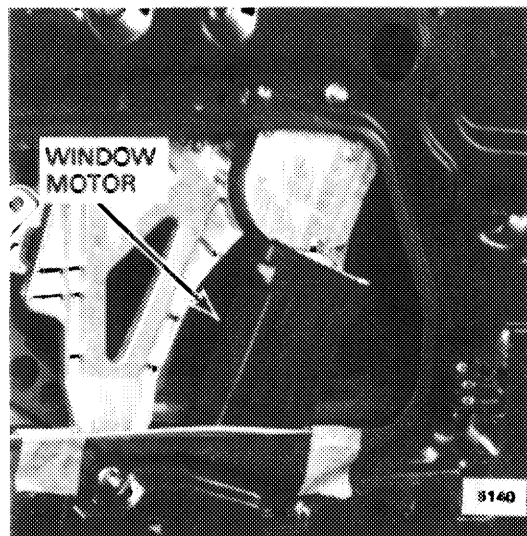


Figure 2 - Inside Driver's Door

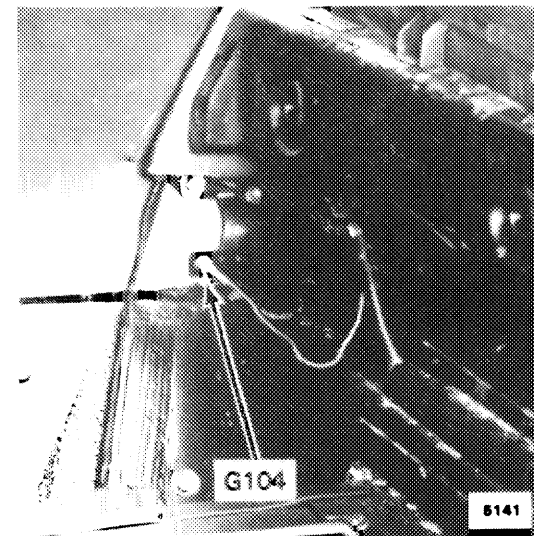


Figure 3 - In Front of RH Rear Lights (D/CD only)

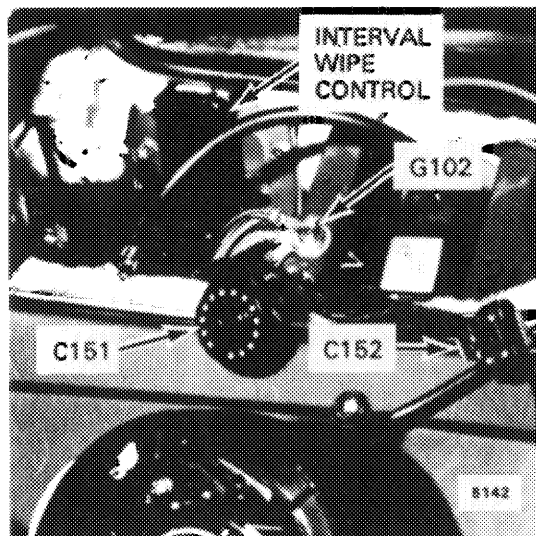


Figure 4 - Behind Instrument Cluster

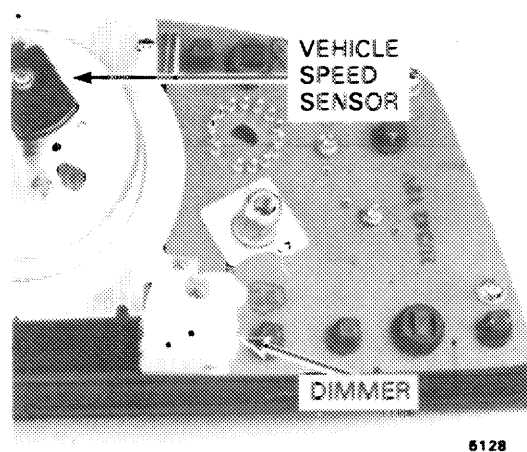


Figure 5 - Back of Instrument Cluster

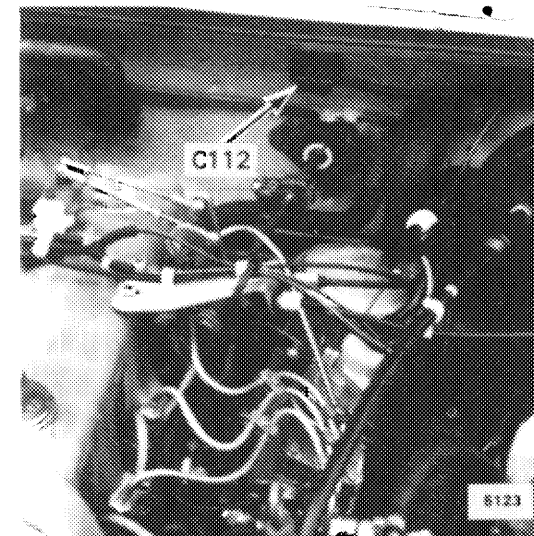


Figure 6 - Right of Power Brake Booster

REVISIONS:

COMPONENT LOCATIONS

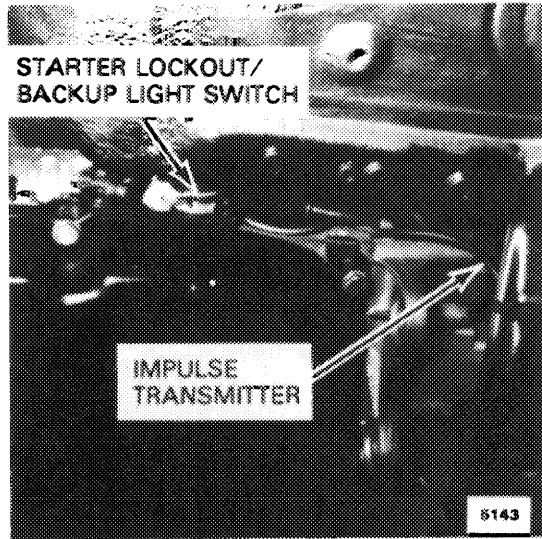


Figure 1 - LH Rear of Transmission (All 300 Models)

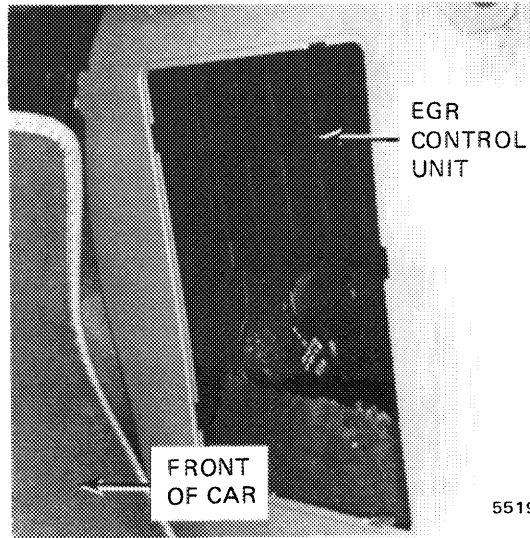


Figure 2 - Behind RH Kick Panel

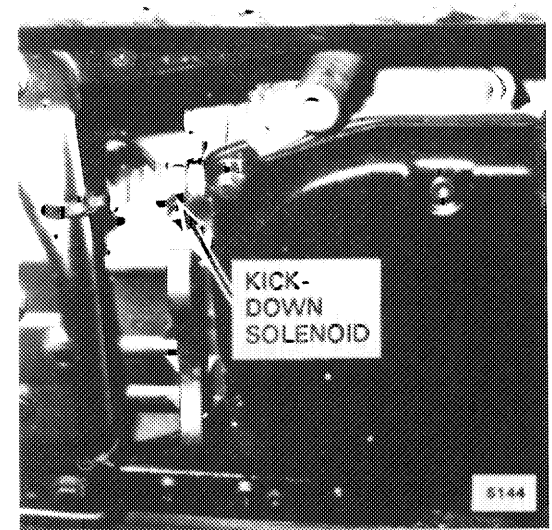


Figure 3 - RH Rear of Transmission (All 300 Models)

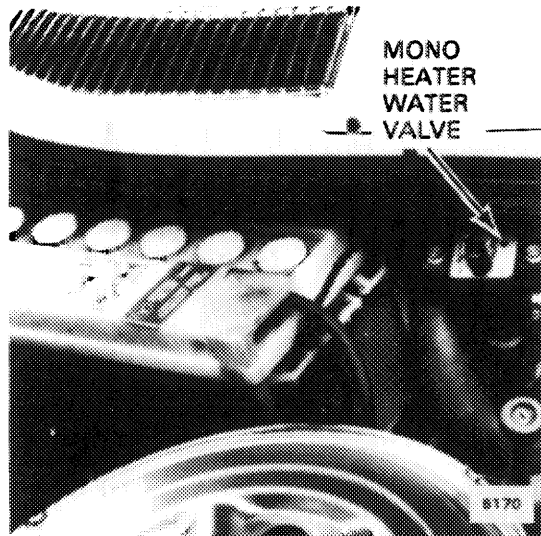


Figure 4 - RH Rear Corner of Engine Compartment

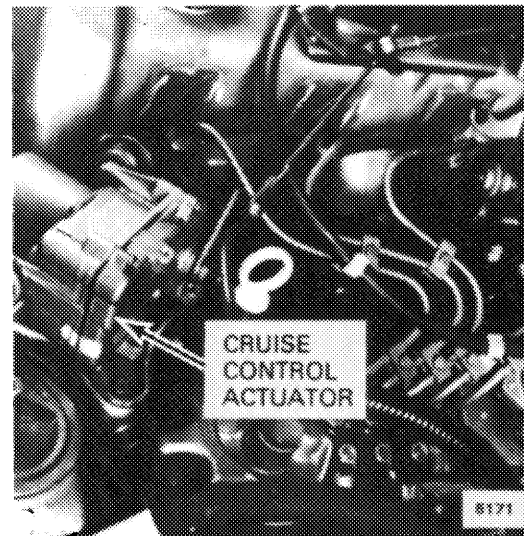


Figure 5 - LH Front of Engine (TD only)

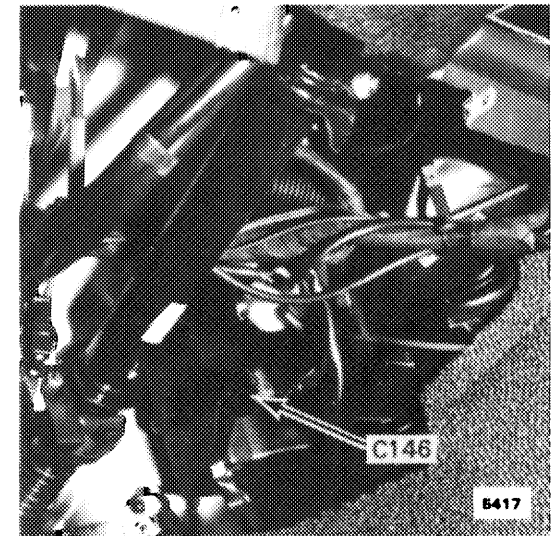


Figure 6 - To Right of Steering Column

REVISIONS:

COMPONENT LOCATIONS

5/84

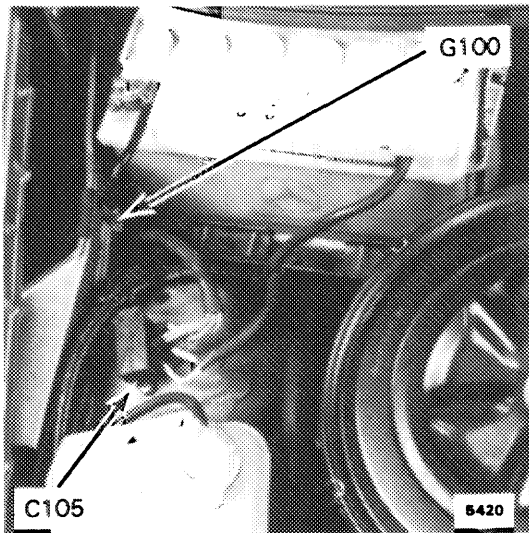


Figure 1 - RH Rear Corner of Engine Compartment

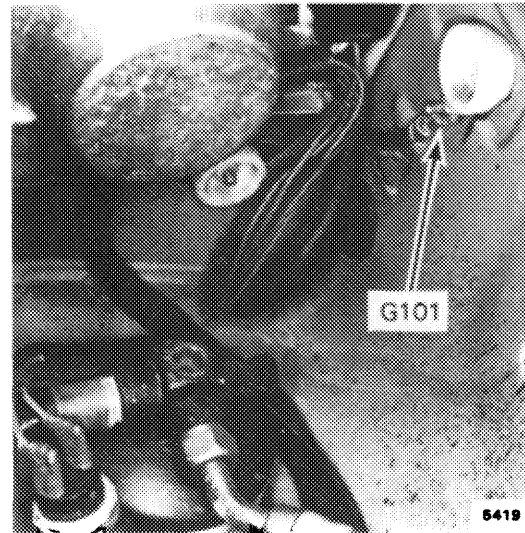


Figure 2 - RH Front Fender Behind Headlights

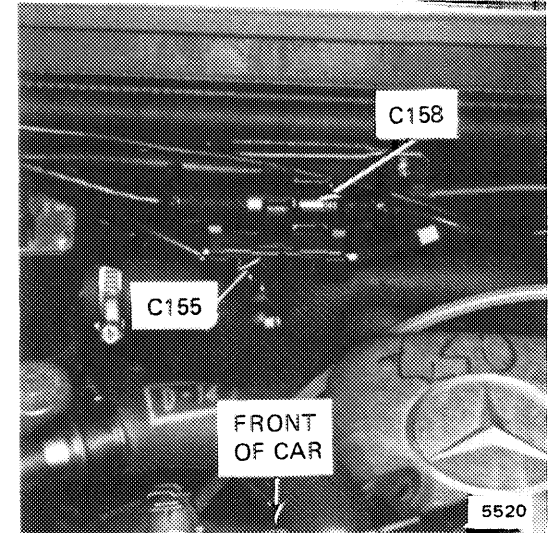


Figure 3 - Center of Firewall

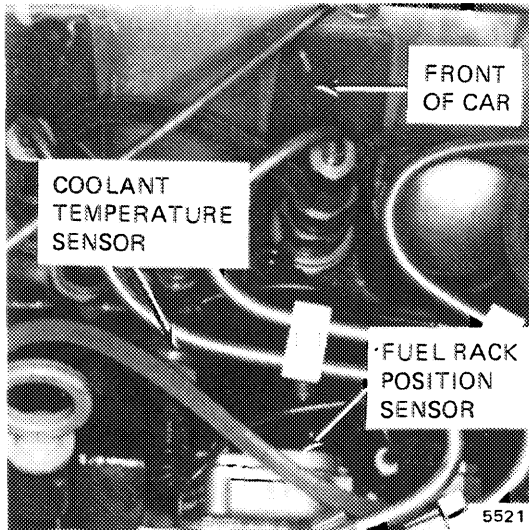


Figure 4 - LH Side of Engine

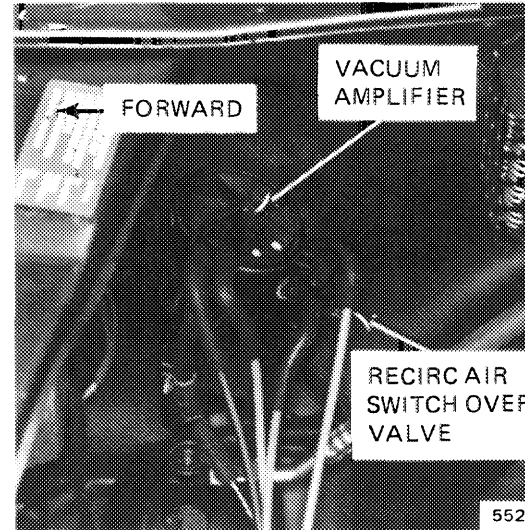


Figure 5 - Behind RH Headlight

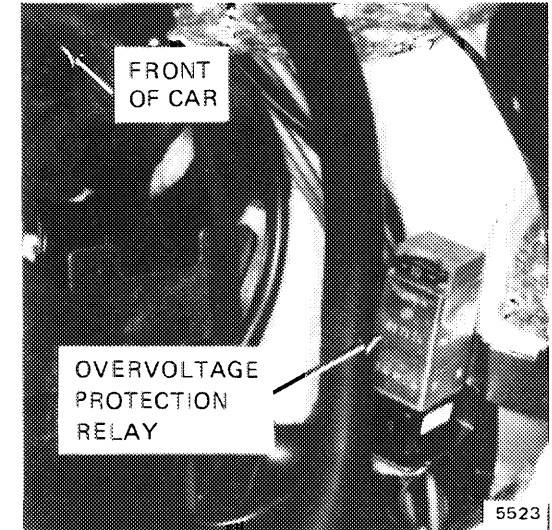


Figure 6 - Behind Glove Box

123.133/153/193

REVISIONS:

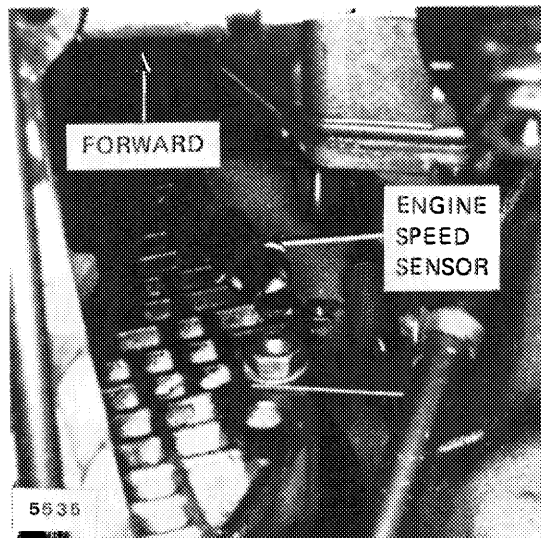


Figure 1 - Under LH Side of Engine/Transmission

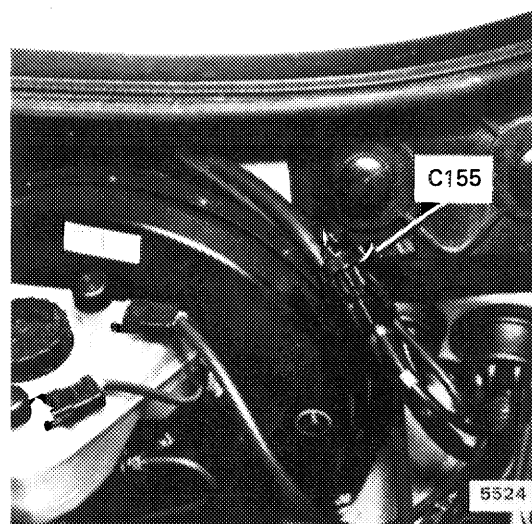


Figure 2 - LH Rear Corner of Engine Compartment

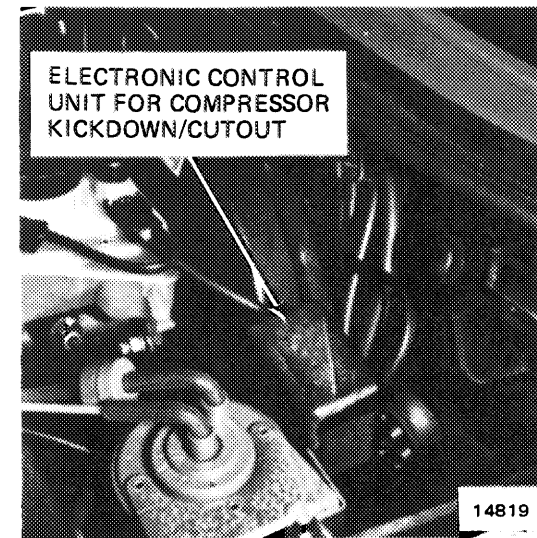


Figure 3 - LH Rear Corner of Engine Compartment

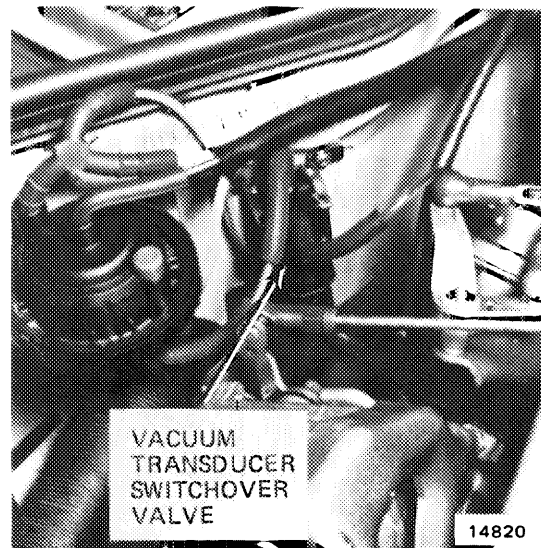


Figure 4 - Behind Coolant Reservoir

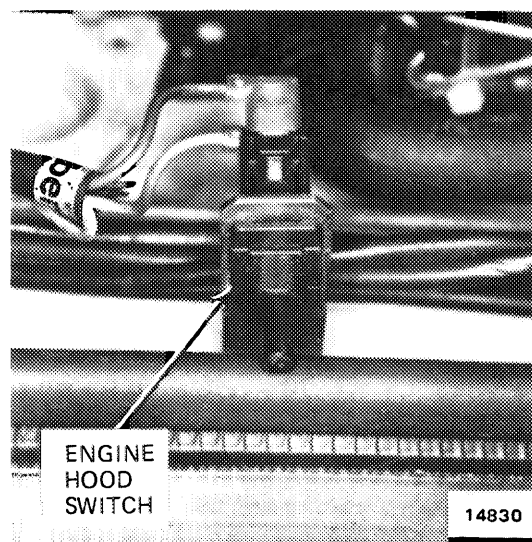


Figure 5 - Top Center of Engine Bulkhead

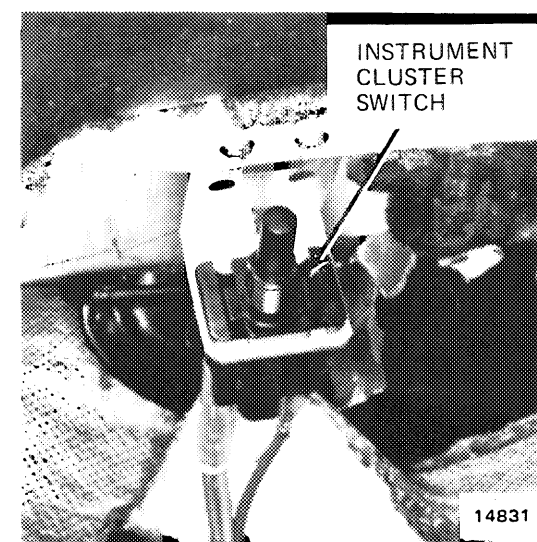


Figure 6 - Behind Instrument Cluster

REVISIONS:

COMPONENT LOCATIONS

3/85

ANTI THEFT ALARM SYSTEM

Alarm Horn	Below battery	213-2
Anti Theft Alarm Control Unit	Under LH side of instrument panel	213-1
Engine Hood Switch	Top center of engine bulkhead	212-5
Instrument Cluster Switch	Behind instrument cluster	212-6
Fuse Box	LH rear corner of engine compartment	103
Warning Module	To right of parking brake support	213-1
C190	Behind brake switch	
C301 (1 pin)	Under battery near alarm horn	
C302 (3 pins)	At driver's door handle	
C303 (3 pins)	In driver's door	
C304 (3 pins)	At passenger's door handle	
C305 (3 pins)	In passenger's door	
C306 (8 pins)	Under LH side of instrument panel	213-1
C307 (3 pins)	In LH side of trunk	
C308 (1 pin)	Near rear dome light switch	
C310 (1 pin)	Near LH rear door jamb switch	
C311 (1 pin)	Near rear dome light switch	
C312 (1 pin)	Near warning module	
G102	Behind instrument cluster	209-4
G104	Ahead of RH rear light assembly	207-2

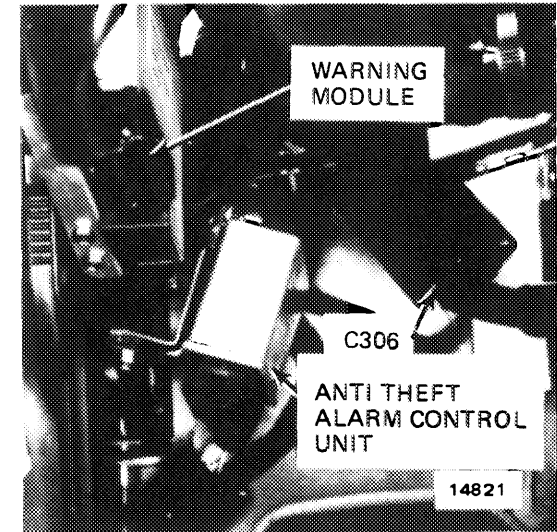


Figure 1 - Under LH Side Of Instrument Panel

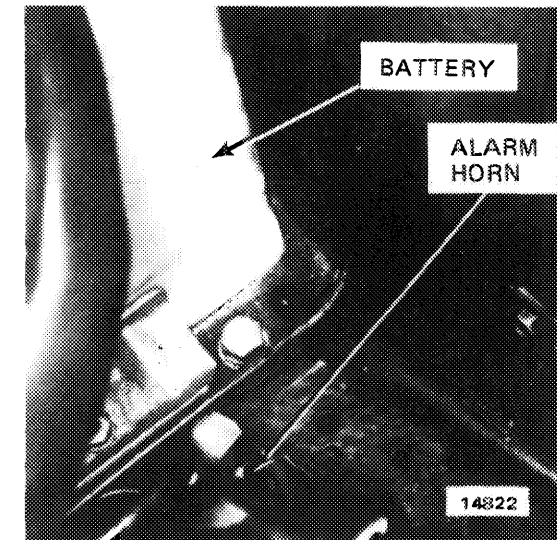


Figure 2 - Under Battery

123.133/153/193

213

REVISIONS: