

INDEX - Alphabetical Listing of Electrical Circuits


Air Conditioning/Heater	120	Lights (continued)	
Automatic Antenna	124	—License	111
Auxiliary Fan	120	—Marker	111
Charging System	106	—Park	110
Cigar Lighter	124	—Stop	108
Clock	114	—Tail	110
Component Location	201	—Turn Signal	112
Cruise Control	108	—Trunk	111
Gauges	114	Power Distribution	102
Ground Distribution	126	Power Windows	123
Heated Seats	125	Pre-Glow System	104
Heater	120	Radio	124
Horns	122	Rear Defogger	121
Lights		Sliding Roof	122
—Backup	116	Start/Stop (Ignition Switch)	105
—Center Console Illumination	117	Transmission Kickdown	116
—Courtesy	118	Warning Indicators	114
—Fog Lights	107	Warning System	113
—Glove Box	116	Wiper/Washer	119
—Hazard	112		
—Headlights	107		
—Instrument Cluster Illumination	114		

FUSE-CIRCUIT LIST


Fuse	Rating (AMPS)	Circuits Protected	Page
1	8(WT)	Automatic Antenna	124
		Center Console Illumination	117
		Instrument Cluster Illumination	115
		Lights: Marker/License	111
		Lights: Park/Tail (RH)	110
		Warning System	113
2	8(WT)	Clock	115
		Courtesy Lights	118
		Lights: Hazard	112
		Trunk Light	111
		Warning System	113
3	8(WT)	Lights Park/Tail (LH)	110
4	8(WT) 16(PK)	Cigar Lighter	124
		Glove Box Light	116
		*With Heated Seats (Front)	125
5	Not used		
6	16(PK)	Headlights/Fog Lights	107
		Wiper/Washer	119
7	8(WT)	Headlight (RH High beam)	107
8	16(PK) 25(BU)	Rear Defogger	121
		*With Heated Seats (Rear)	121
9	8(WT)	Headlight (LH High beam)	107
10	16(PK)	Air Conditioning/Heater	120
11	16(PK)	Headlights (RH Low Beam)/Fog Lights	107

Fuse	Rating	Circuits Protected	Page
12	8(WT)	Auxiliary Fan	120
		Lights: Turn Signal	112
		Power Windows	123
		Stoplights/Cruise Control	108
		Warning Indicators/Gauges	114
13	8(WT)	Headlight (LH Low Beam)	107
14	8(WT)	Backup Lights/Transmission Kickdown	116
		Horns	122
		Warning System	113
a	16(PK)	Power Windows	123
b	16(PK)	Power Windows	123
c	16(PK)	Auxiliary Fan	120
d	16(PK)	Sliding roof	122
In-Line		Radio	124


POWER DISTRIBUTION

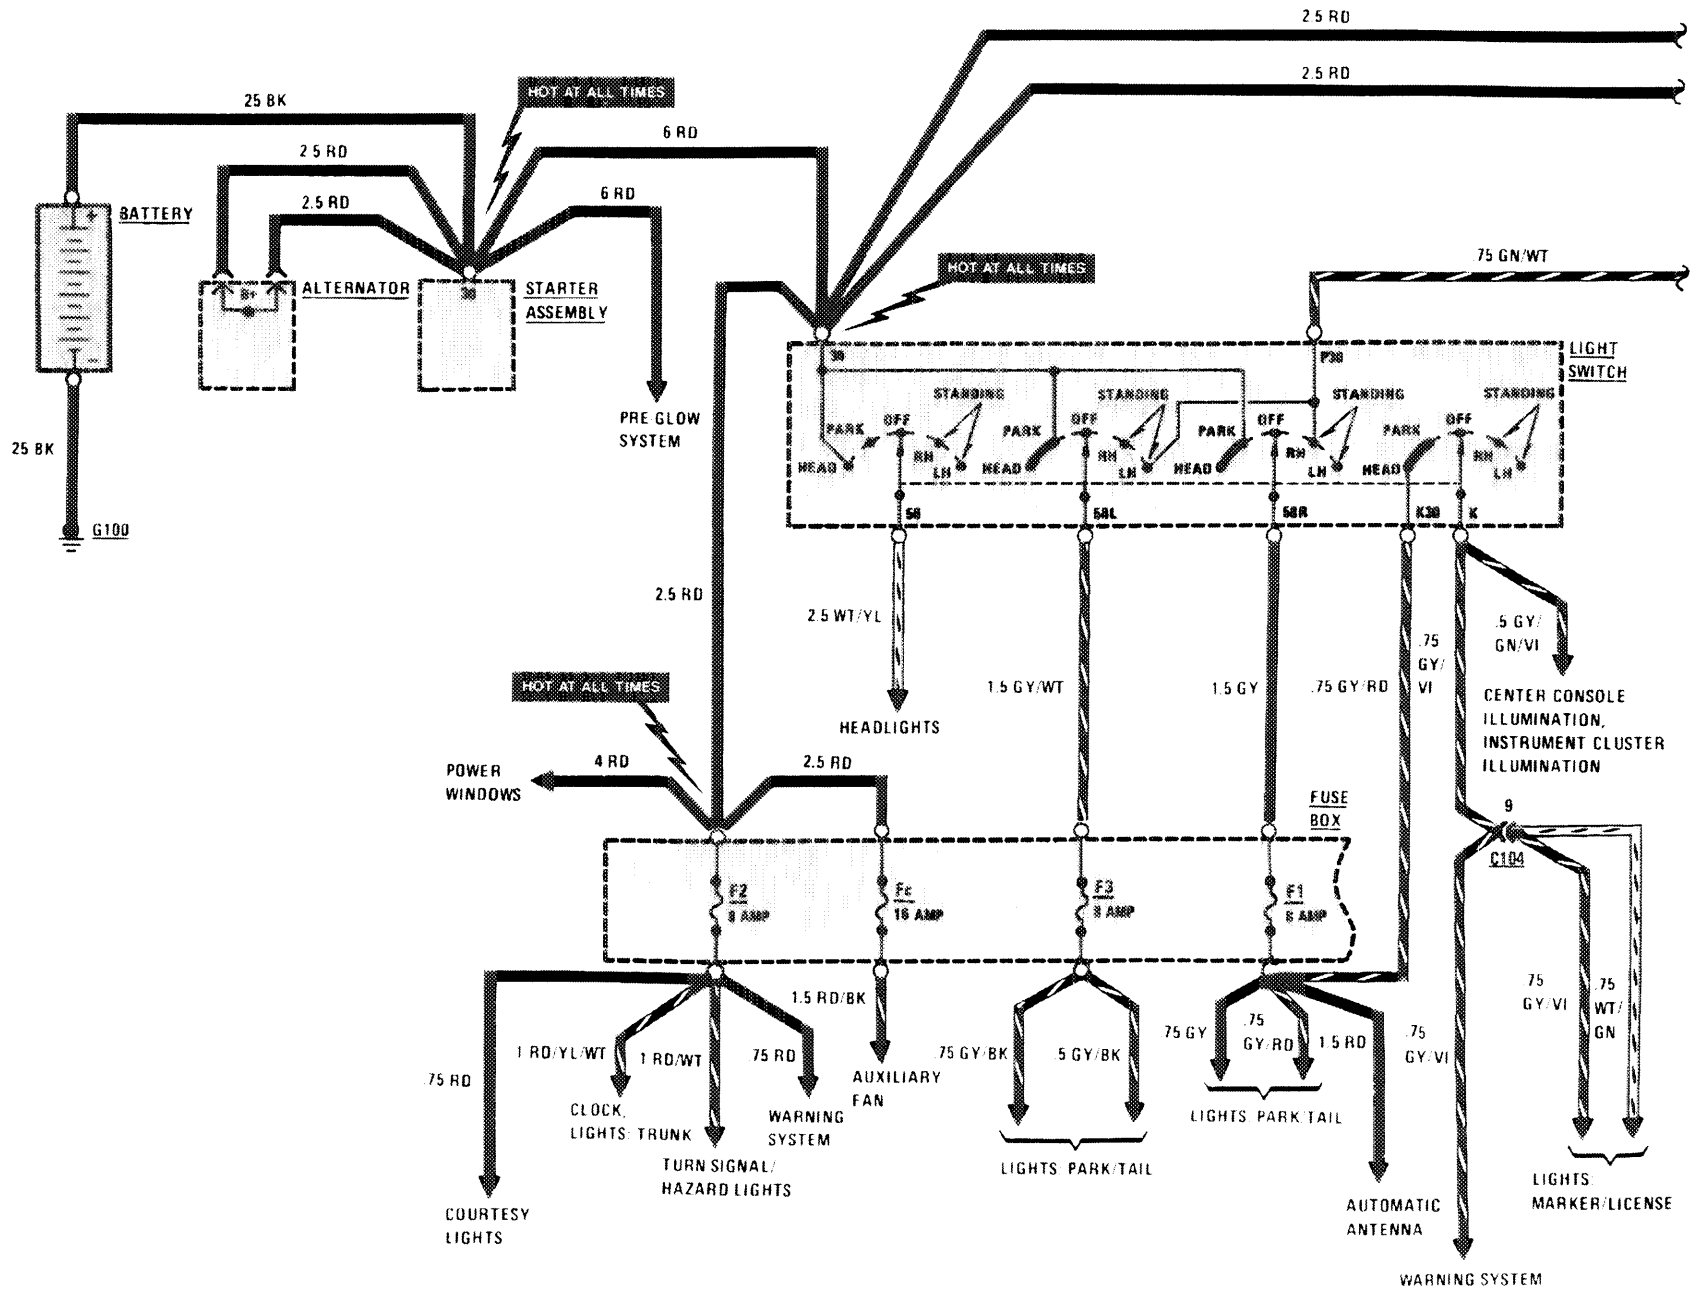


POWER DISTRIBUTION

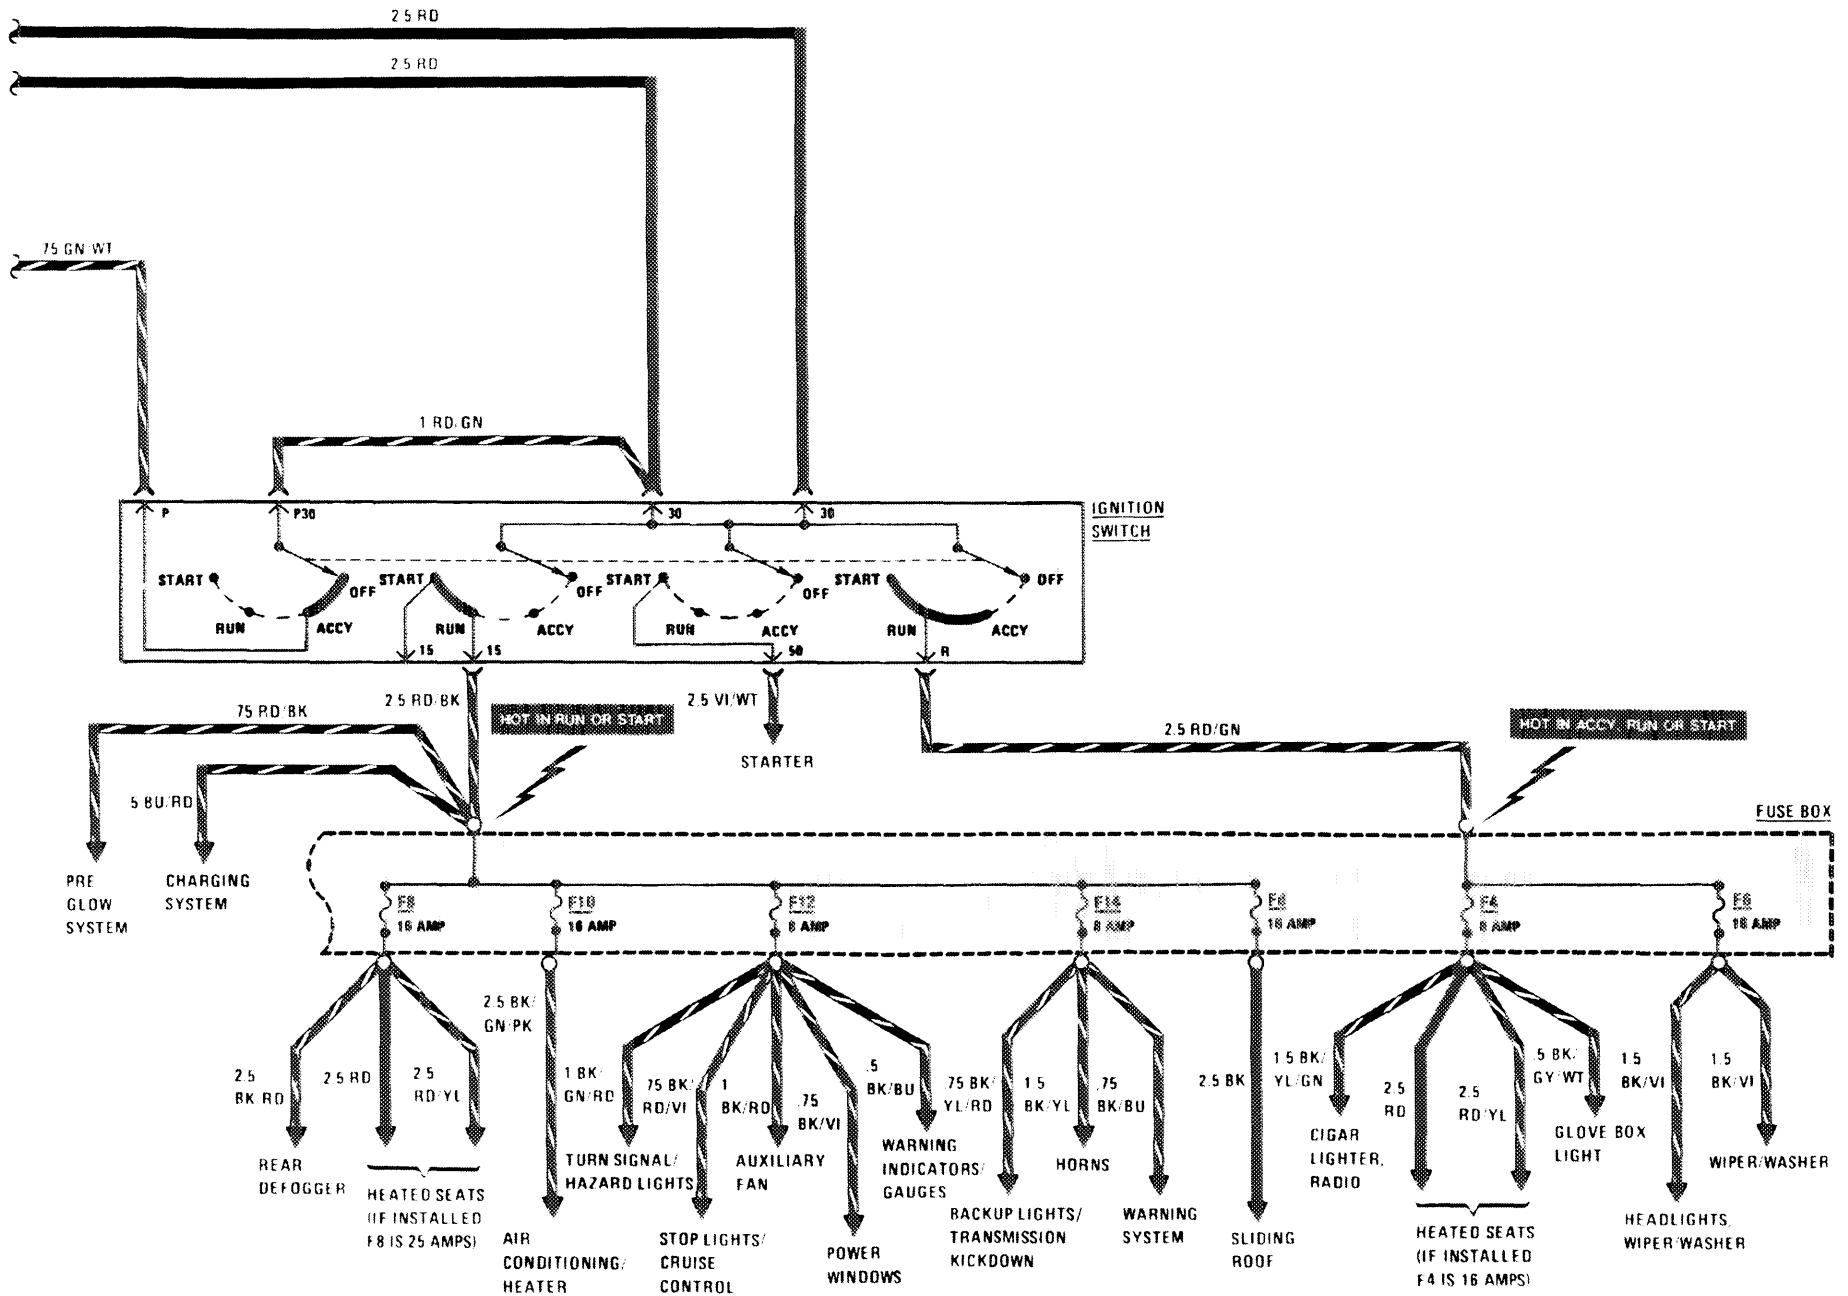


PRE-GLOW SYSTEM

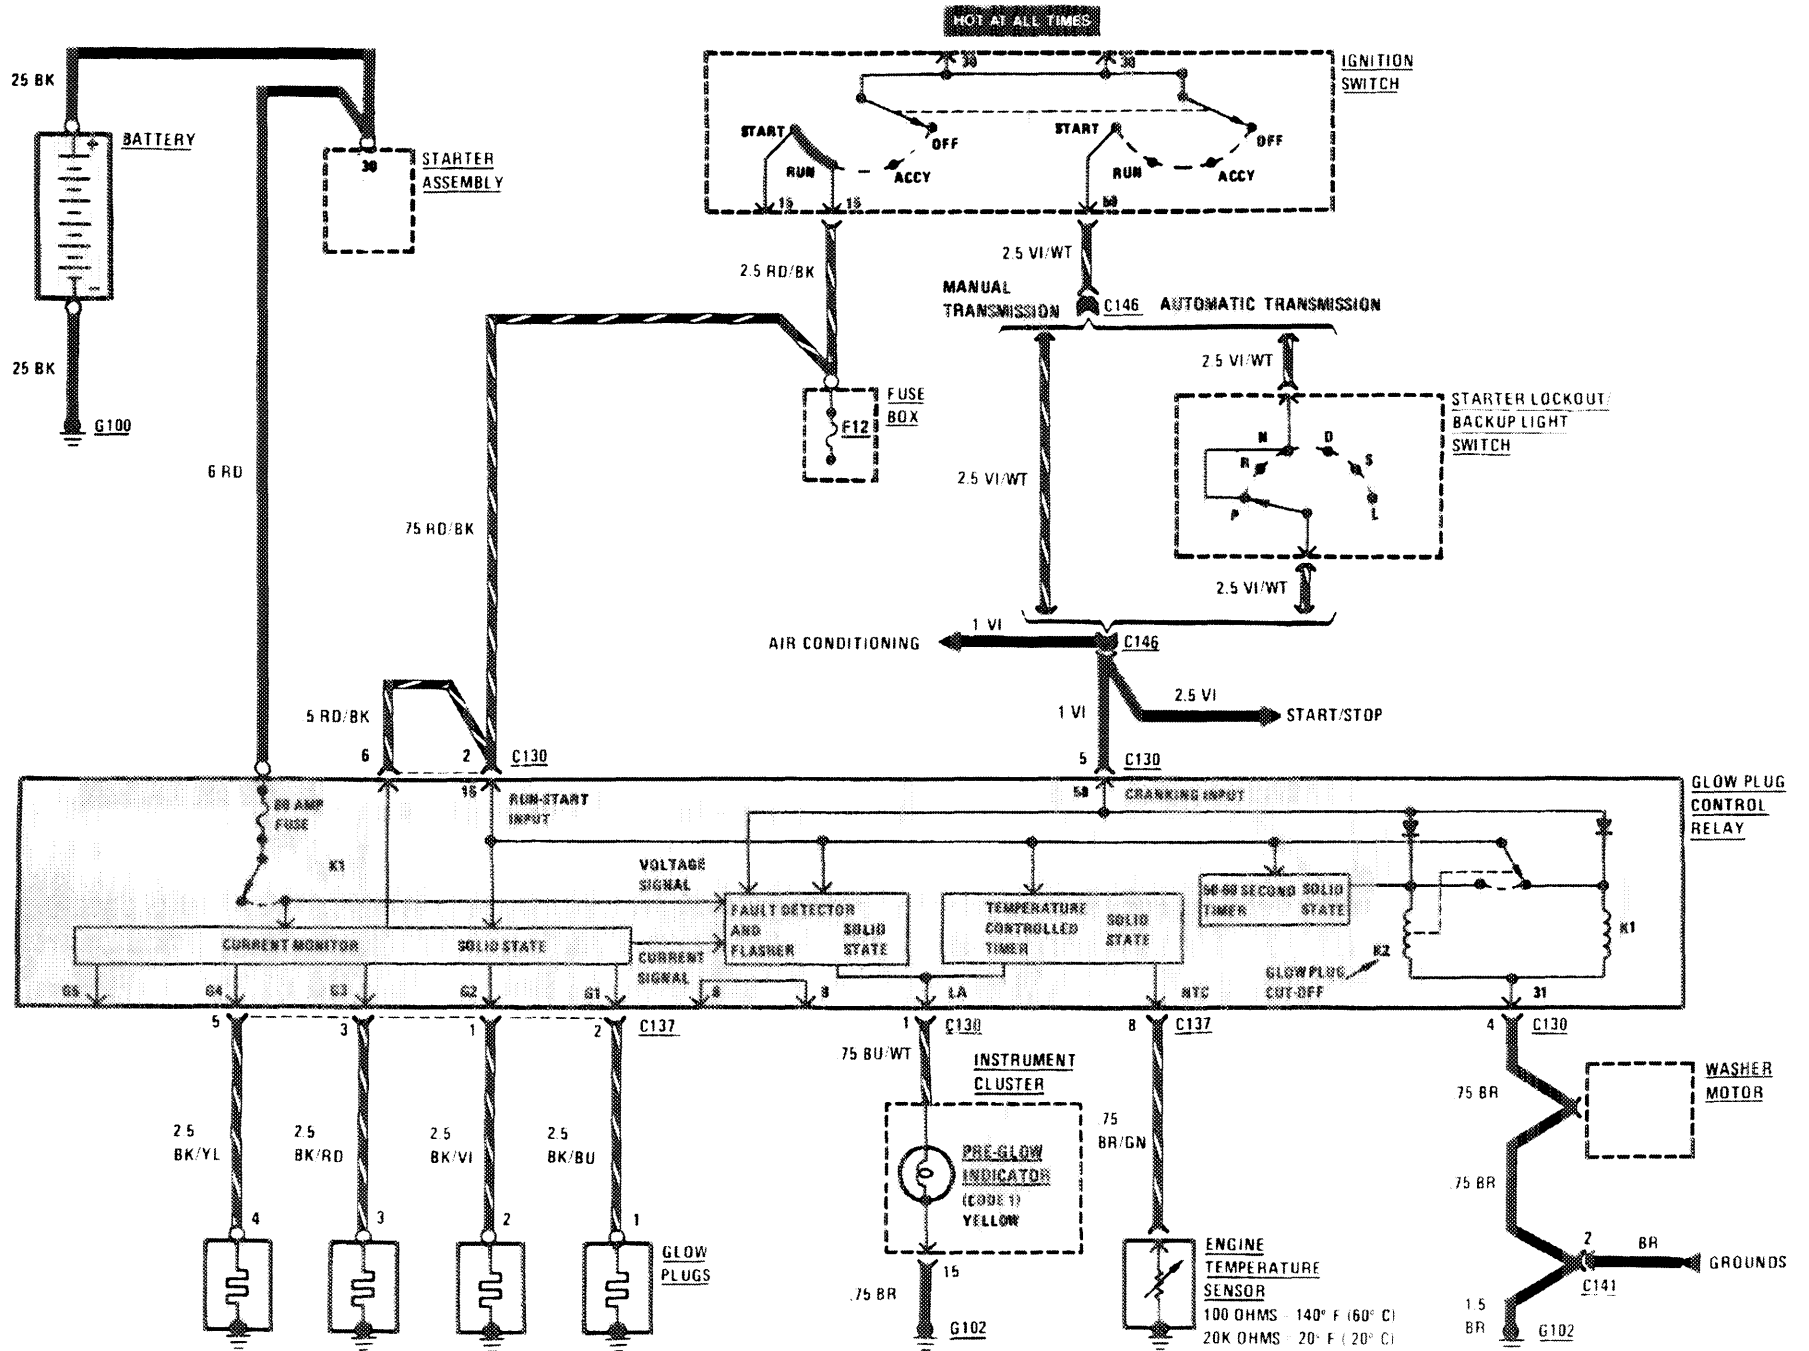


START/STOP (IGNITION SWITCH)

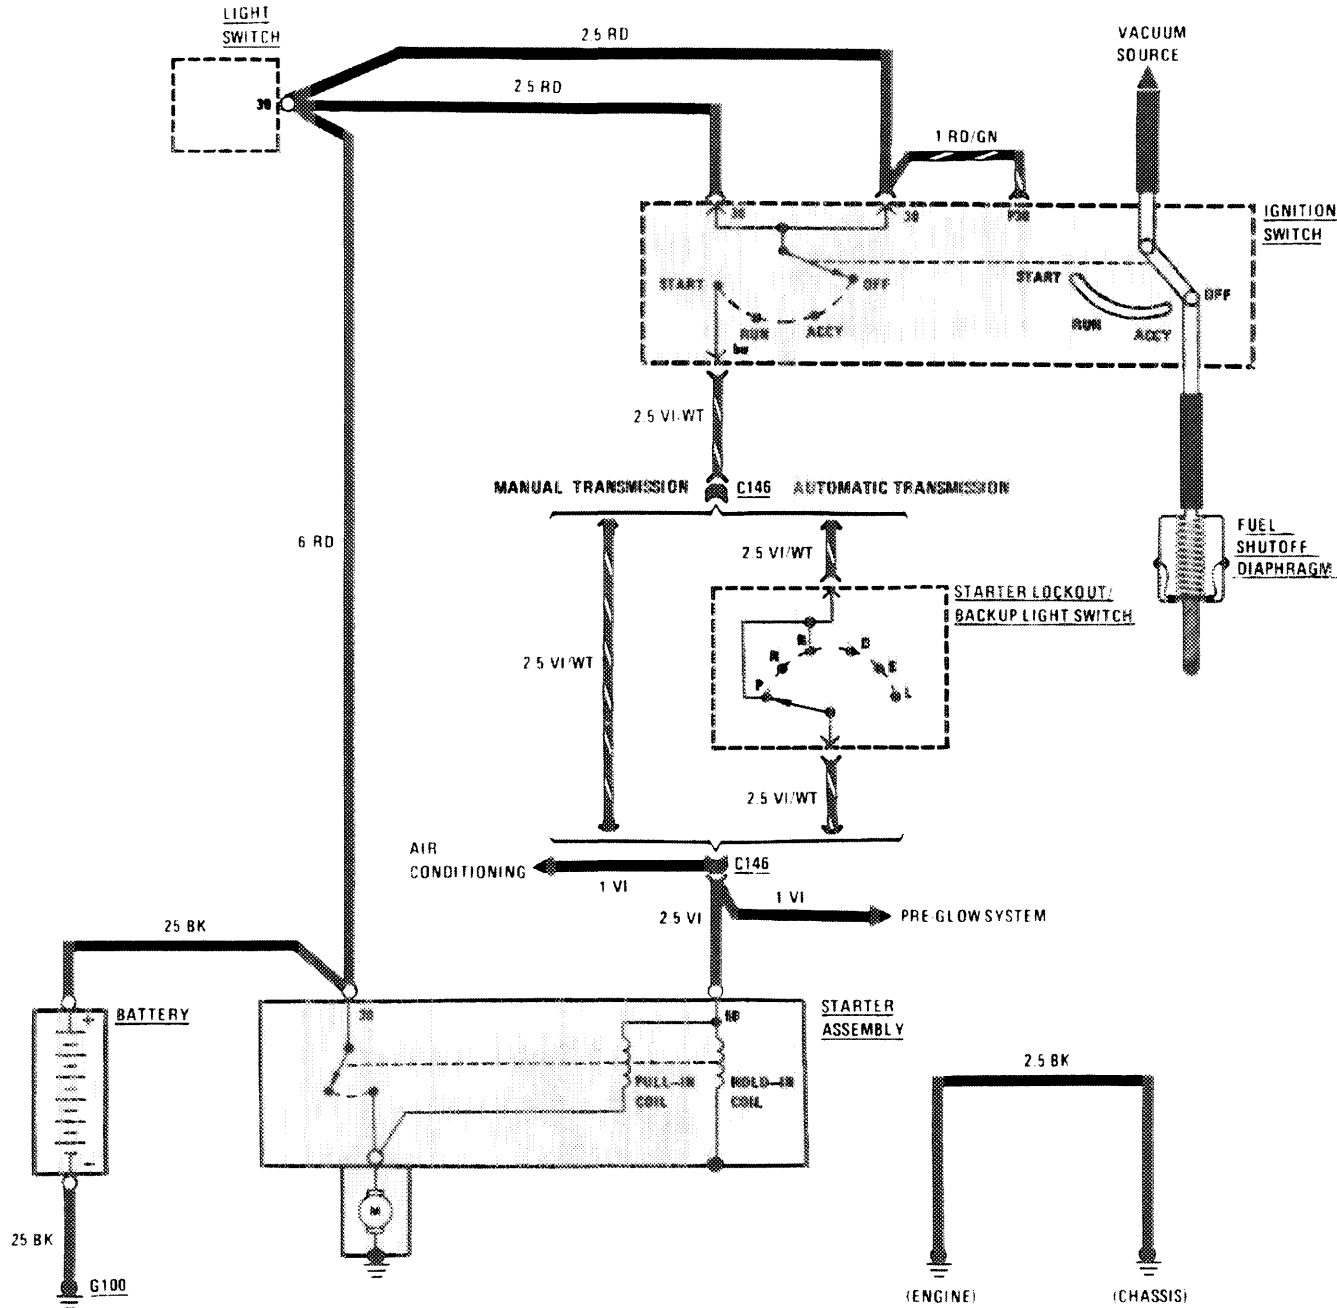

CHARGING SYSTEM

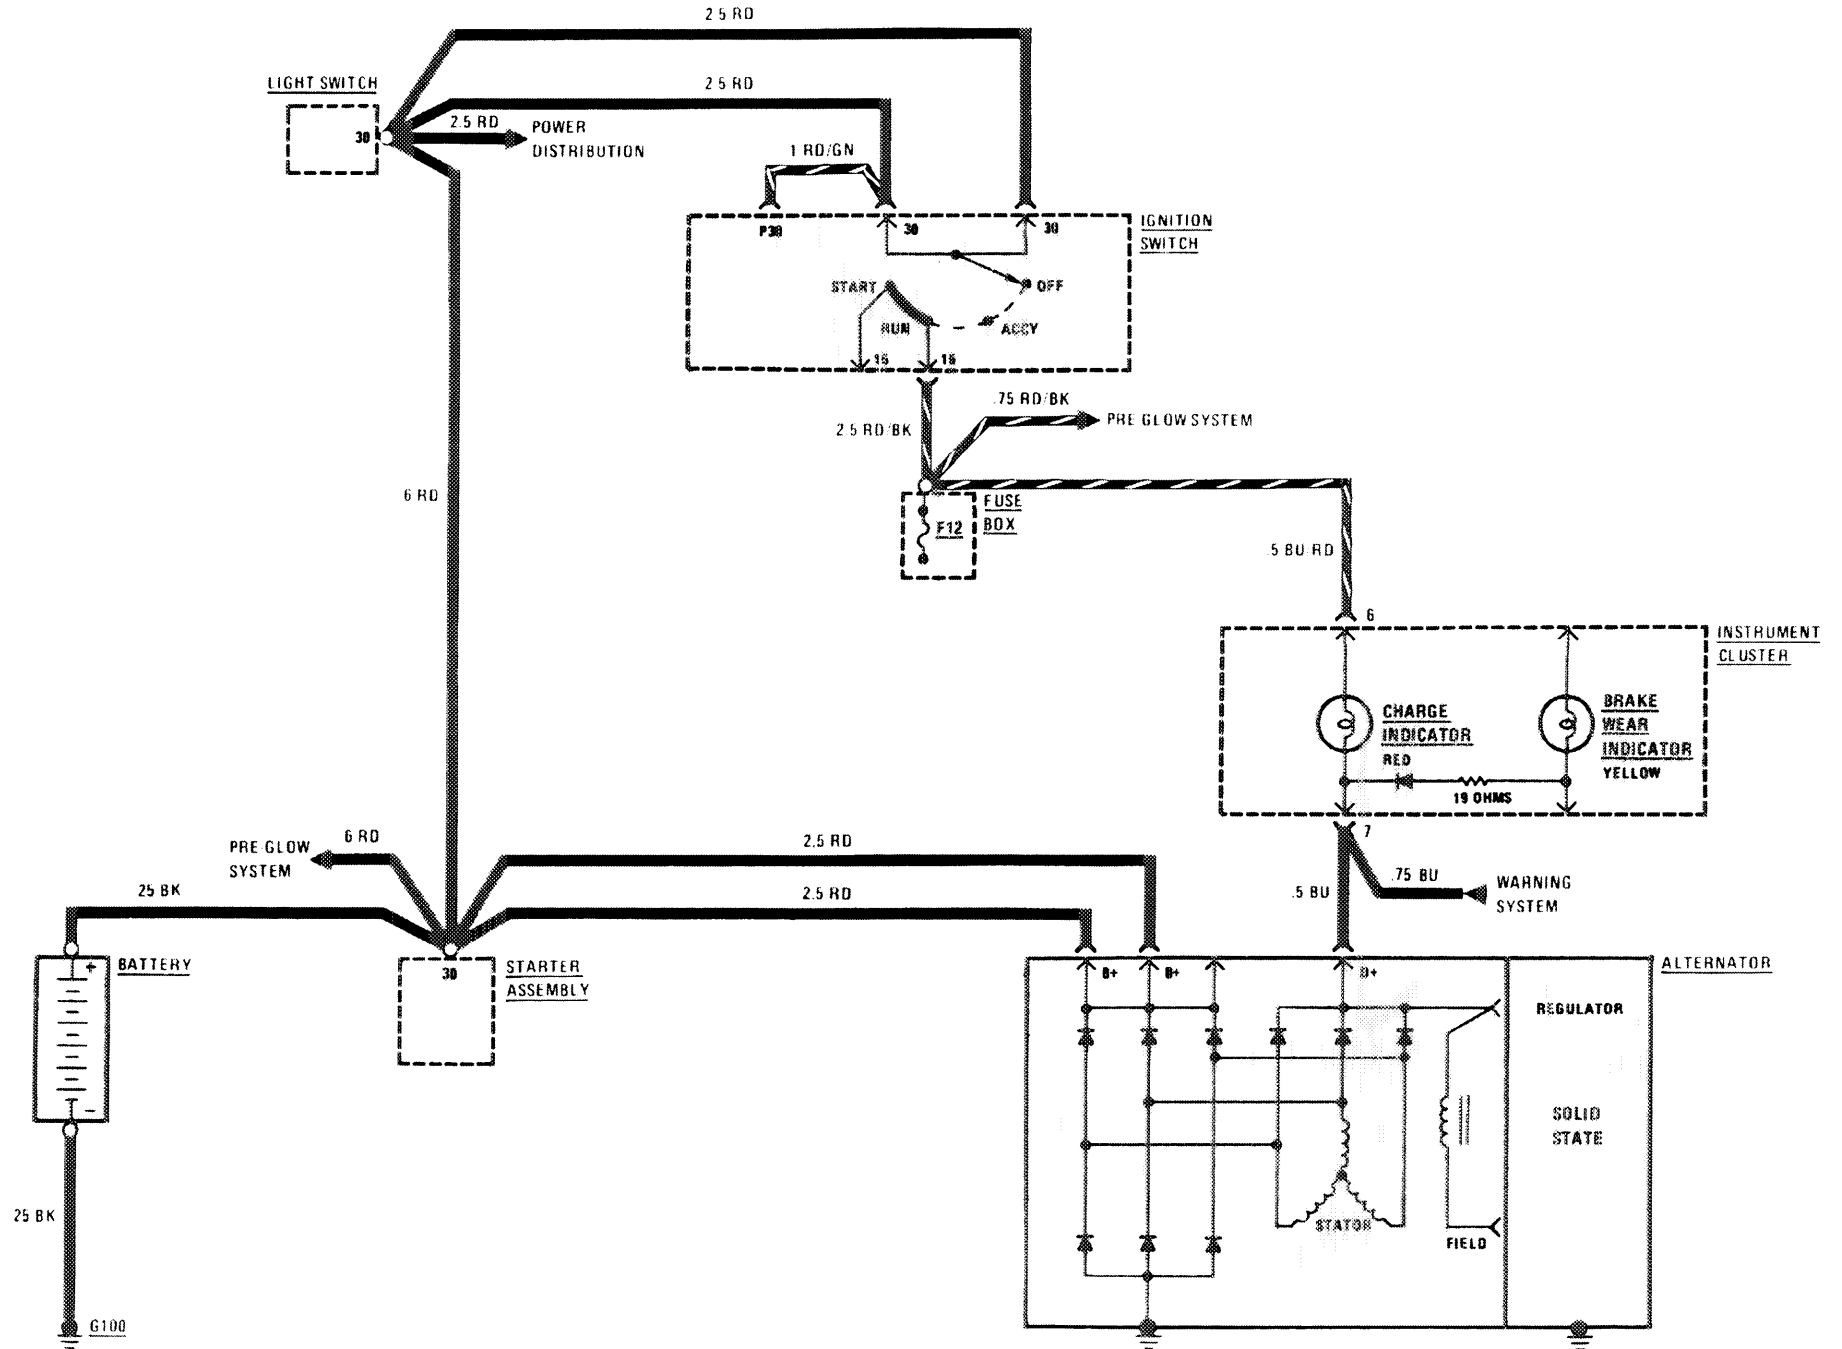



HEADLIGHTS/FOG LIGHTS

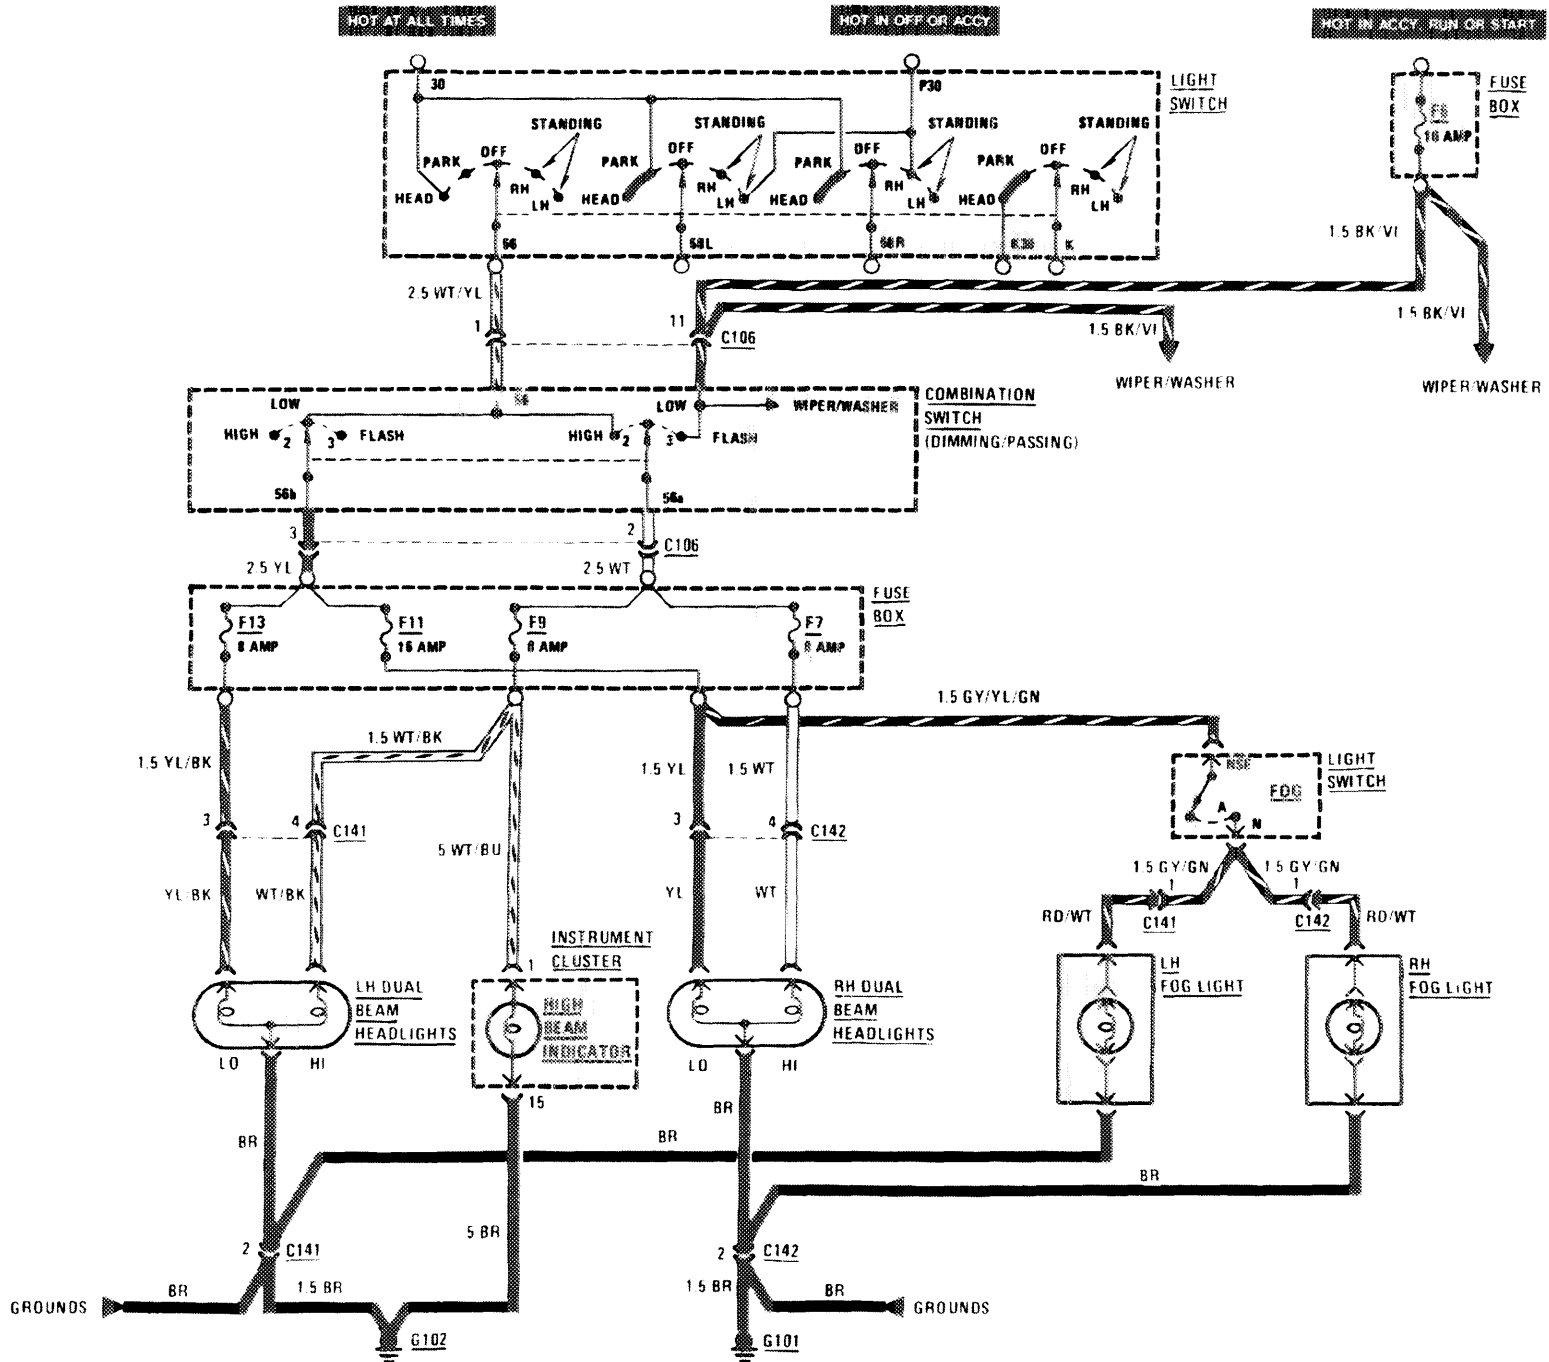

STOPLIGHTS/CRUISE CONTROL

AUTOMATIC TRANSMISSION

HOT IN RUN OR START

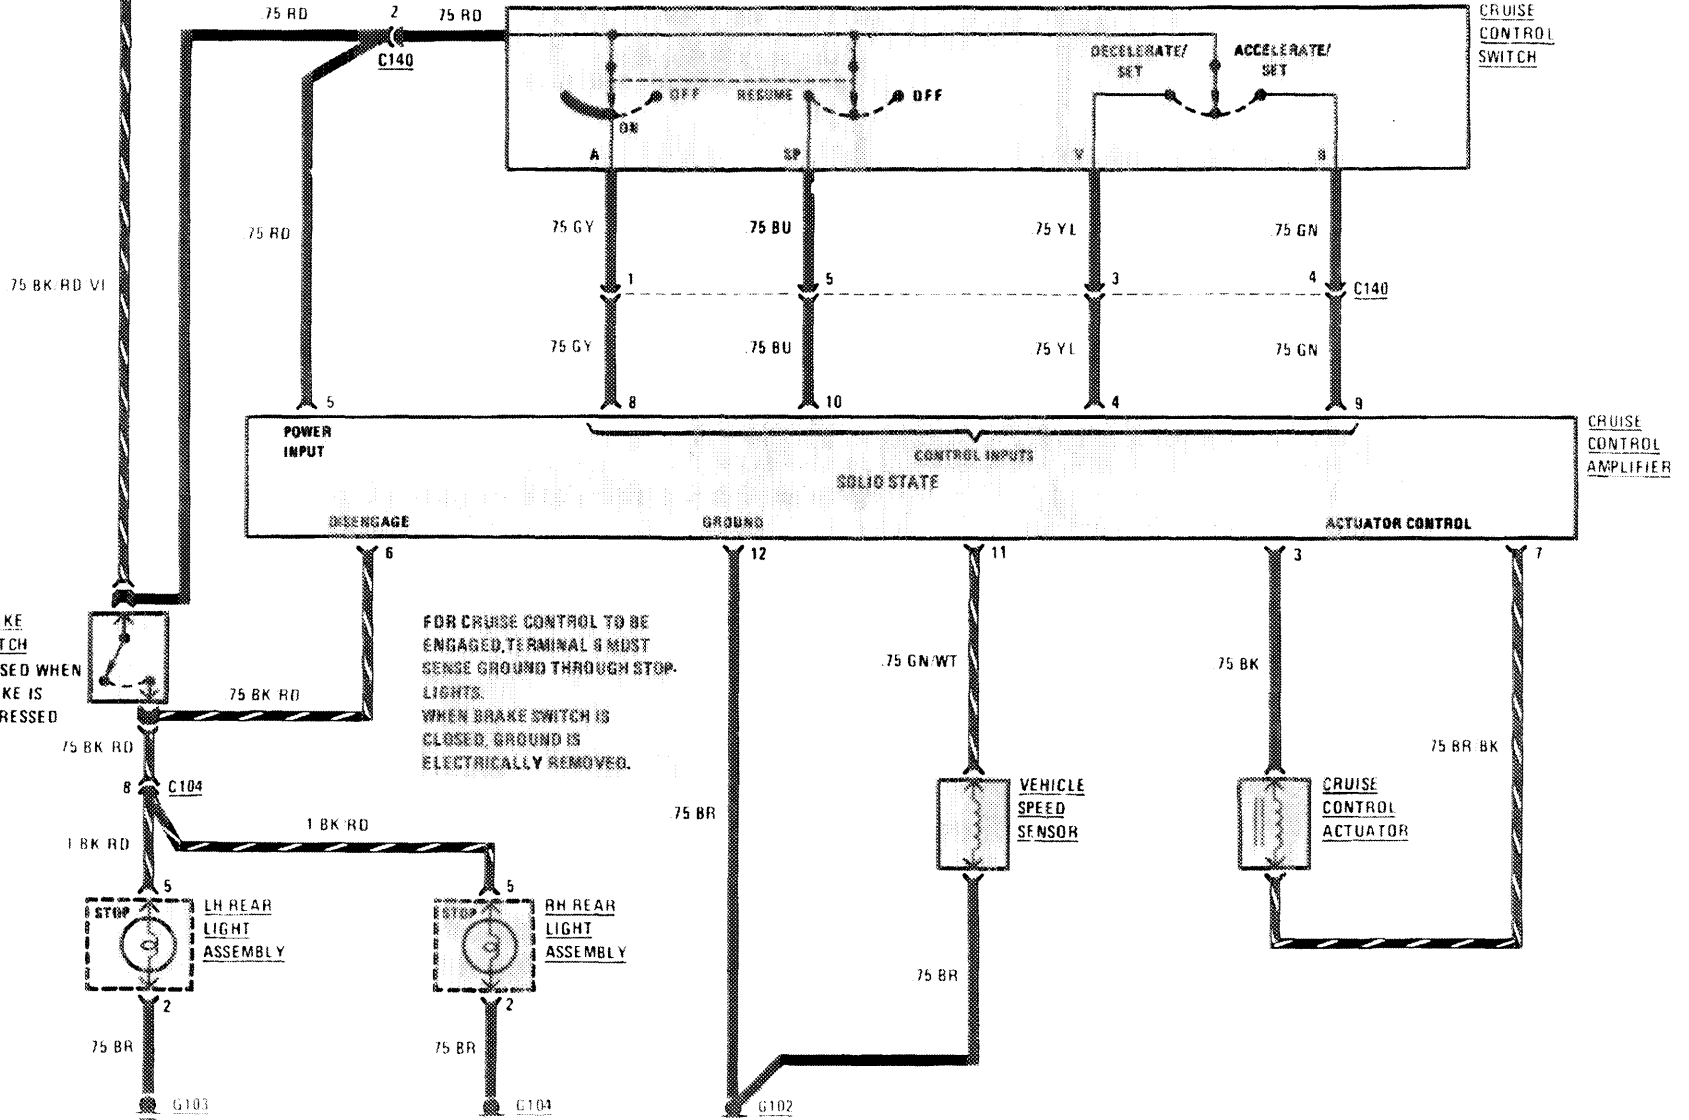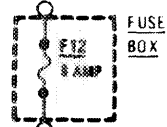

BRAKE SWITCH CLOSED WHEN BRAKE IS DEPRESSED

FOR CRUISE CONTROL TO BE ENGAGED, TERMINAL 9 MUST SENSE GROUND THROUGH STOP LIGTS. WHEN BRAKE SWITCH IS CLOSED, GROUND IS ELECTRICALLY REMOVED.

VEHICLE SPEED SENSOR


CRUISE CONTROL ACTUATOR

CRUISE CONTROL SWITCH


CRUISE CONTROL AMPLIFIER

STOPLIGHTS/CRUISE CONTROL


MANUAL TRANSMISSION

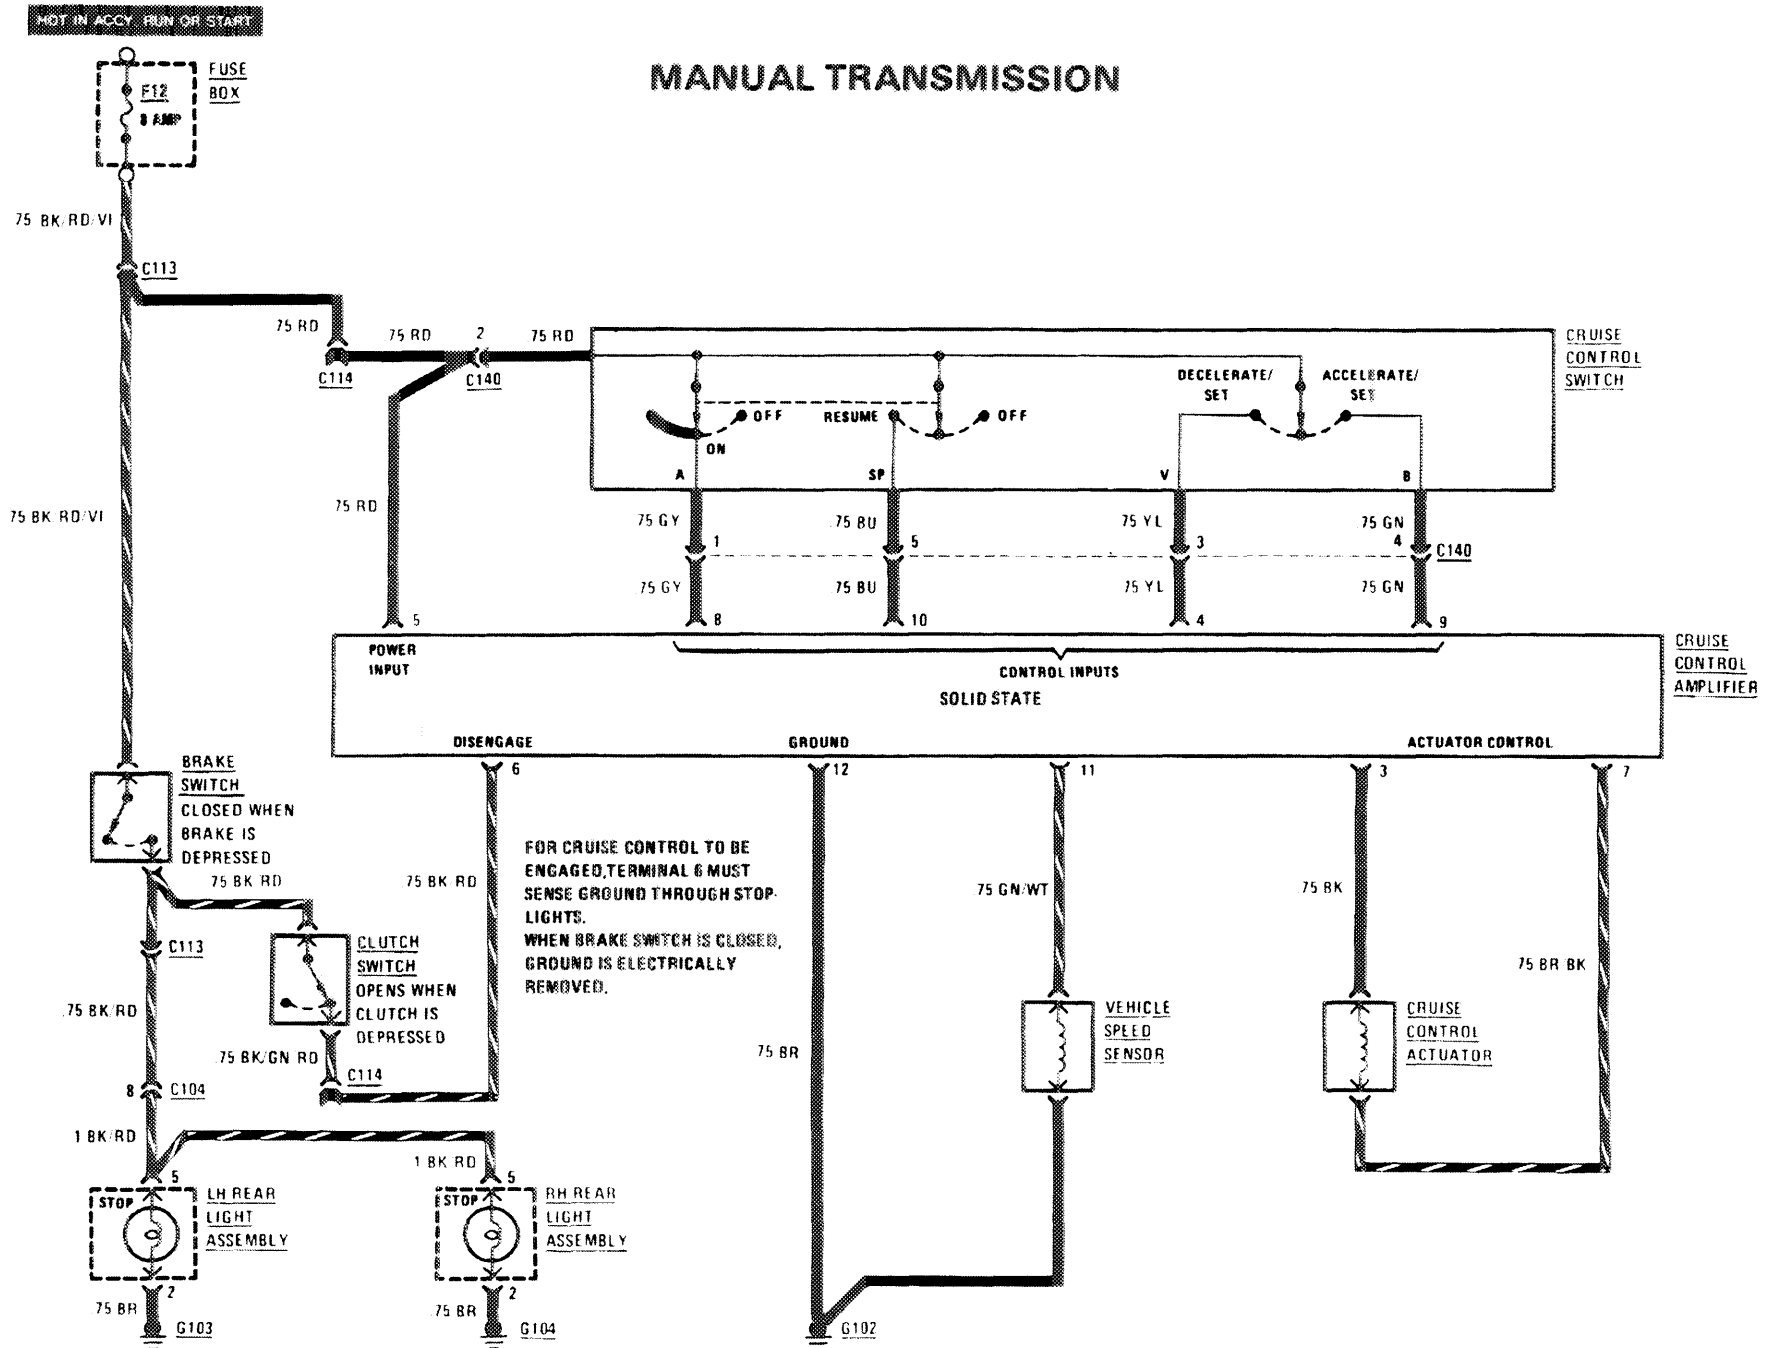


LIGHTS: PARK/TAIL

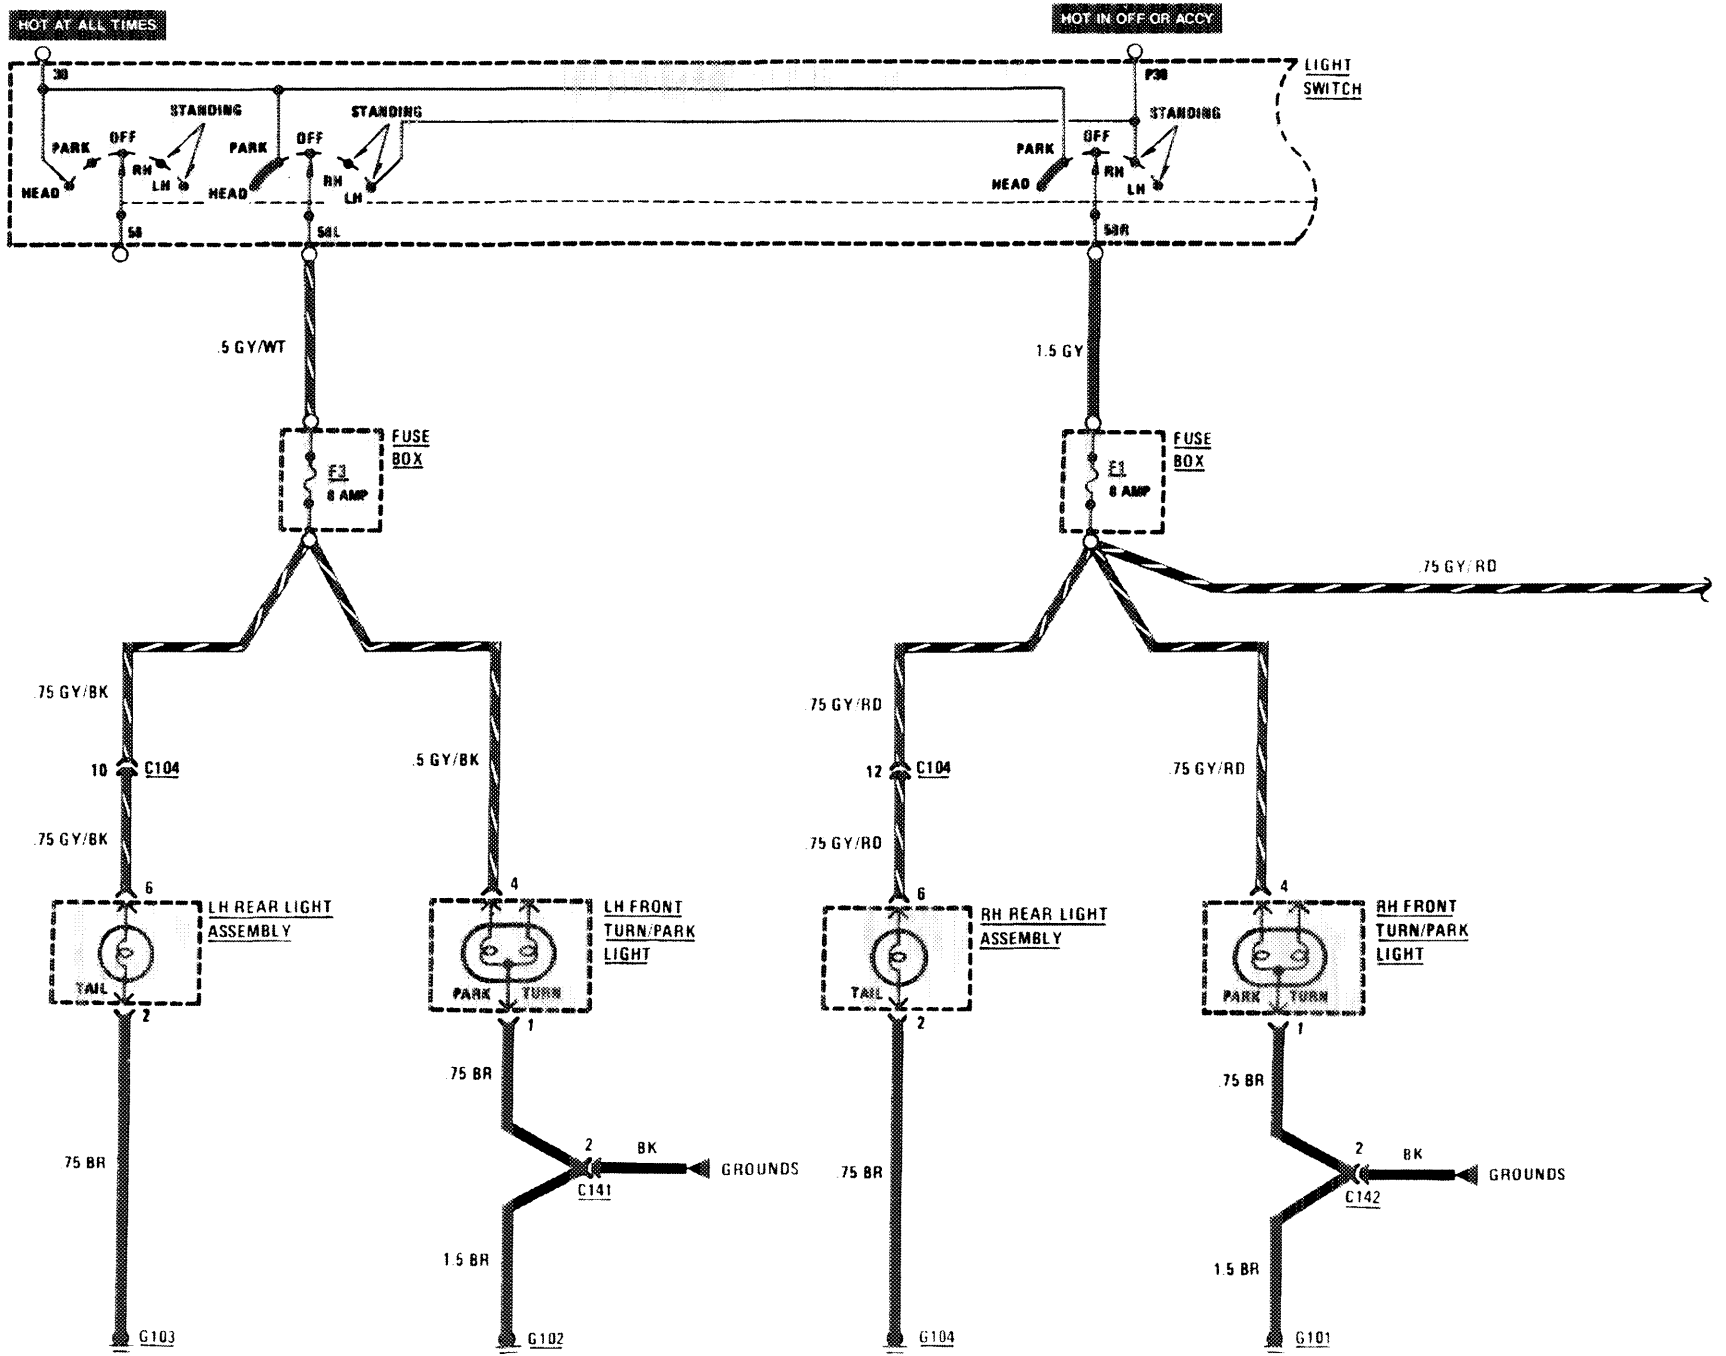


LIGHTS: MARKER/LICENSE/TRUNK

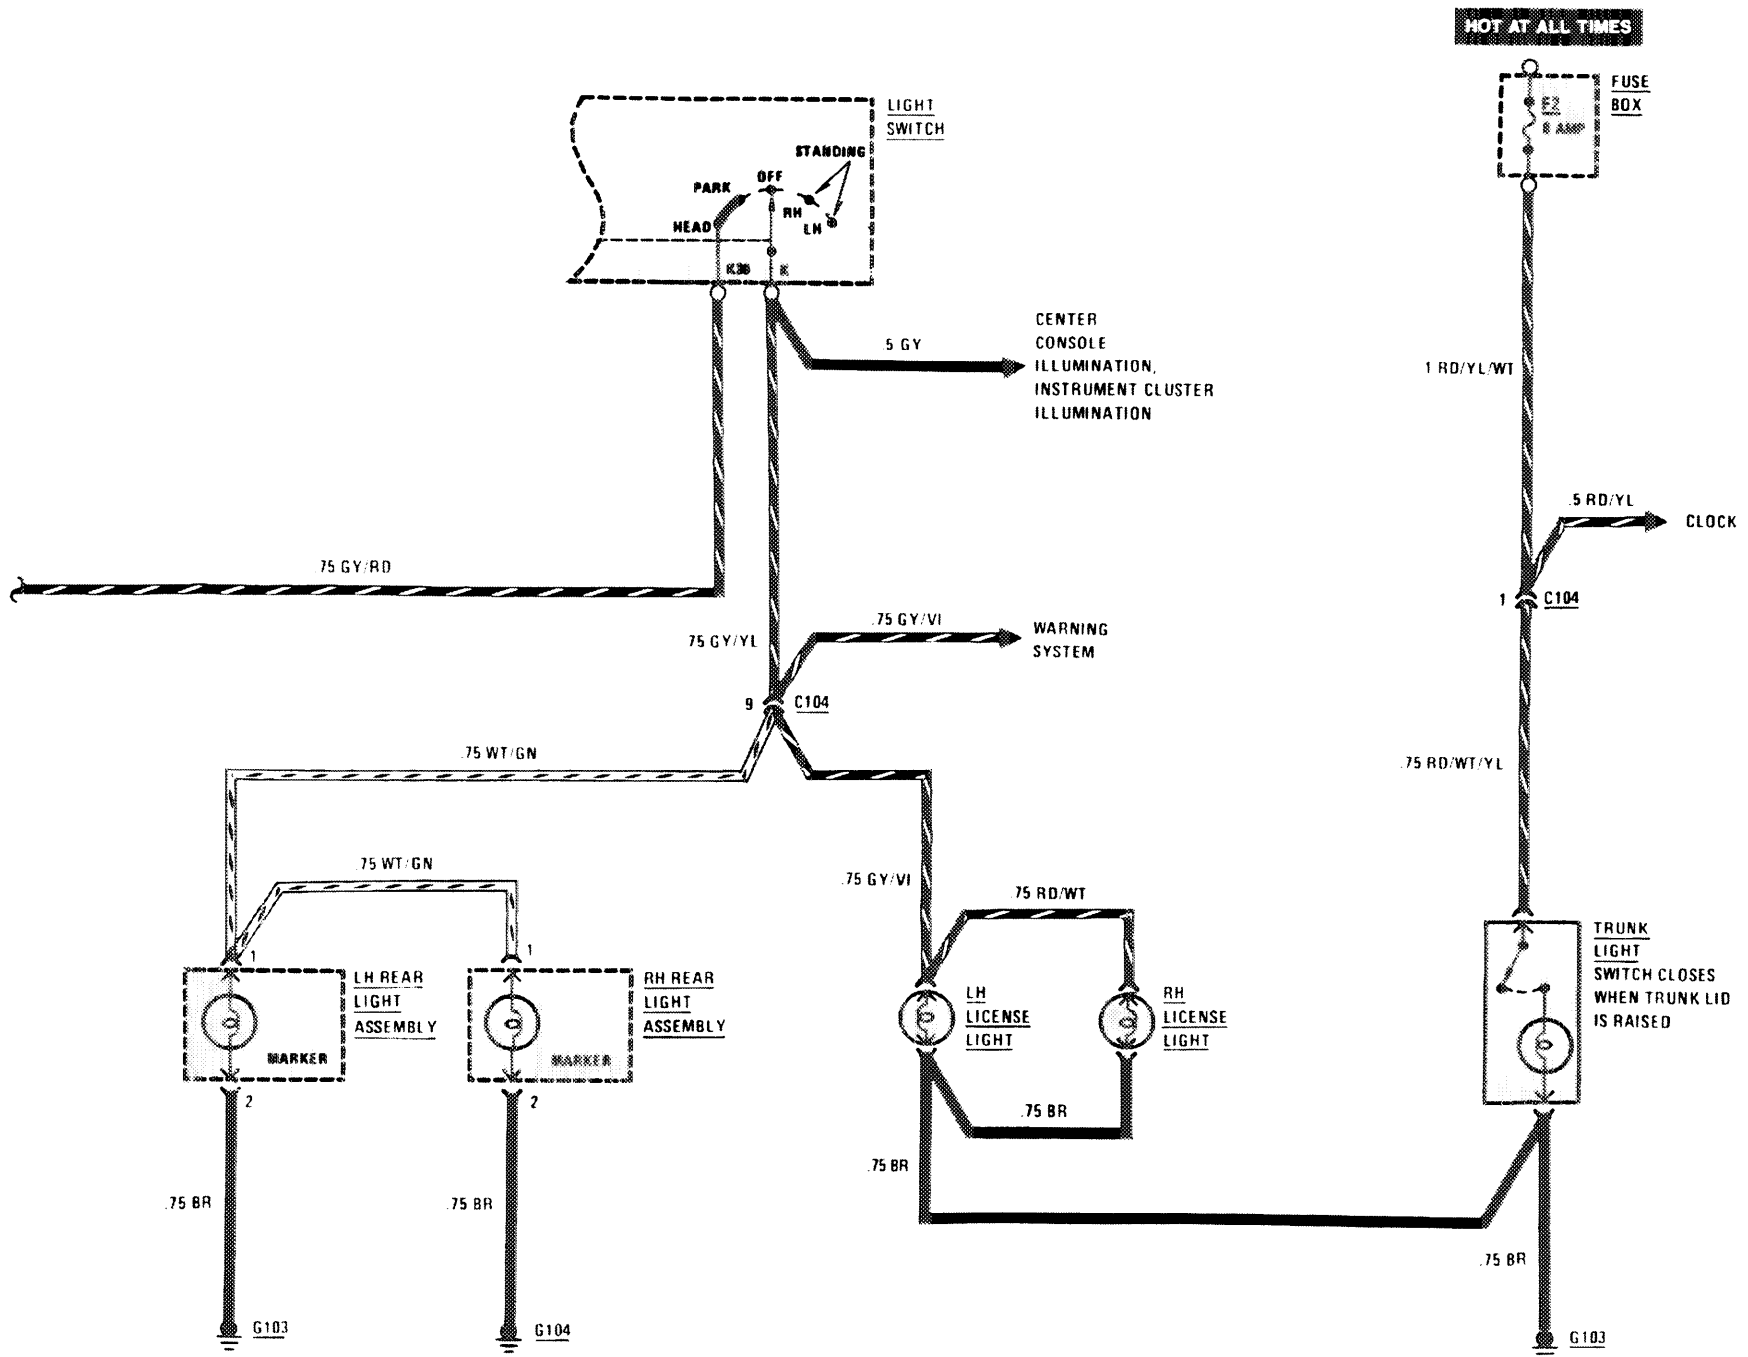


TURN SIGNAL/HAZARD LIGHTS

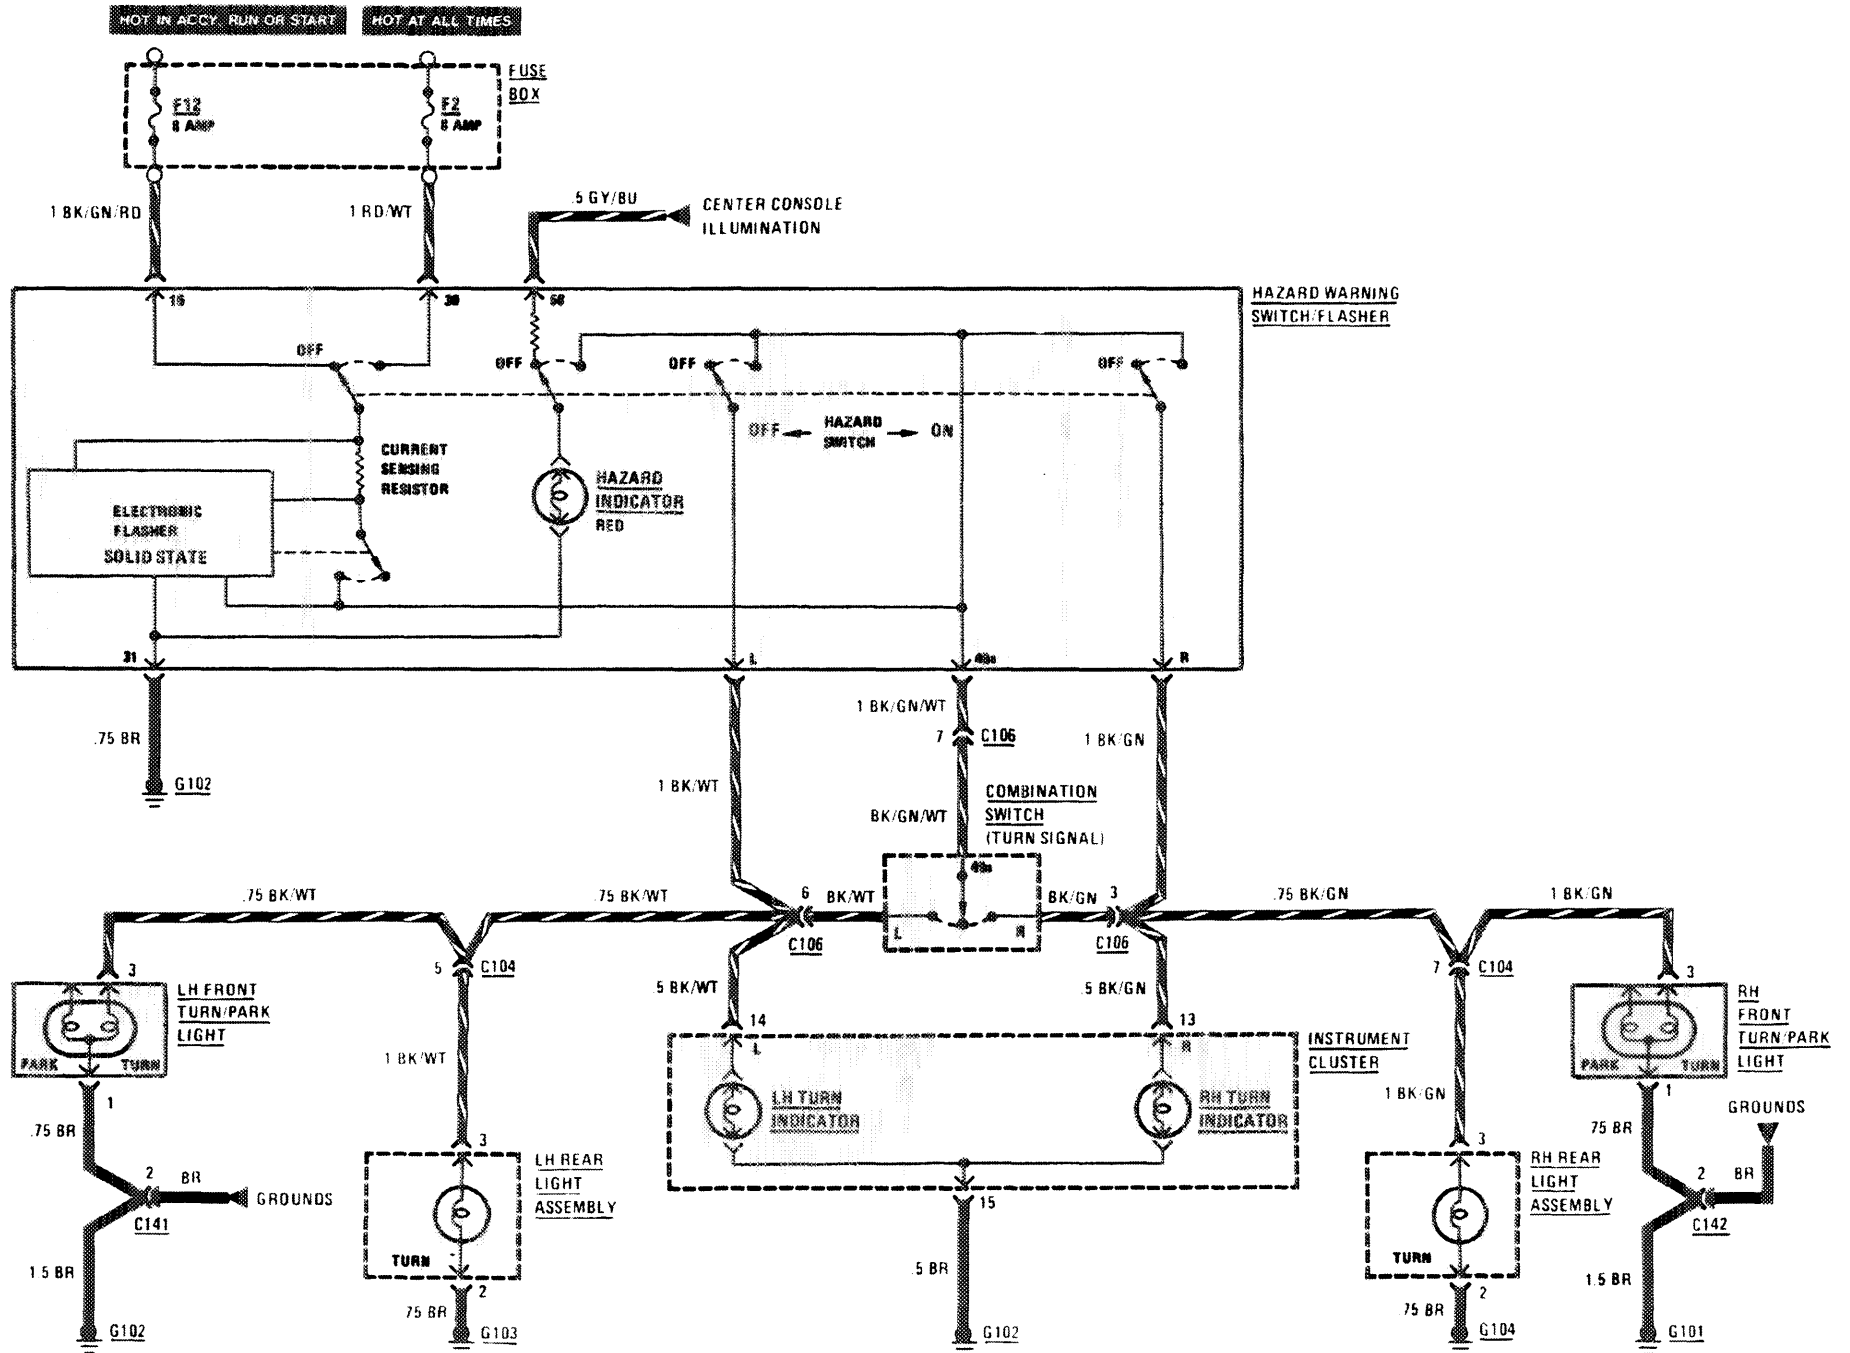


WARNING SYSTEM


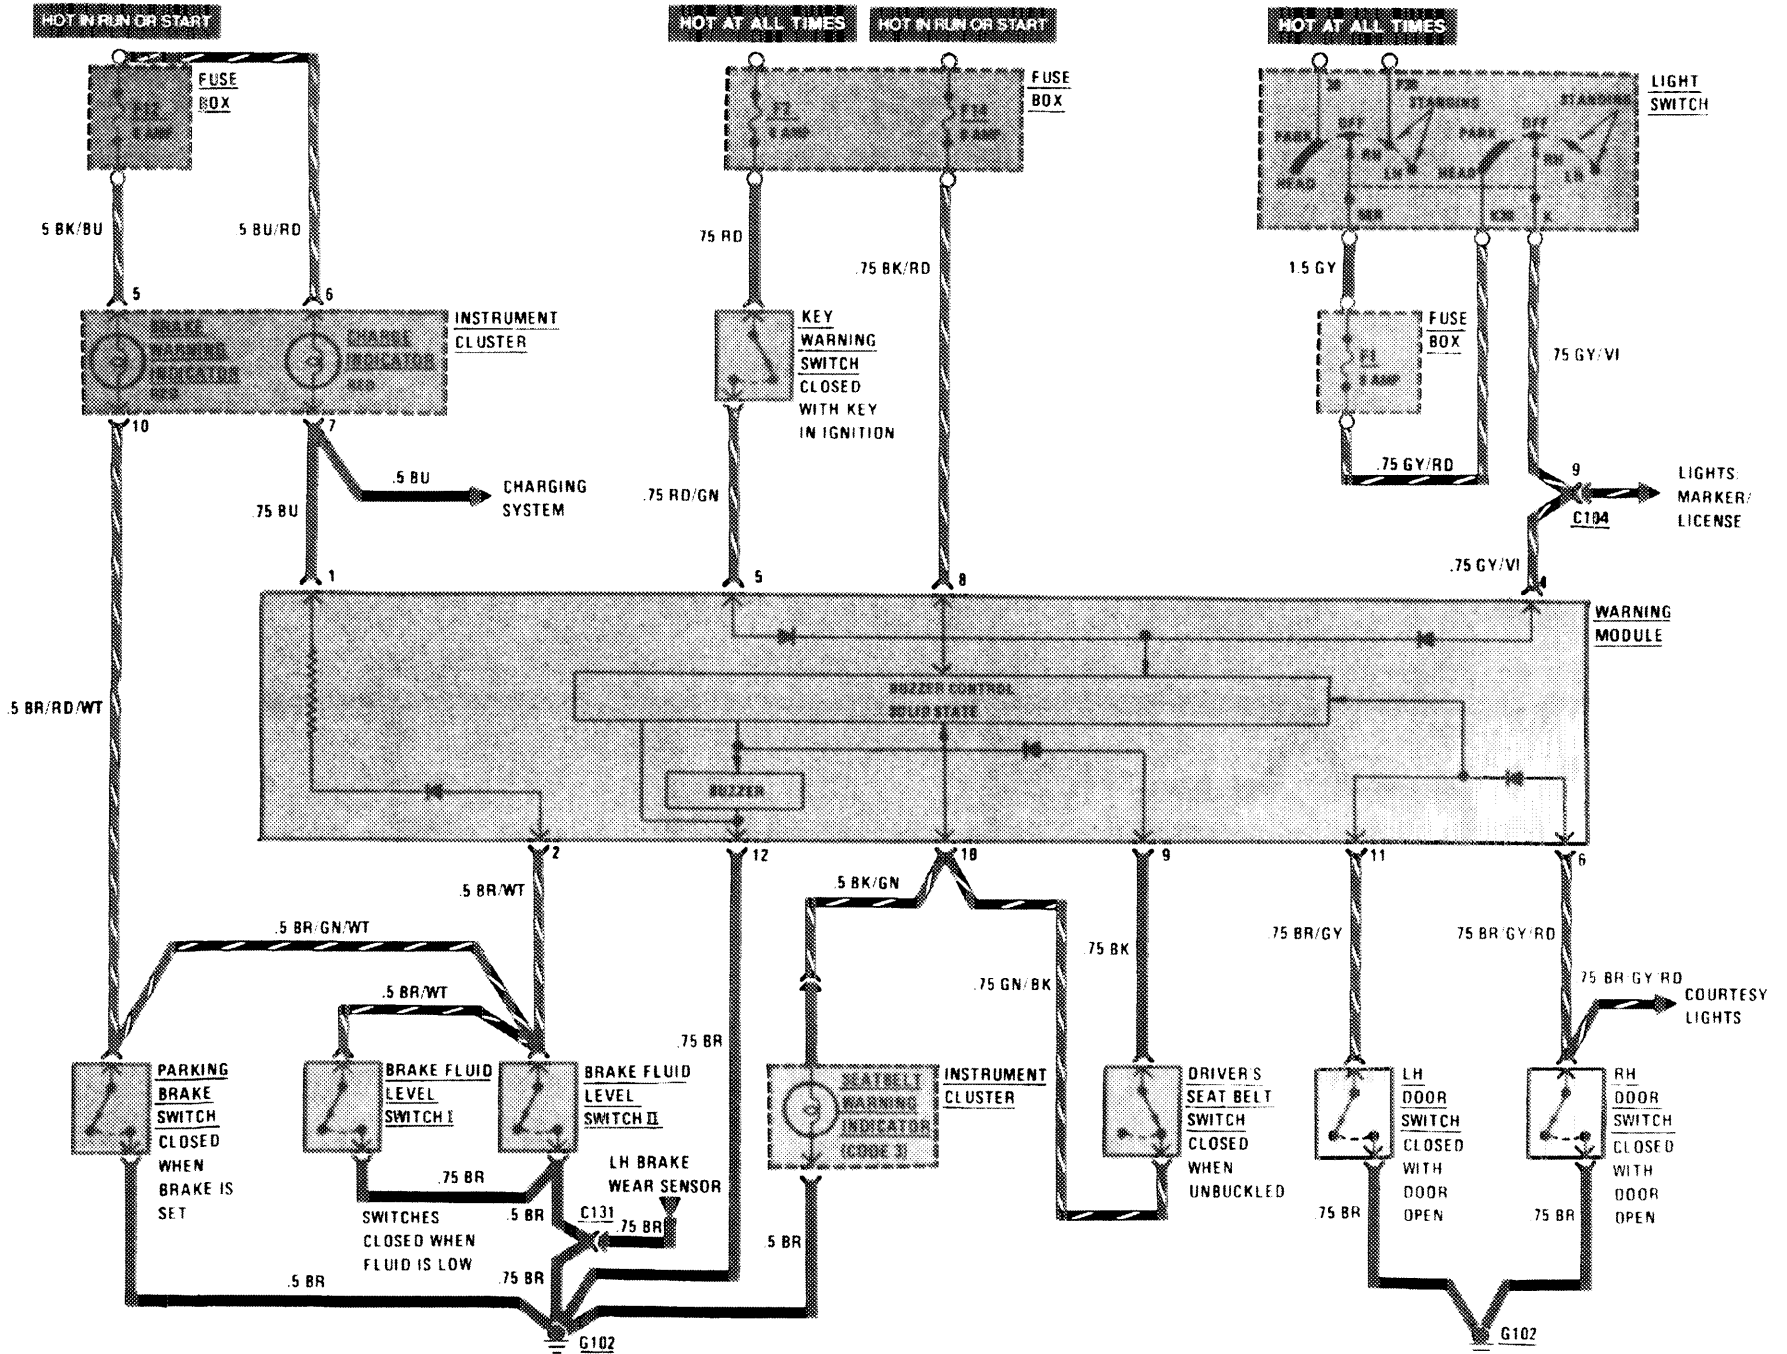


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

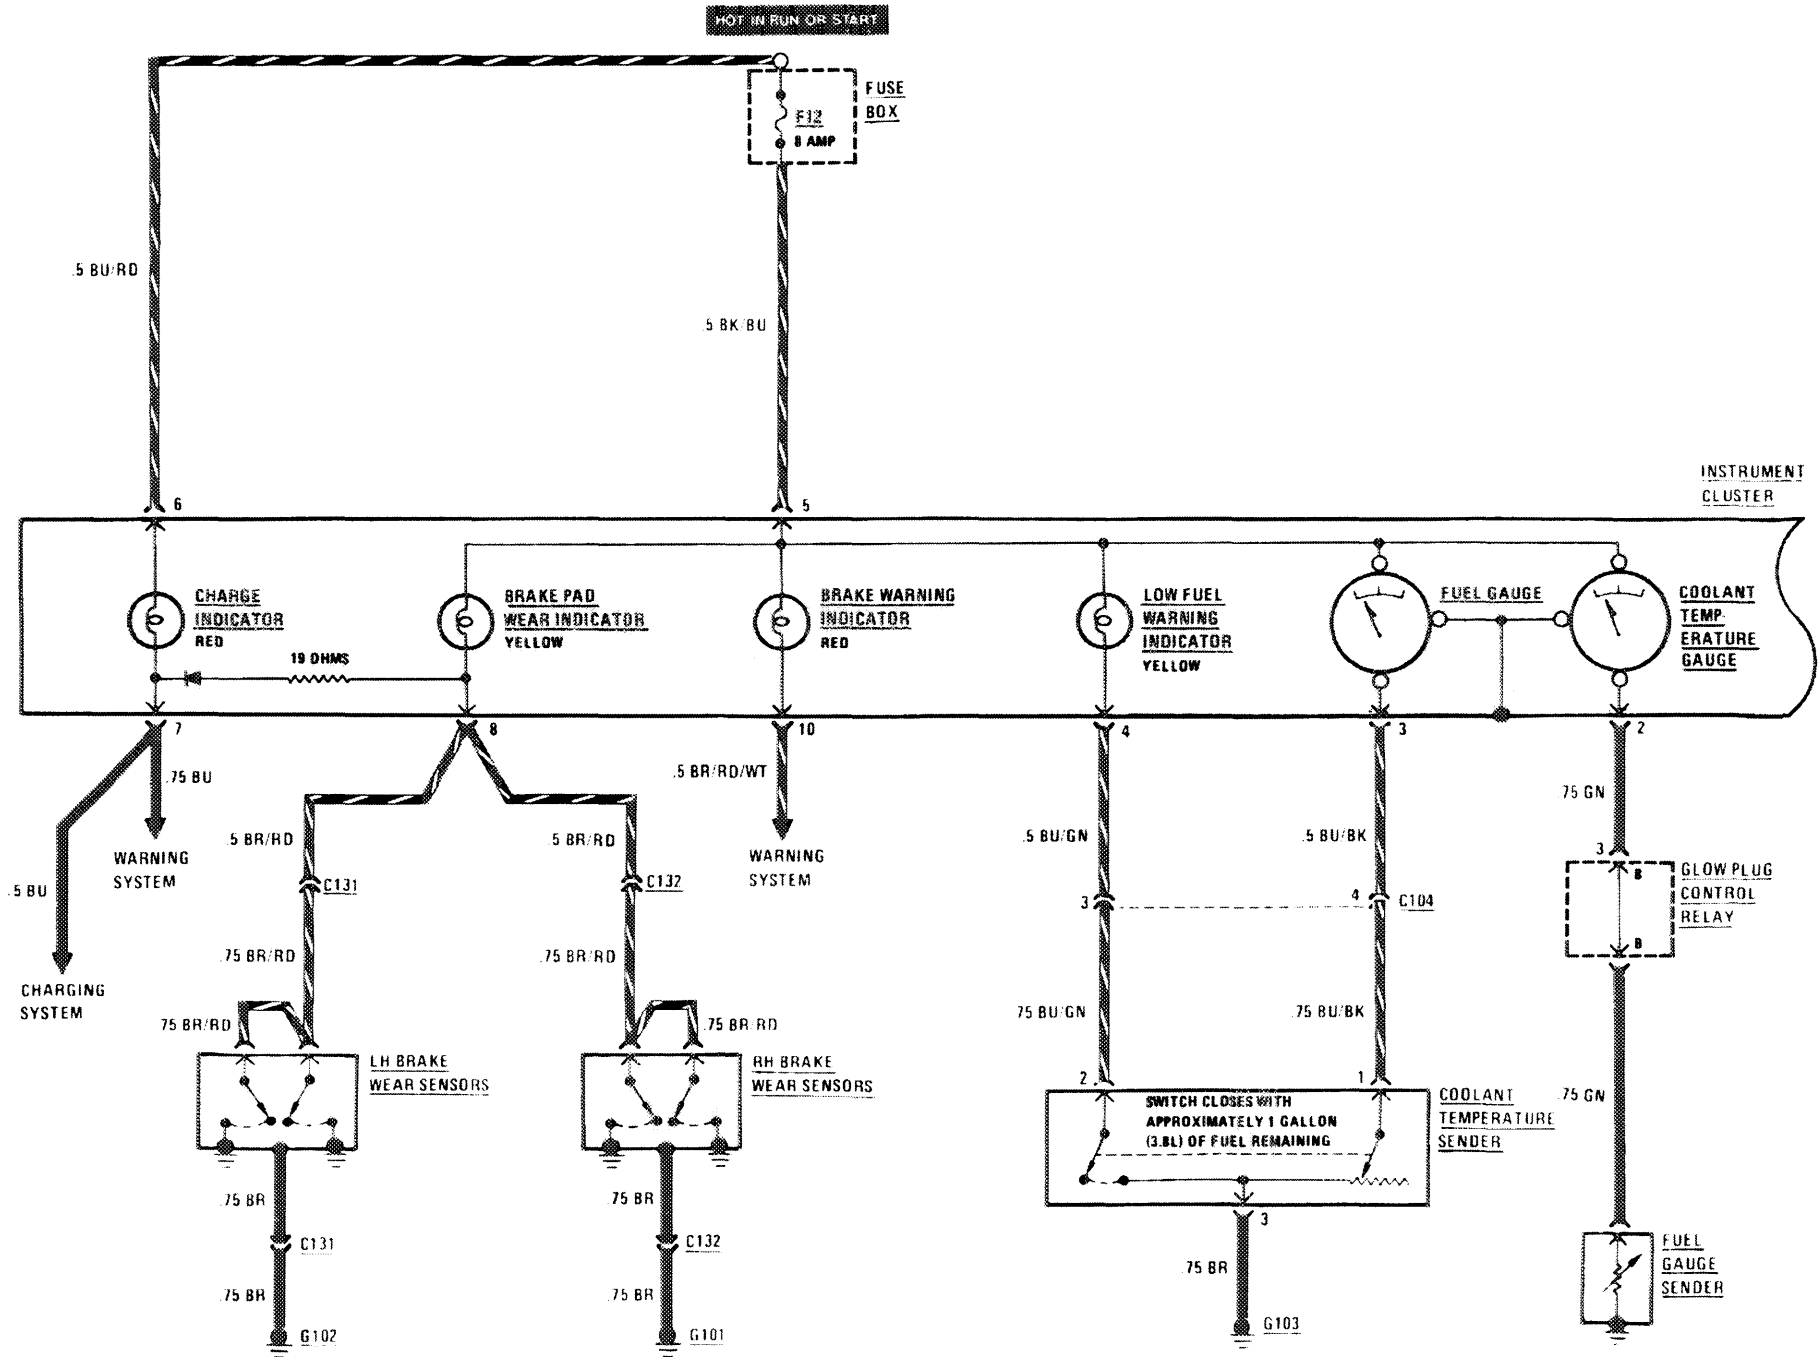


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

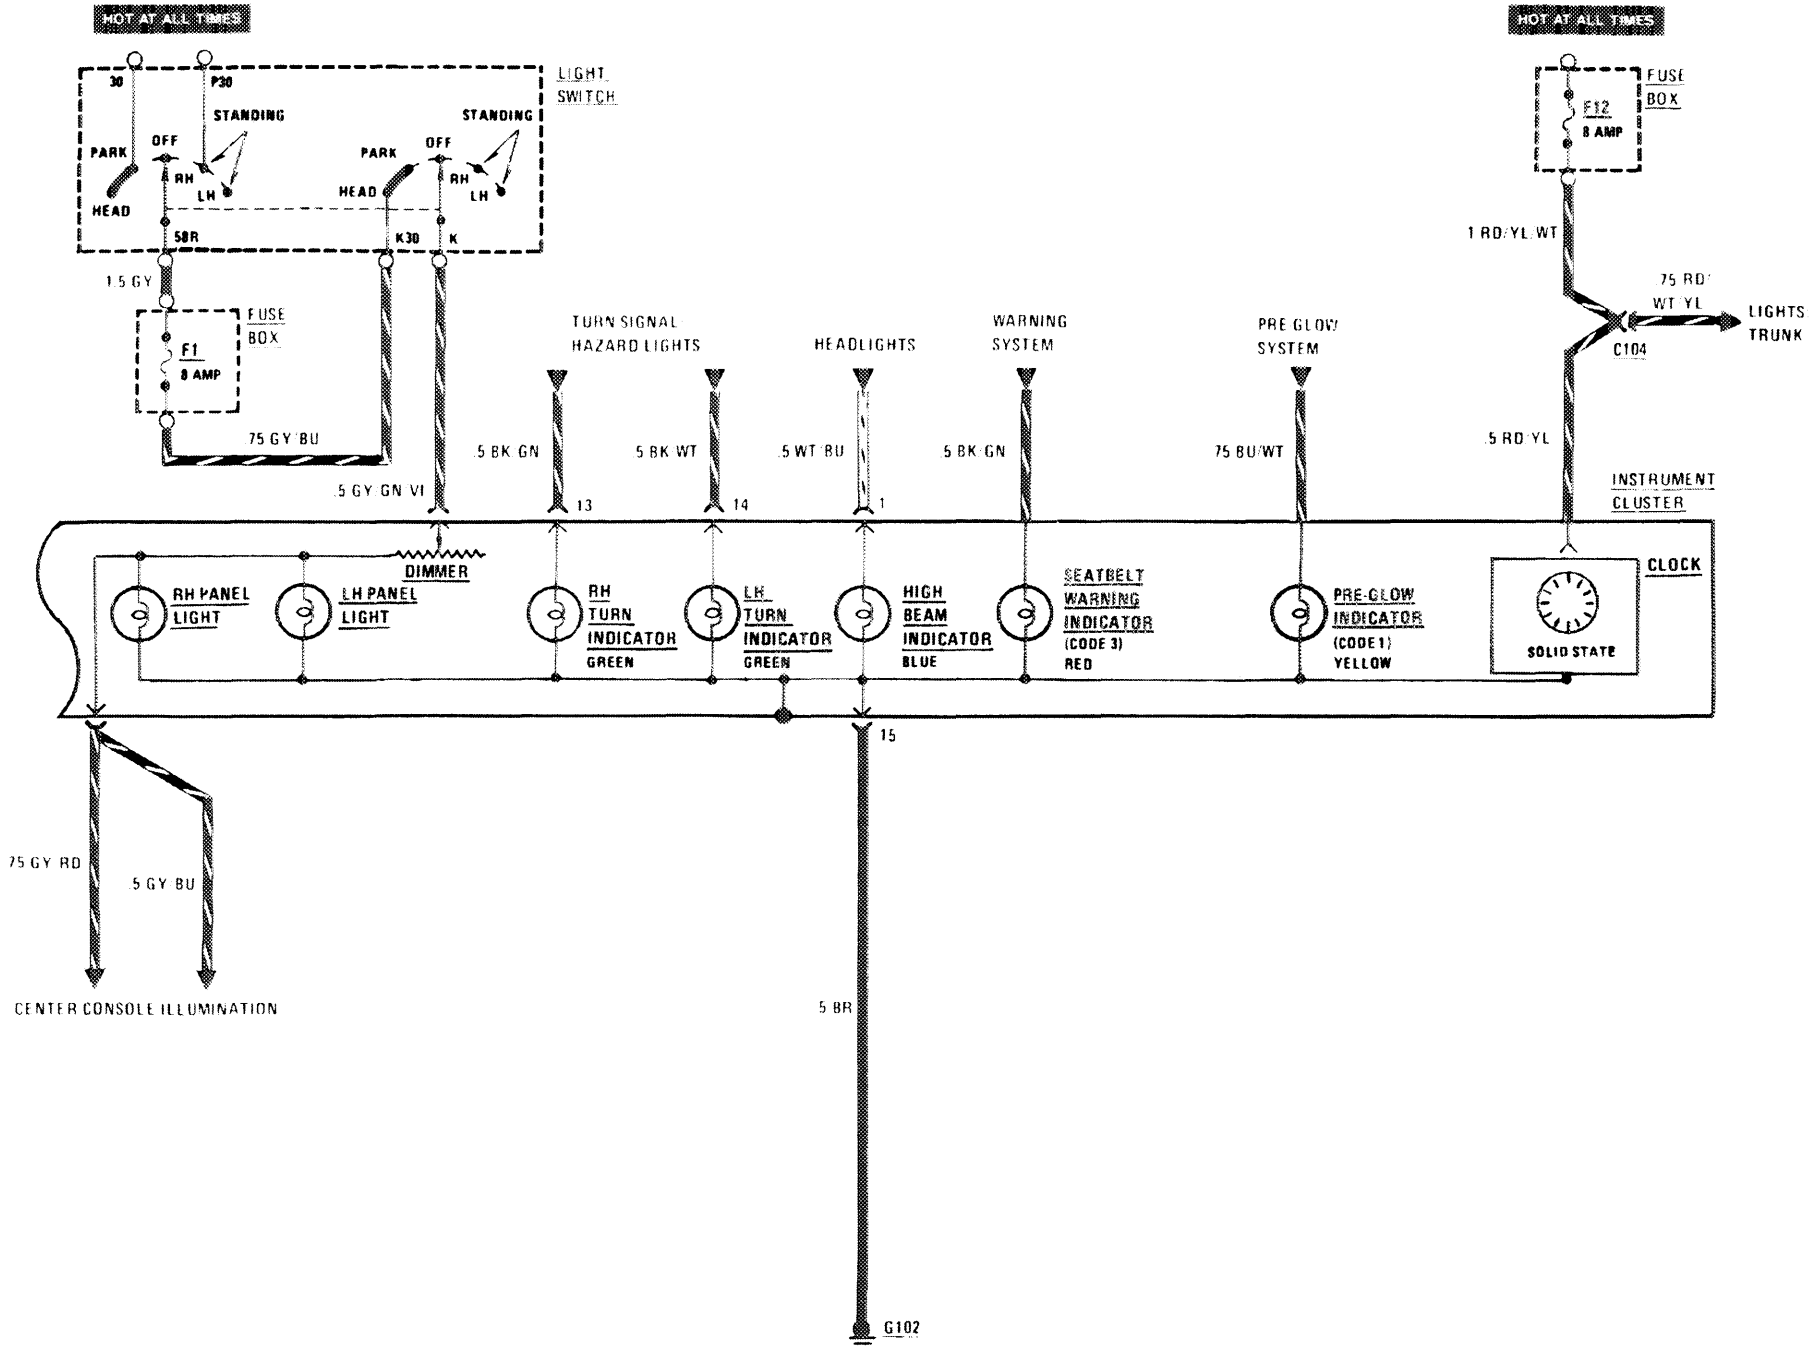


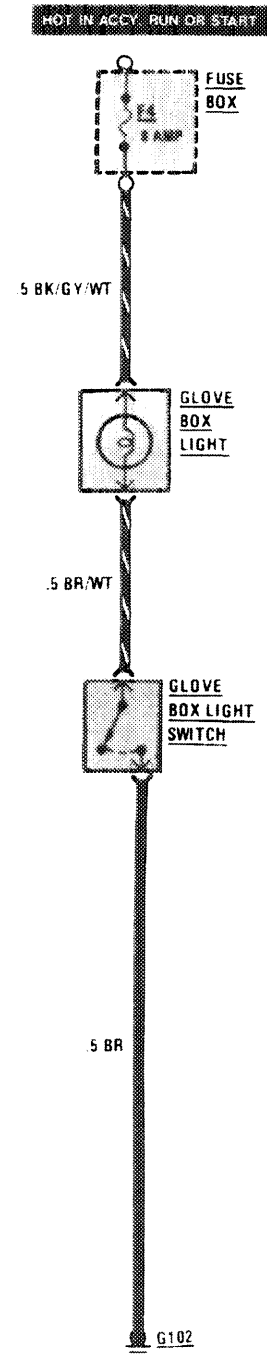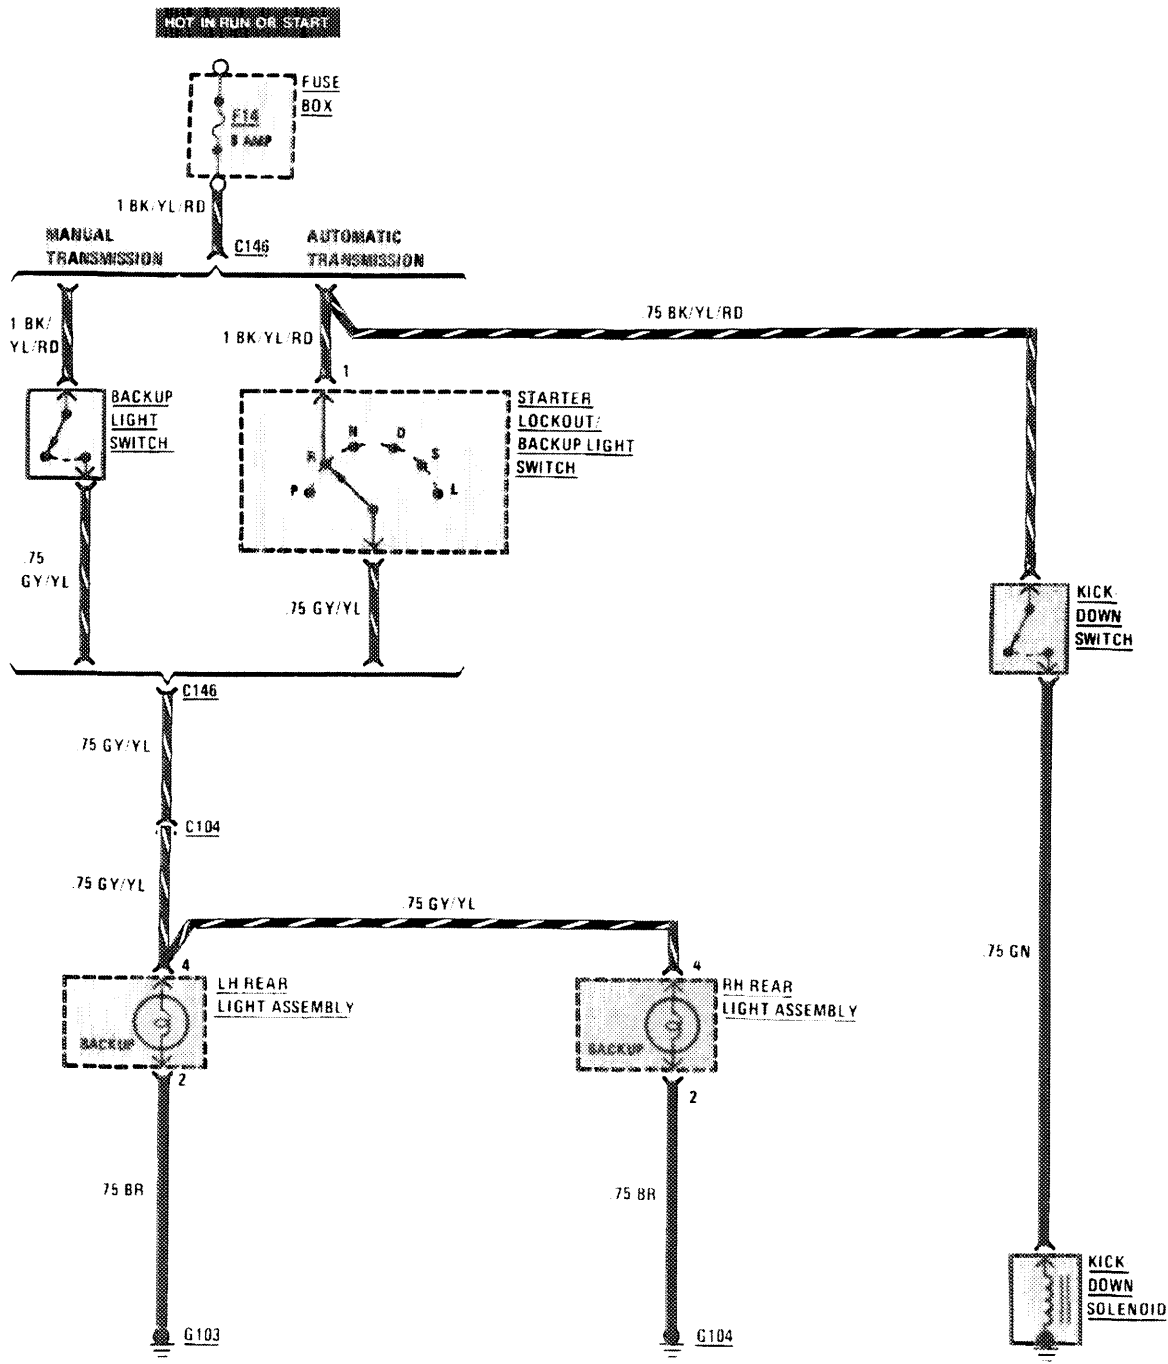


CENTER CONSOLE ILLUMINATION

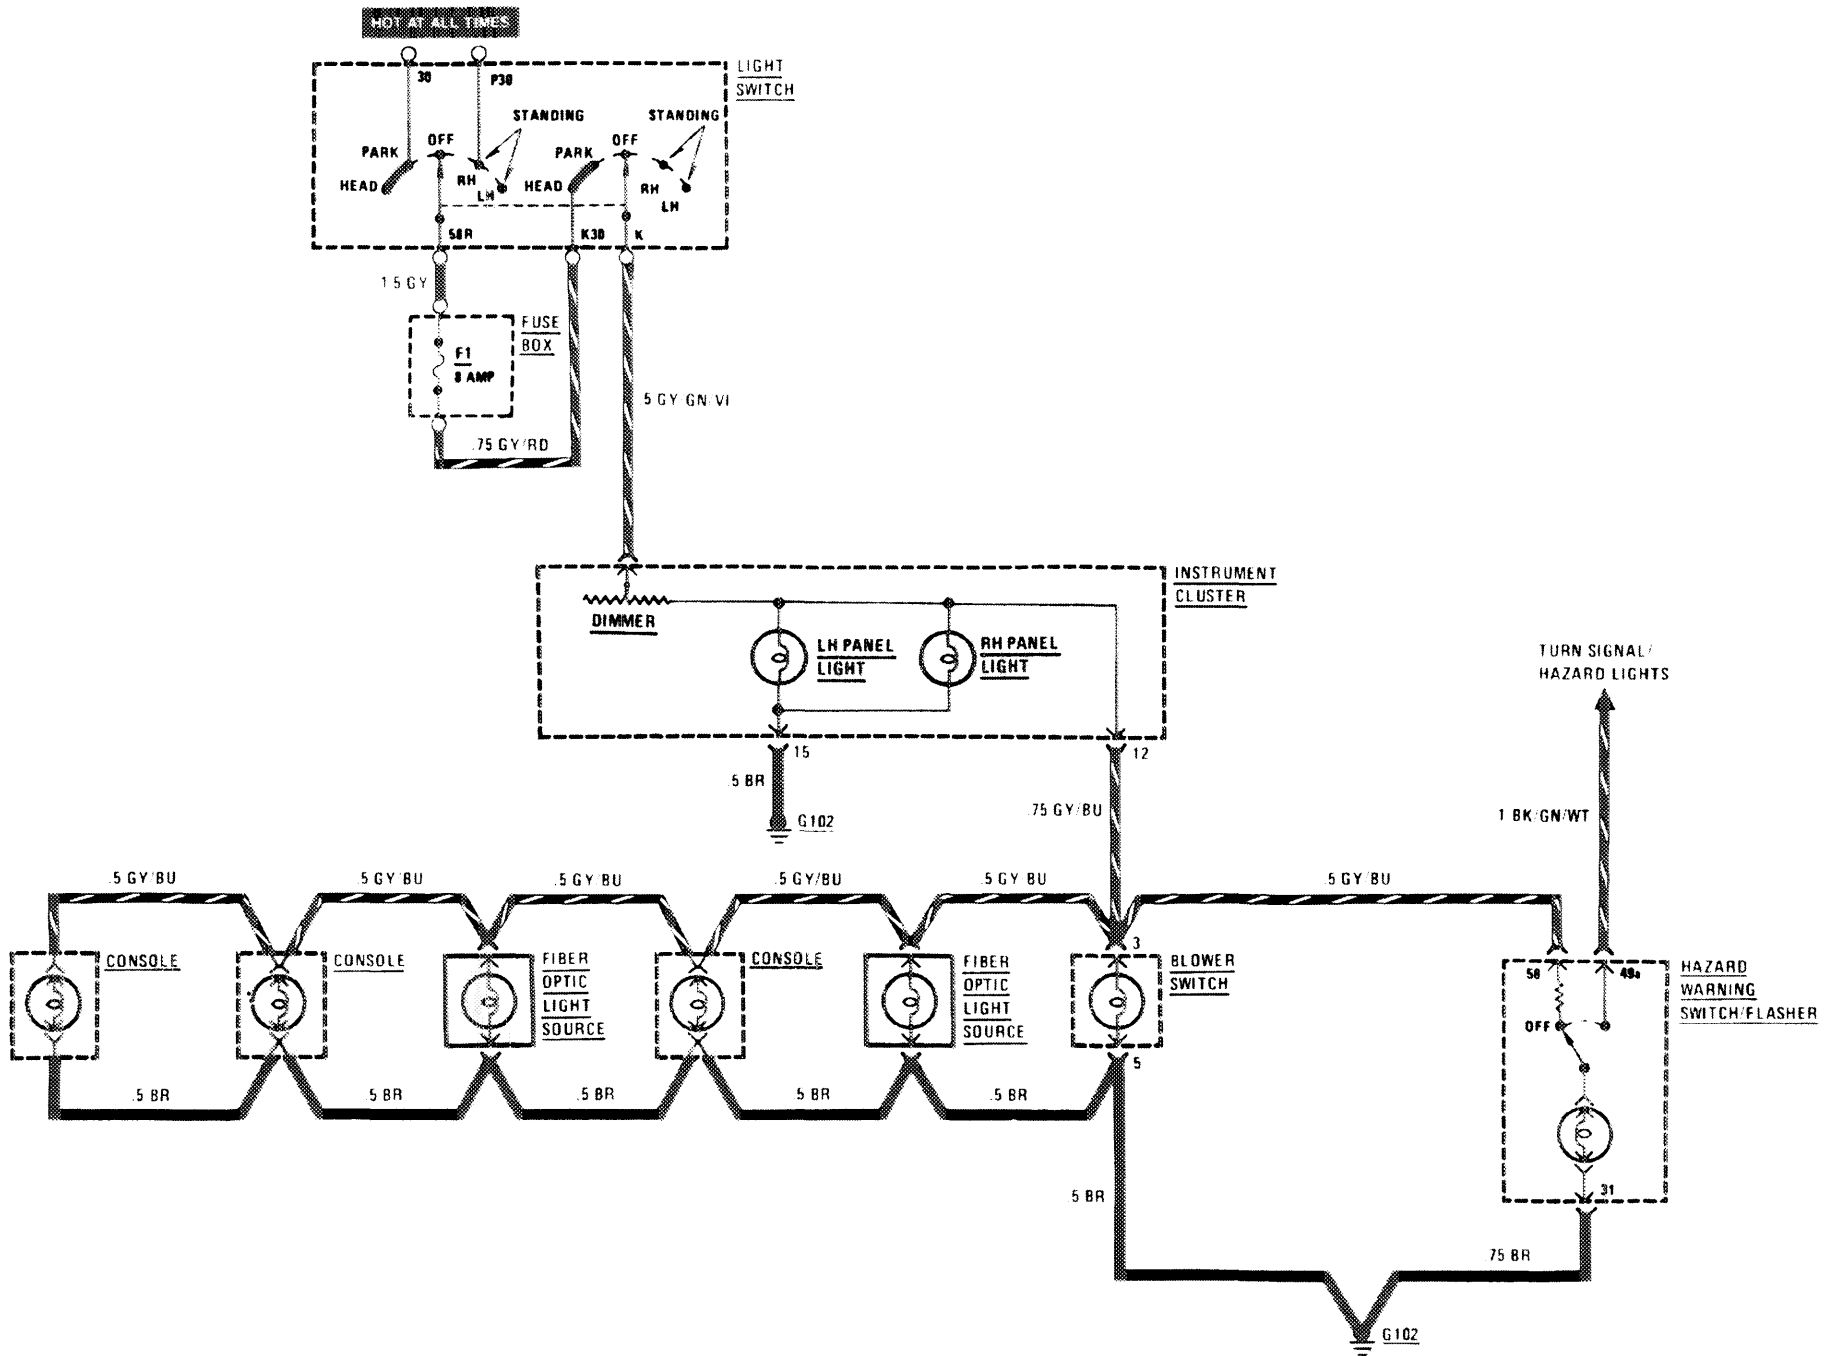


COURTESY LIGHTS

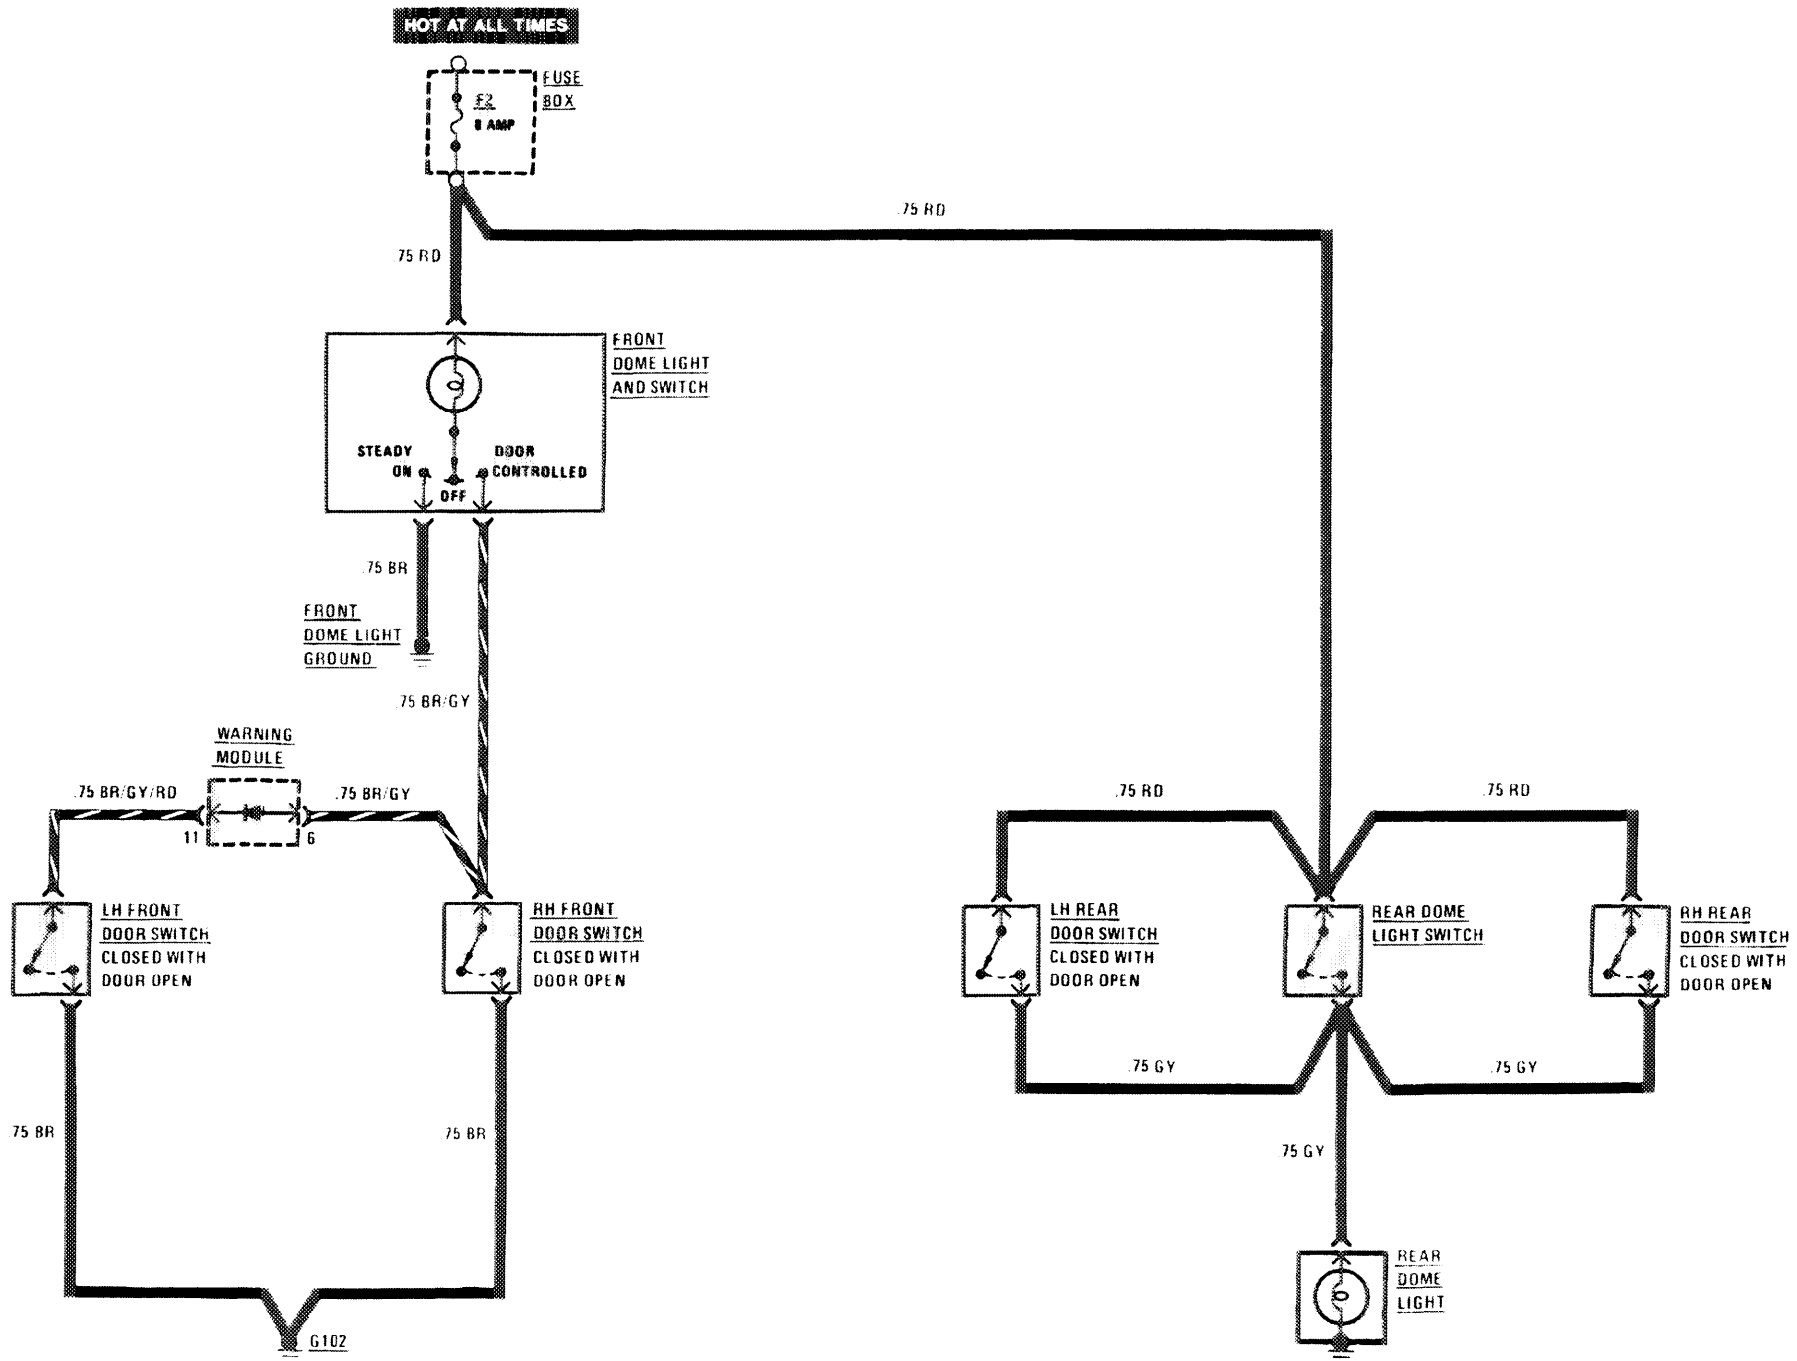



WIPER/WASHER

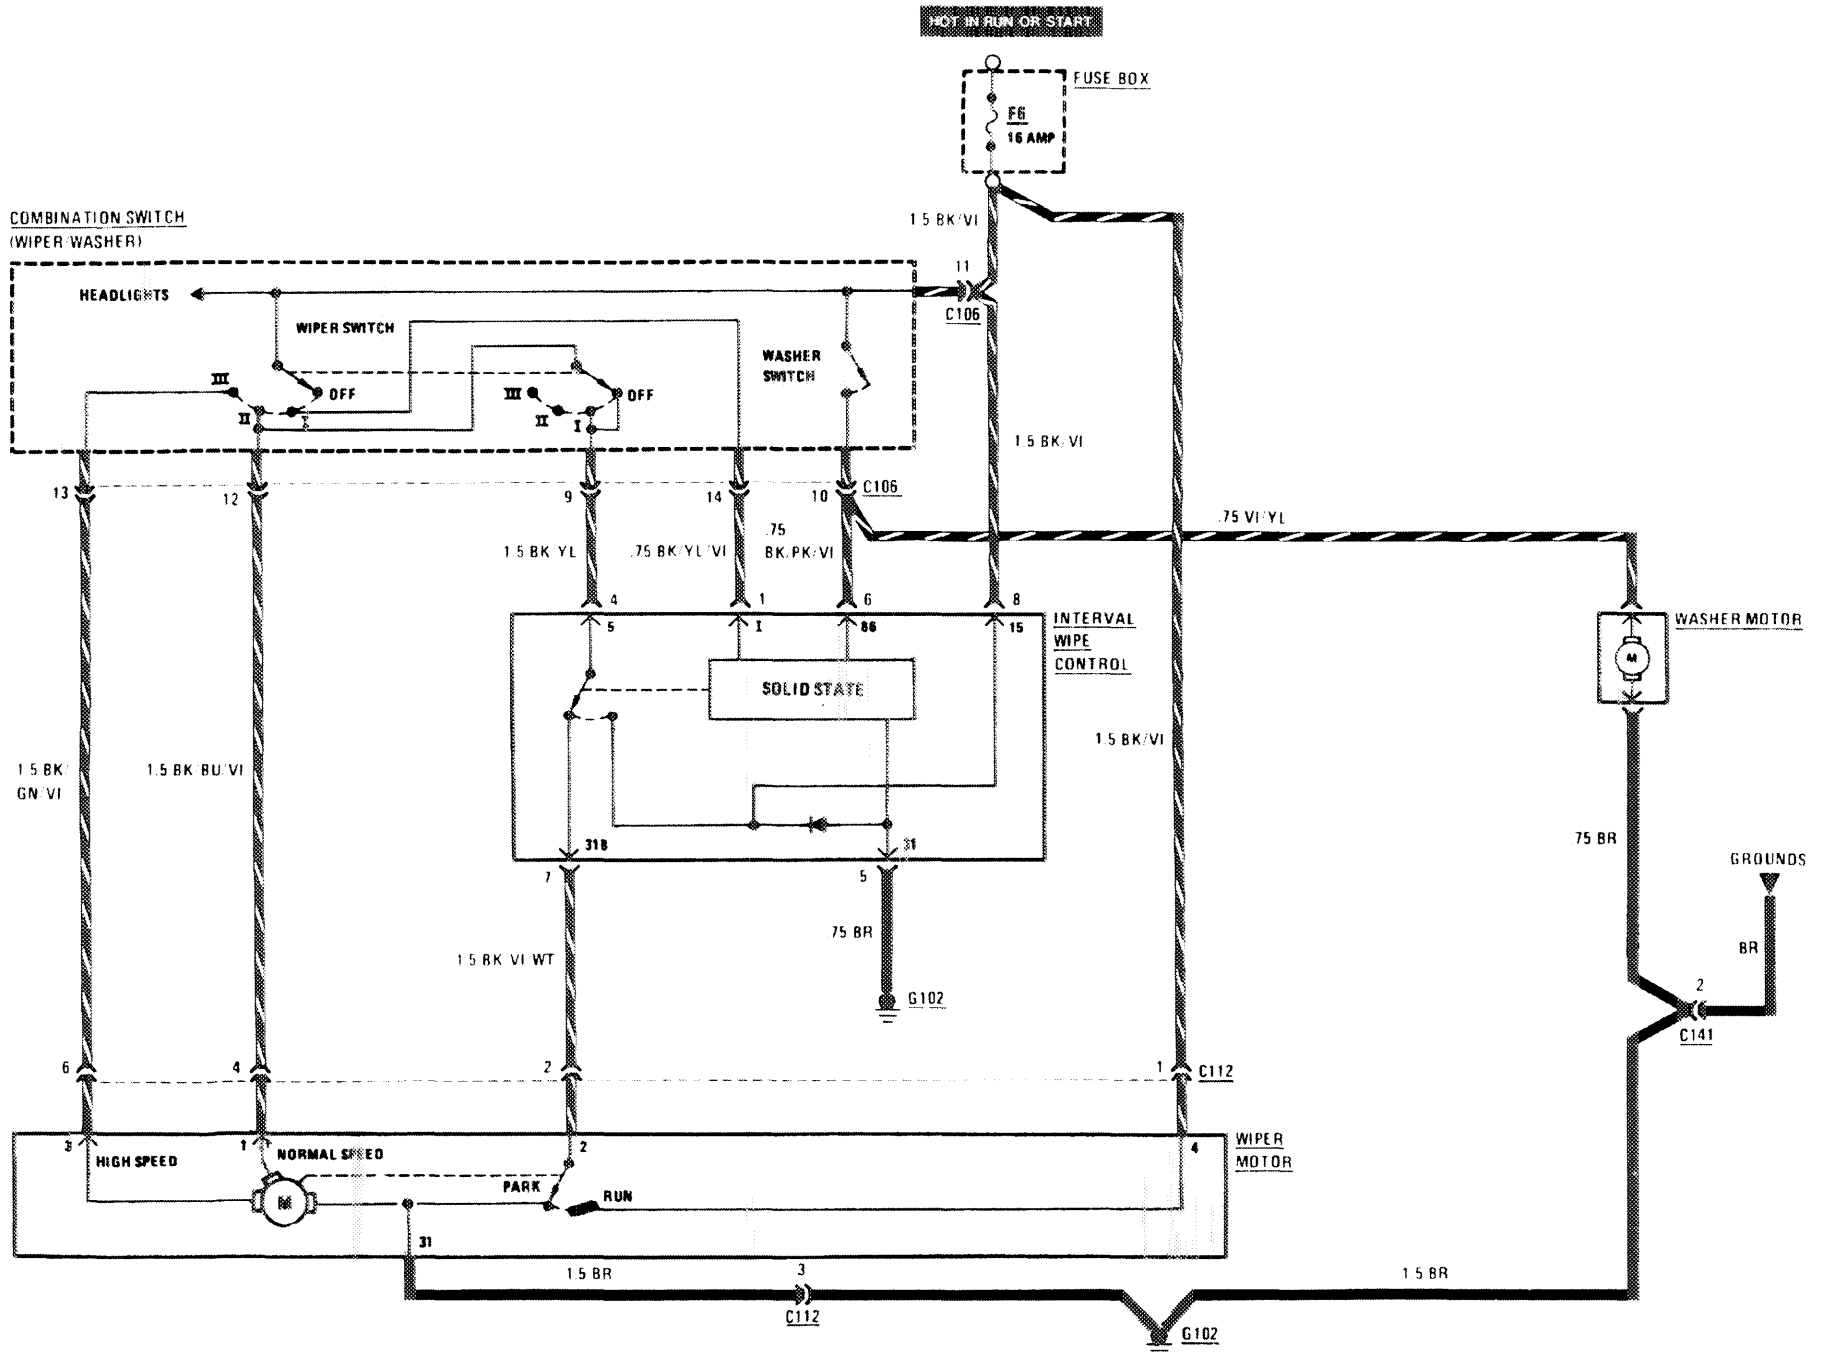


REAR DEFOGGER

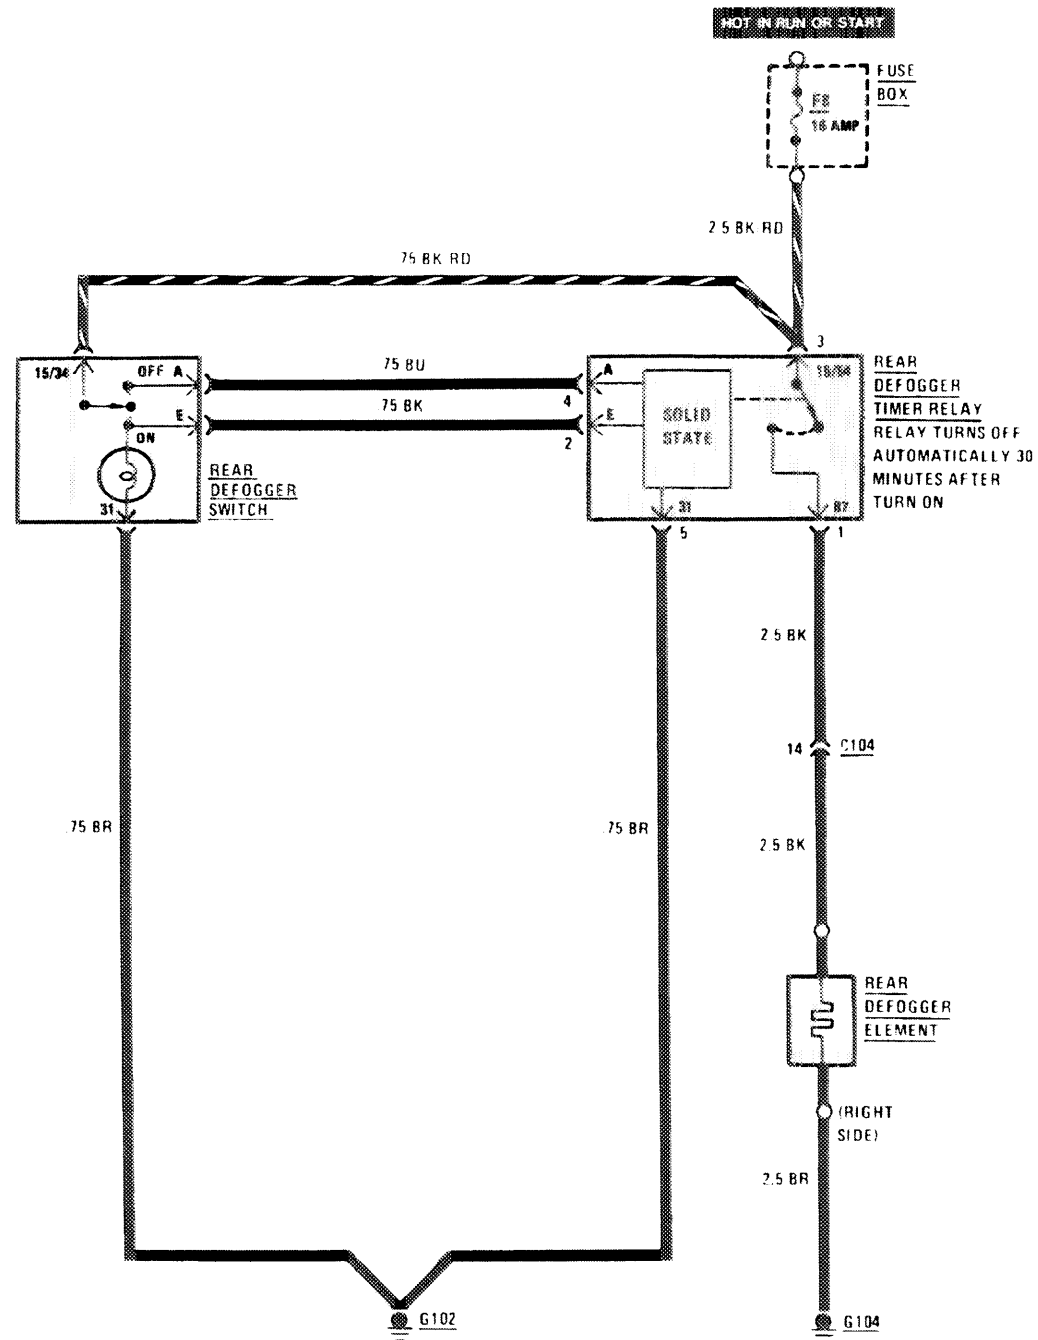


HORNS/SLIDING ROOF

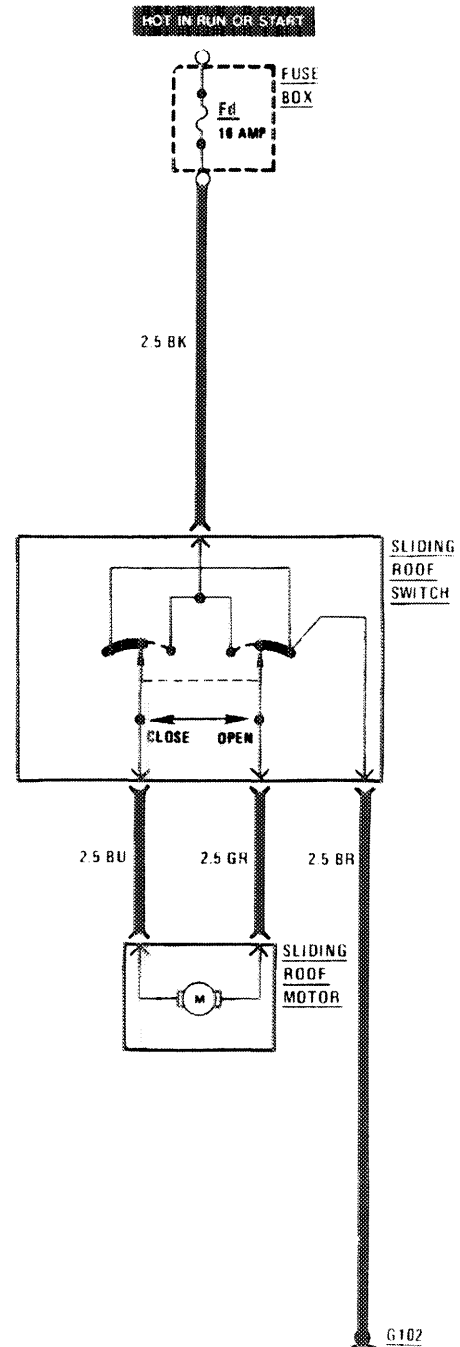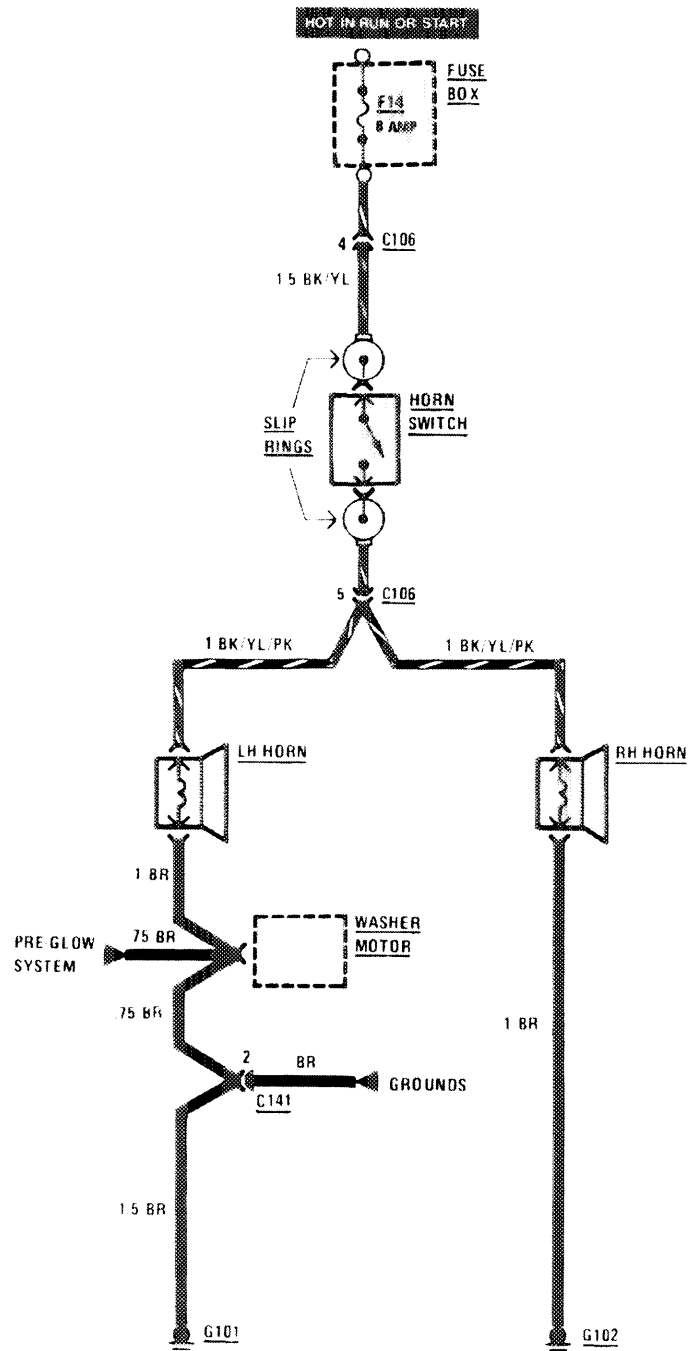


POWER WINDOWS

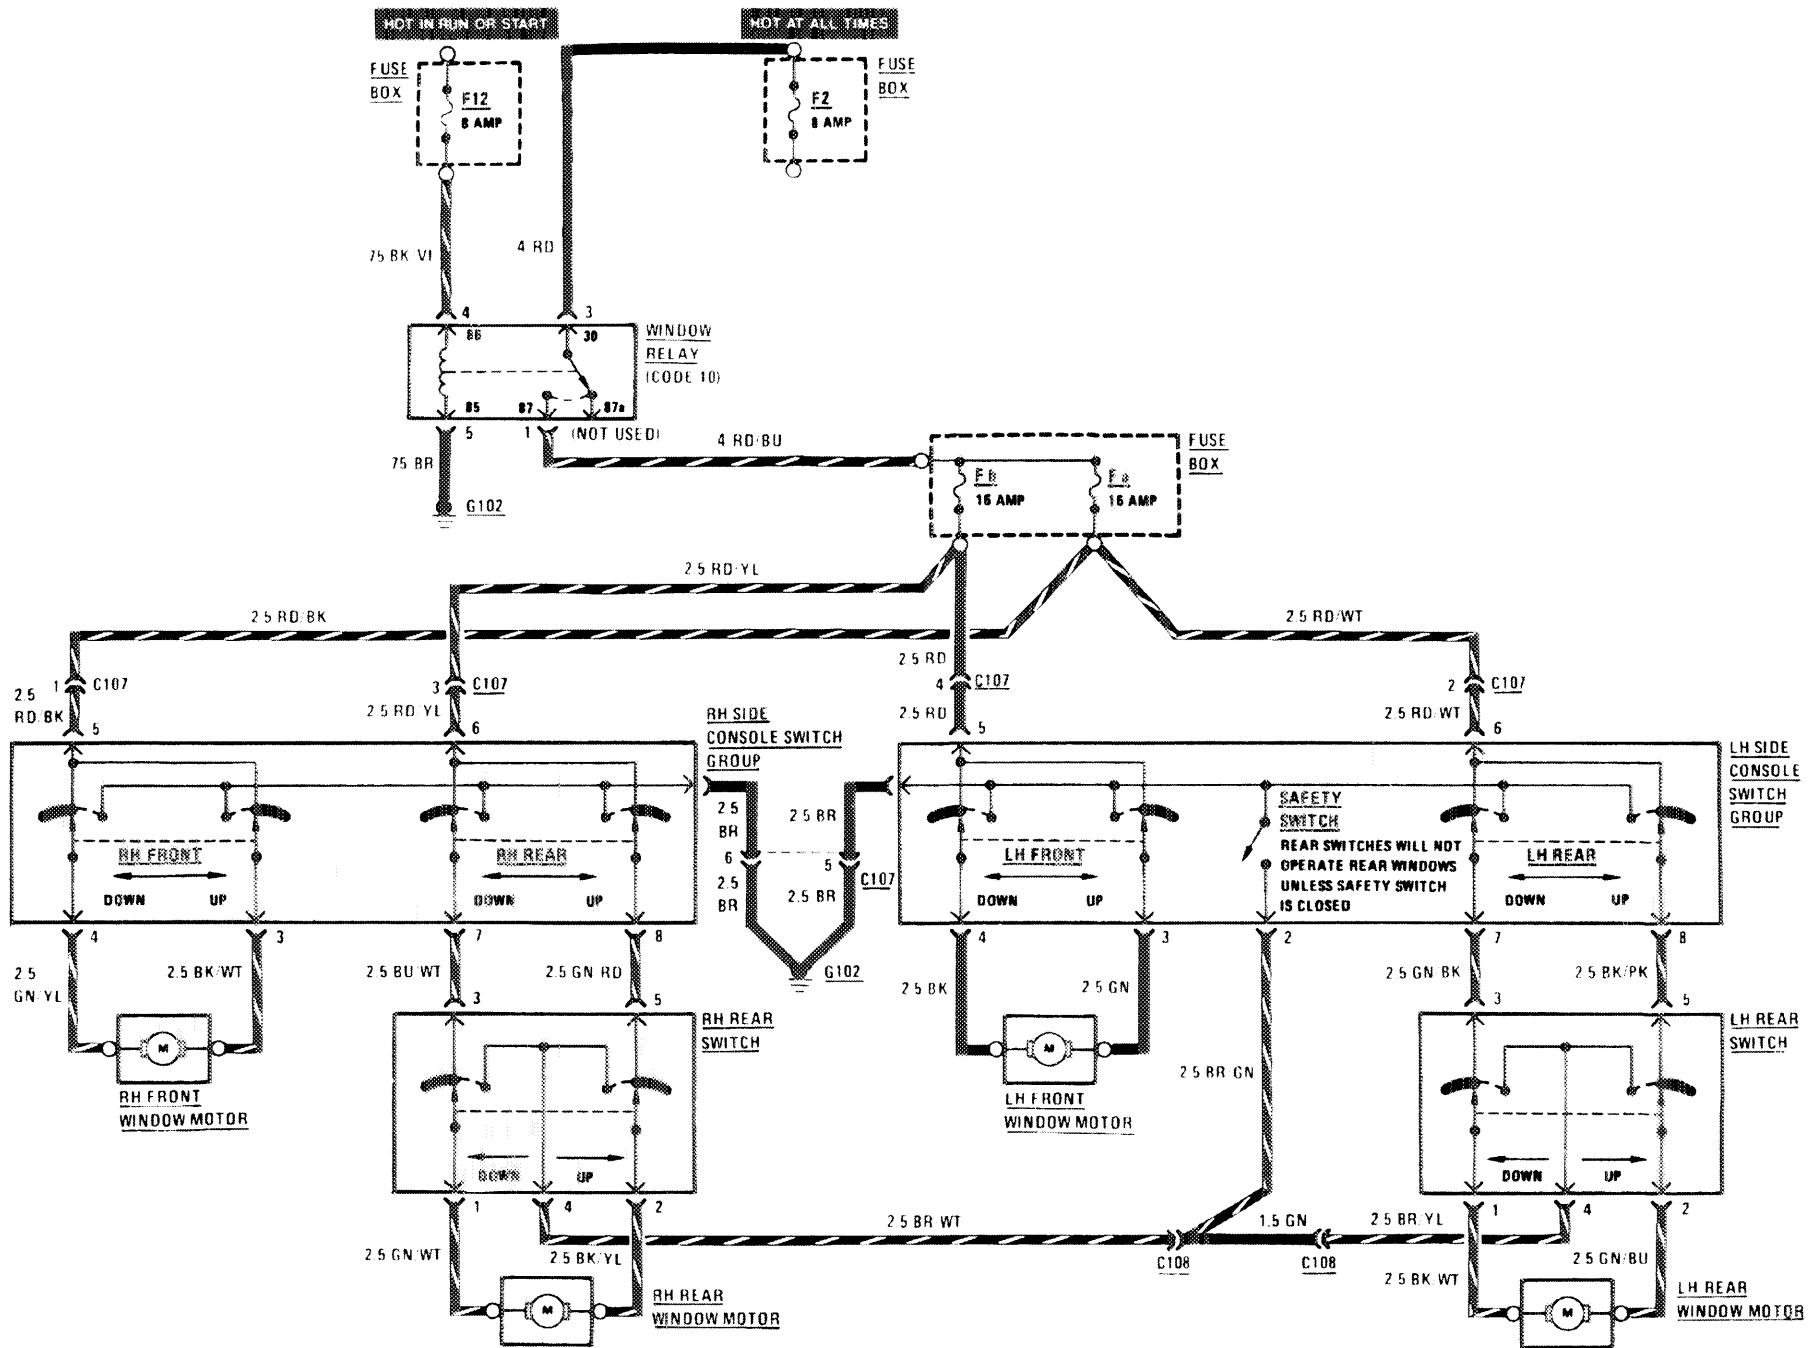



CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

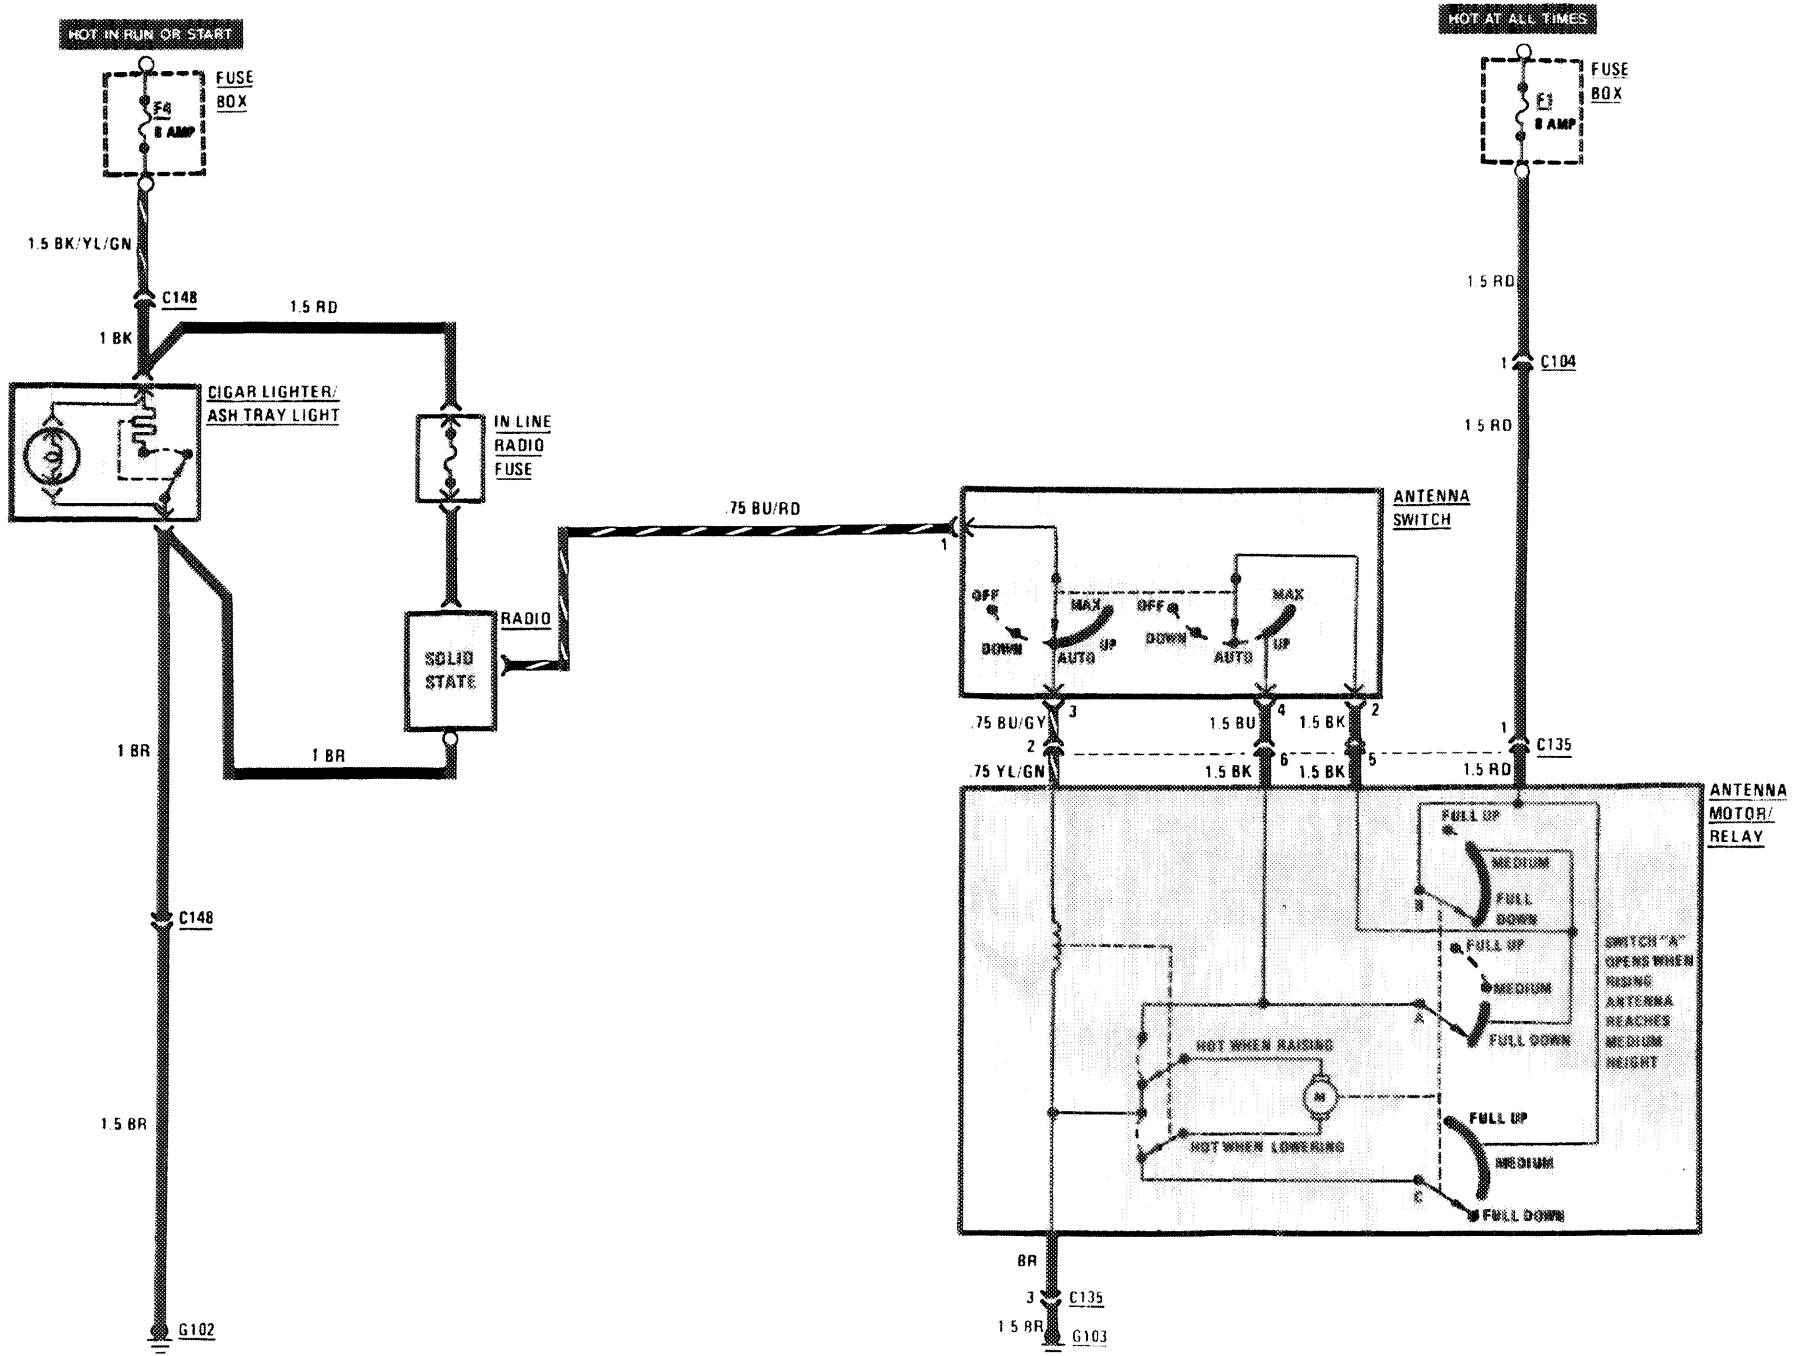



HEATED SEATS

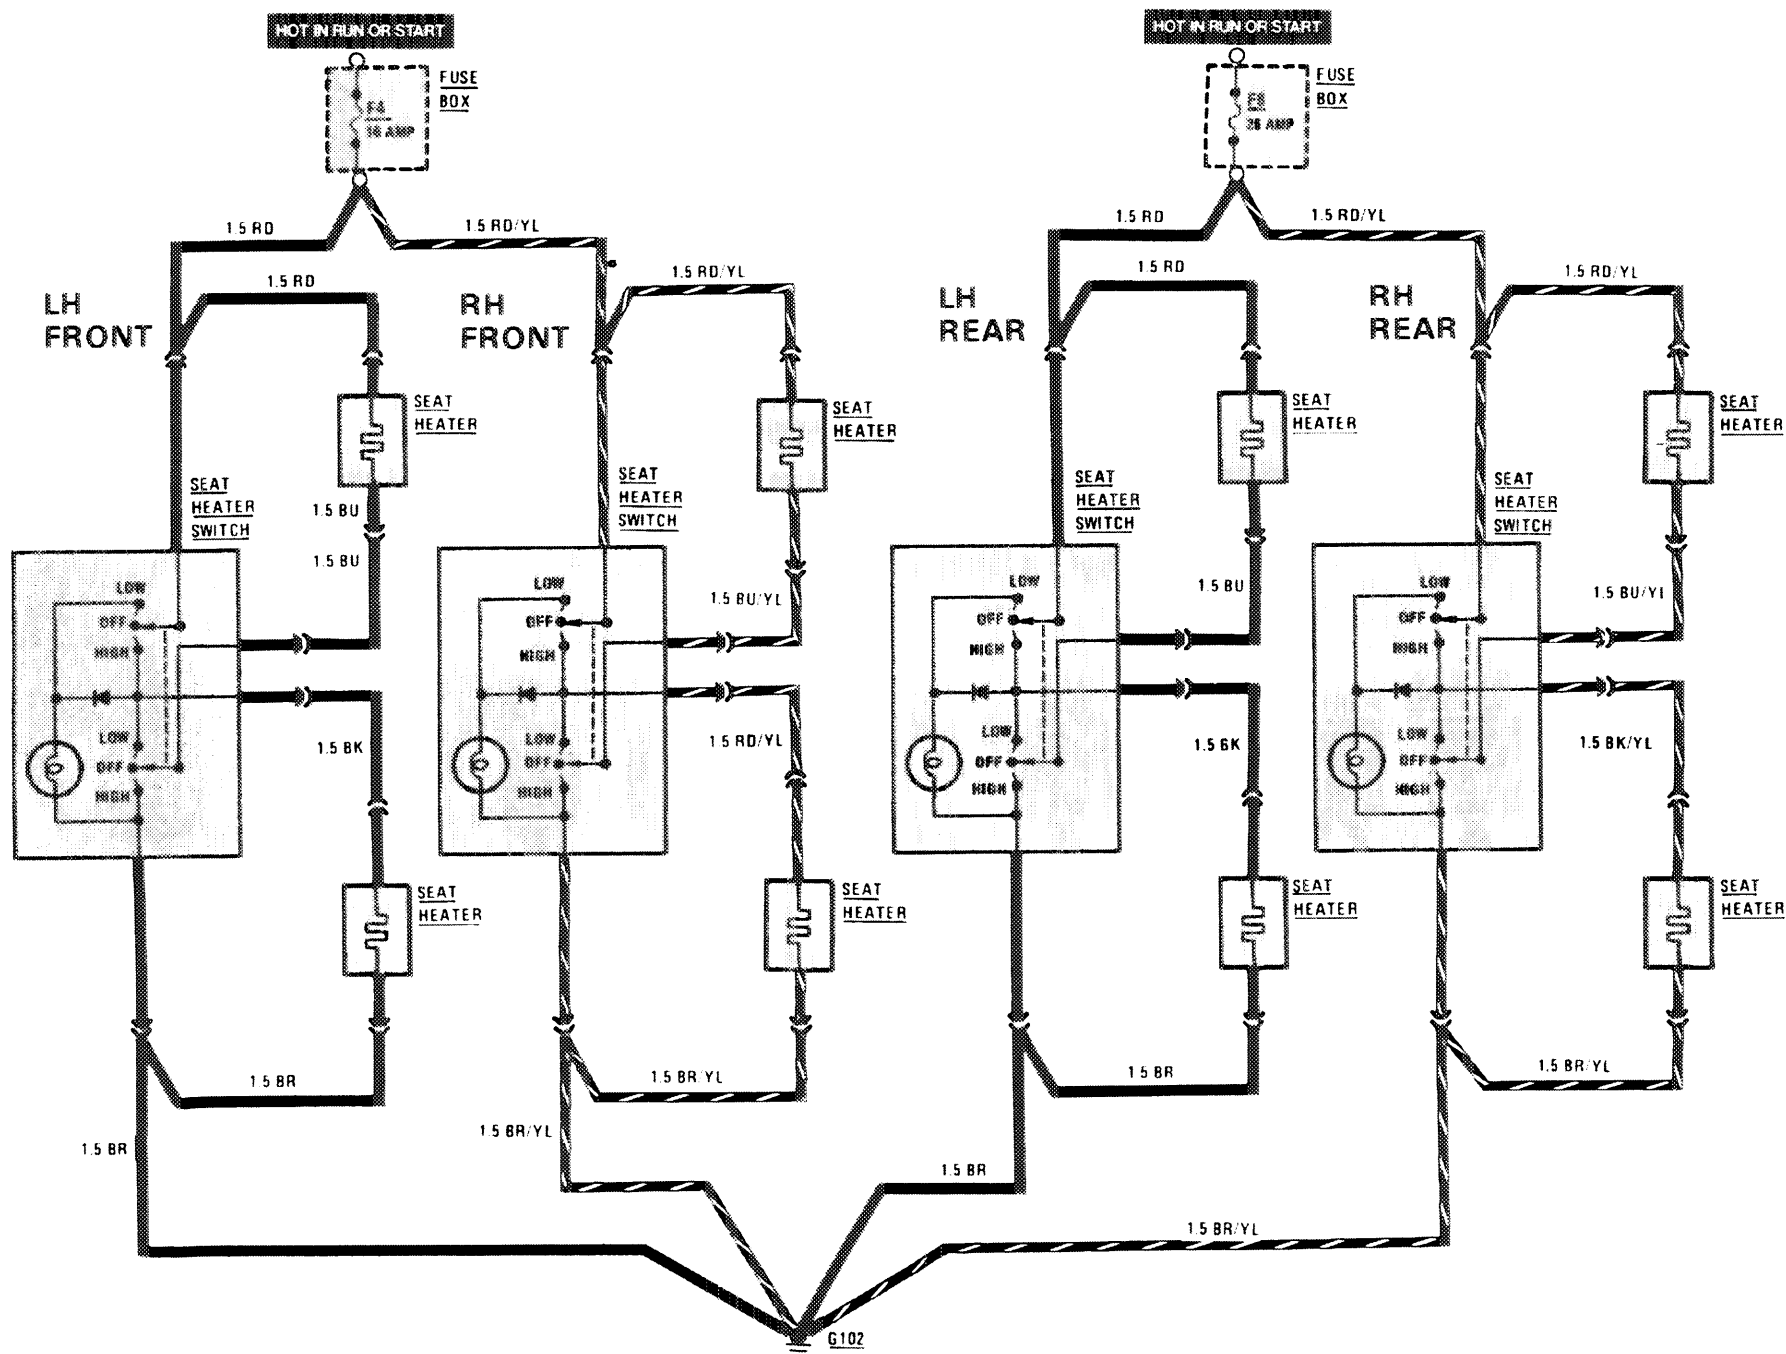

GROUND DISTRIBUTION

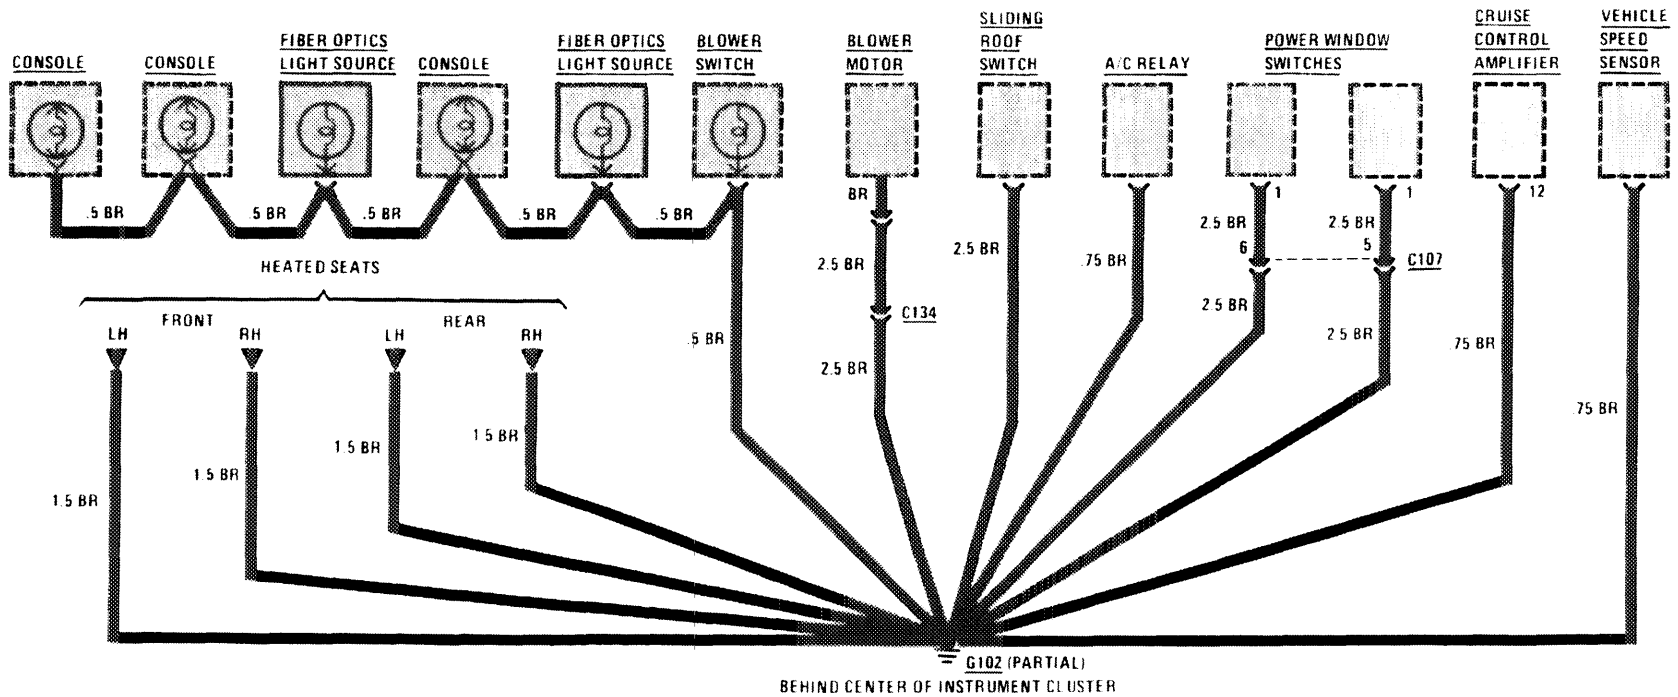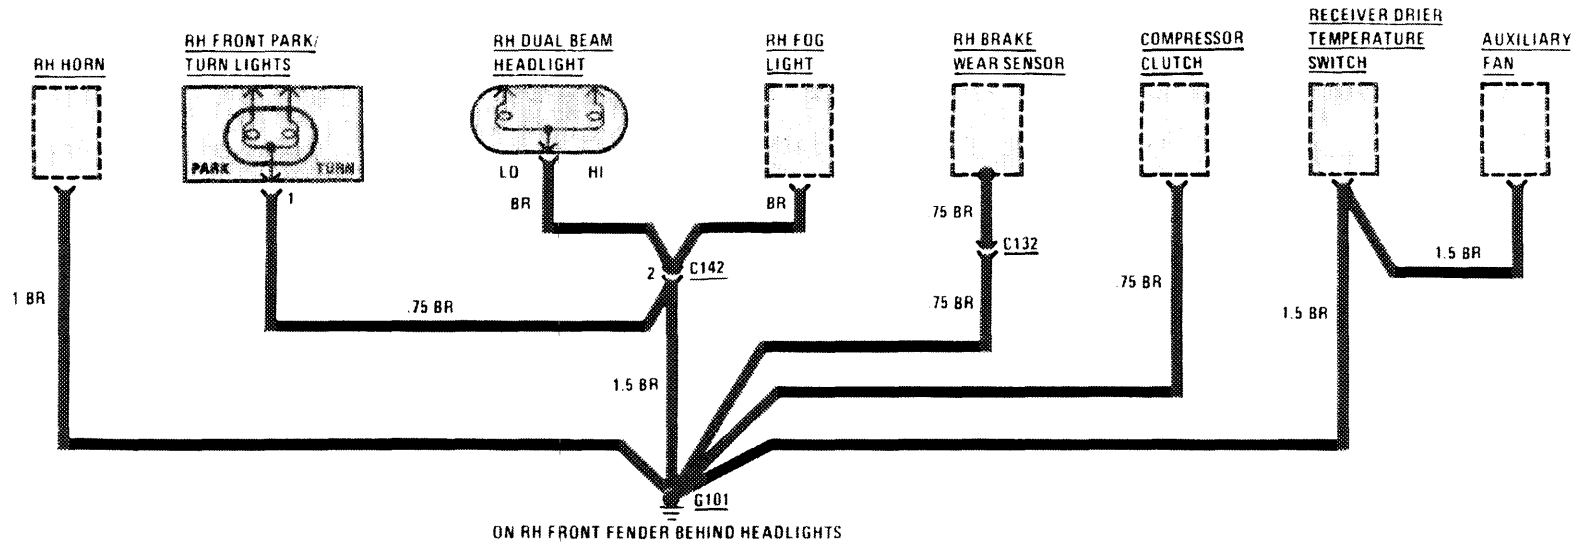

GROUND DISTRIBUTION

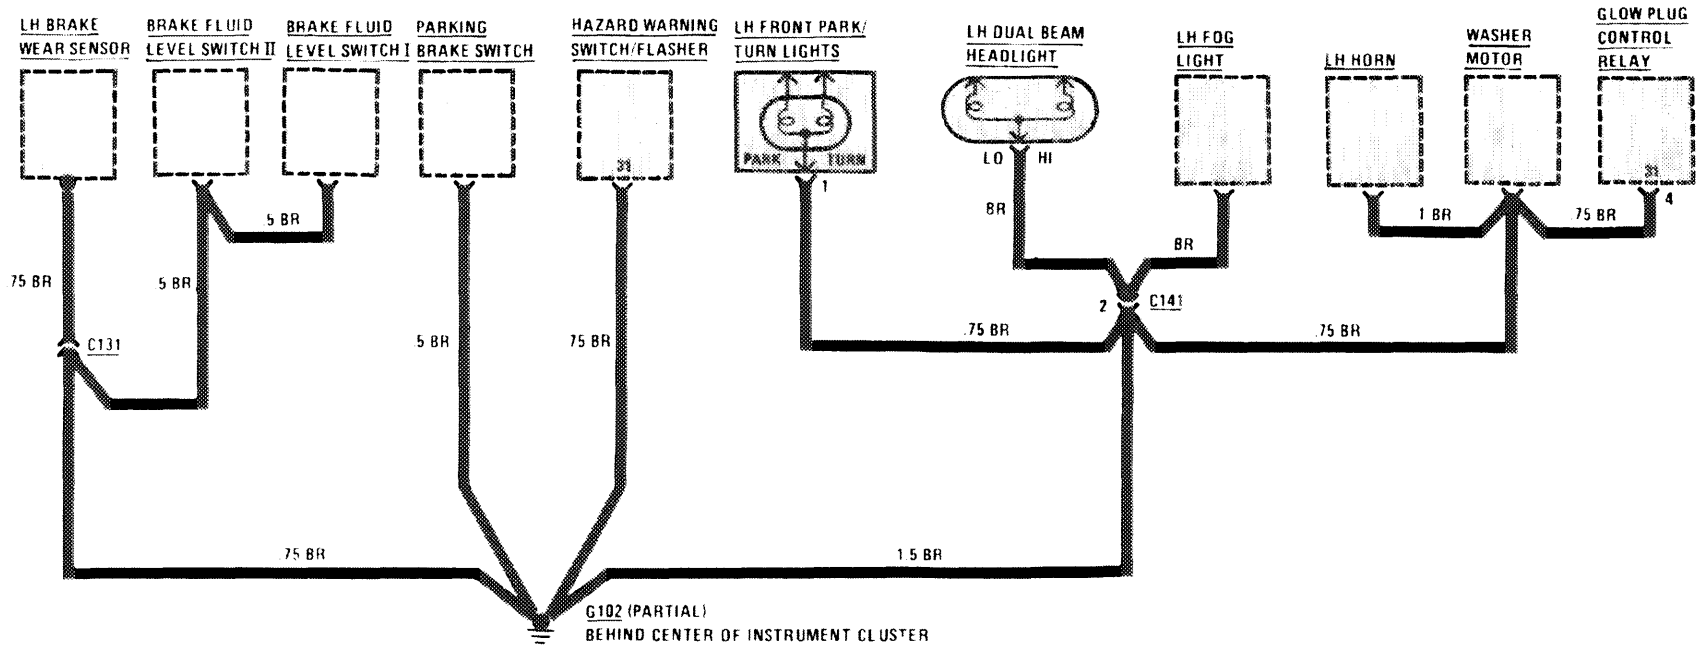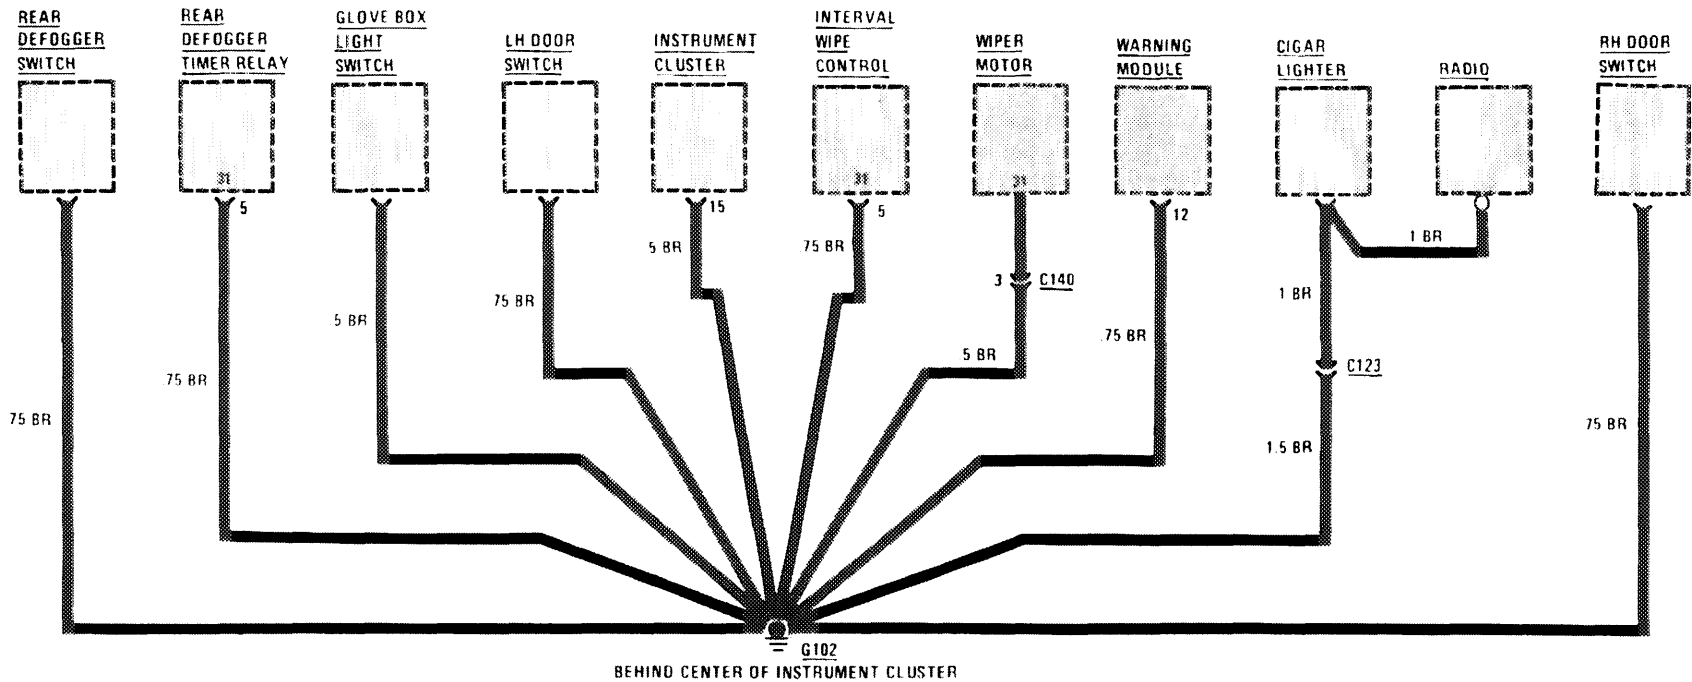

GROUND DISTRIBUTION

