

## COMPONENT LOCATIONS

### AUXILIARY FAN/HEATER/AIR CONDITIONING

	Page-Figure
A/C Compressor Clutch.....	Lower LH front of engine ..... 207-3
A/C Compressor Low Pressure Cut-Out Switch	On receiver drier ..... 201-1
A/C Relay .....	Top of LH front wheel well, in relay box
Auxiliary Fan Motor .....	Front of radiator
Auxiliary Fan Relay .....	Top of LH front wheel well, in relay box ..... 201-2
Blower Motor .....	Above passenger's footwell ..... 208-1
Blower Resistors .....	In fresh air duct
Blower Switch .....	On upper console
Fuse Box .....	LH rear corner of engine compartment ..... 100-1
Ignition Switch .....	Instrument panel, right of steering column .... 205-1
Receiver Drier Temperature Switch .....	On receiver drier, behind RH headlights ..... 201-1
Starter Assembly .....	Lower RH side of engine
Starter Lockout/Backup Light Switch.....	LH side of automatic transmission ..... 208-3
Temperature Vacuum Switch	On upper console
C134 (4 pins).....	Above LH side of passenger's footwell ..... 208-1
C146 (4 pins).....	Beside upper console, above accelerator ..... 208-2
G101 .....	RH front fender, behind headlights ..... 201-1
G102 .....	Behind instrument cluster ..... 202-1

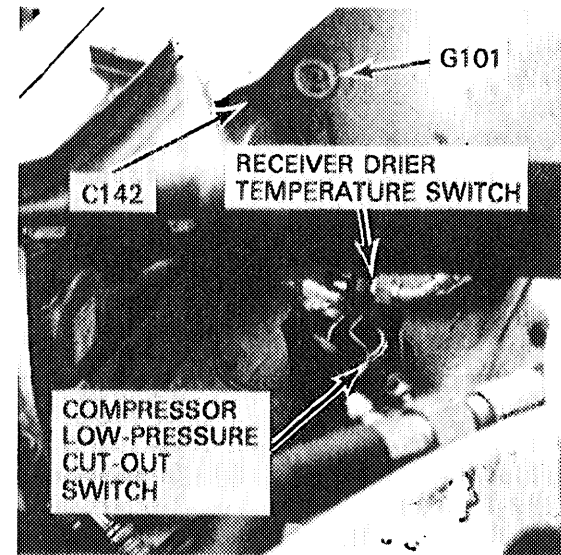


Figure 1 - Behind RH Headlight Assembly

### BACKUP LIGHTS/TRANSMISSION KICKDOWN

Backup Light Switch .....	Base of manual transmission shifter
Fuse Box .....	LH rear corner of engine compartment ..... 100-1
Kickdown Solenoid .....	RH front side of transmission ..... 206-2
Kickdown Switch .....	Under accelerator pedal
Starter Lockout/Backup Light Switch.....	LH side of automatic transmission ..... 208-3
C104 (14 pins) .....	To right of emergency brake support ..... 205-2
C146 (4 pins).....	Beside upper console, above accelerator ..... 208-2
G103 .....	In trunk, on rear of LH wheel well ..... 202-2
G104 .....	Ahead of RH rear light assembly ..... 204-1

### CENTER CONSOLE ILLUMINATION

Fiber Optic Light Sources.	Behind upper console
Hazard Warning Switch/Flasher .....	On center console
Light Switch.....	Instrument panel, left of steering column
Fuse Box .....	LH rear corner of engine compartment ..... 100-1
G102 .....	Behind instrument cluster ..... 202-1

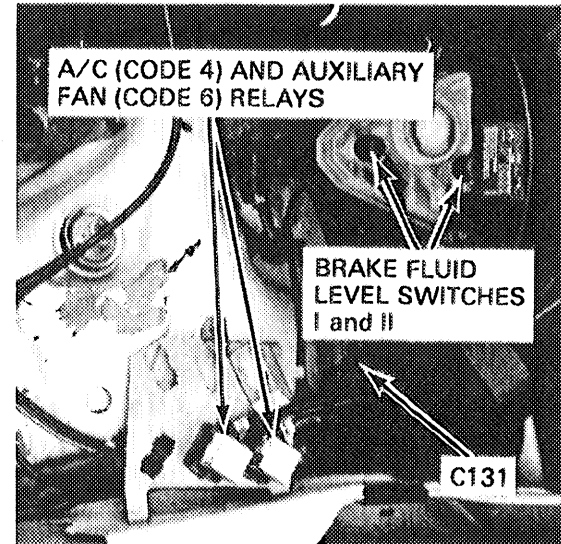


Figure 2 - Behind LH Front Wheel Well

## COMPONENT LOCATIONS

### CHARGING SYSTEM

Page-Figure

Alternator .....	Front of engine	
Battery .....	RH rear of engine compartment	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Light Switch .....	Instrument panel, left of steering column	
Starter Assembly .....	Lower RH side of engine	
G100 .....	RH front fender, ahead of battery .....	206-1

### CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Switch .....	On upper console	
Antenna Motor/Relay .....	Behind LH rear wheel well .....	202-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
In-Line Radio Fuse .....	In upper console behind radio	
C104 (14 pins) .....	To right of emergency brake support	
C135 (6 pins) .....	Behind LH rear wheel well	
C148 (2 pins) .....	Behind rear of ash tray	
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2

### COURTESY LIGHTS

Front Dome Light and Switch .....	Behind rear view mirror assembly	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Door Switches .....	In each door jamb	
Rear Dome Light Switch .....	On upper console	
Warning Module .....	To right of emergency brake support .....	205-2
G102 .....	Behind instrument cluster .....	202-1

### GLOVE BOX LIGHT

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Glove Box Light Switch .....	LH side of glove box	
G102 .....	Behind instrument cluster .....	202-1

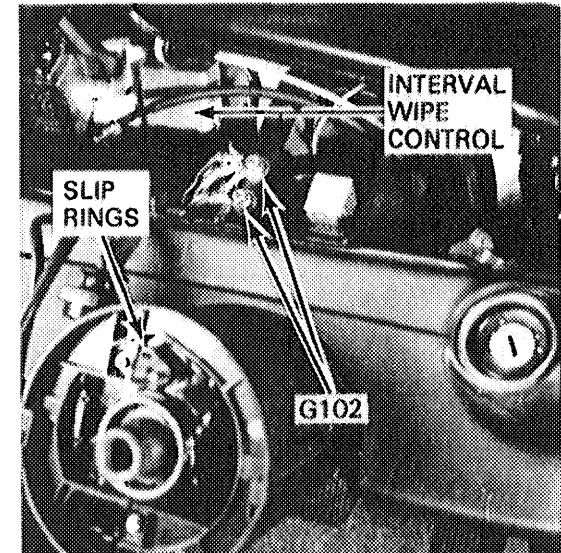


Figure 1 - Behind Instrument Cluster

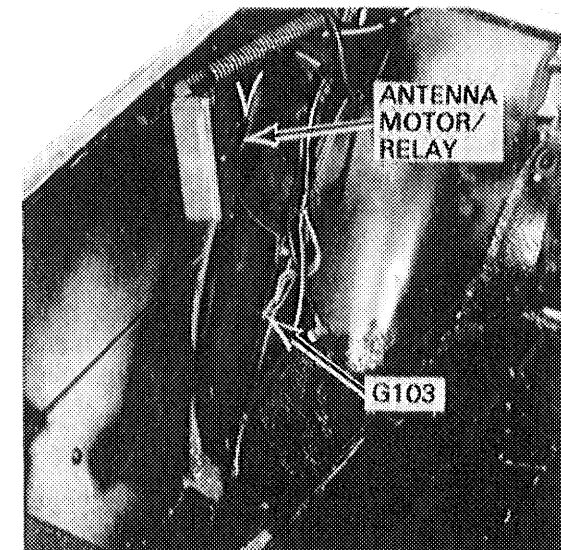


Figure 2 - Behind LH Rear Wheel Well

## COMPONENT LOCATIONS

### HEADLIGHTS/FOG LIGHTS

Page-Figure

Combination Switch .....	Upper LH side of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column	
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C141 (4 pins) .....	Rear of LH dual beam headlight	
C142 (4 pins) .....	Rear of RH dual beam headlight .....	201-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1

### HEATED SEATS

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Seat Heaters .....	In each seat cushion	
Seat Heater Switches .....	In center console	
G102 .....	Behind instrument cluster .....	202-1

### HORNS

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Horn Switch .....	Behind center of steering wheel	
Slip Rings .....	Behind steering wheel .....	203-2
Washer Motor .....	Bottom of washer fluid reservoir, behind LH headlights	
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C141 (4 pins) .....	Rear of LH dual beam headlight	
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1

### LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column	
C104 (14 pins) .....	To right of emergency brake support .....	205-2
C141 (4 pins) .....	Rear of LH dual beam headlight	
C142 (4 pins) .....	Rear RH side of RH dual beam headlight .....	201-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

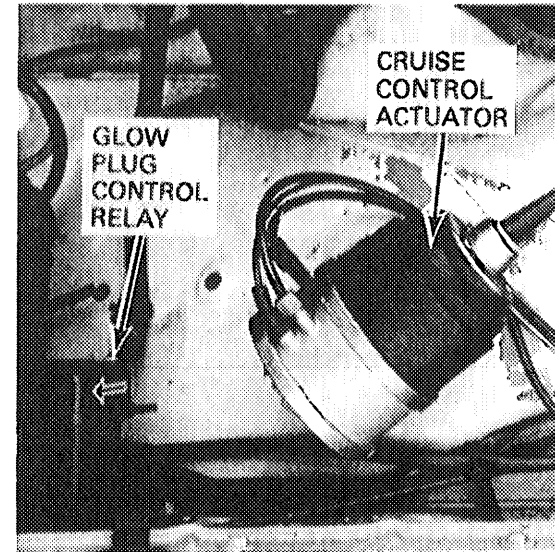


Figure 1 - Ahead of LH Front Wheel Well

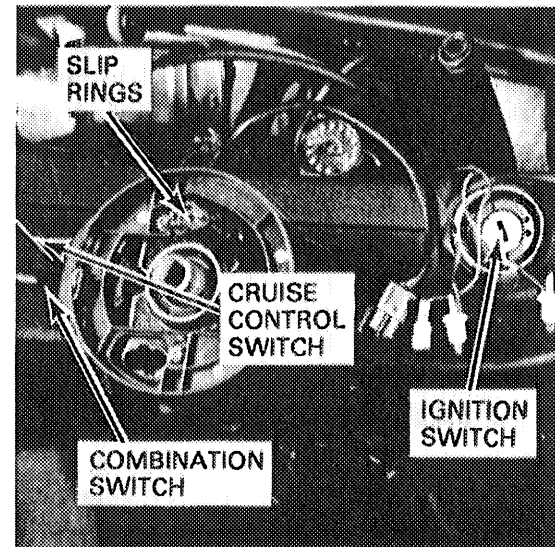


Figure 2 - Top of Steering Column

## COMPONENT LOCATIONS

## POWER DISTRIBUTION

		Page-Figure
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Light Switch .....	Instrument panel, left of steering column	
Starter Assembly .....	Lower RH side of engine	
C104 (14 pins) .....	To right of emergency brake support .....	205-2
G100 .....	RH front fender, ahead of battery .....	206-1

## POWER WINDOWS

Console Switch Group .....	On center console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Window Switches .....	Below each rear window	
Window Relay .....	Behind instrument cluster .....	204-2
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102 .....	Behind instrument cluster .....	202-1

## PRE-GLOW SYSTEM

Engine Temperature Sensor.	Top LH center of cylinder head .....	207-3
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Glow Plug Control Relay .....	Behind LH headlights .....	203-1
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Starter Assembly .....	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch .....	LH side of automatic transmission .....	208-3
Washer Motor .....	Bottom of washer fluid reservoir, behind LH headlights	
C130 (6 pins).....	Connected to glow plug control relay	
C137 (6 pins).....	Connected to glow plug control relay	
C141 (4 pins).....	Rear of LH dual beam headlight	
C146 (4 pins).....	Beside upper console, above accelerator pedal	208-2
G100 .....	RH front fender, ahead of battery .....	206-1
G102 .....	Behind middle of instrument cluster .....	202-1

## REAR DEFOGGER

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Defogger Switch .....	On upper console	
Rear Defogger Timer Relay.	Behind LH side of instrument cluster .....	204-2
C104 (14 pins) .....	To right of emergency brake support .....	205-2
G102 .....	Behind instrument cluster .....	202-1
G104 .....	Ahead of RH rear light assembly .....	204-1

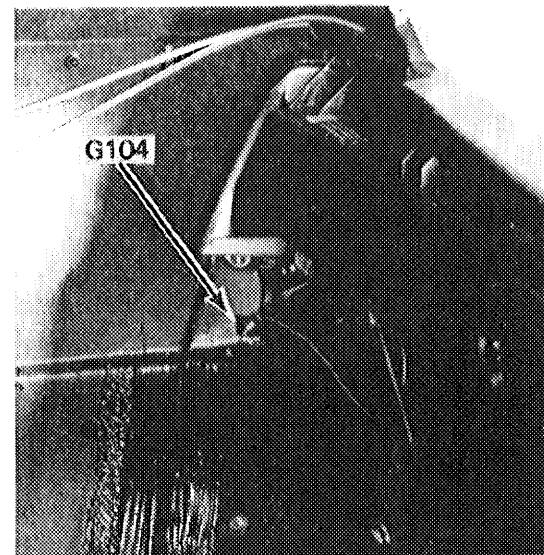


Figure 1 - Ahead of RH Rear Lights

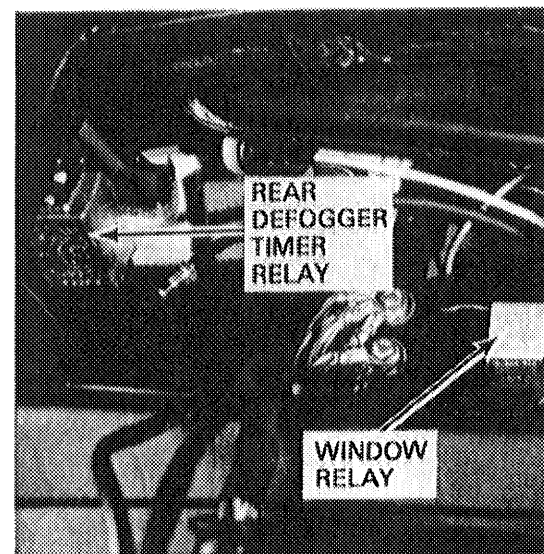


Figure 2 - Behind Instrument Cluster

## COMPONENT LOCATIONS

### SLIDING ROOF

	Page-Figure
Fuse Box .....	LH rear corner of engine compartment ..... 100-1
Sliding Roof Motor .....	In trunk, above LH rear wheel well
Sliding Roof Switch .....	On upper console
G102 .....	Behind instrument cluster ..... 202-1

### START/STOP (IGNITION SWITCH)

Fuel Shutoff Diaphragm .....	At rear of fuel injection pump ..... 207-4
Ignition Switch .....	Instrument panel, right of steering column .... 205-1
Light Switch .....	Instrument panel, left of steering column
Starter Assembly .....	Lower RH side of engine
Starter Lockout/Backup	
Light Switch .....	LH side of automatic transmission ..... 208-3
C146 (4 pins) .....	Beside upper console, above accelerator 208-2
G100 .....	RH front fender, ahead of battery ..... 206-1

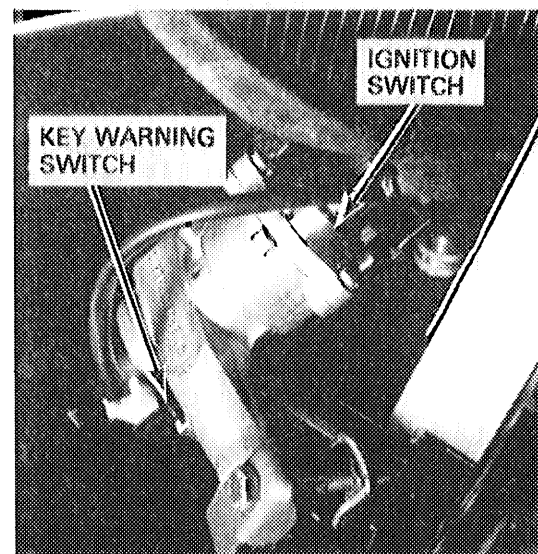


Figure 1 - Ignition Switch  
(As Seen From Below)

### STOPLIGHTS/CRUISE CONTROL

Brake Switch .....	On brake pedal support ..... 205-2
Clutch Switch .....	On clutch pedal support
Cruise Control Actuator .....	On front part of LH front wheel well ..... 203-1
Cruise Control Amplifier .....	To left of brake pedal support ..... 205-2
Cruise Control Switch .....	Upper left of steering column ..... 203-2
Fuse Box .....	LH rear corner of engine compartment ..... 100-1
Vehicle Speed Sensor .....	Mounted on rear of speedometer ..... 208-4
C104 (14 pins) .....	To right of emergency brake support ..... 205-2
C113 (2 pins) .....	Above clutch pedal
C114 (2 pins) .....	Above clutch pedal
C140 (6 pins) .....	Behind LH side of instrument panel, above steering column ..... 208-2
G102 .....	Behind instrument cluster ..... 202-1
G103 .....	In trunk, on rear of LH wheel well ..... 202-2
G104 .....	Ahead of RH rear light assembly ..... 204-1

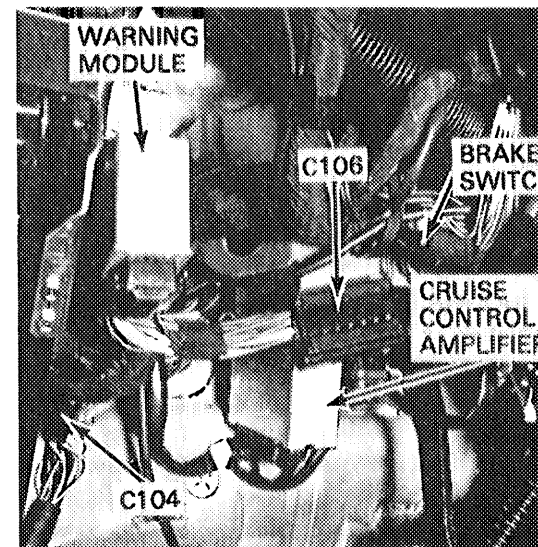


Figure 2 - To Left of Steering Column

## COMPONENT LOCATIONS

### TURN SIGNAL/HAZARD LIGHTS

		Page-Figure
Combination Switch .....	Upper LH of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Hazard Warning Switch/ Flasher .....	On center console	
C104 (14 pins) .....	To right of emergency brake support .....	205-2
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C141 (4 pins) .....	Rear of LH dual beam headlight	
C142 (4 pins) .....	Rear of RH dual beam headlight .....	201-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

### WARNING INDICATORS GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

Brake Wear Sensors .....	In each front brake pad	
Coolant Temperature Sender .....	Left center of engine cylinder head .....	207-4
Fuel Gauge Sender .....	Under first aid kit tray	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Glow Plug Control Relay .....	Behind LH headlights .....	203-1
Light Switch .....	Instrument panel, left of steering column	
C104 (14 pins) .....	To right of emergency brake support .....	205-2
C131 (2 pins) .....	Beside power brake master cylinder .....	201-2
C132 (2 pins) .....	Between battery and RH front wheel well .....	206-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2

### WARNING SYSTEM

Brake Fluid Level		
Switches .....	In brake fluid reservoir .....	201-2
Door Switches .....	In each door jamb	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Key Warning Switch .....	Part of ignition switch .....	205-1
Parking Brake Switch .....	On emergency brake bracket	
C104 (14 pins) .....	To right of emergency brake support .....	205-2
C131 (2 pins) .....	Beside brake master cylinder	
G102 .....	Behind instrument cluster .....	202-1

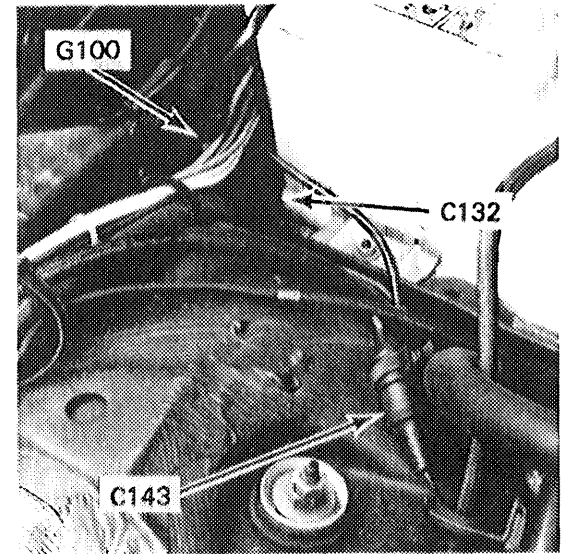


Figure 1 - Ahead of Battery

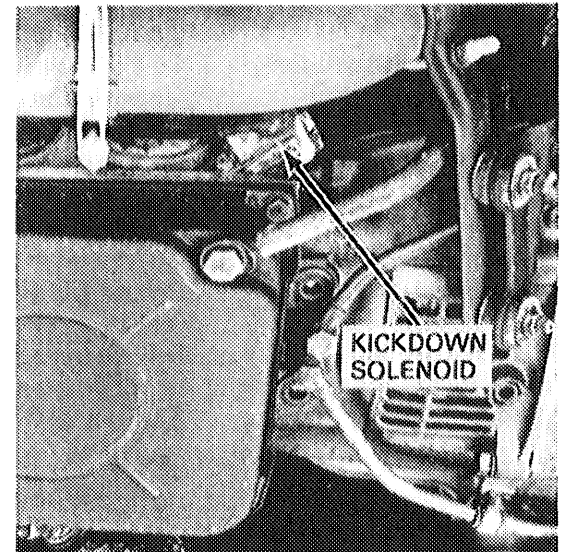


Figure 2 - RH Side of Automatic Transmission



## COMPONENT LOCATIONS

### WIPER/WASHER

		Page-Figure
Combination Switch .....	Upper left of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Interval Wipe Control .....	Behind LH side of instrument cluster .....	202-1
Washer Motor .....	Bottom of wash fluid reservoir, behind LH headlights	
Wiper Motor .....	In center of fresh air duct	
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C112 (6 pins).....	To upper left of power brake booster .....	207-1
G102 .....	Behind instrument cluster .....	202-1

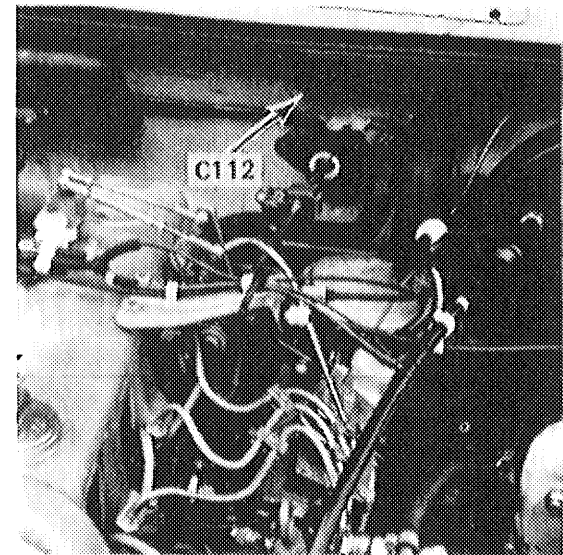


Figure 1 - To Right of Power Brake Booster

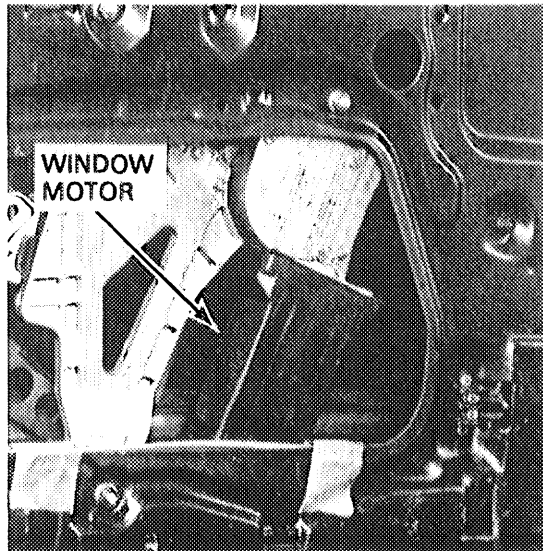


Figure 2 - Inside Driver's Door

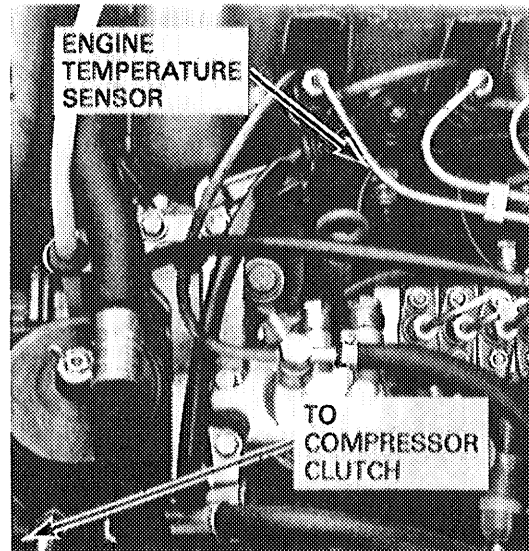


Figure 3 - Front LH Side of Engine

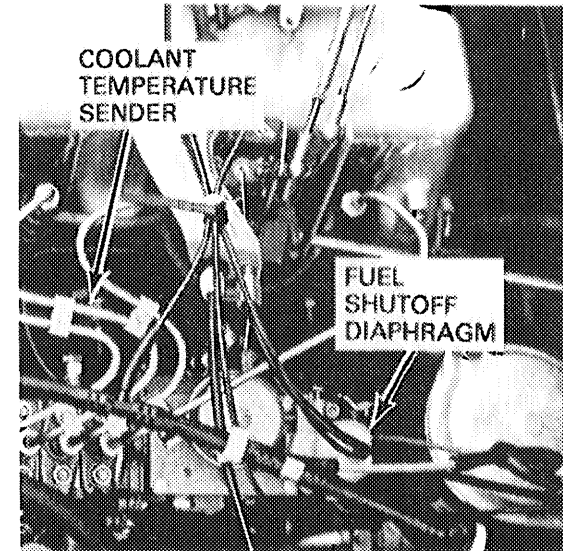


Figure 4 - Rear LH Side of Engine

## COMPONENT LOCATIONS

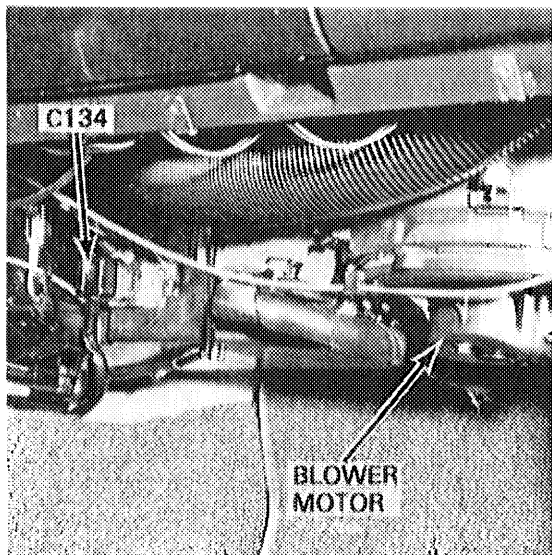


Figure 1 - Under RH Side of Instrument Panel

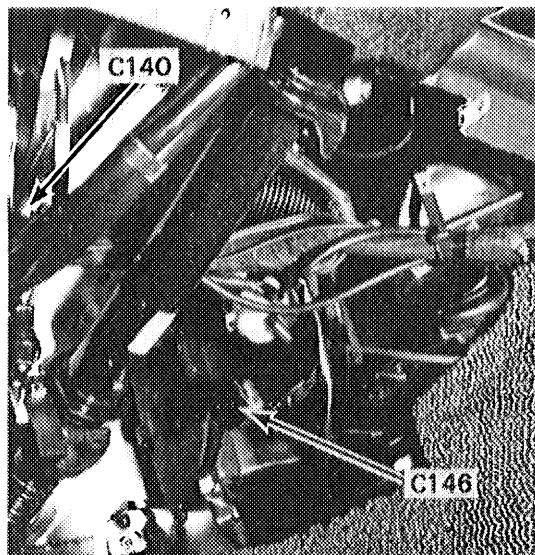


Figure 2 - To Right of Steering Column

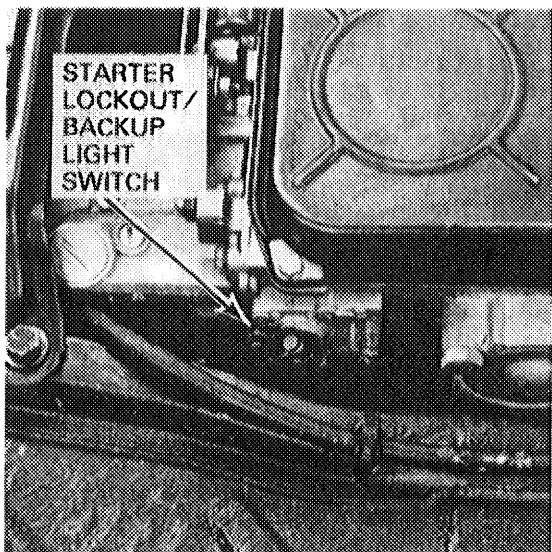


Figure 3 - LH Side of Automatic Transmission

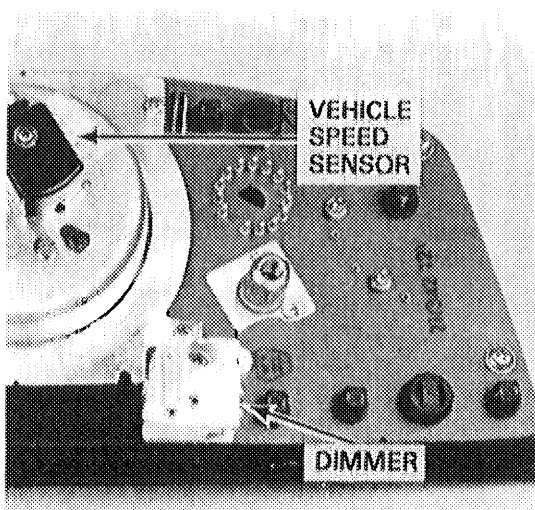


Figure 4 - Back of Instrument Cluster