

COMPONENT LOCATIONS

AUTOMATIC CLIMATE CONTROL

Page-Figure

ACC Amplifier.....	Behind glove box	201-1
ACC Compressor Clutch	Lower LH side of engine	
ACC Control Panel	On upper console	
ACC Double Pole Relay	Behind glove box	210-3
ACC Servo Assembly	On top of RH front wheel well	202-1
A/C In-Line Fuse	Top of LH front wheel well, in relay box	210-1
A/C Start Relay	Top of LH front fender, inside relay box	201-2
Ambient Temperature Sensor	Above rear of engine, in fresh air duct	
Auxiliary Water Pump	Ahead of RH front wheel well	202-1
Bi-Level Compressor		
Vacuum Switch	Behind upper console	
Blower Master Vacuum		
Switch	Behind upper console	
Blower Motor	Under RH side of instrument panel	
Blower Resistors	Above LH side of passenger's footwell, in air duct	
Compressor Low-Pressure		
Cut-Out Switch	On receiver drier	
Compressor Vacuum Switch..	Behind upper console	
Evaporator Temperature		
Regulator	Above passenger's footwell, next to console. ...	209-4
Fuse Box	LH rear corner of engine compartment	100-1
In-Car Temperature Sensor...	RH front radio grill	
Switch-Over Valves	Behind upper console	
Water Pump Temperature		
Switch	Behind upper console	
C125 (6 pins).....	LH side of passenger footwell	209-4
C126 (2 pins).....	In blower housing	
C127 (2 pins).....	Ahead of RH front wheel well	
C129 (1 pin).....	Top LH front wheel well, in relay box	
C133 (12 pins)	Above RH kick panel	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2

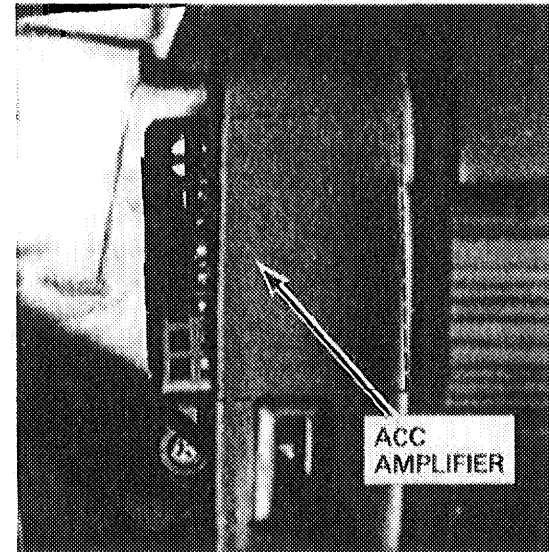


Figure 1 - Behind Glove Box

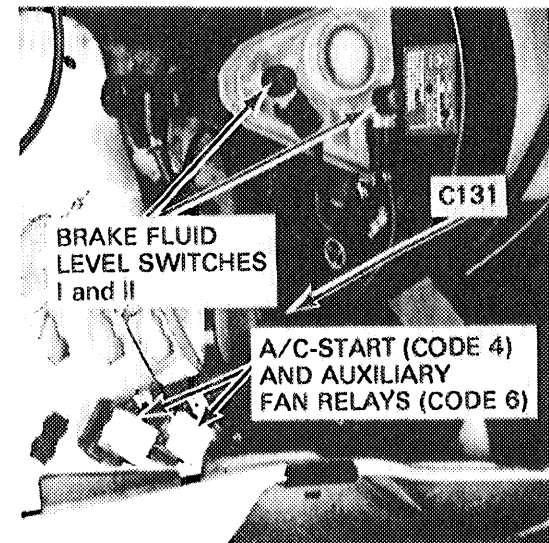


Figure 2 - Behind LH Front Wheel Well

COMPONENT LOCATIONS

AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Top of LH front wheel well, in relay box	201-2
Fuse Box	LH rear corner of engine compartment	
Receiver Drier Temperature Switch	On receiver drier, behind RH headlights	202-1
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

BACKUP LIGHTS/TRANSMISSION KICKDOWN

Fuse Box	LH rear corner of engine compartment	100-1
Kickdown Solenoid	RH front of transmission	202-2
Kickdown Switch	Under accelerator pedal	
Starter Lockout/Backup Light Switch	LH side of transmission	204-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C138 (4 pins)	To left of spare tire	209-1
C139 (4 pins)	Ahead of RH rear light assembly	207-2
G103 (300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

CENTER CONSOLE ILLUMINATION

ACC Double Pole Relay	Behind glove box	210-3
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Warning Switch/Flasher	Behind shift selector	
Switch-Over Valves	Behind upper console	
C124 (1 pin)	Behind center console	
G102	Behind instrument cluster	210-2
G109	In console, base of gear shift selector	

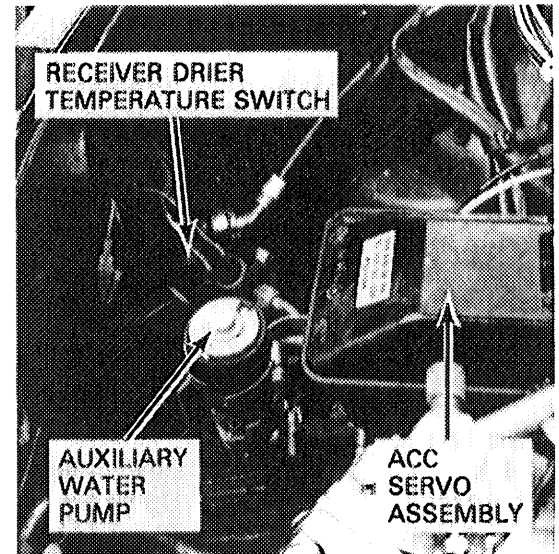


Figure 1 - Behind RH Headlights

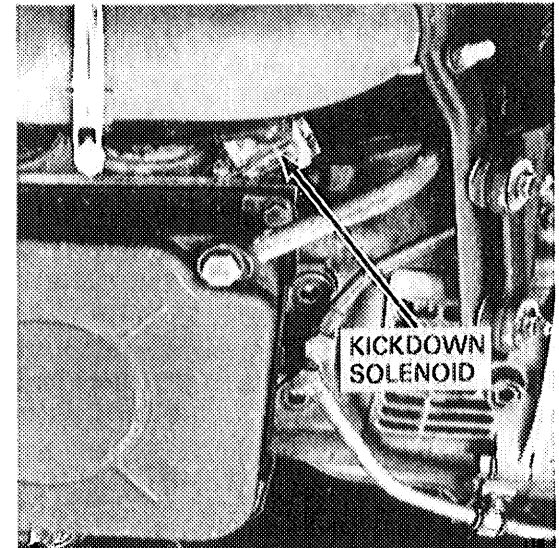


Figure 2 - RH Side of Transmission

COMPONENT LOCATIONS

CHARGING SYSTEM

		Page-Figure
Alternator	Front of engine	
Battery	RH rear of engine compartment	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
G100	RH front fender, ahead of battery	

COURTESY LIGHTS

Door Switches	In each door jamb	
Front Dome Light and Switch	Behind rear view mirror assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Dome Light Switch	On upper console	
Tailgate Lock Switch	Inside lower middle area of tailgate	203-1
Warning Module	To right of emergency brake pedal support	207-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C136 (8 terminals)	Top center of tailgate frame.....	208-2
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay		
(300 D/CD)	Behind LH rear wheel well	203-2
(300 TD)	To left of spare tire	209-1
Antenna Switch	On upper console	
Fuse Box	LH rear corner of engine compartment	
In-Line Radio Fuse	In upper console, behind radio	
C104 (14 pins)	Under LH side of instrument panel	207-1
C135 (6 pins)		
(300 D/CD)	Behind LH rear wheel well.....	209-1
(300 TD)	To left of spare tire	209-1
C148 (2 pins).....	Behind upper console	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	205-1
(300 TD)	Above LH rear wheel well	205-1

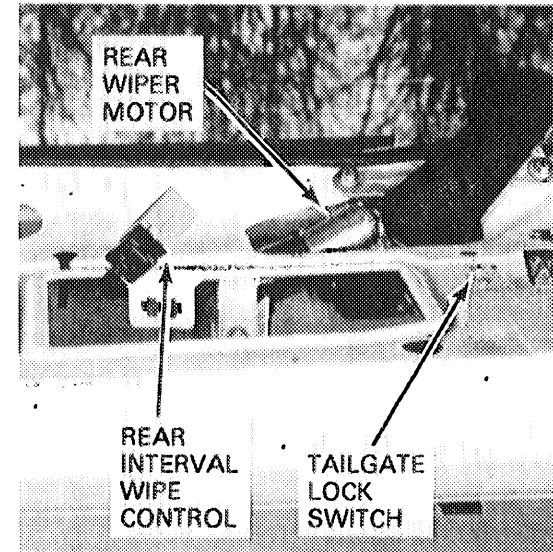


Figure 1 - Below Tailgate Window

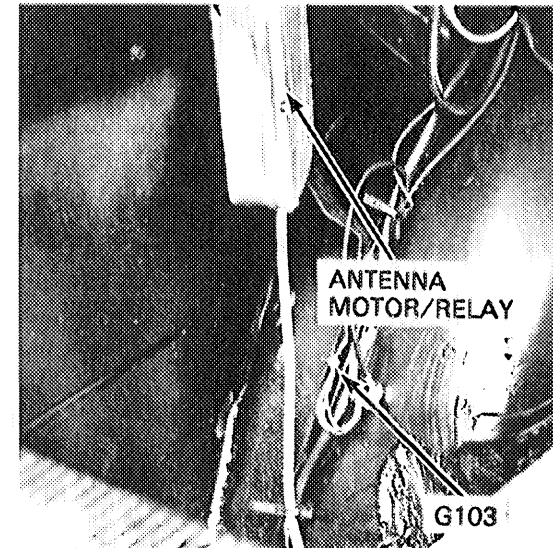


Figure 2 - Behind LH Rear Wheel Well

COMPONENT LOCATIONS

GLOVE BOX LIGHT

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Glove Box Light Switch	LH side of glove box	
G102	Behind instrument cluster	210-2

HEADLIGHTS/FOG LIGHTS

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C106 (14 pins)	To left of brake pedal support	207-1
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2

HEATED SEATS

Fuse Box	LH rear corner of engine compartment	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	In center console	
G102	Behind instrument cluster	210-2

HORNS

Fuse Box	LH rear corner of engine compartment	100-1
Horn Switch	In steering wheel	
Slip Rings	Behind center of steering wheel	204-2
Washer Motor	At base of washer fluid reservoir	
C106 (14 pins)	To left of brake pedal support	207-1
C141 (4 pins)	Connected to LH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2

LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	Under left side of instrument panel	207-1
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

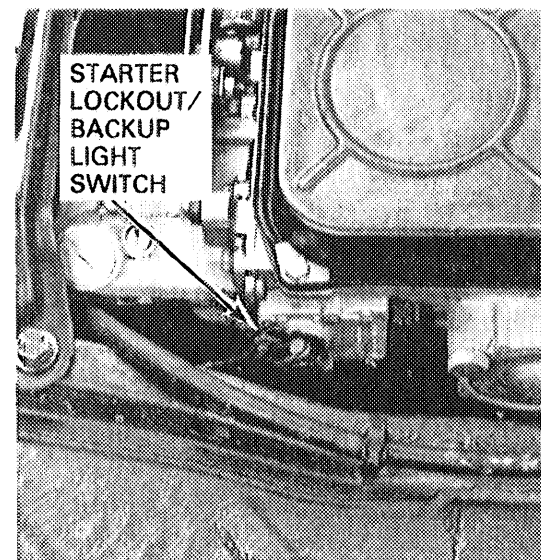


Figure 1 - LH Side of Transmission

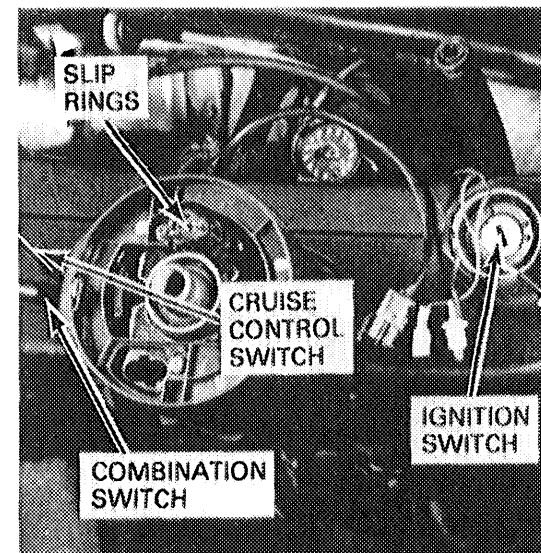


Figure 2 - Steering Column

COMPONENT LOCATIONS

POWER DISTRIBUTION

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-1
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	Under LH side of instrument panel	207-1
G100	RH front fender, ahead of battery	

POWER WINDOWS

Console Switch Group	On center console	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Window Switches	Below each rear window	
Window Relay	Behind instrument cluster	205-2
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	210-2

PRE-GLOW SYSTEM

A/C-Start Relay	Top of LH front wheel well, in relay box	201-2
Engine Temperature Sensor.	Top LH center of cylinder head	
Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Behind LH headlights	206-2
Ignition Switch	Instrument panel, right of steering column.	208-1
Starter Assembly	Lower RH rear side of engine	
Starter Lockout/Backup		
Light Switch.....	LH side of transmission	204-1
Washer Motor	Bottom of washer fluid reservoir, behind LH headlights	
C130 (6 pins).....	Connected to glow plug control relay	
C137 (6 pins).....	Connected to glow plug control relay	
C141 (4 pins).....	Connected to LH headlight assembly	
G100	RH front fender, ahead of battery	
G102	Behind middle of instrument cluster	210-2

REAR DEFOGGER

Fuse Box	LH rear corner of engine compartment	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay.	Behind LH side of instrument cluster	205-2
C104 (14 pins)	Under LH side of instrument panel	207-1
C136 (8 terminals)	Top center of tailgate frame	208-2
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	205-1
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

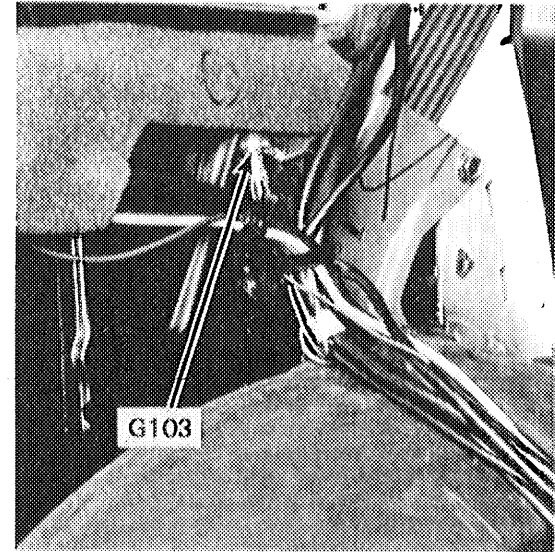


Figure 1 - Above LH Rear Wheel Well

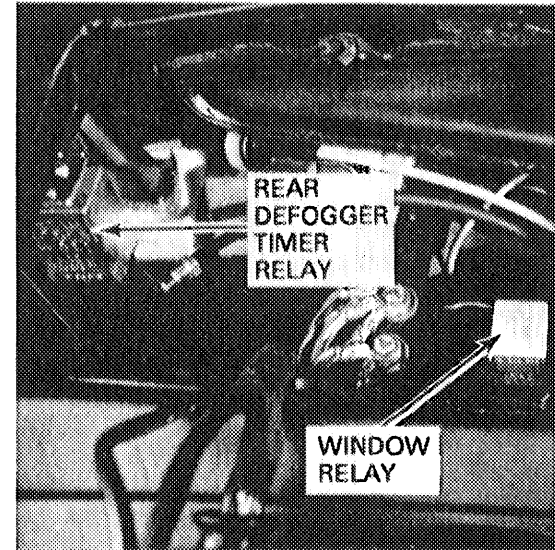


Figure 2 - Behind Instrument Cluster

COMPONENT LOCATIONS

REAR WIPER/WASHER

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Rear Interval Wipe Control ...	In lower RH side of tailgate	203-1
Rear Washer Motor	Behind fuel tank intake tube	207-2
Rear Washer Switch	Part of upper console assembly	
Rear Wiper Motor	Inside lower middle area of tailgate	203-1
Rear Wiper Switch	Part of upper console assembly	
C136 (8 terminals)	Top center of tailgates frame	208-2
C139 (4 pins)	In front of RH rear lights assembly	207-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	In front of RH rear lights assembly	207-2

SLIDING ROOF

Fuse Box	LH rear corner of engine compartment	100-1
Sliding Roof Motor	In trunk, above LH rear wheel well	
Sliding Roof Switch	On upper console assembly	
G102	Behind instrument cluster	210-2

START/STOP (IGNITION SWITCH)

A/C-Start Relay	Top of LH front wheel well, in relay box	201-2
Fuel Shutoff Diaphragm	Rear of fuel injection pump	206-1
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	204-1
G100	RH front fender, ahead of battery	
G102	Behind instrument cluster	210-2

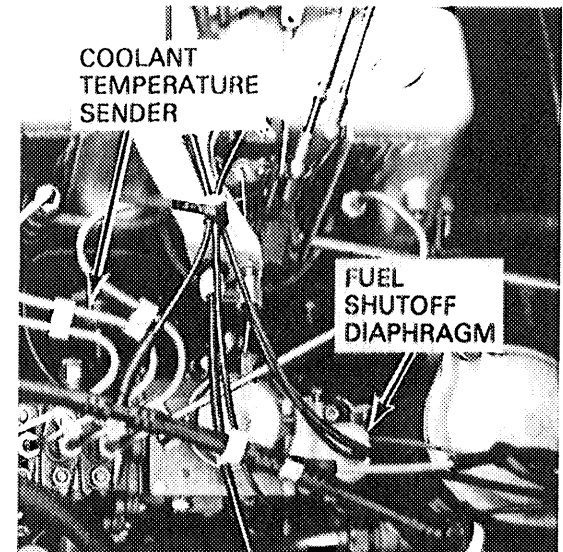


Figure 1 - LH Rear Side of Engine

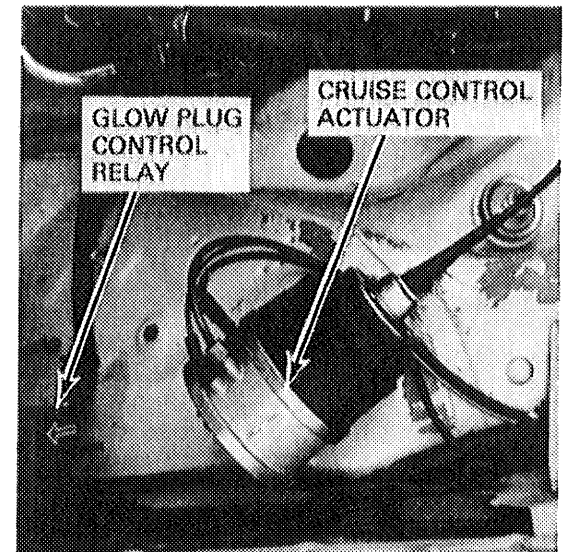


Figure 2 - Front of LH Front Wheel Well

206

300
D/CD/TD

COMPONENT LOCATIONS

STOPLIGHTS/CRUISE CONTROL

Page-Figure

Brake Switch	Top of brake pedal support	
Cruise Control Actuator	On front part of LH front wheel well	206-2
Cruise Control Amplifier	To right of parking brake support	207-1
Cruise control Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Vehicle Speed Sensor	Mounted on speedometer	209-5
C104 (14 pins)	Under LH side of instrument panel	207-1
C140 (6 pins)	To left of brake pedal support	207-1
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Warning Switch/ Flasher	On center console	
C104 (14 pins)	Under LH side of instrument panel	207-1
C106 (14 pins)	To left of steering column	207-1
C138 (4 pins)	To left of spare tire	209-1
C139 (4 pins)	Ahead of RH rear light assembly	207-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	205-1
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

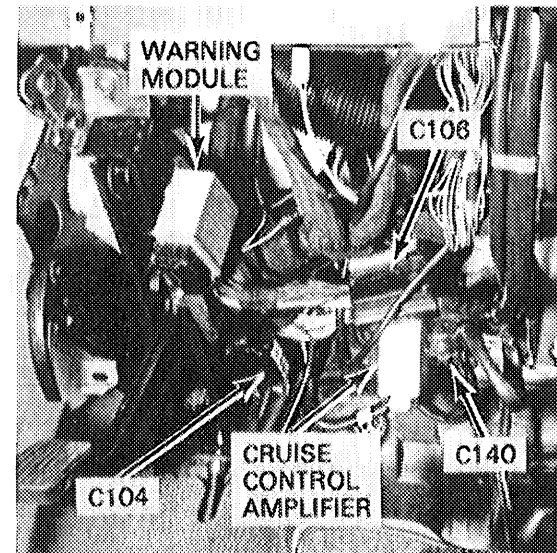


Figure 1 - Above Driver's Footwell

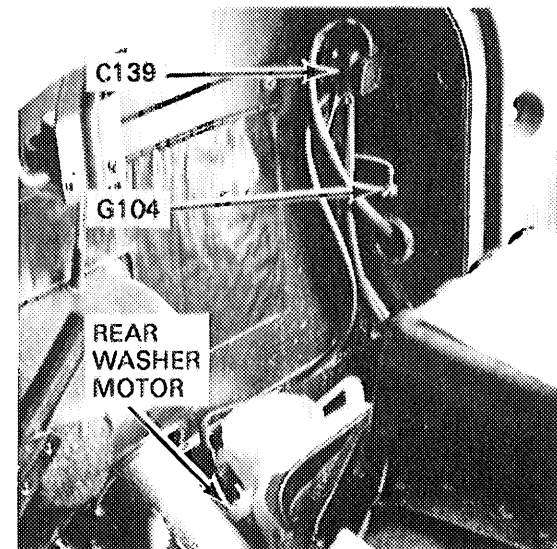


Figure 2 - In Front of RH Rear Lights

COMPONENT LOCATIONS

208
300
D/CD/TO

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

		Page-Figure
Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	Top LH front part of engine	206-1
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Behind LH headlights	206-2
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box	201-2
C132 (2 pins)	Behind RH front wheel well, at battery	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1

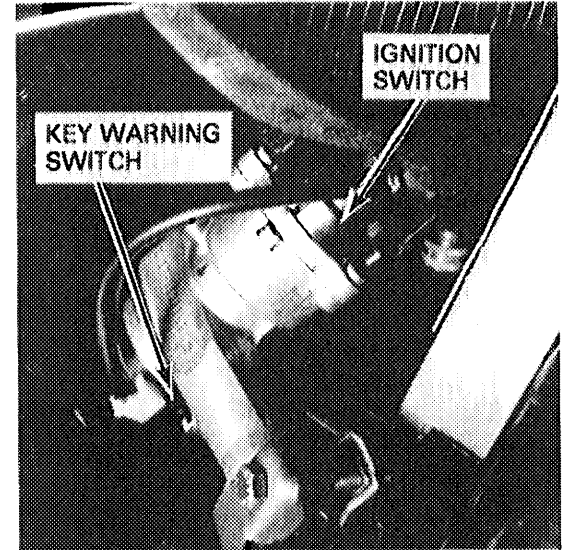


Figure 1 - Ignition Switch (As Seen From Below)

WARNING SYSTEM

Brake Fluid Level		
Switches	Brake fluid reservoir	201-2
Door Switches	In each door jamb	
Fuse Box	LH rear corner of engine compartment	100-1
Key Warning Switch	Part of ignition switch	208-1
Parking Brake Switch	On parking brake support	
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well	201-2
G102	Behind instrument cluster	210-2

WIPER/WASHER

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind LH side of instrument cluster	210-2
Washer Motor	At base of washer fluid reservoir	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	207-1
C112 (6 pins)	To upper right of power brake booster	209-6
C141 (4 pins)	Connected to LH headlight assembly	
G102	Behind instrument cluster	210-2

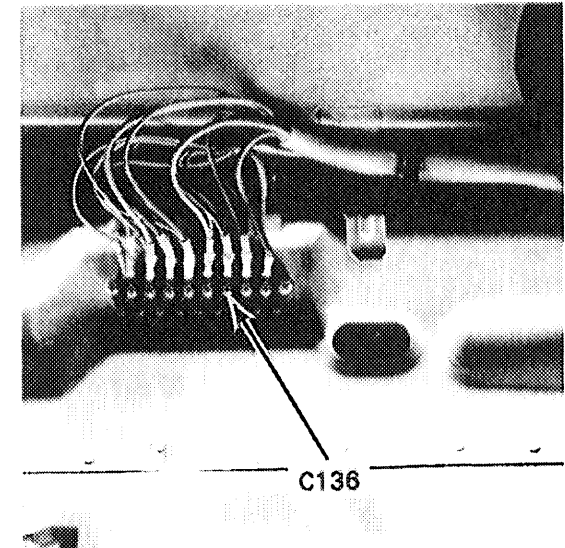


Figure 2 - Top of Tailgate Frame

COMPONENT LOCATIONS

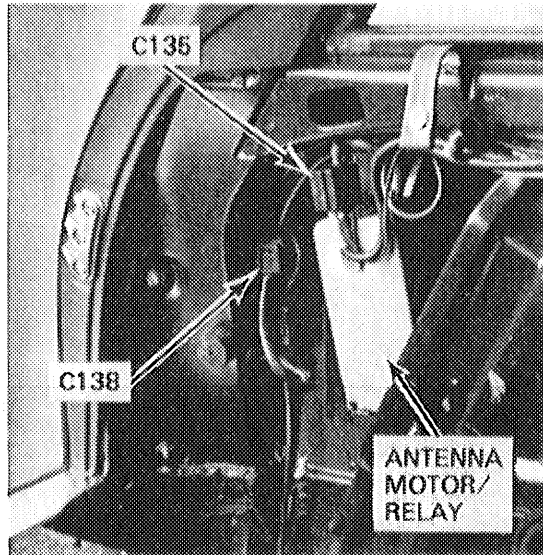


Figure 1 - Spare Tire Well

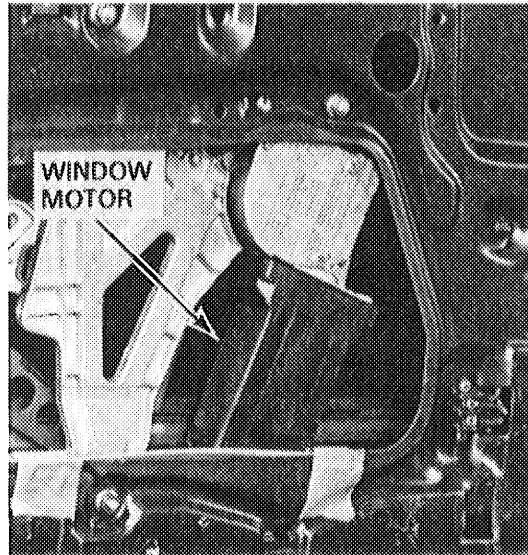


Figure 2 - Inside Driver's Door

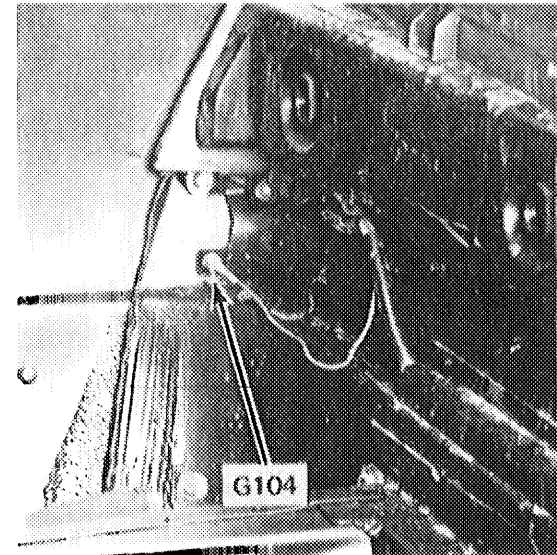


Figure 3 - In Front of RH Rear Lights

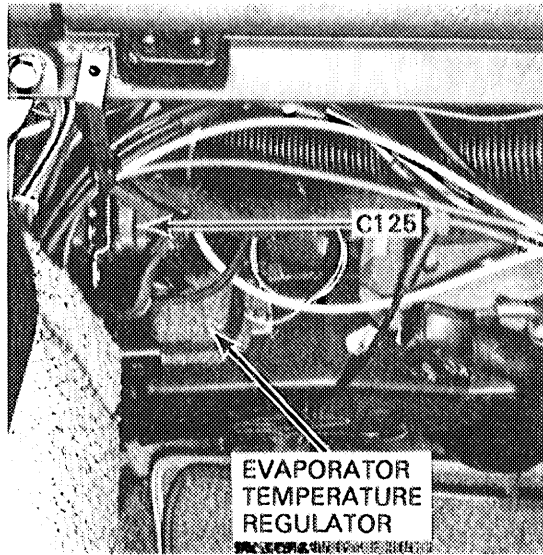


Figure 4 - Above Passenger's Footwell

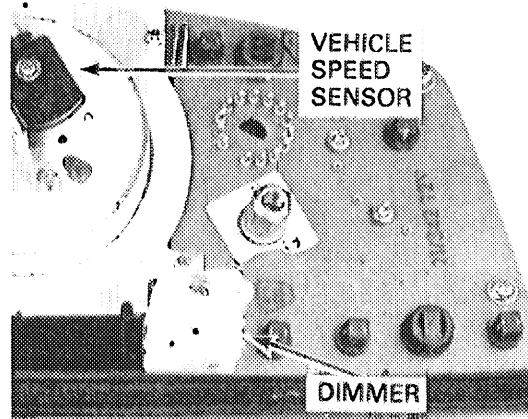


Figure 5 - Back of Instrument Cluster

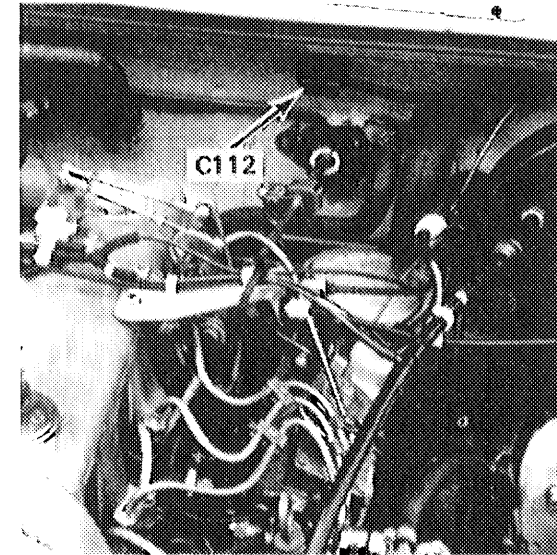


Figure 6 - Right of Power Brake Booster

COMPONENT LOCATIONS

210
300
Q/CO/TO

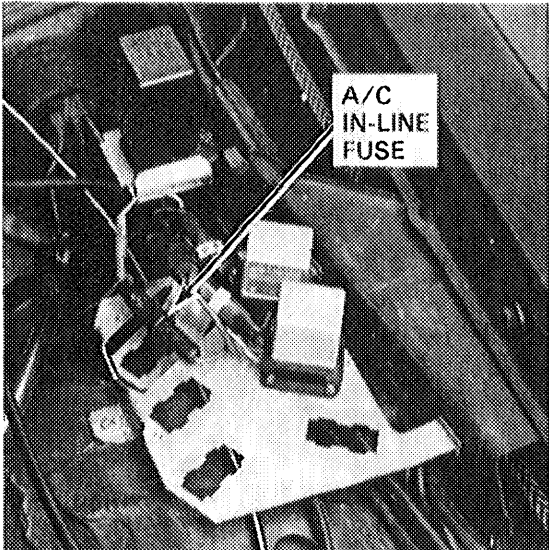


Figure 1 - Top of LH Front Wheel Well

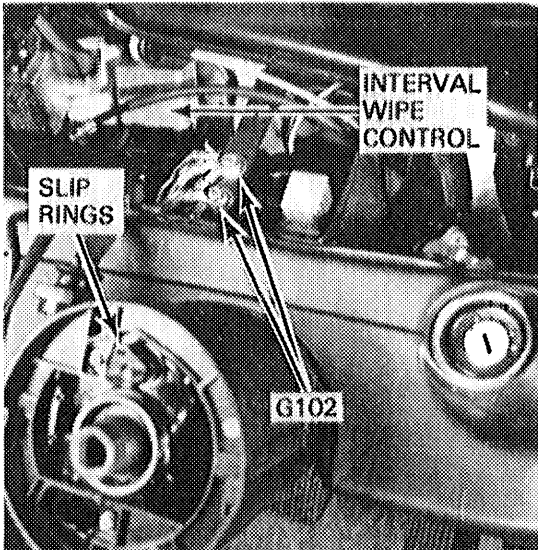


Figure 2 - Behind Instrument Cluster

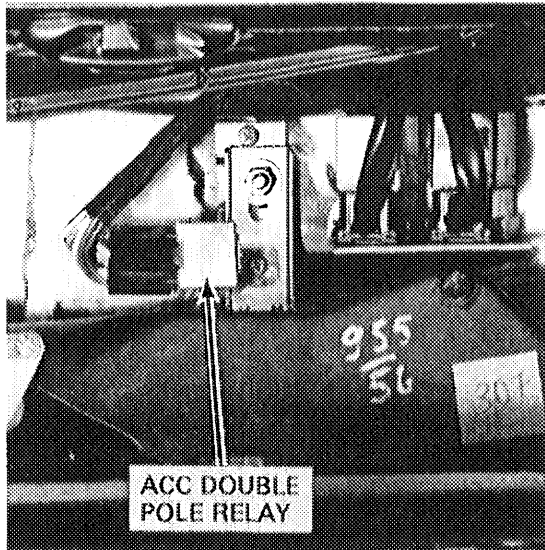


Figure 3 - Behind Glove Box