

INDEX

1982 SALES DESIGNATIONS	MODEL
240 D	123.123

INDEX - Alphabetical Listing of Electrical Circuits

	SCHEMATIC	COMPONENT LOCATION
Air Conditioning	124	201
Automatic Antenna	130	202
Auxiliary Fan	125	201
Charging System	108	202
Cigar Lighter	130	202
Clock	120	206
Cruise Control	114	205
Exhaust Gas Recirculation	109	202
Fuse Information	102	103
Gauges	120	206
Ground Distribution	132	
Heated Seats	131	203
Heater	124	201
Horns	127	203
Lights		
—Backup	111	201
—Center Console	116	201
—Courtesy	119	202
—Fog Lights	110	203
—Glove Box	111	201
—Hazard	118	205

Lights (continued)

	SCHEMATIC	COMPONENT LOCATION
—Headlights	110	203
—Instrument Cluster	120	206
—License	113	203
—Marker	113	203
—Park	112	203
—Stop	114	205
—Tail	112	203
—Turn Signal	118	205
—Trunk	113	203
Power Distribution	104	204
Power Windows	128	204
Pre-Glow System	106	204
Radio	130	202
Rear Defogger	126	204
Sliding Roof	127	203
Start/Stop (Ignition Switch)	107	205
Transmission Kickdown	111	201
Warning Indicators	120	206
Warning System	122	206
Wiper/Washer	123	206

101
240
 D


FUSE-CIRCUIT LIST

Fuse		Circuits Protected	Page
No.	Amps (Color)		
1	8(WT)	Center Console Illumination	116
		Lights: Park/Tail (RH)	112
		Lights: Marker/License	113
		Warning Indicators/ Instrument Cluster Illumination	120
		Warning System	122
2	8(WT)	Automatic Antenna	130
		Clock	120
		Courtesy Lights	119
		Hazard Lights	118
		Trunk Light	113
		Warning System	122
3	8(WT)	Lights: Park/Tail (LH)	112
4	8(WT) 16(PK)*	Cigar Lighter	130
		Glove Box Light	113
		Radio *With Heated Seats (Front)	130
5		Not Used	
6	16(PK)	Headlights	110
		Wiper/Washer	123
7	8(WT)	Headlights (RH High Beam)	110
8	16(PK)	Air Conditioning	124
		Heater	124
9	8(WT)	Headlights (LH High Beams)	110
10	16(PK) 25(BU)*	Rear Defogger	126
		*With Heated Seats (Rear)	131

Fuse		Circuits Protected	Page
No.	Amps (Color)		
11	16(PK)	Fog Lights	110
		Headlights (RH Low Beam)	110
12	8(WT)	Auxiliary Fan	125
		Cruise control	114
		Gauges	120
		Power Windows	128
		Stoplights	114
		Turn Signal Lights Warning Indicators	118 120
13	8(WT)	Headlights (LH Low Beam)	110
14	8(WT)	Backup Lights/Transmission Kickdown	111
		Exhaust Gas Recirculation	109
		Horns	127
		Warning System	122
a	16(PK)	Power Windows	128
b	16(PK)	Power Windows	128
c	16(PK)	Auxiliary Fan	125
d	16(PK)	Sliding Roof	127
In-Line Radio Fuse	2(GLASS)	Radio (Part of Radio)	130
	80	Pre-Glow System (Part of Pre-Glow Relay)	106

102
240
D

FUSE BOX

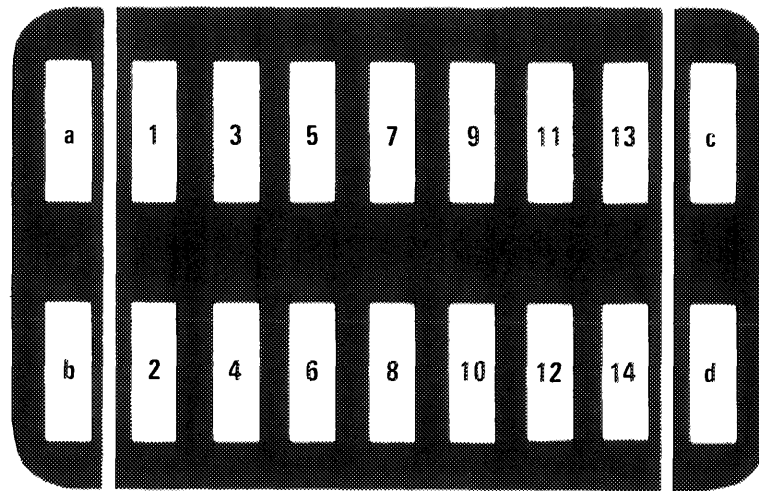


103
240
D

RELAY CODE	RELAY USE
10	Window Relay
12	A/C Relay
6	Auxiliary Fan Relay

POWER DISTRIBUTION


(For Component Locations See Page 204)

104
240
0

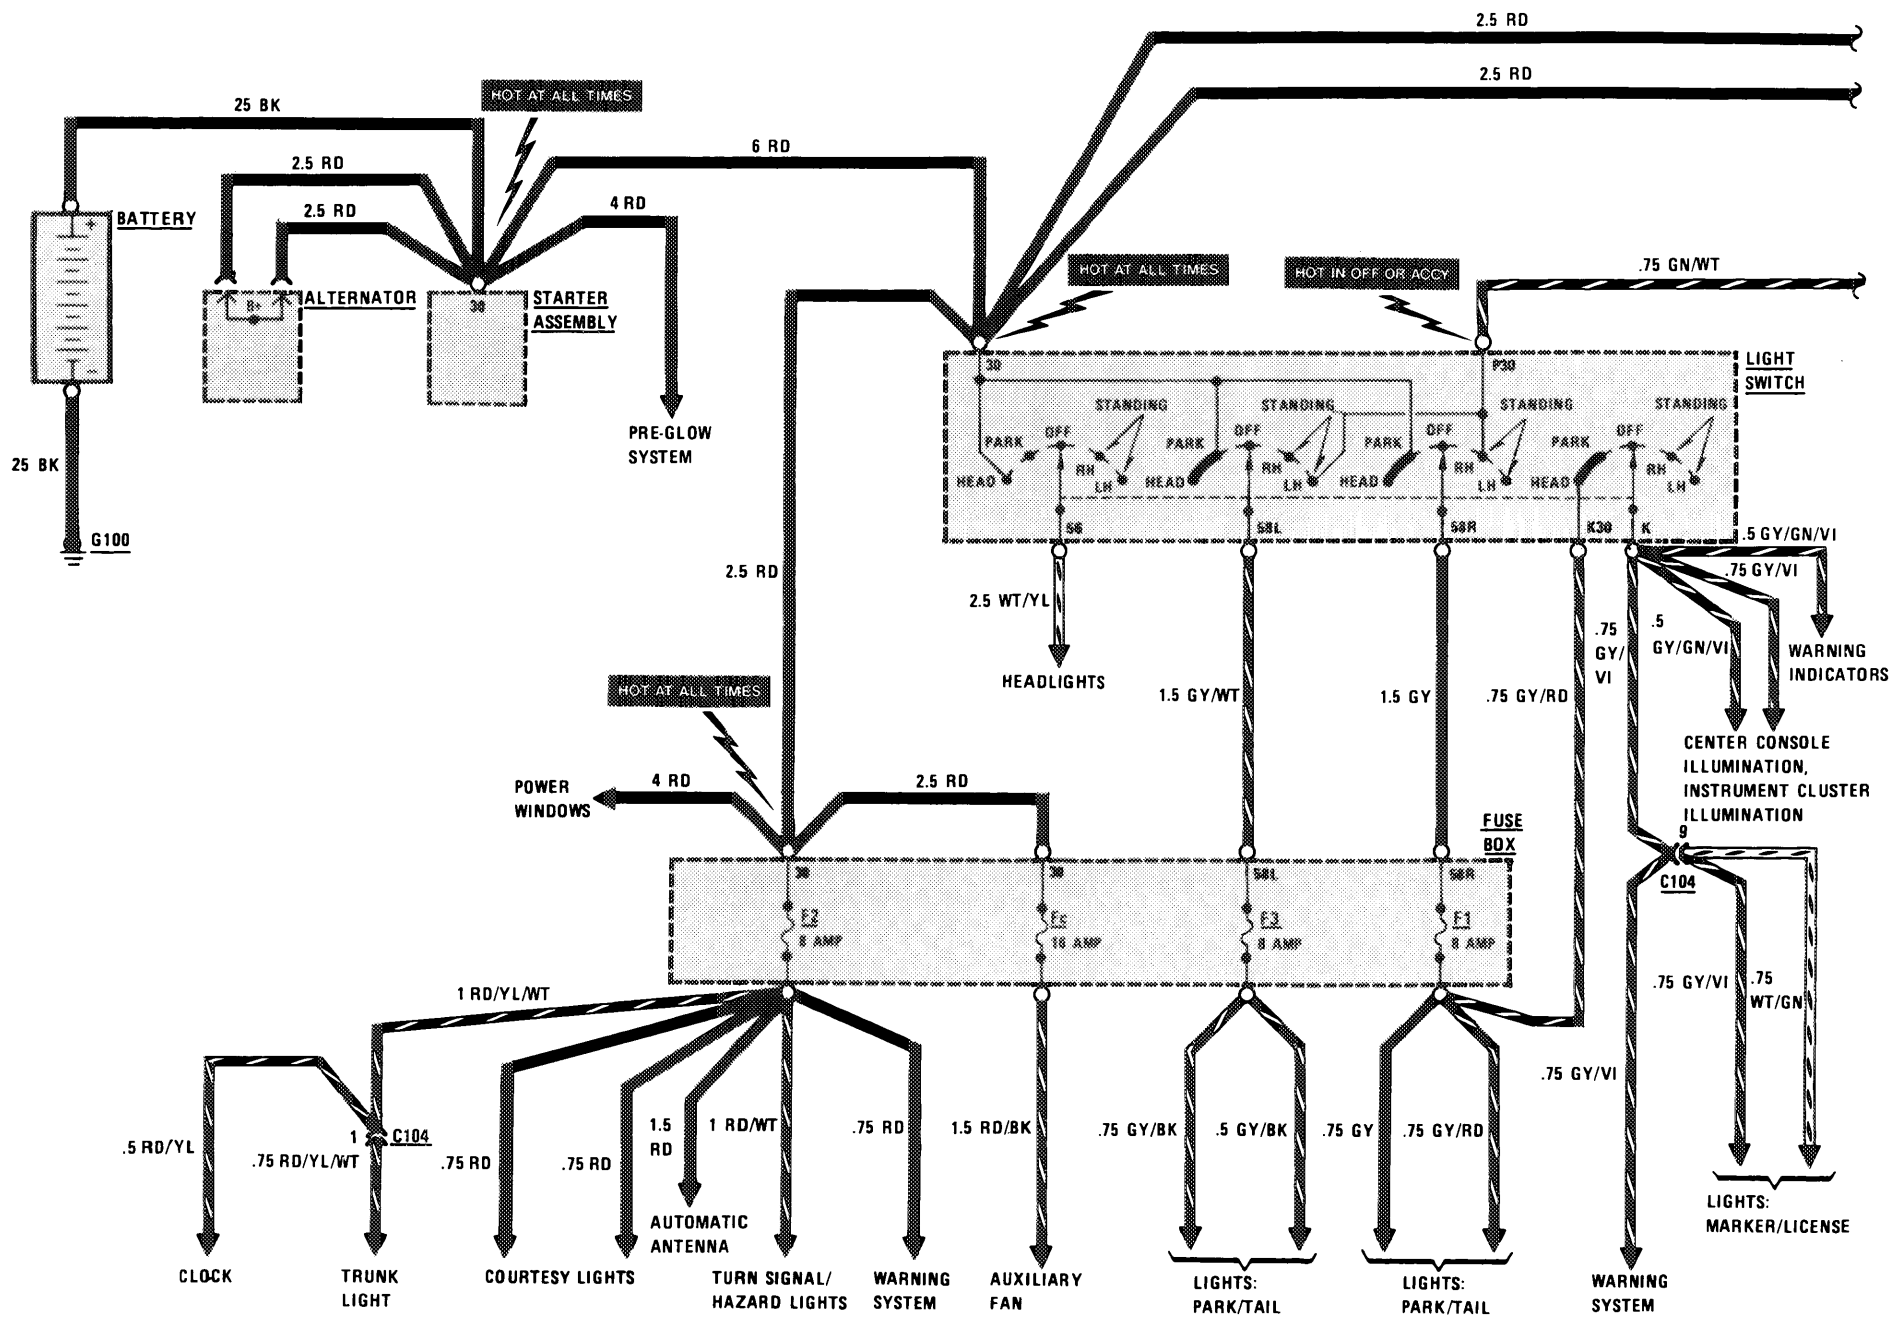

POWER DISTRIBUTION


(For Component Locations See Page 204)

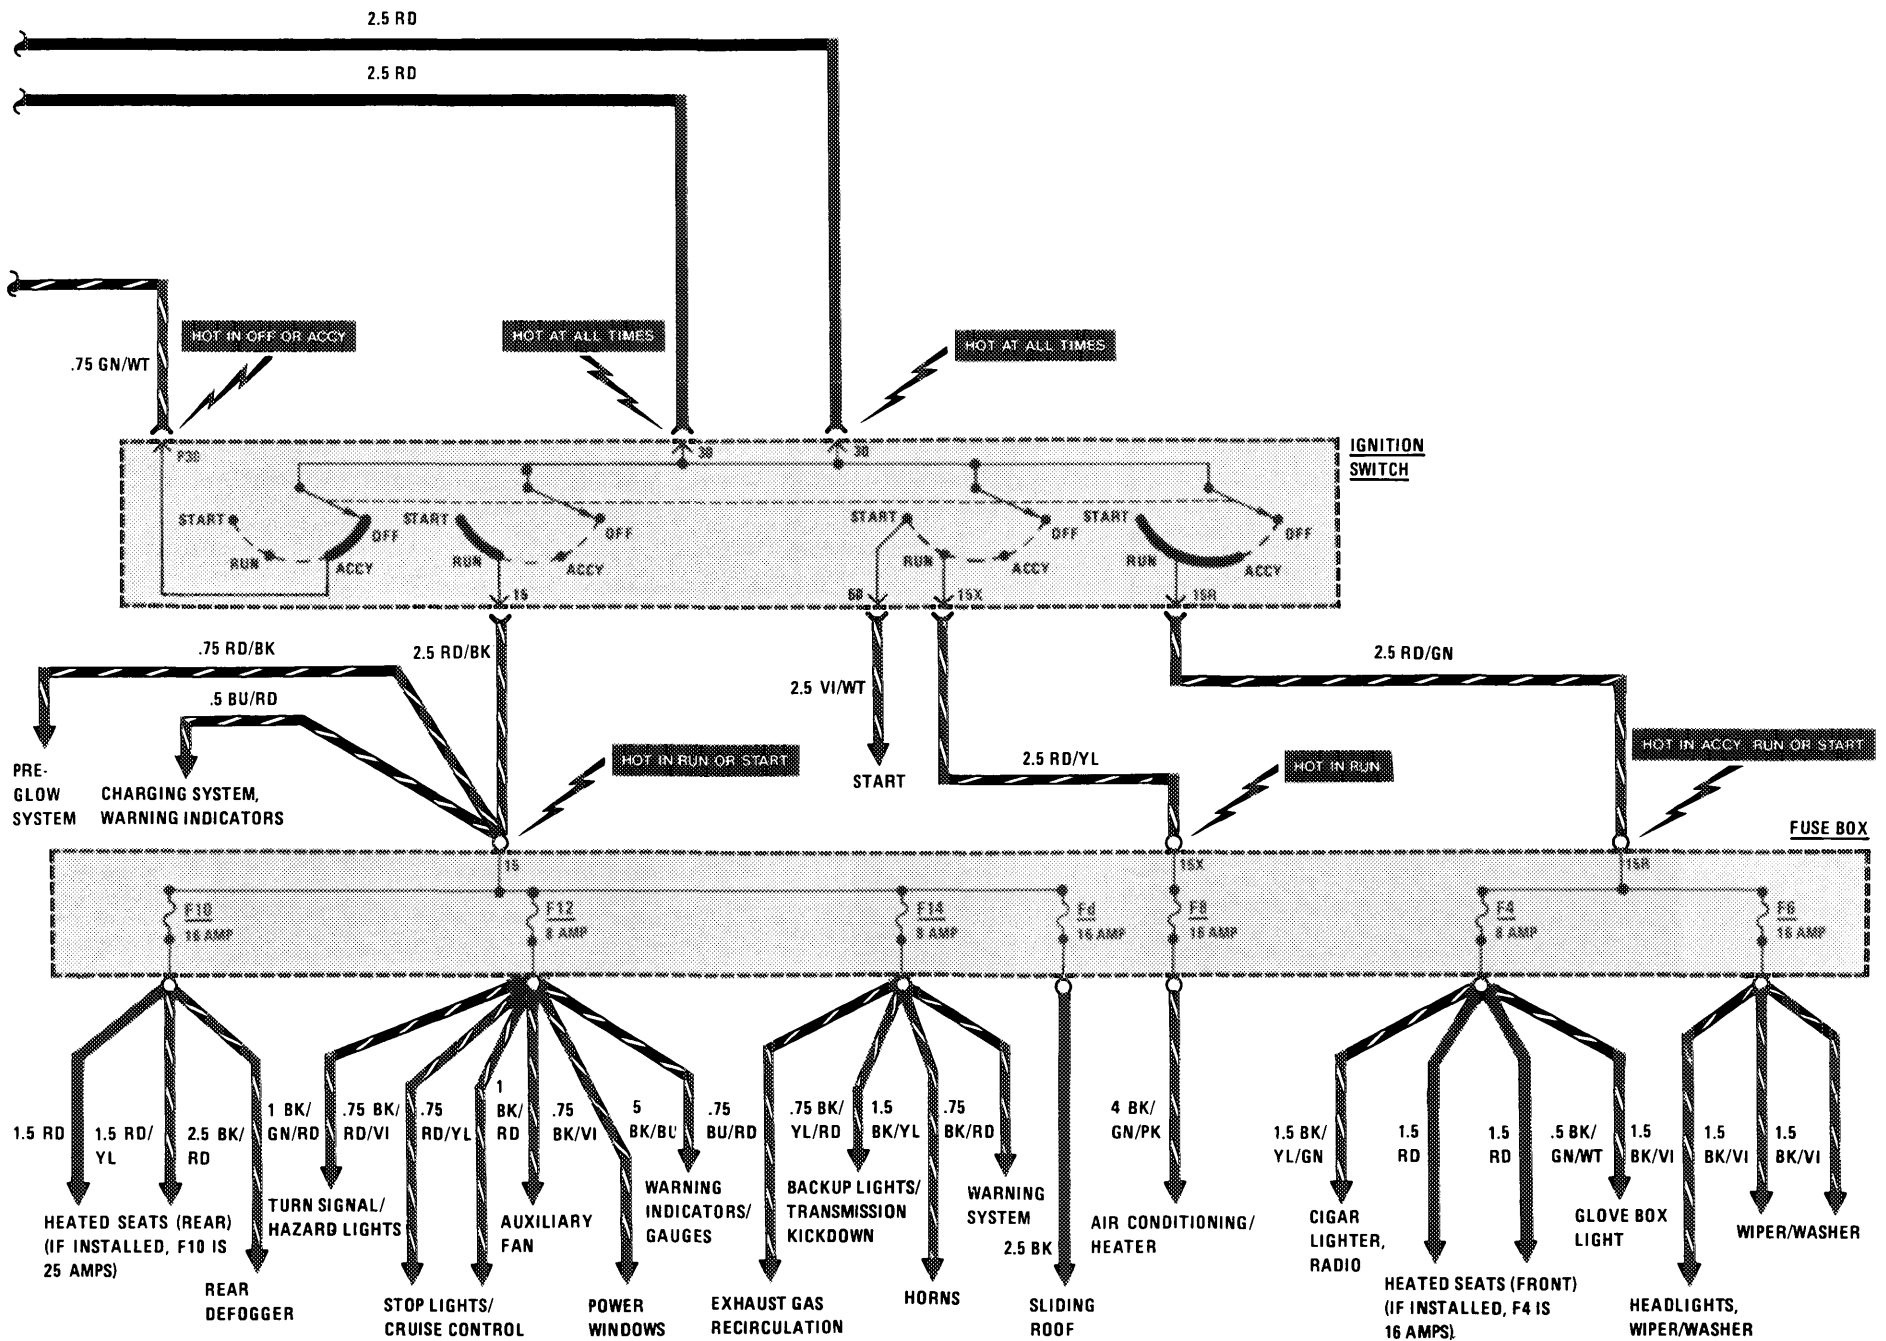

PRE-GLOW SYSTEM

(For Component Locations See Page 204)


106
240
D

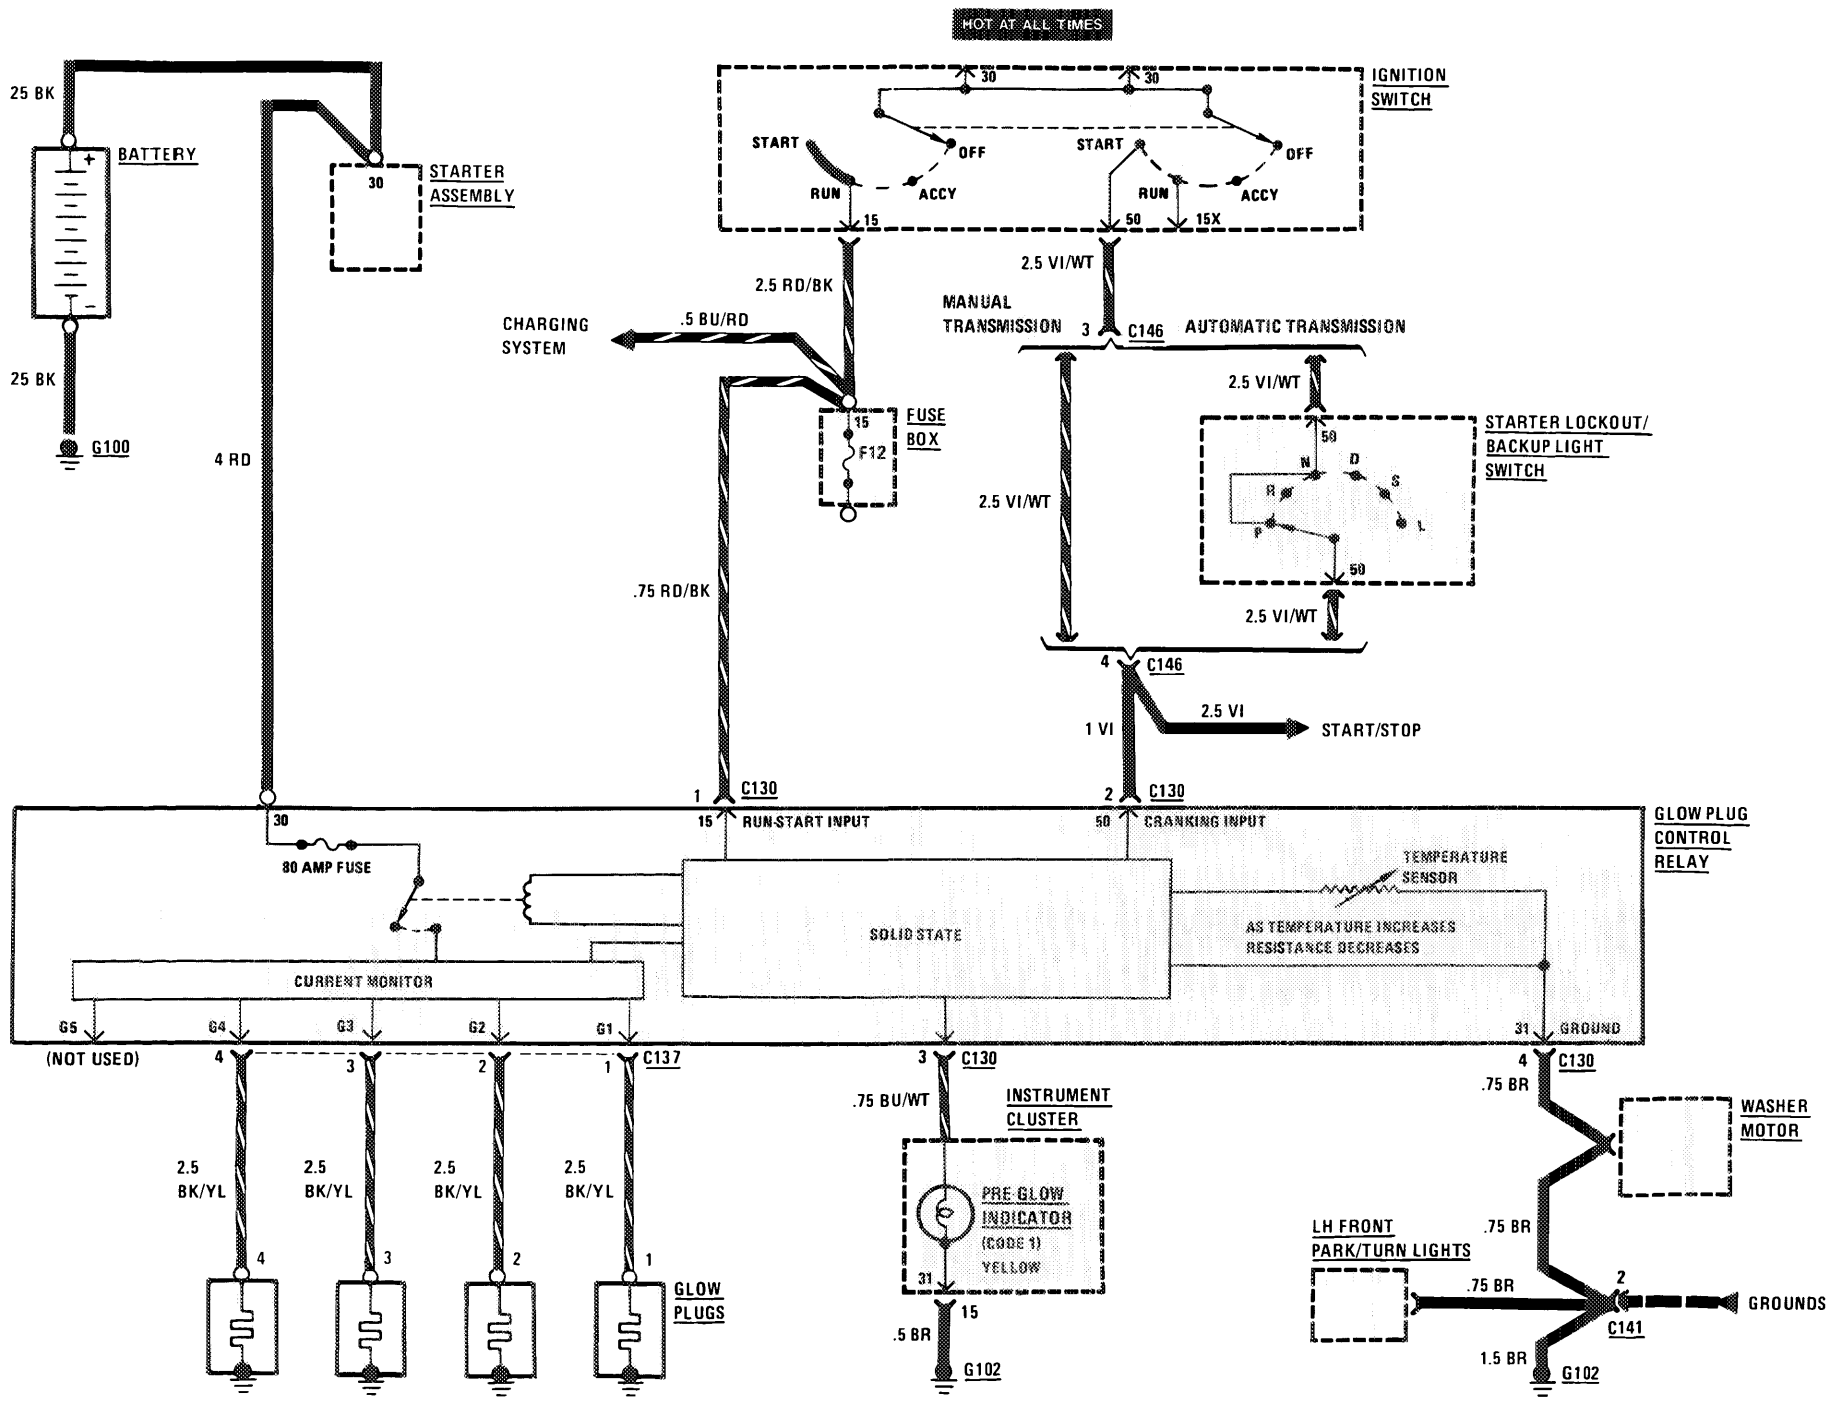

START/STOP (IGNITION SWITCH)

(For Component Locations See Page 205)


107
240
D

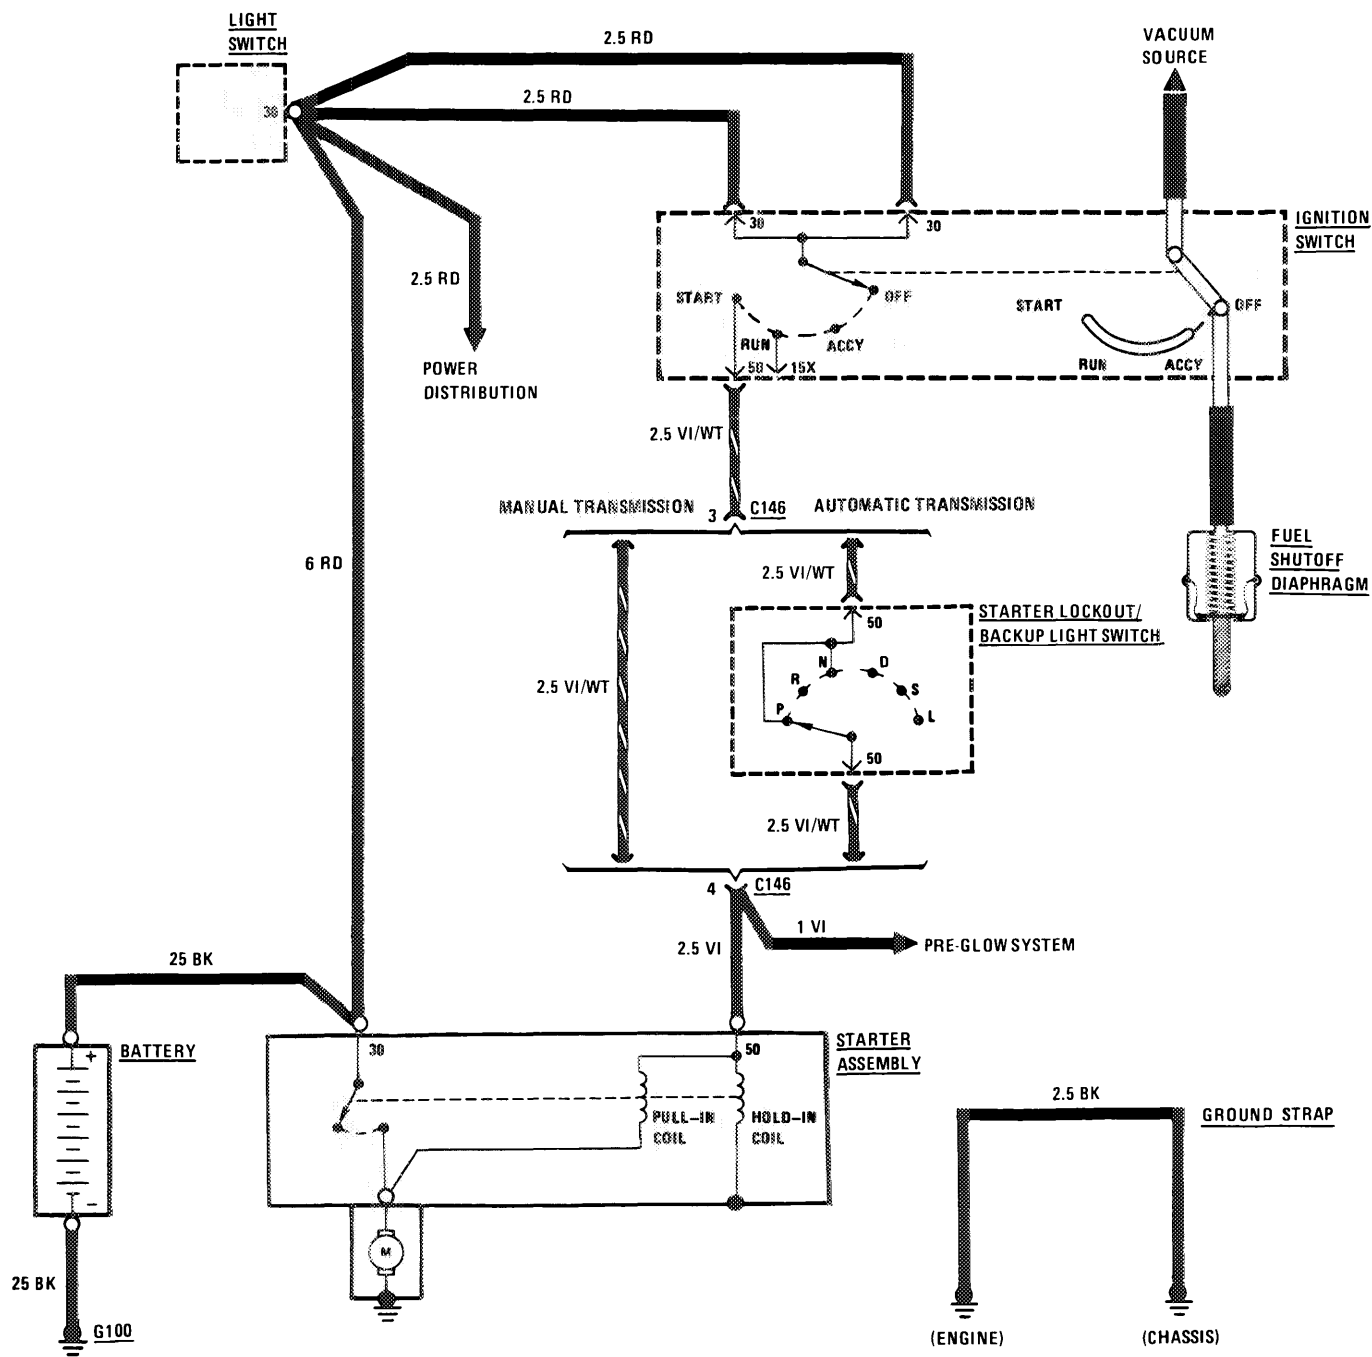

CHARGING SYSTEM


(For Component Locations See Page 202)

108
240
0

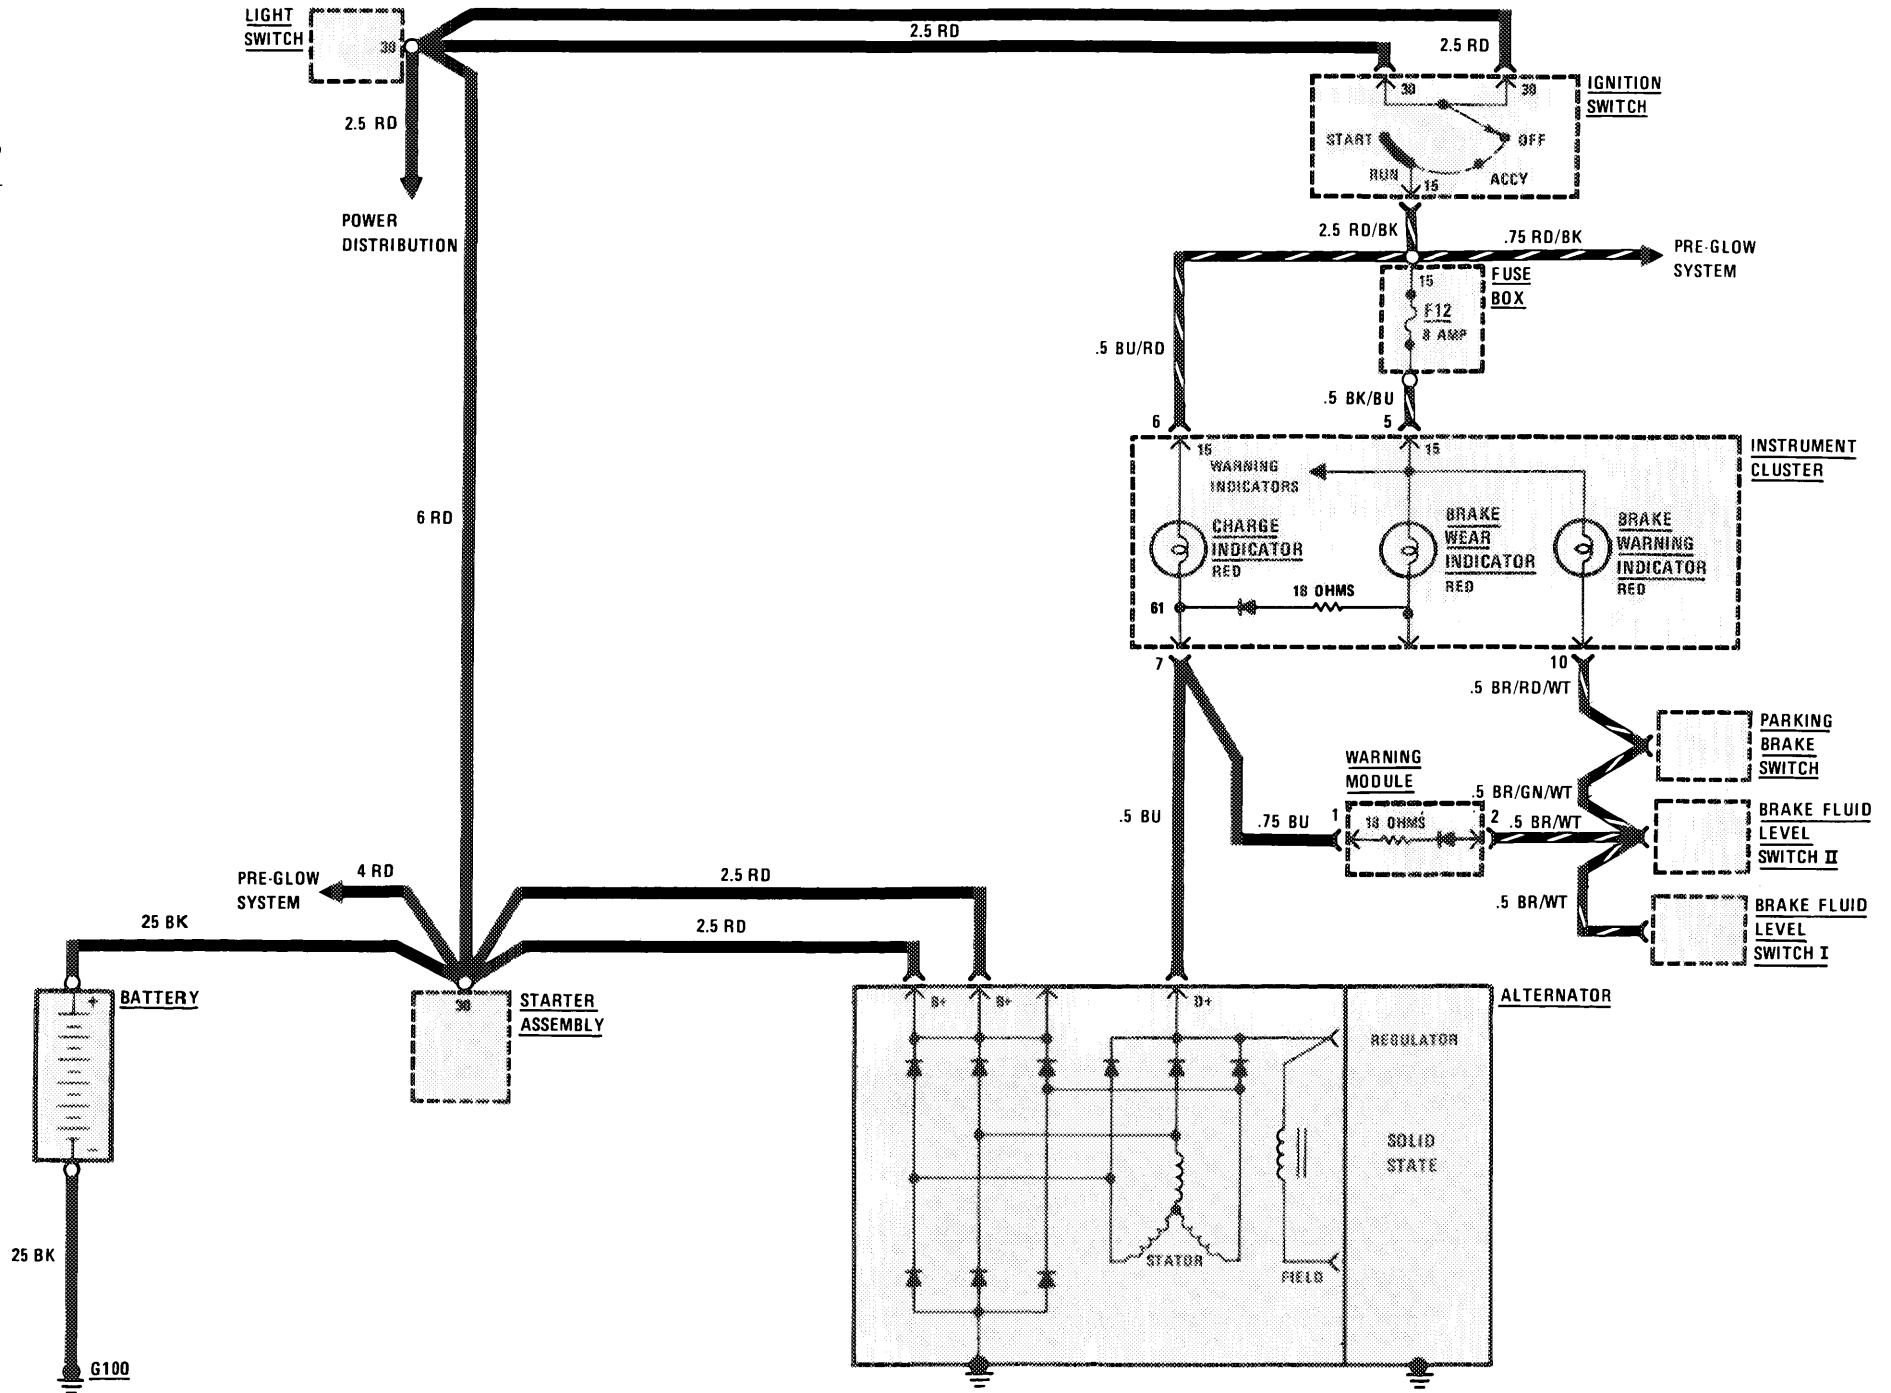

EXHAUST GAS RECIRCULATION


(For Component Locations See Page 202)

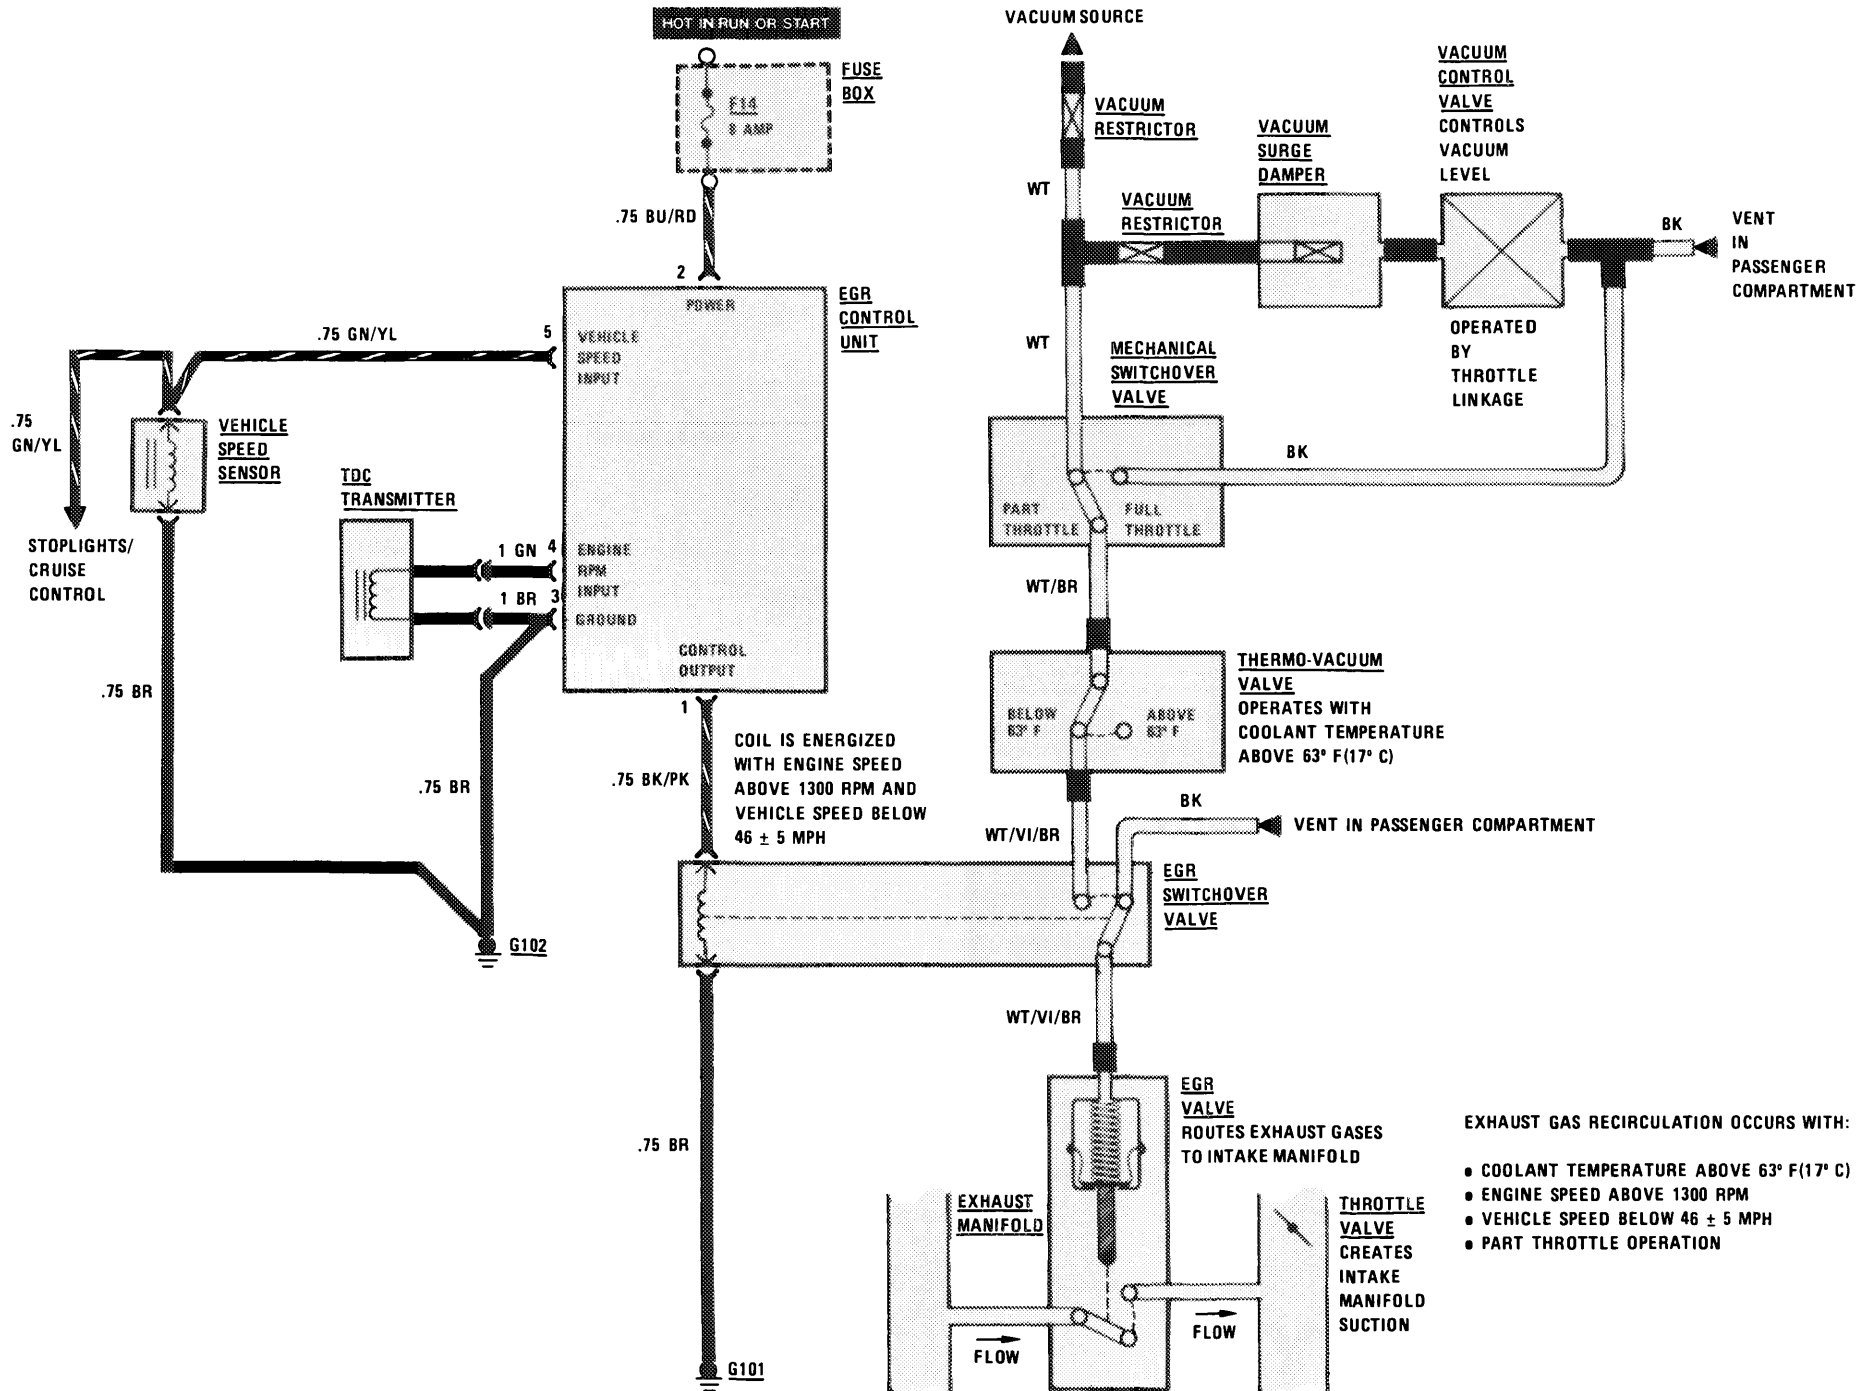

HEADLIGHTS/FOG LIGHTS


(For Component Locations See Page 203)

110
240
0

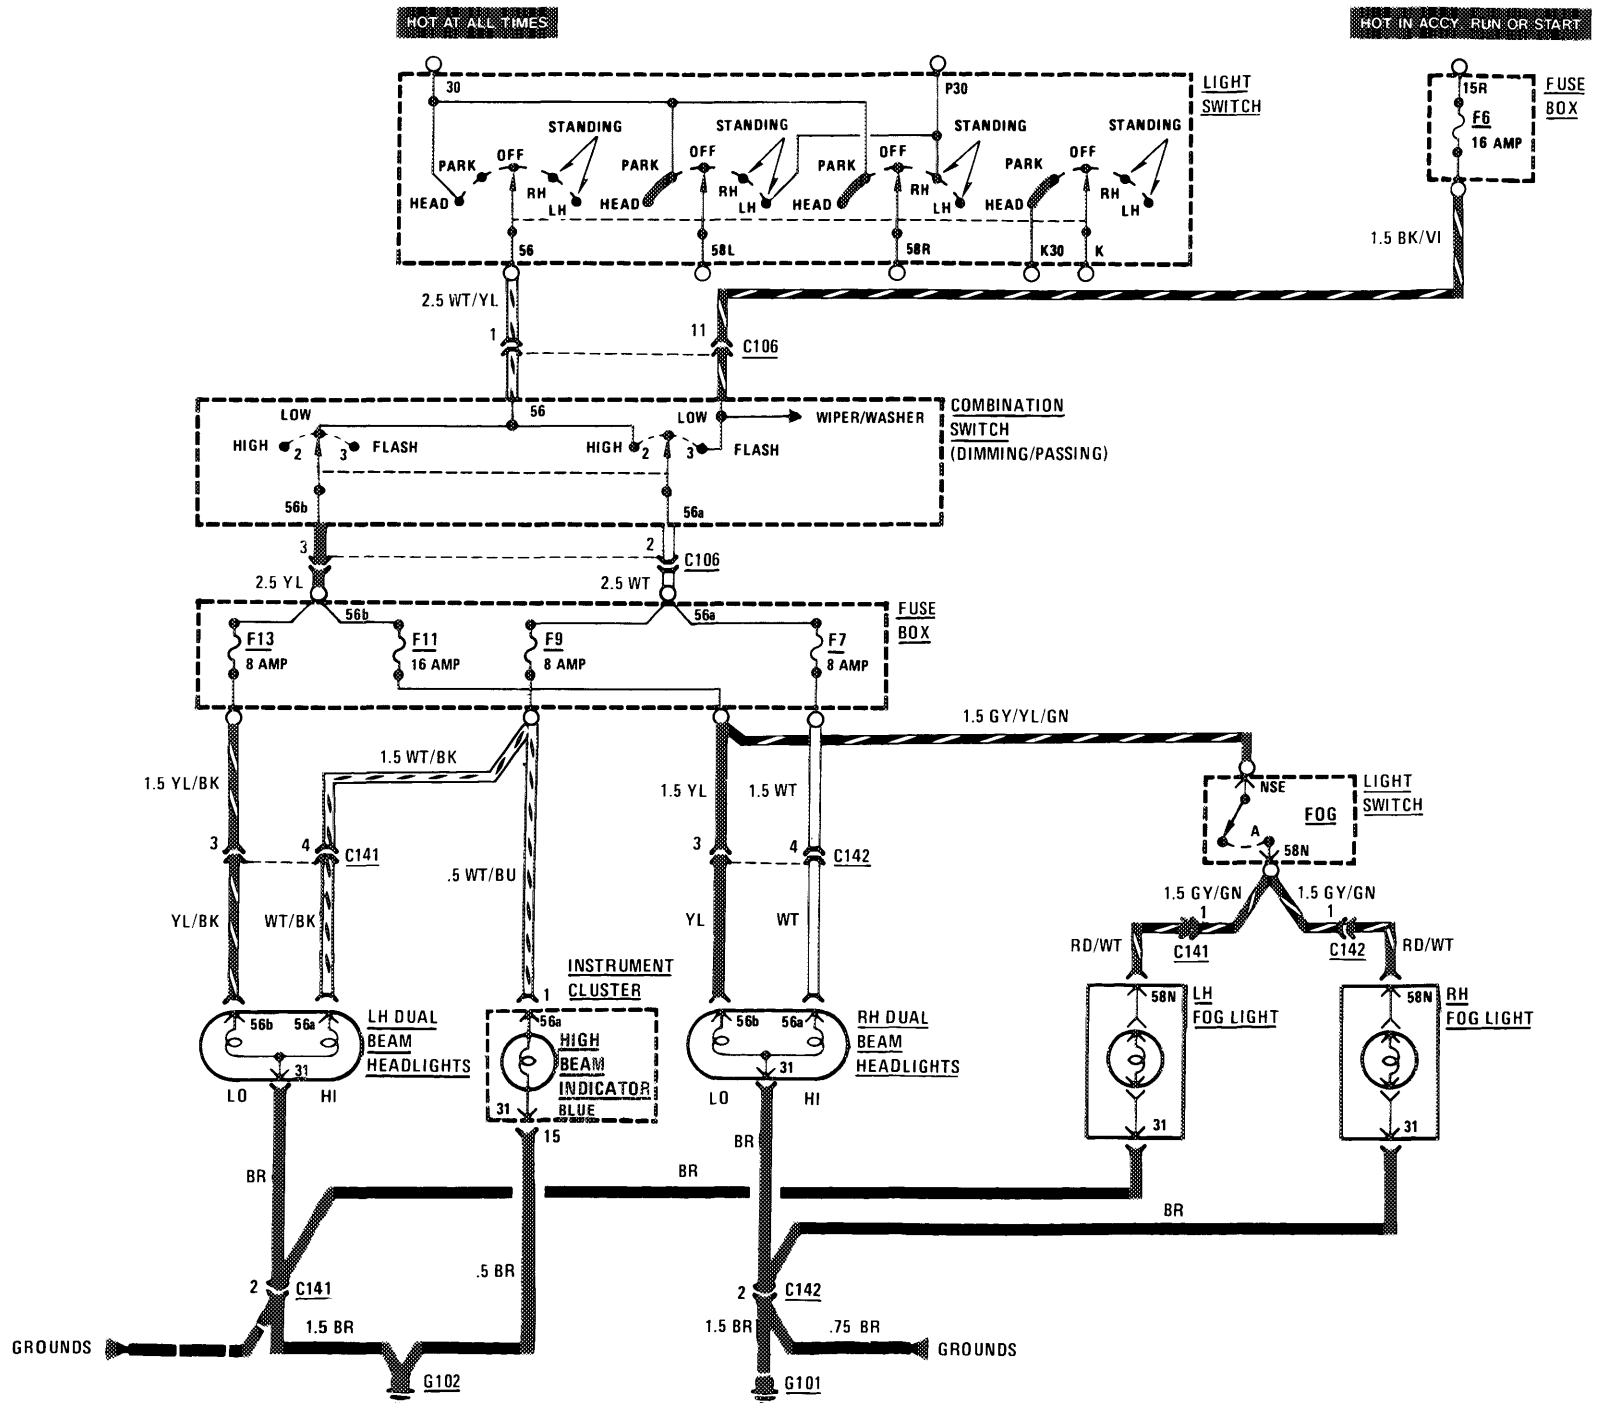


BACKUP LIGHTS / TRANSMISSION KICKDOWN

(For Component Locations See Page 201)

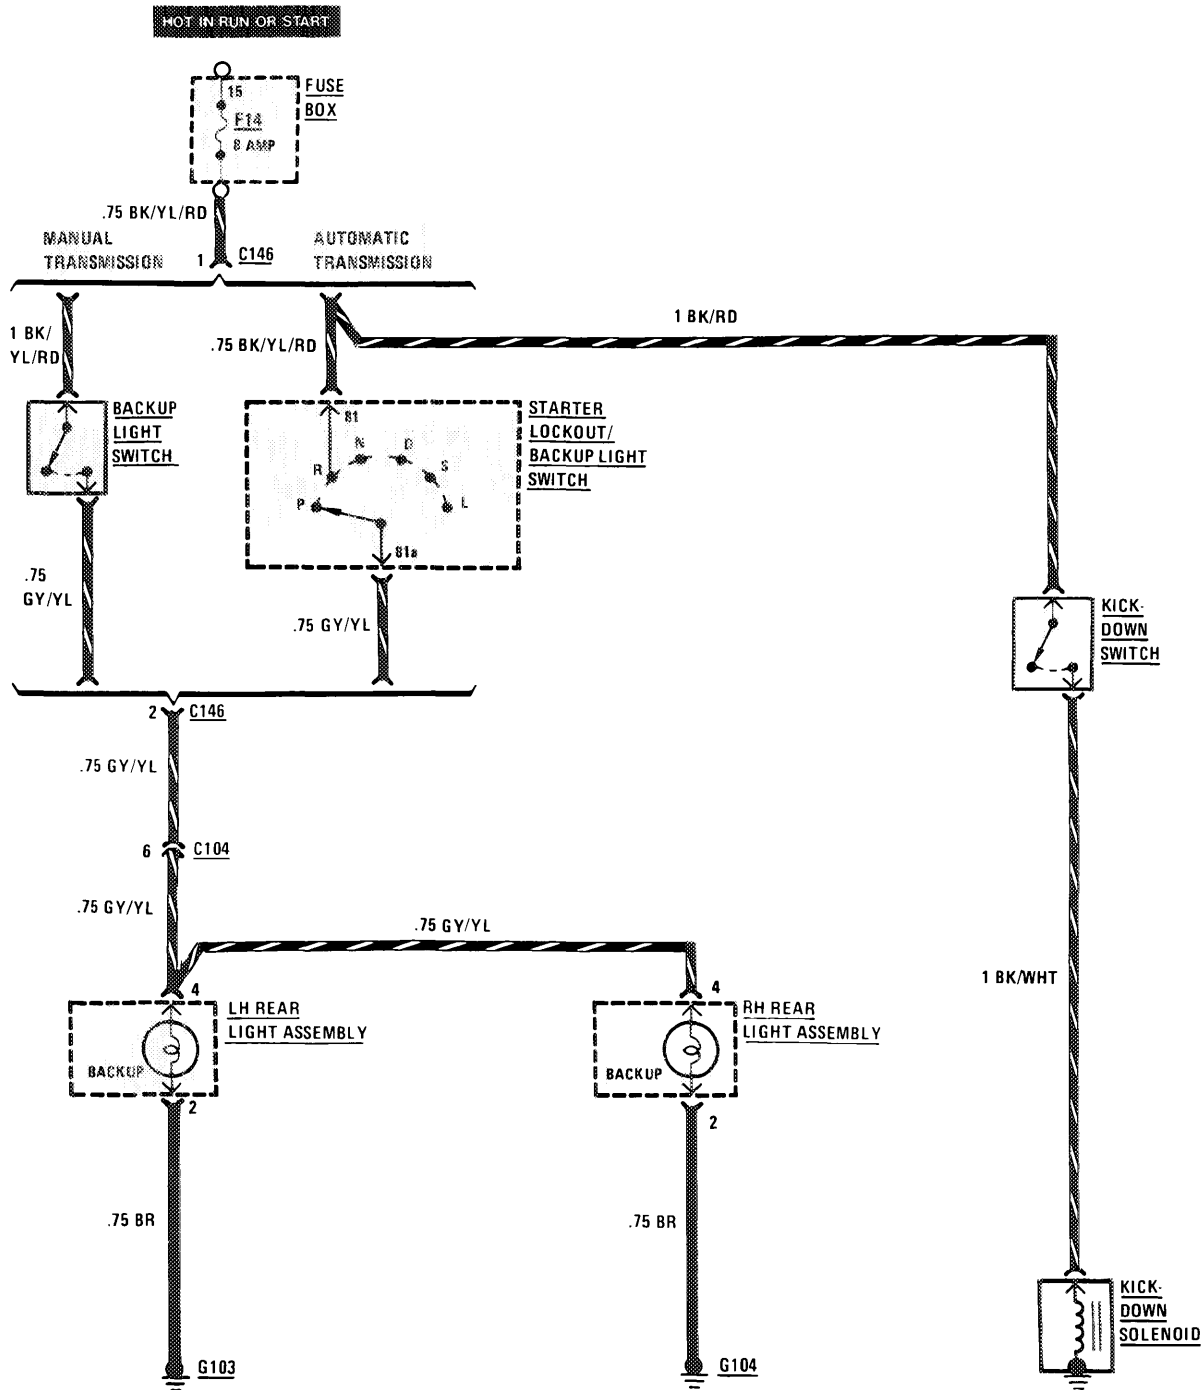

GLOVE BOX LIGHT

(For Component Locations See Page 201)

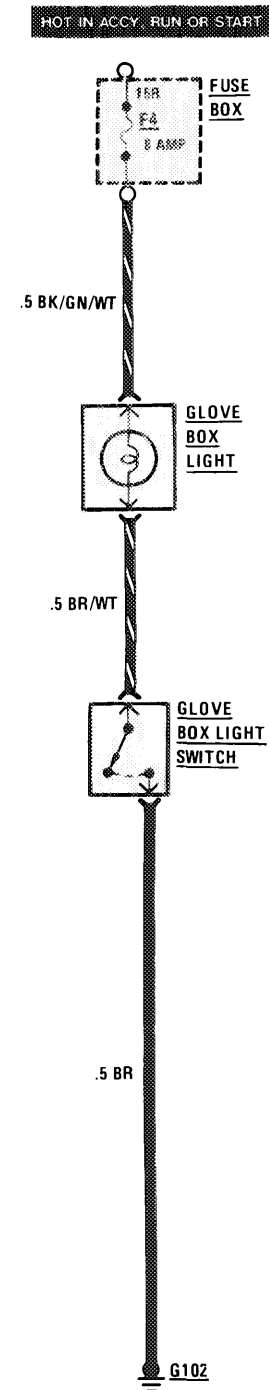


111
240
D

LIGHTS: PARK/TAIL


(For Component Locations See Page 203)

112
240
0

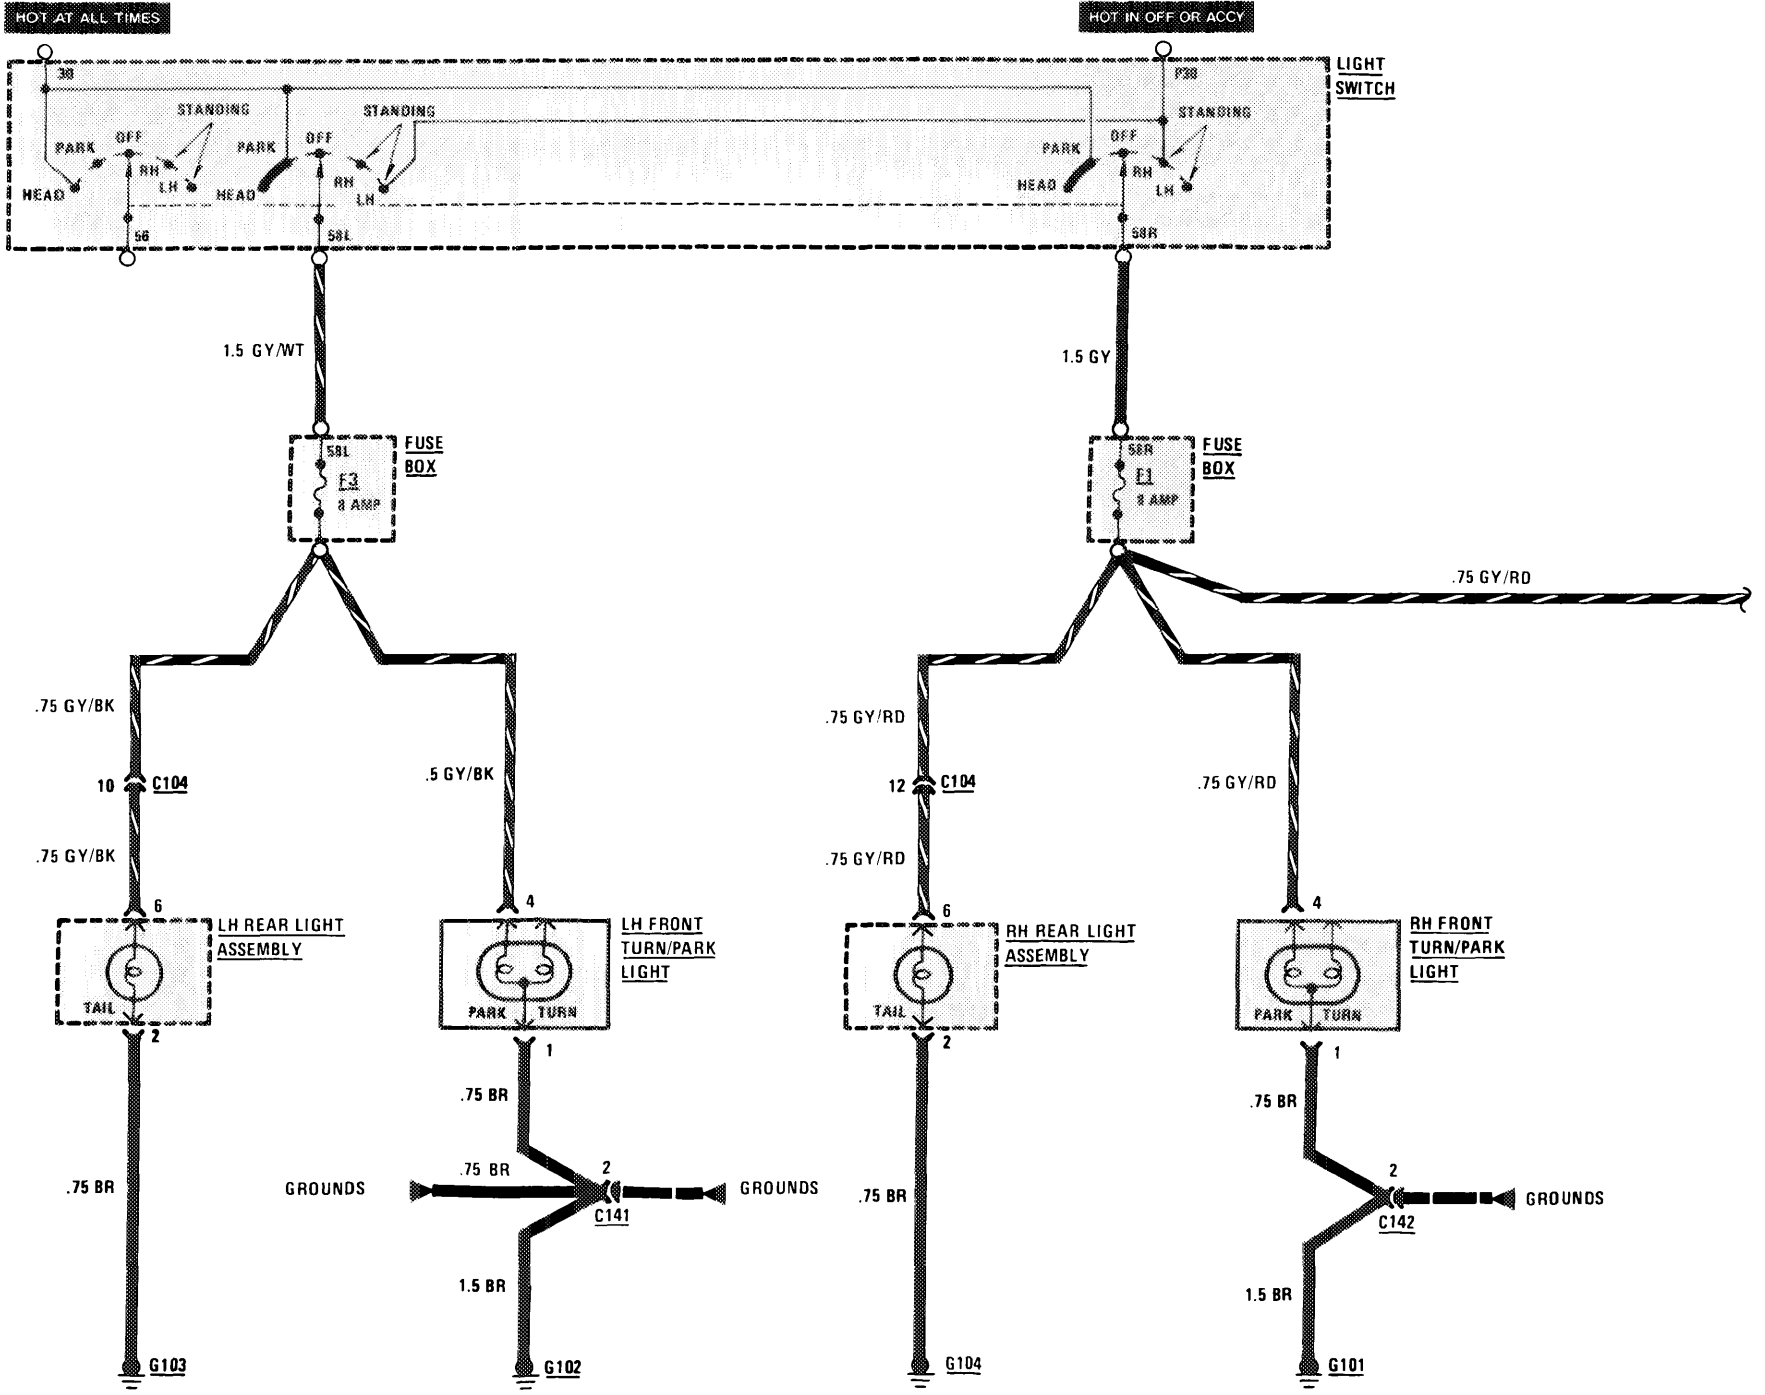

LIGHTS: MARKER/LICENSE/TRUNK

(For Component Locations See Page 203)

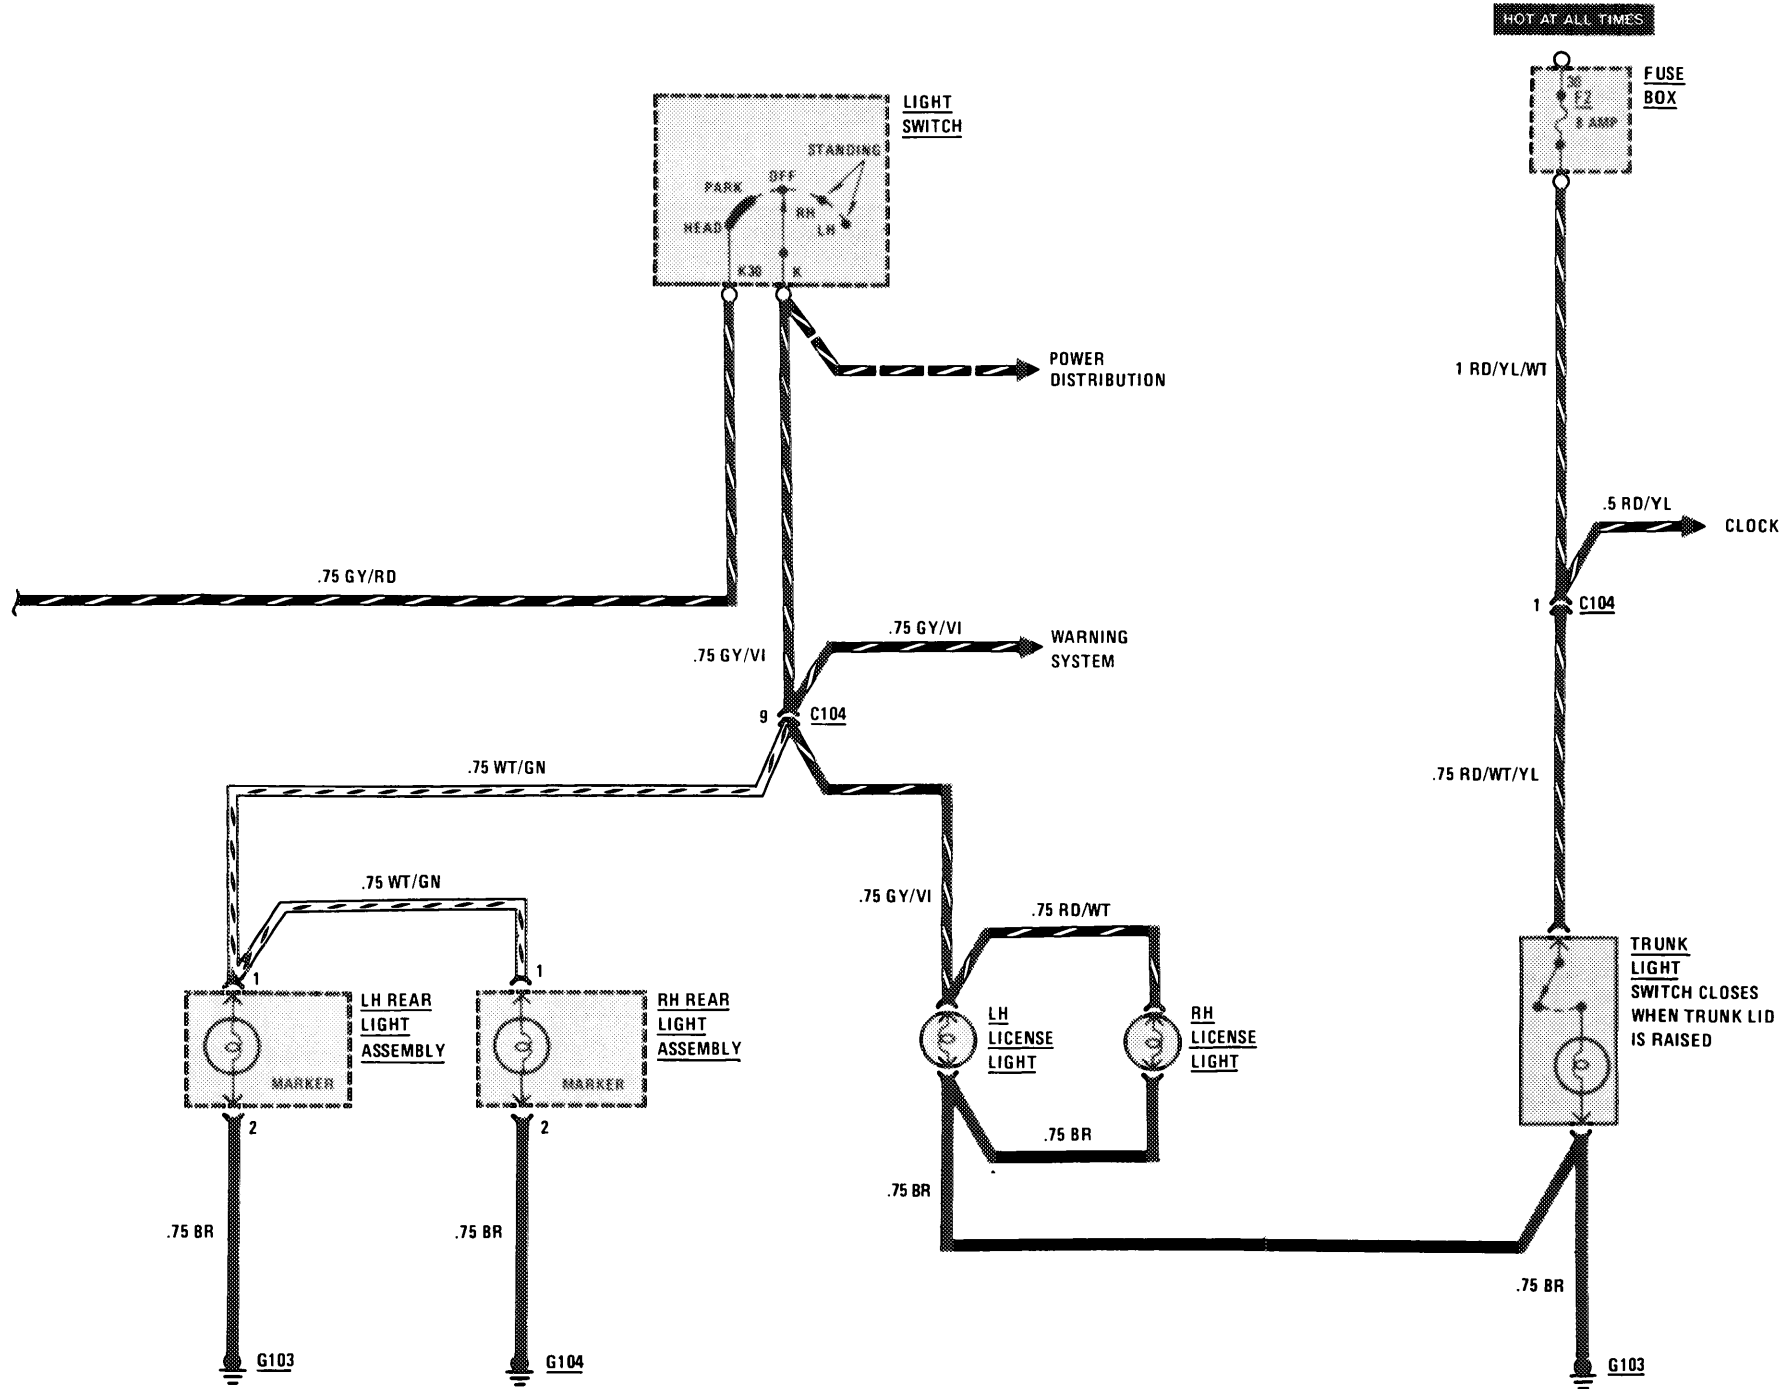


113
240
D

STOPLIGHTS/CRUISE CONTROL

(For Component Locations See Page 205)


AUTOMATIC TRANSMISSION

114
240
0

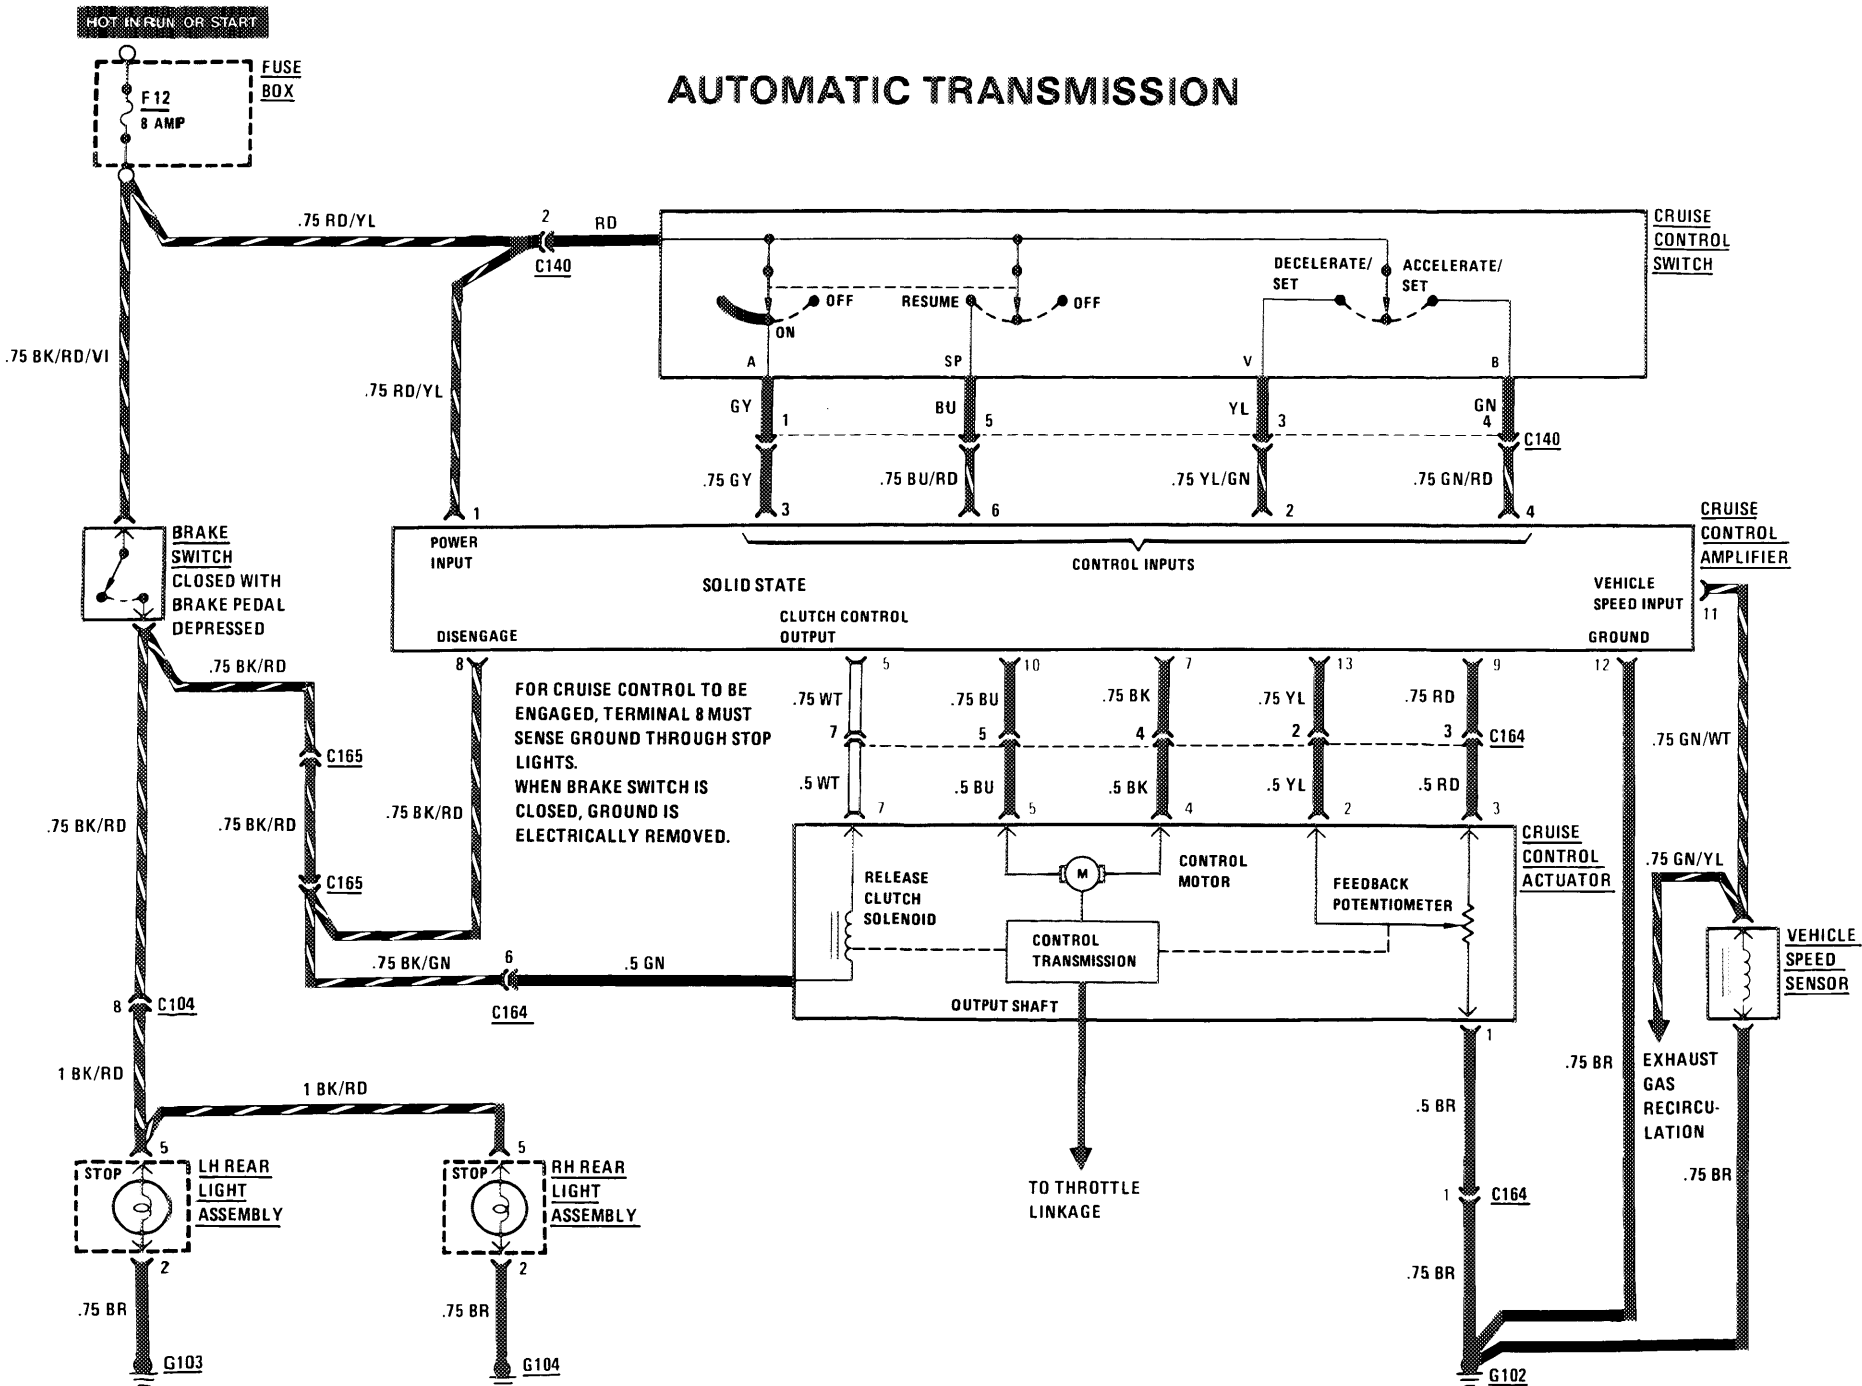

STOPLIGHTS/CRUISE CONTROL (MANUAL TRANSMISSION)


(For Component Locations See Page 205)

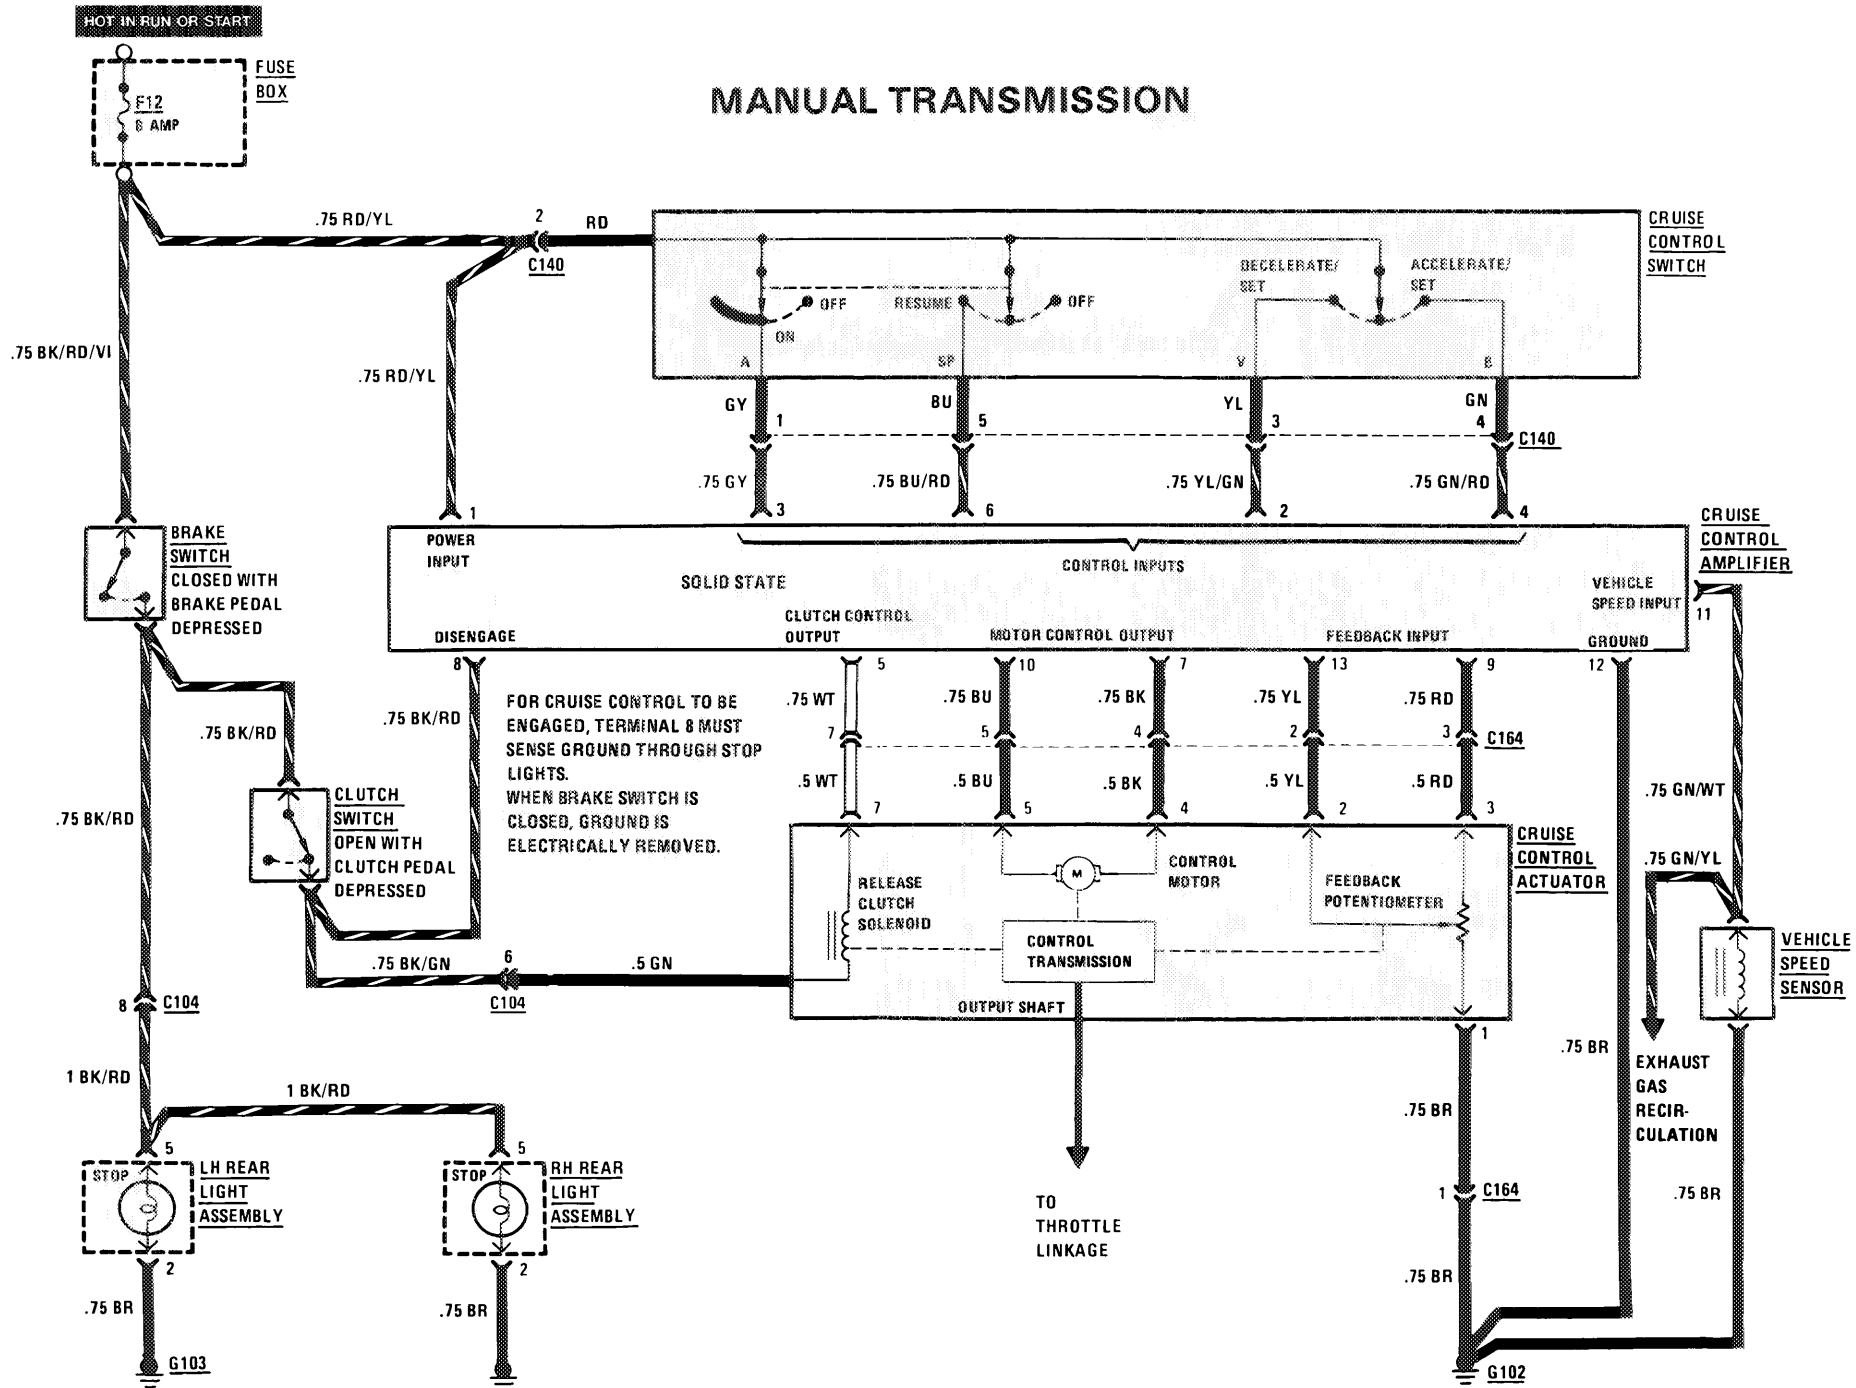

CENTER CONSOLE ILLUMINATION

(For Component Locations See Page 201)


116
240
D

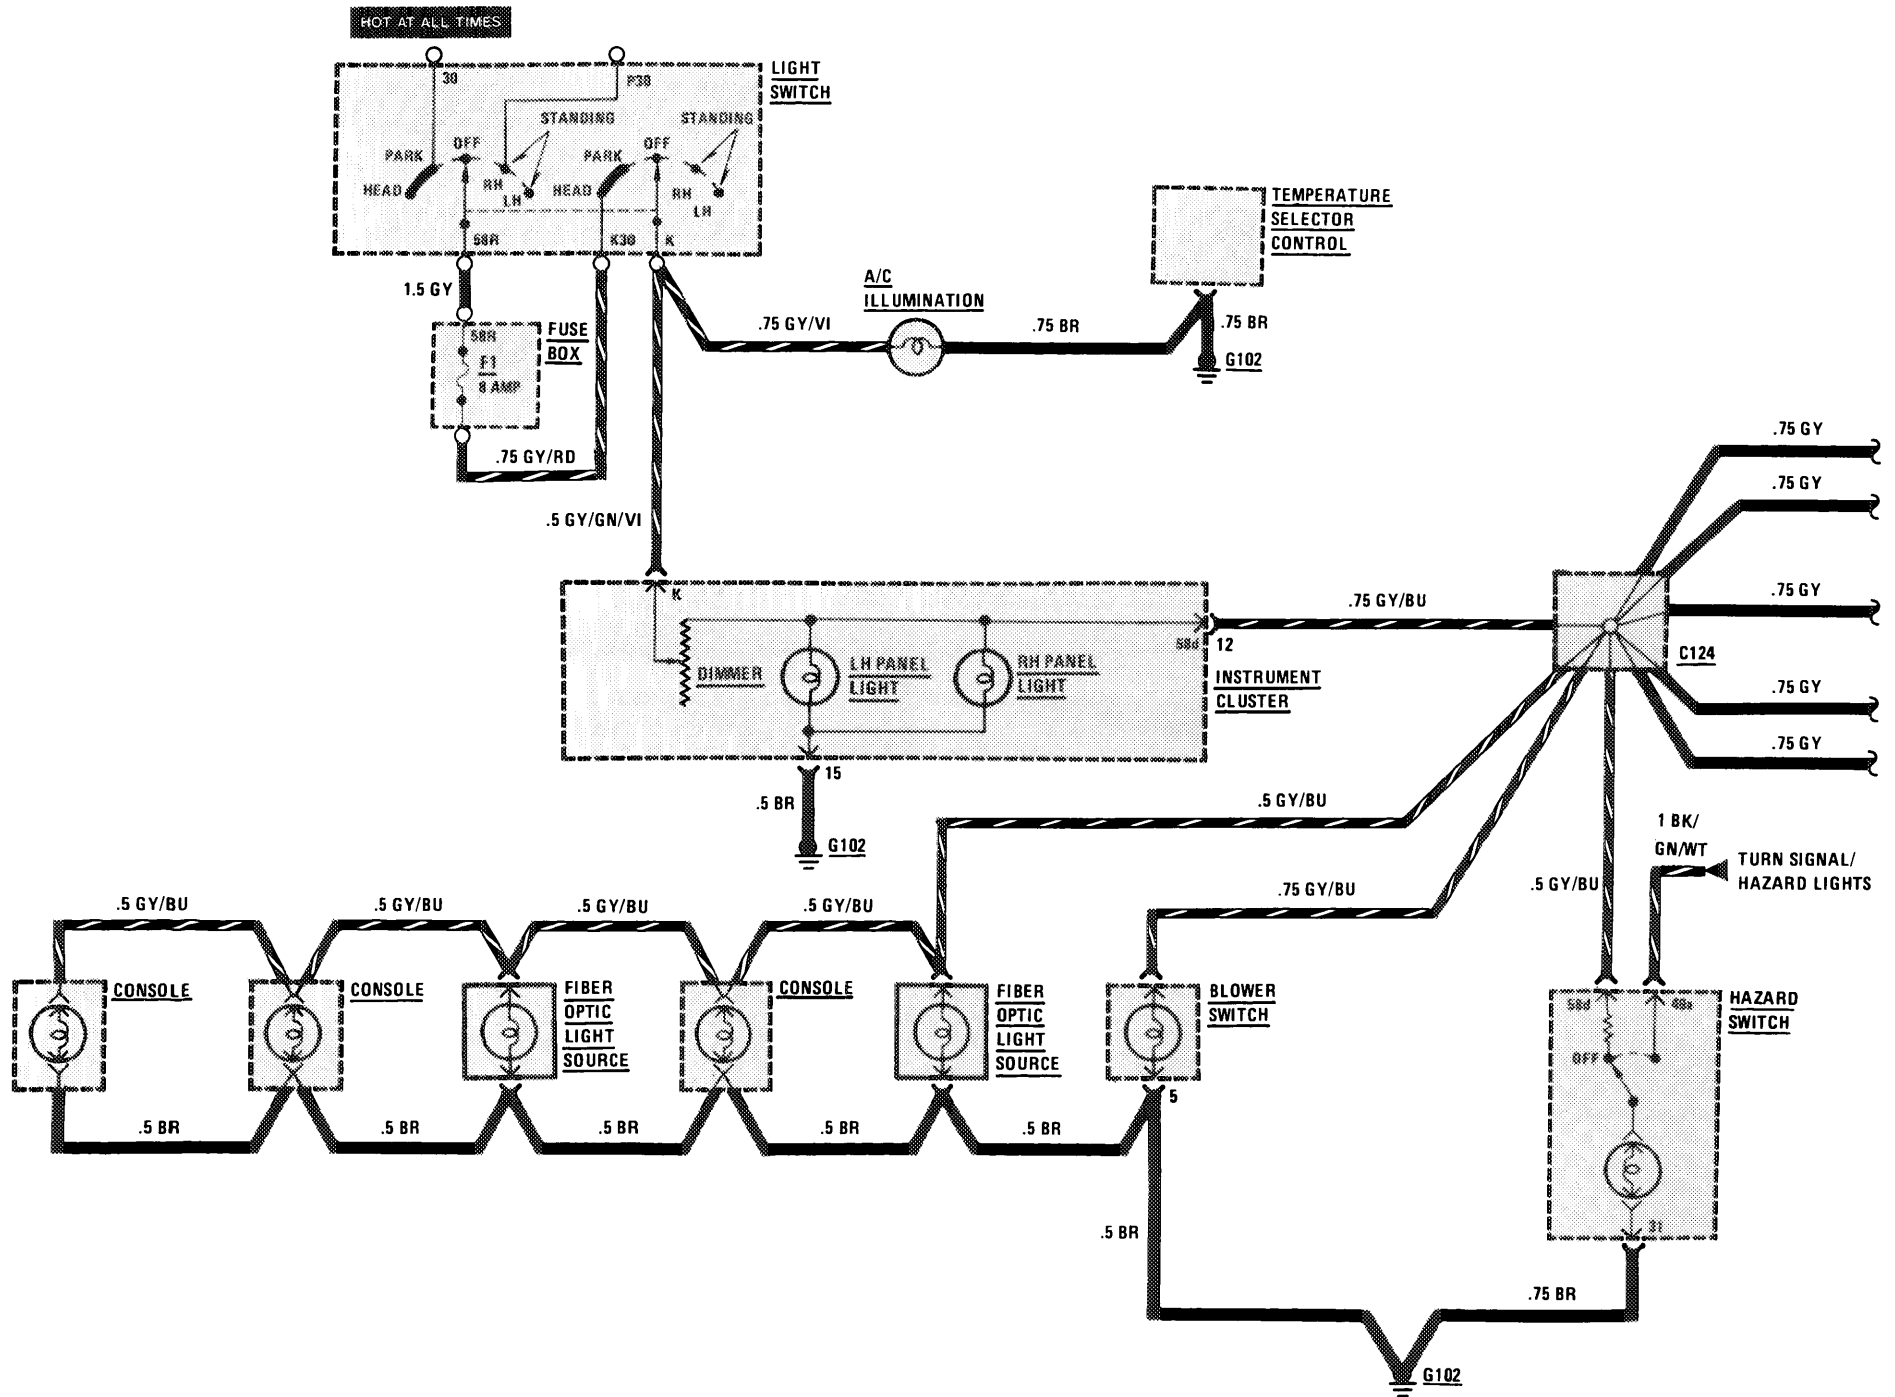

TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 205)


118
240
0

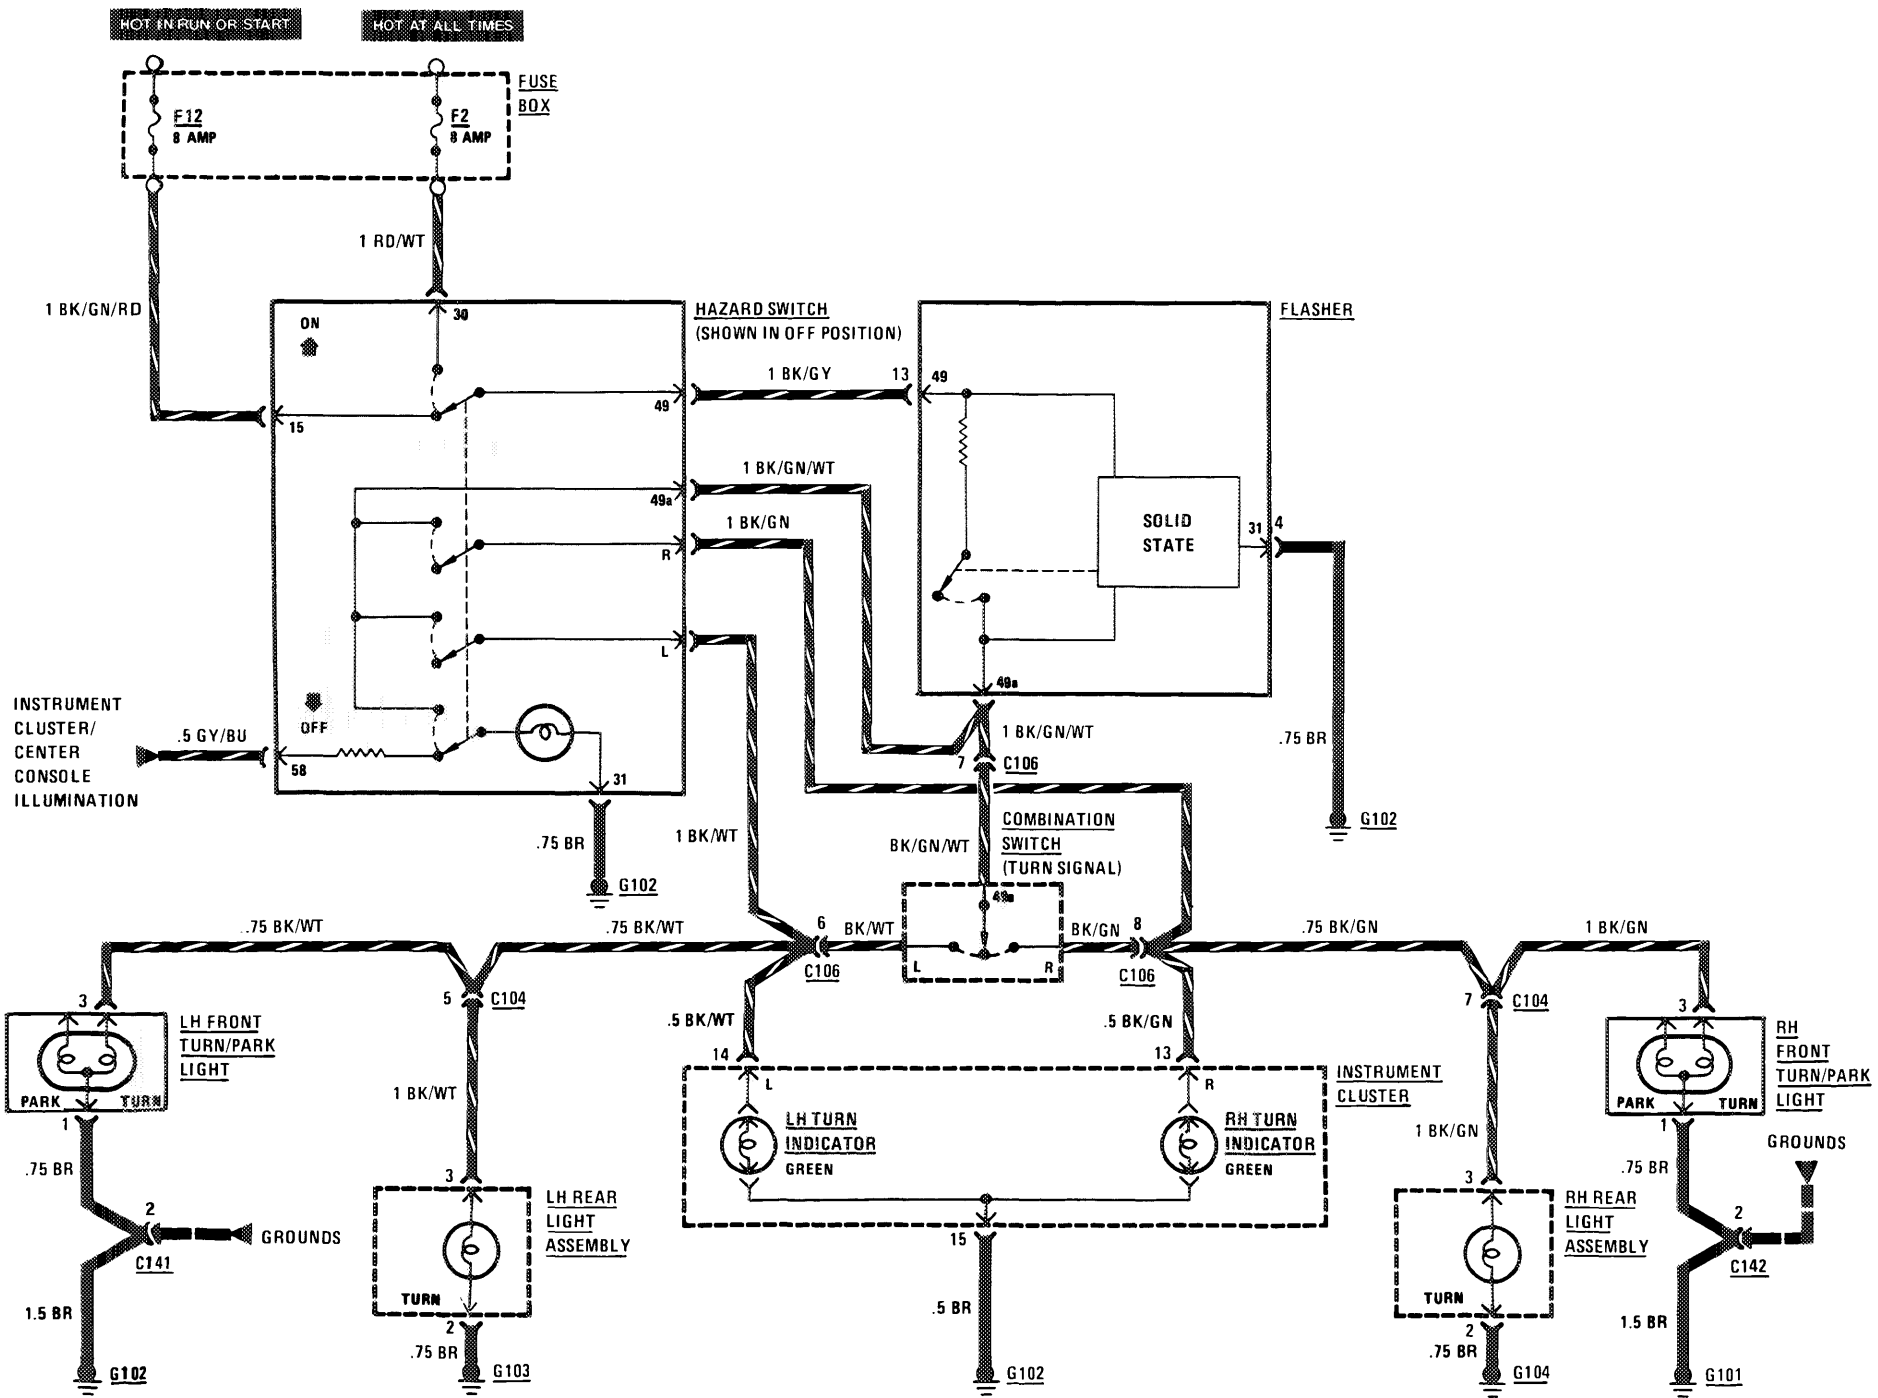

COURTESY LIGHTS

(For Component Locations See Page 202)


119
240
D

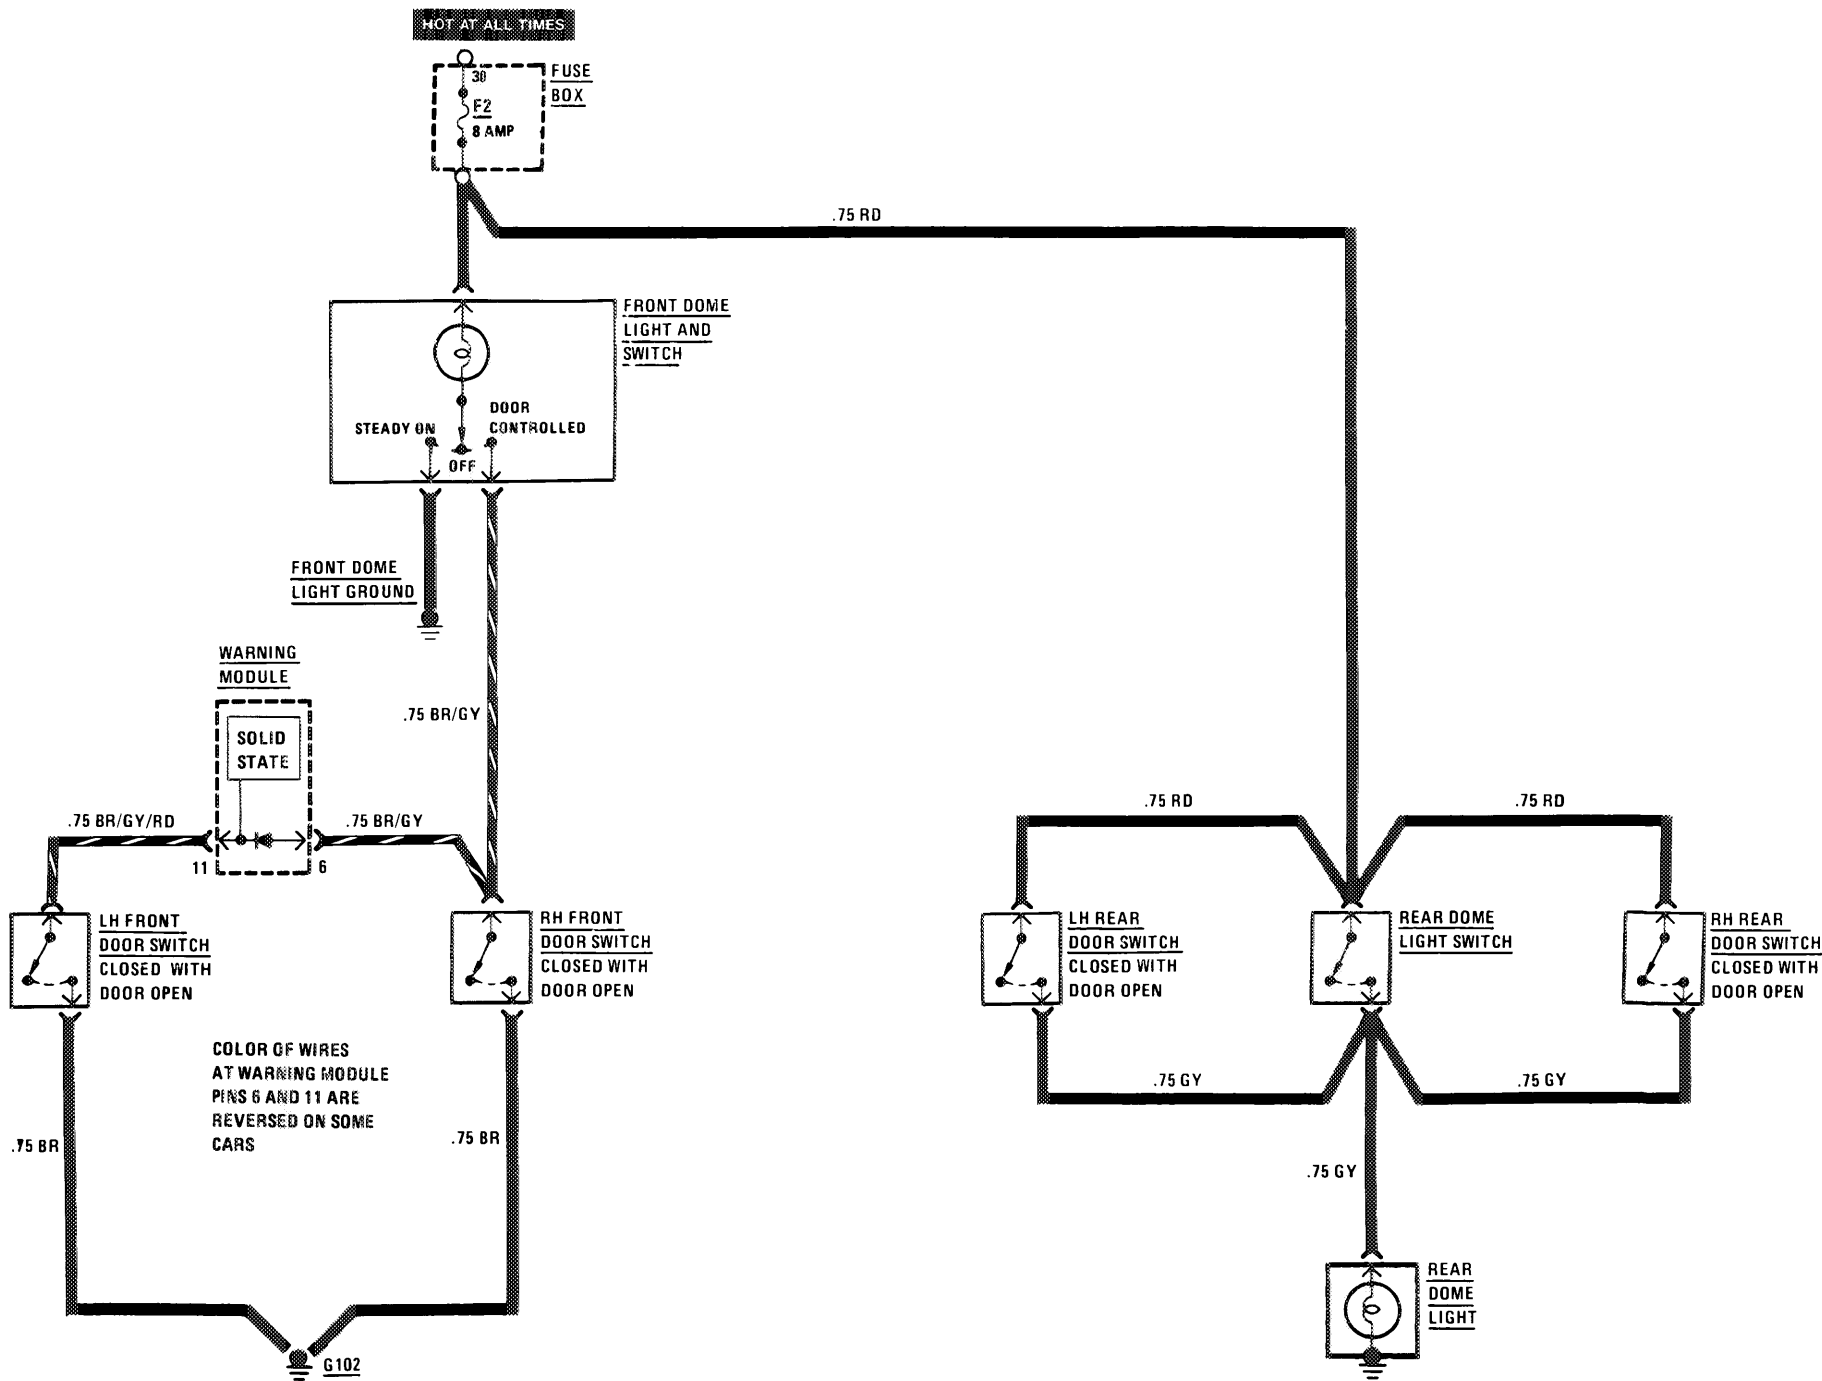

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION


(For Component Locations See Page 206)

120
240
0

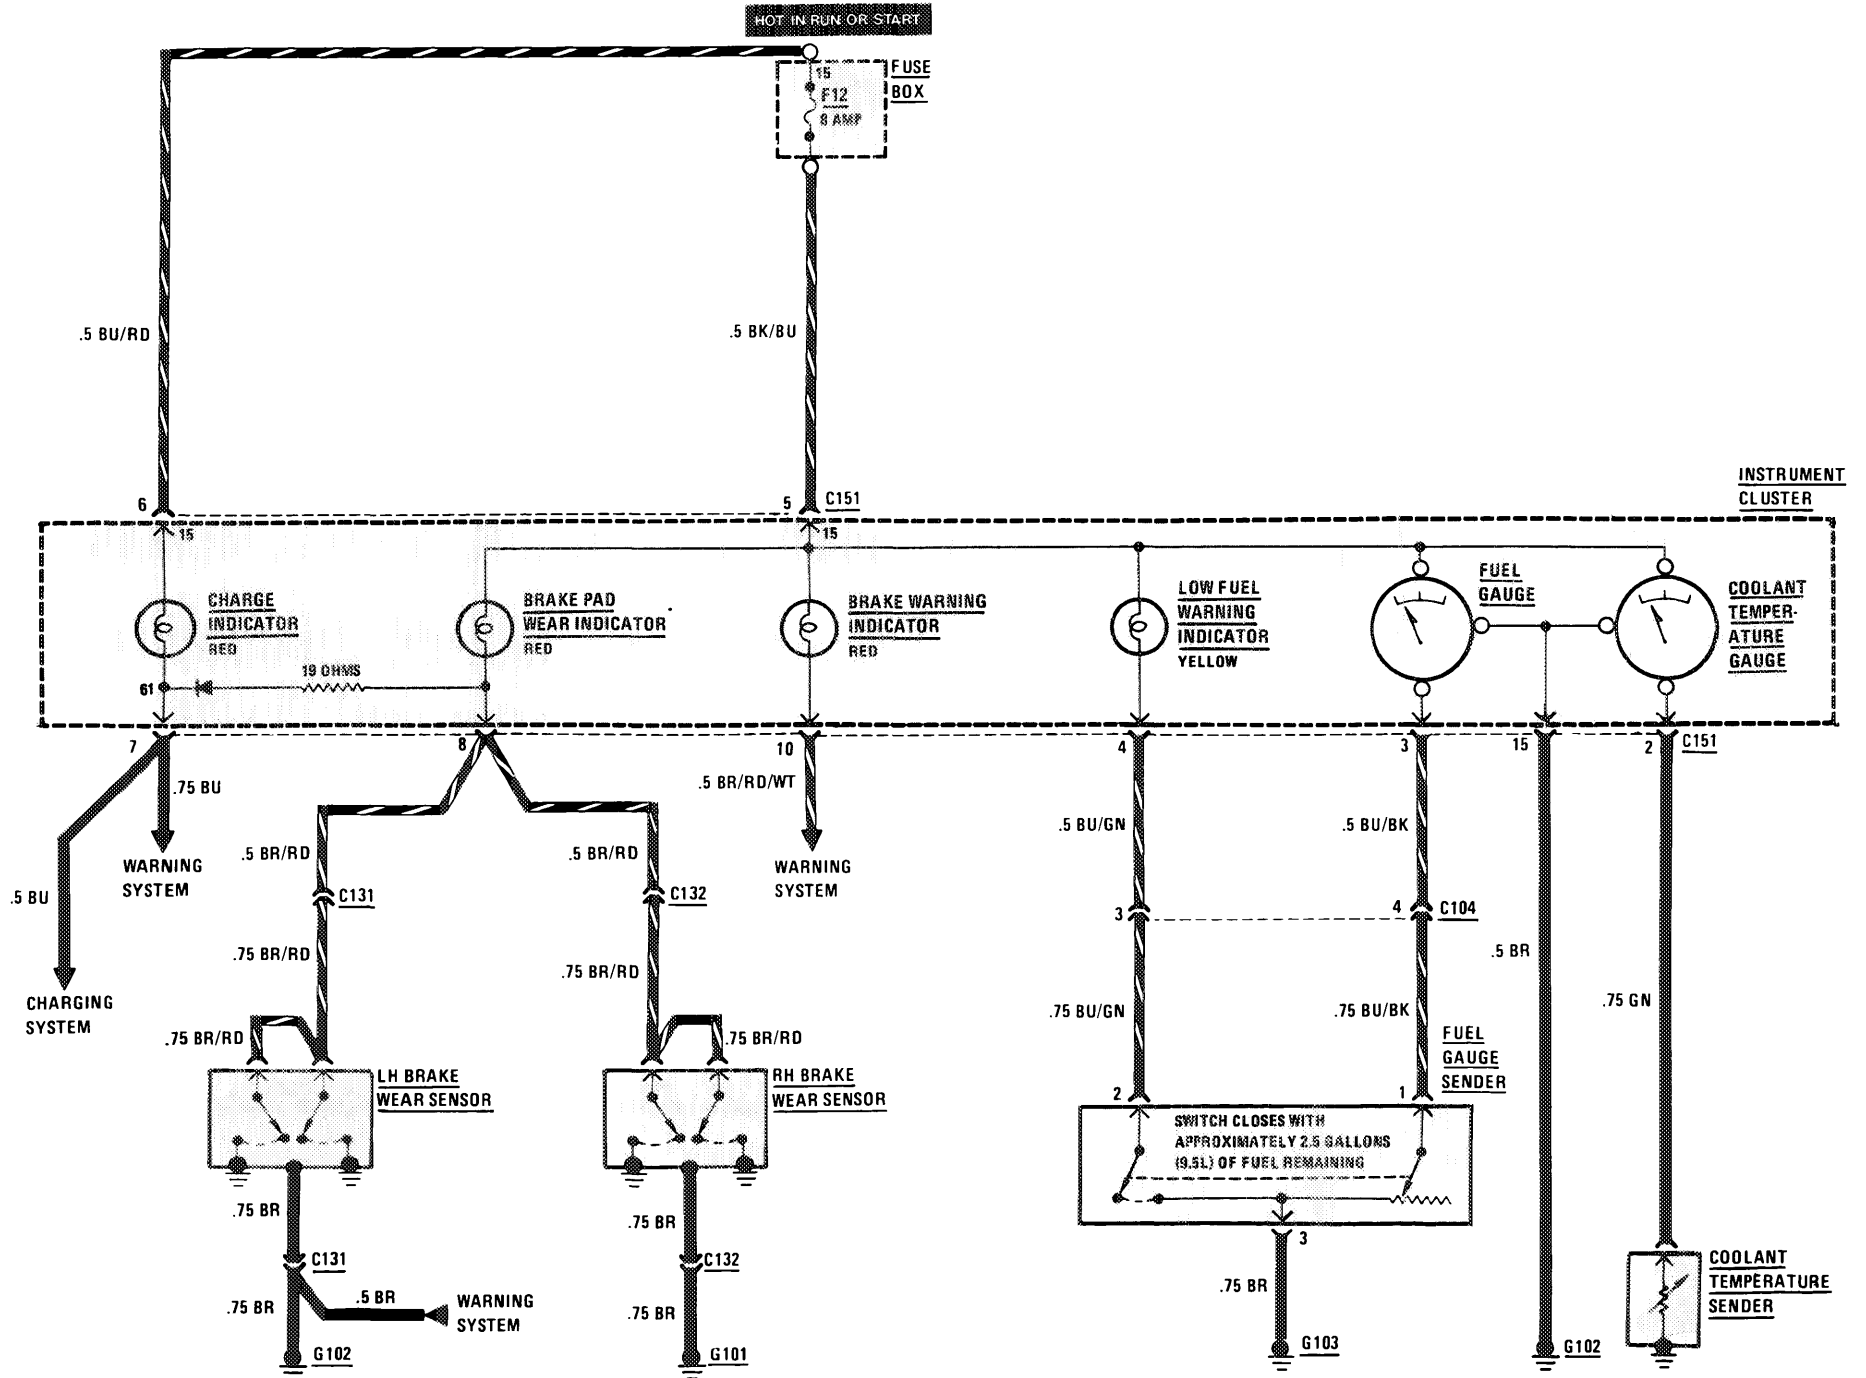

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 206)

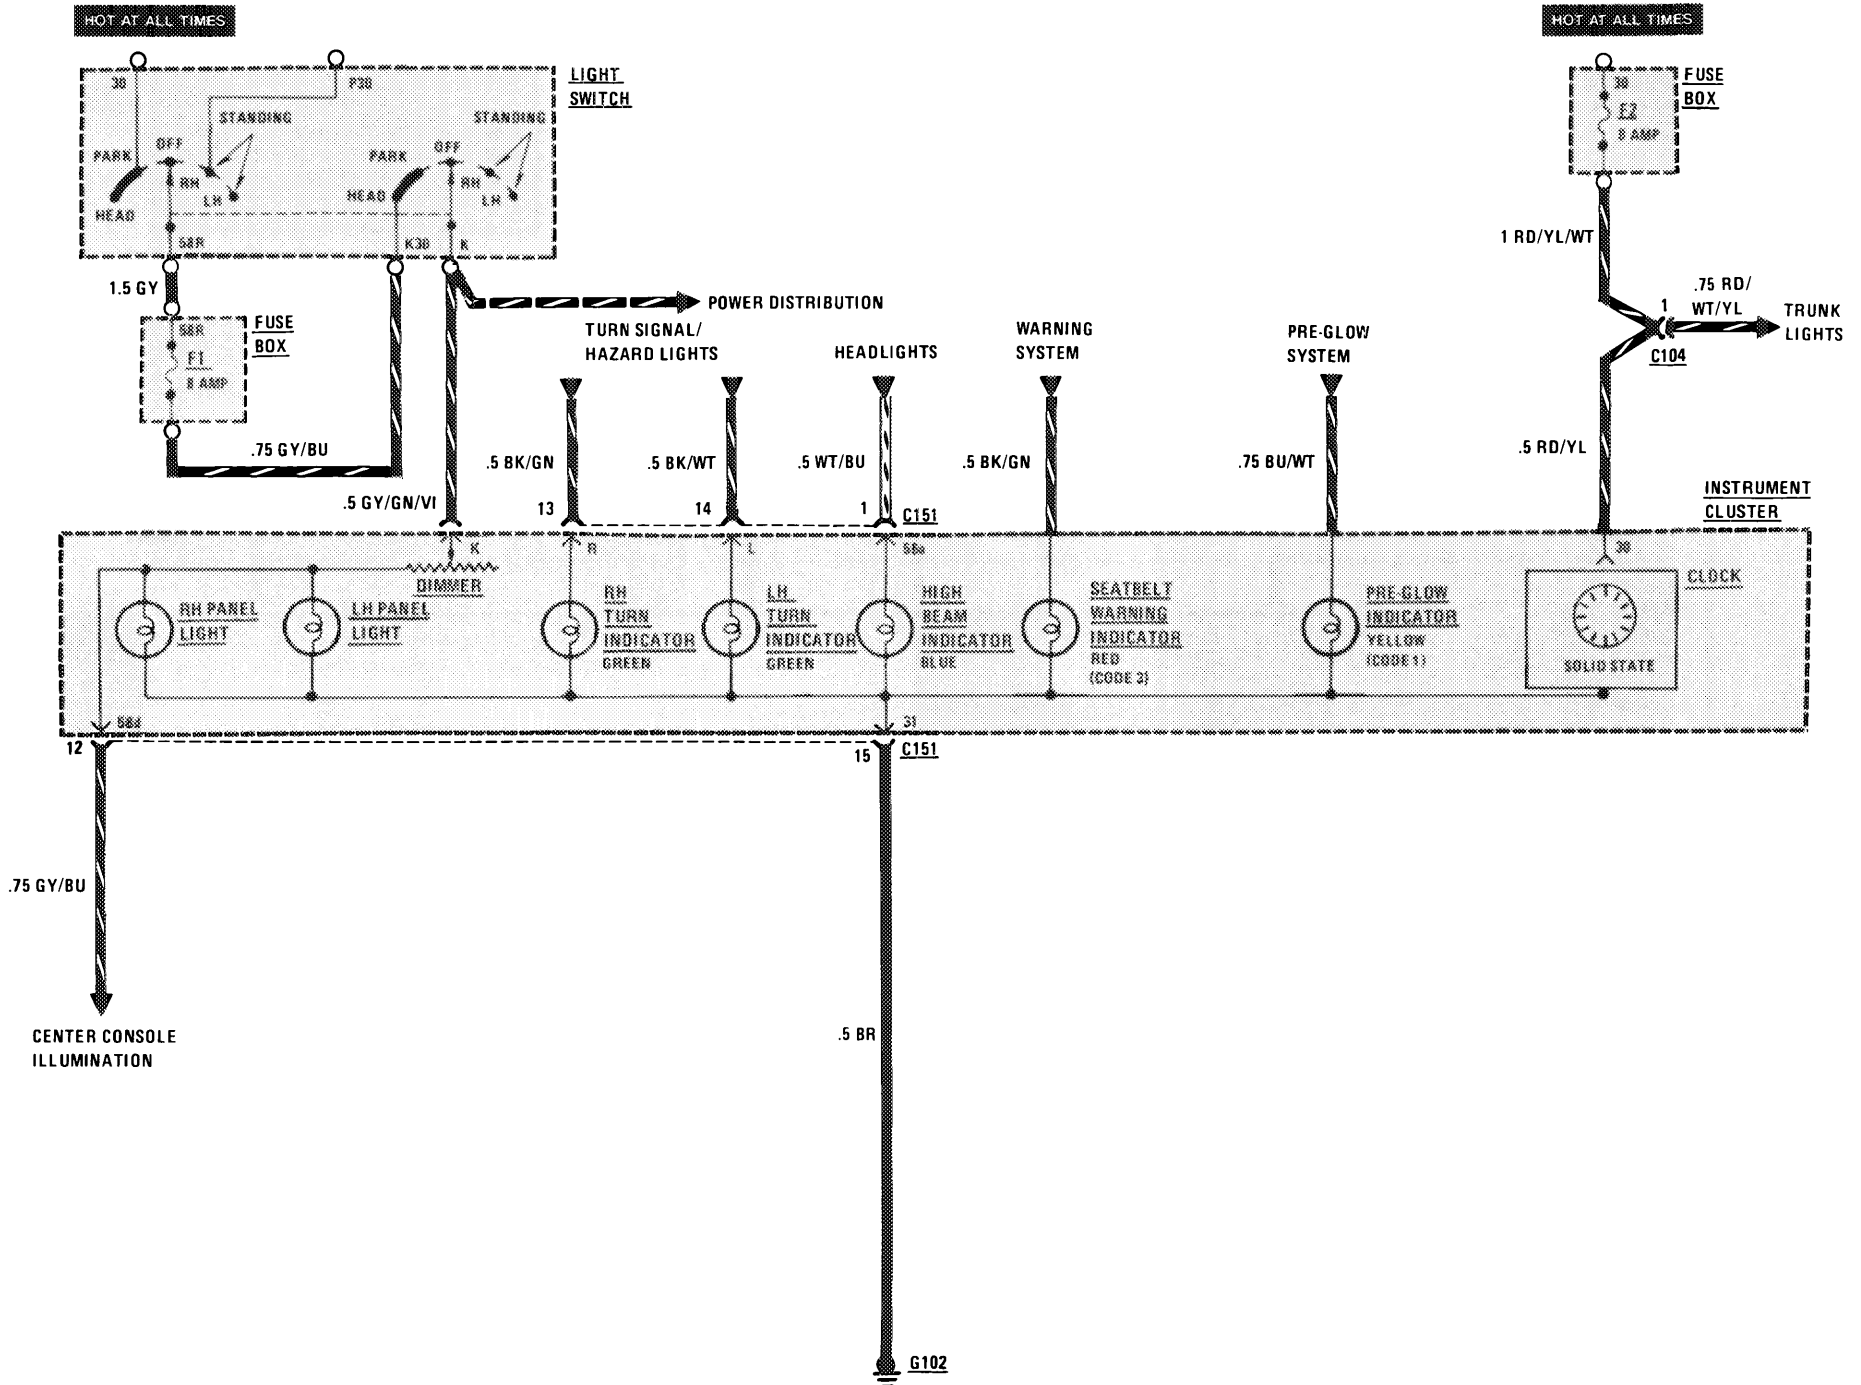


121
240
D

WARNING SYSTEM

(For Component Locations See Page 206)


122
240
0

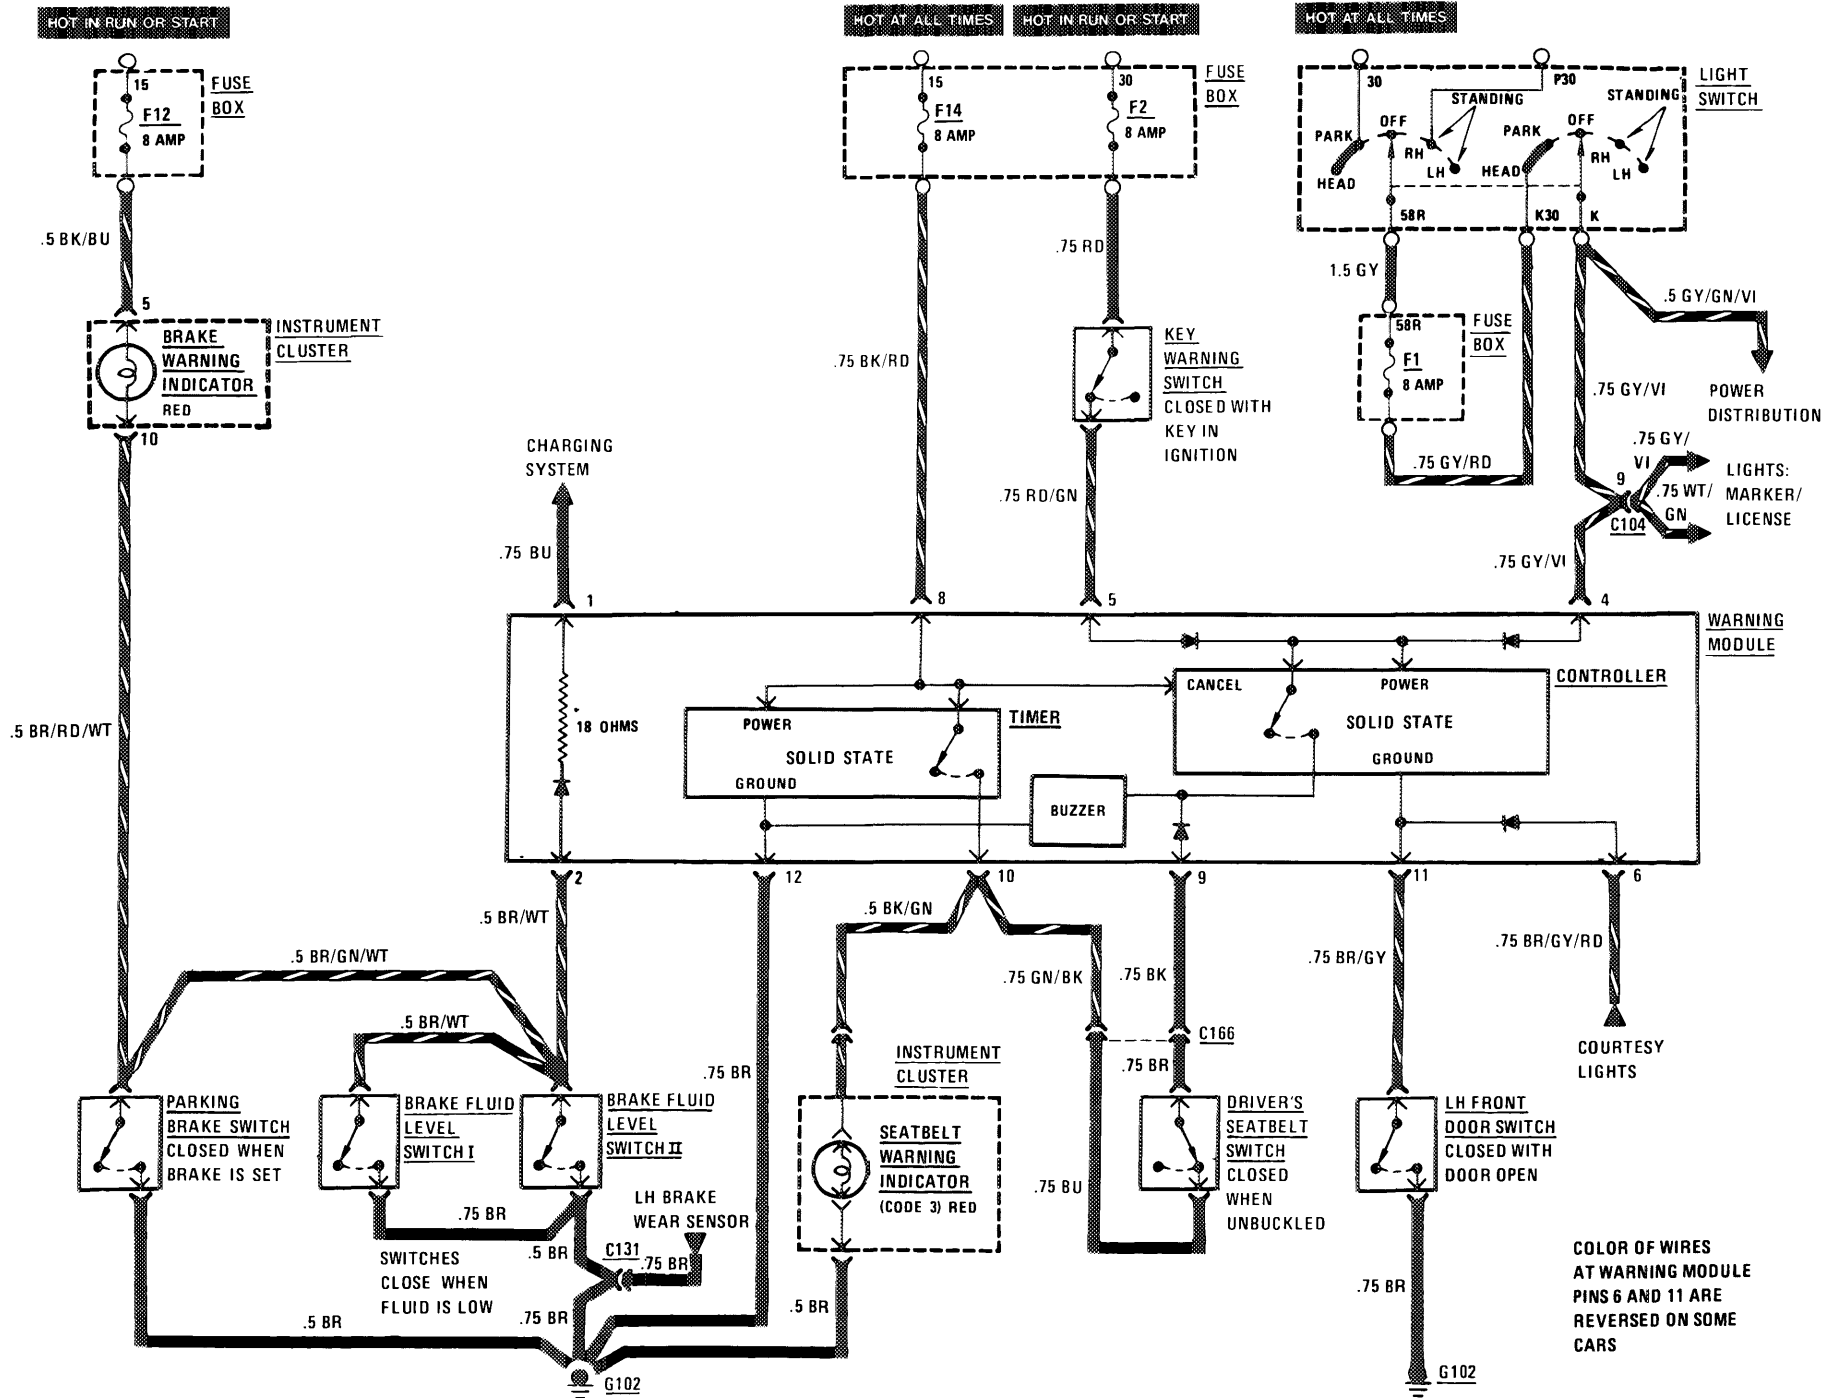

WIPER/WASHER

(For Component Locations See Page 206)


HOT IN ACCY, RUN OR START

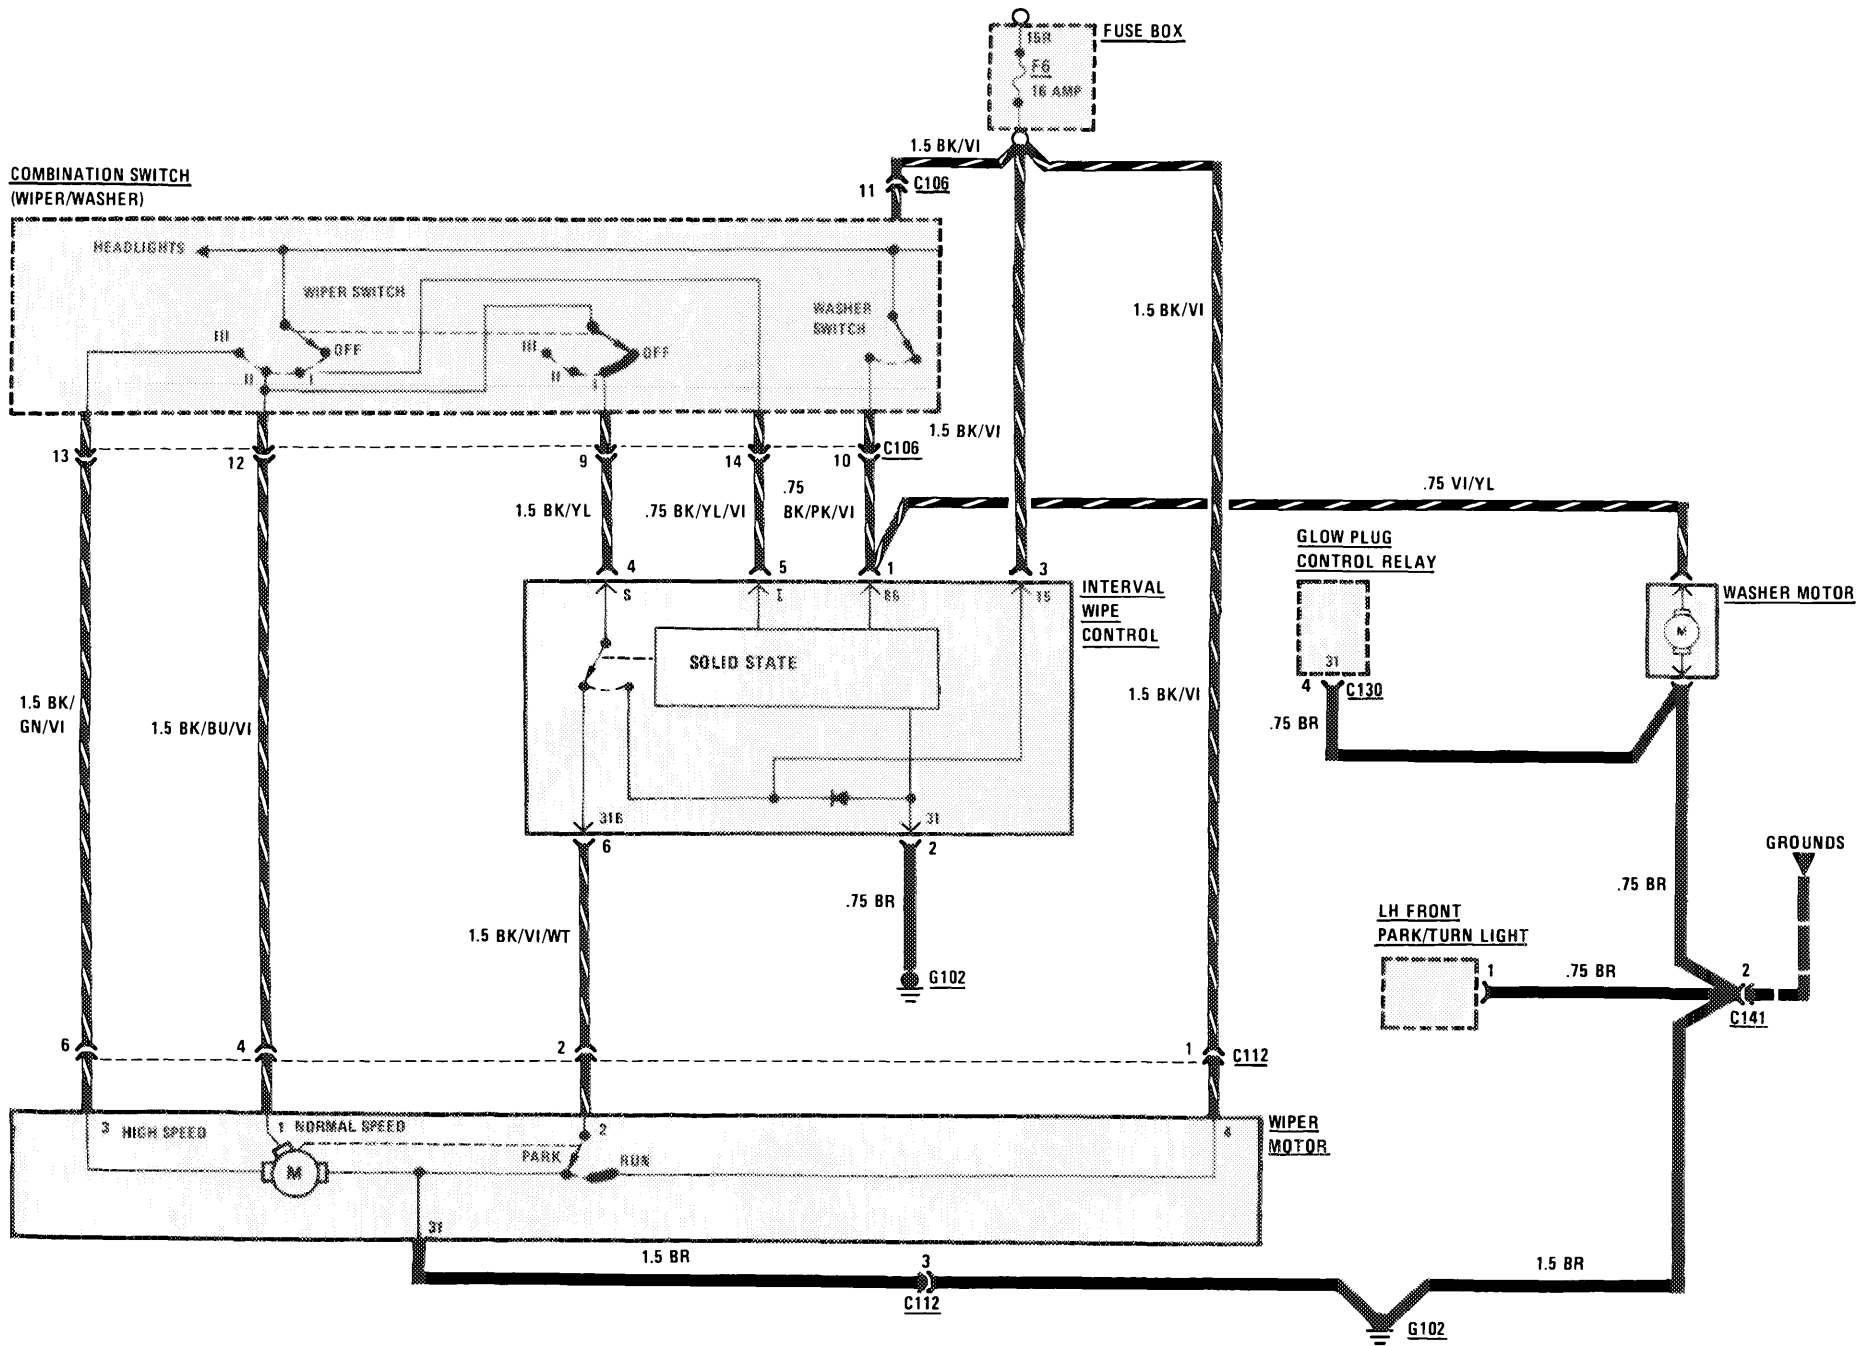

123
240
D


AIR CONDITIONING/HEATER

(For Component Locations See Page 201)

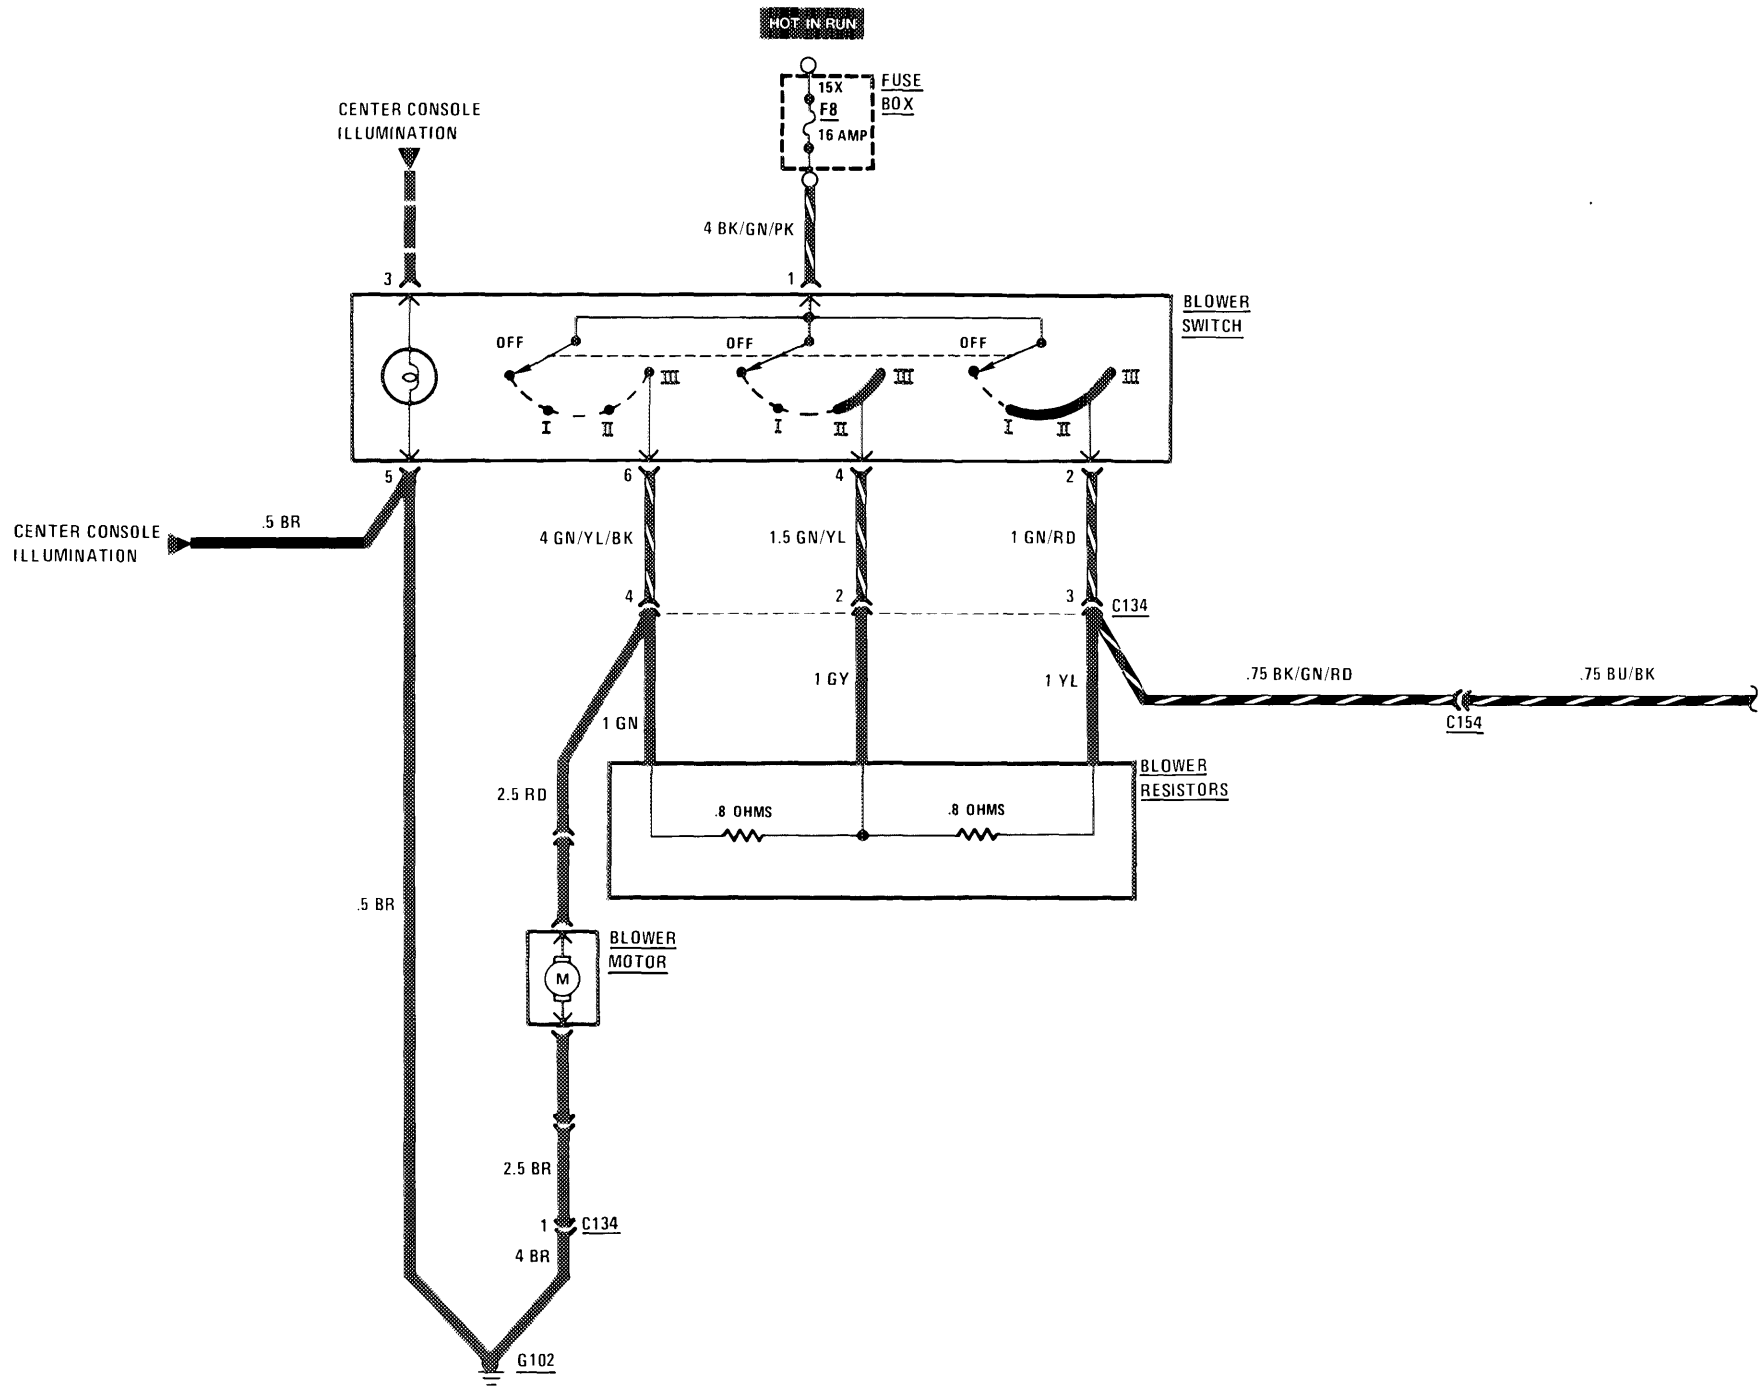

AIR CONDITIONING/HEATER/AUXILIARY FAN

(For Component Locations See Page 201)

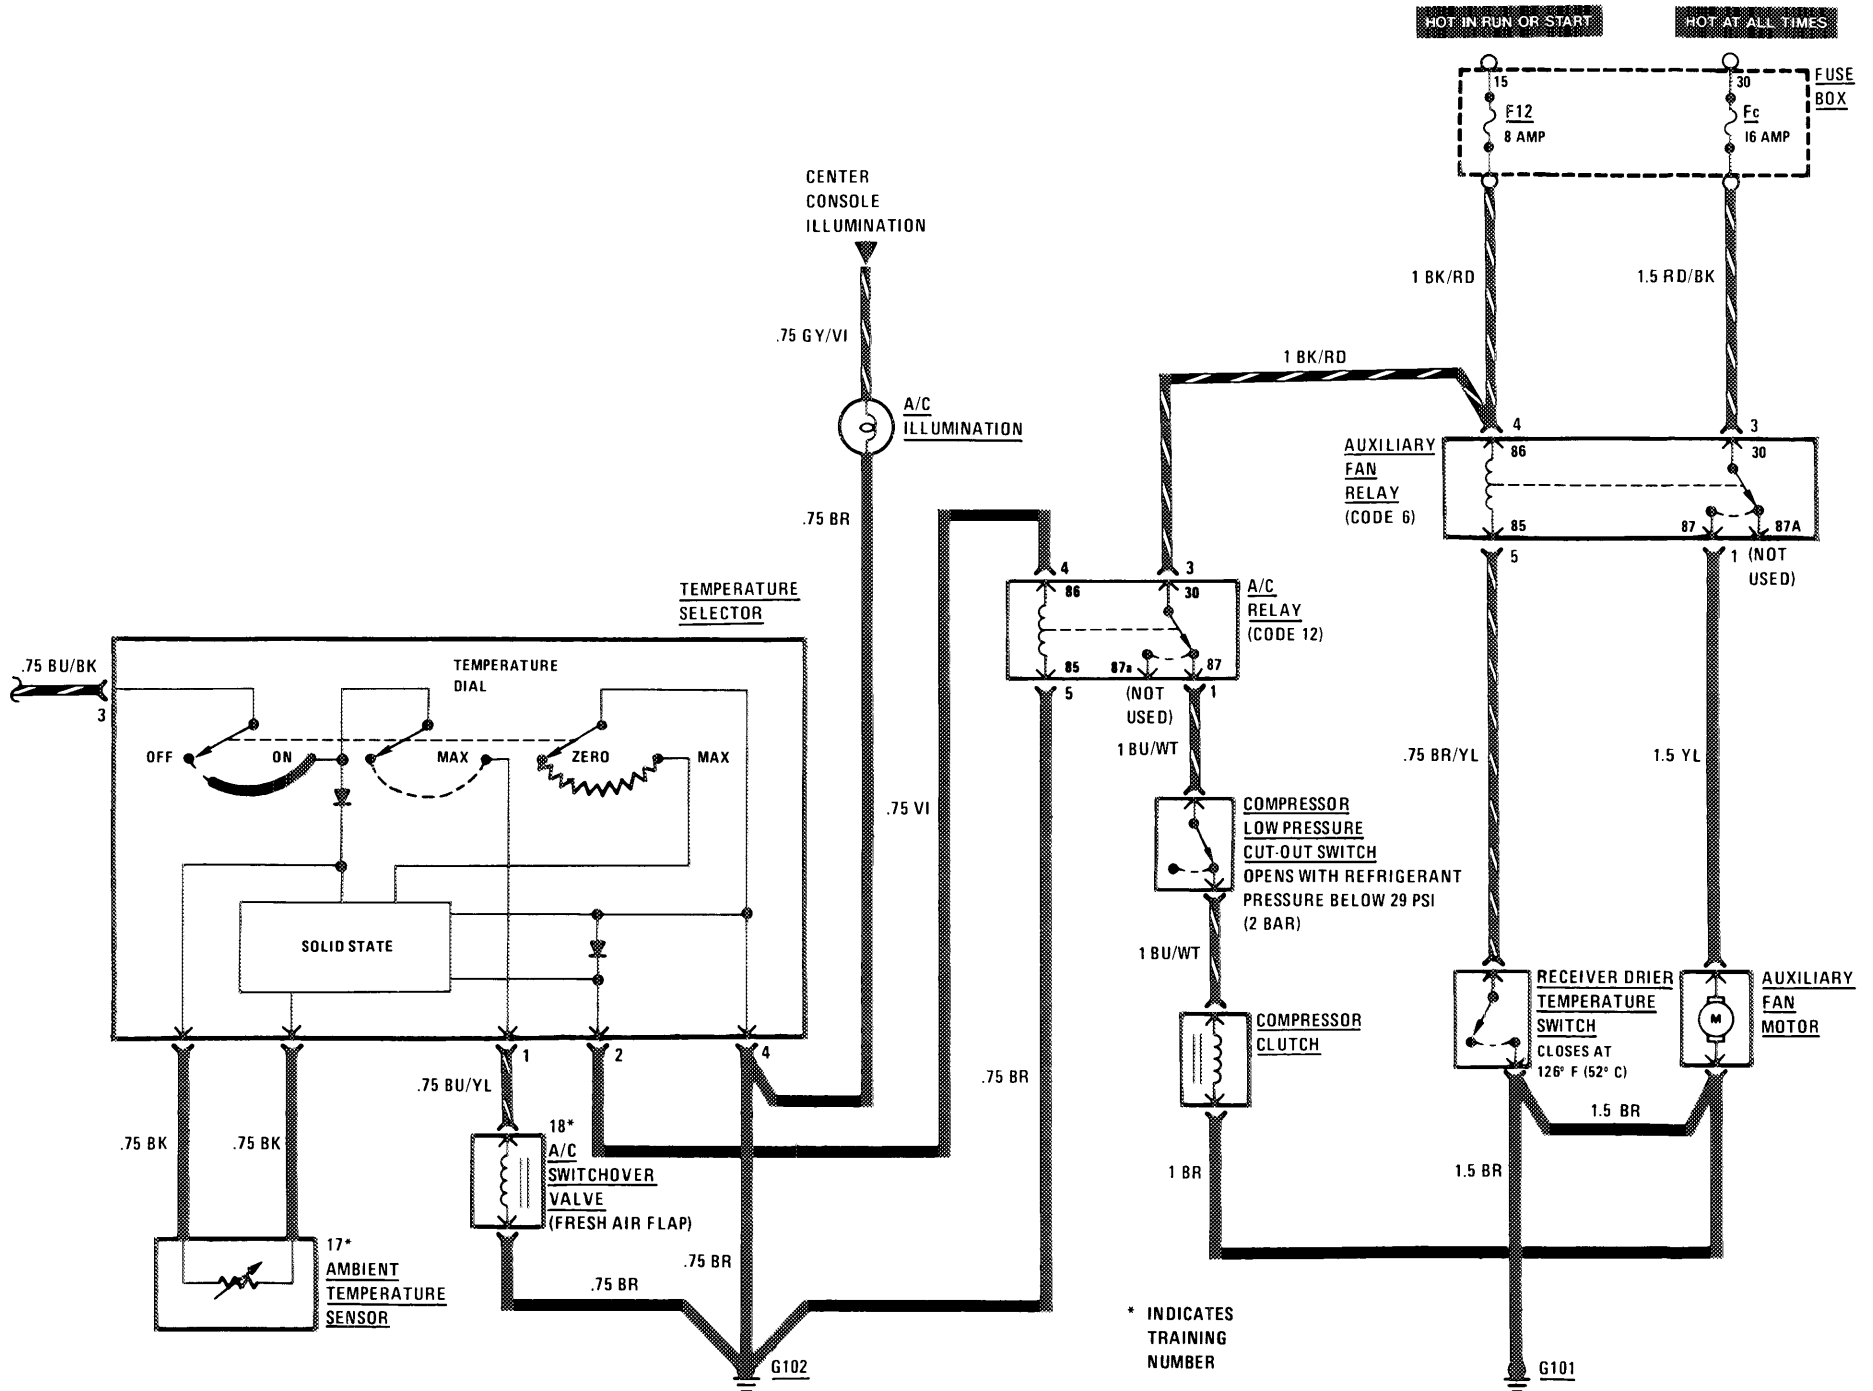


125
240
D

* INDICATES TRAINING NUMBER

REAR DEFOGGER


(For Component Locations See Page 204)

126
240
D

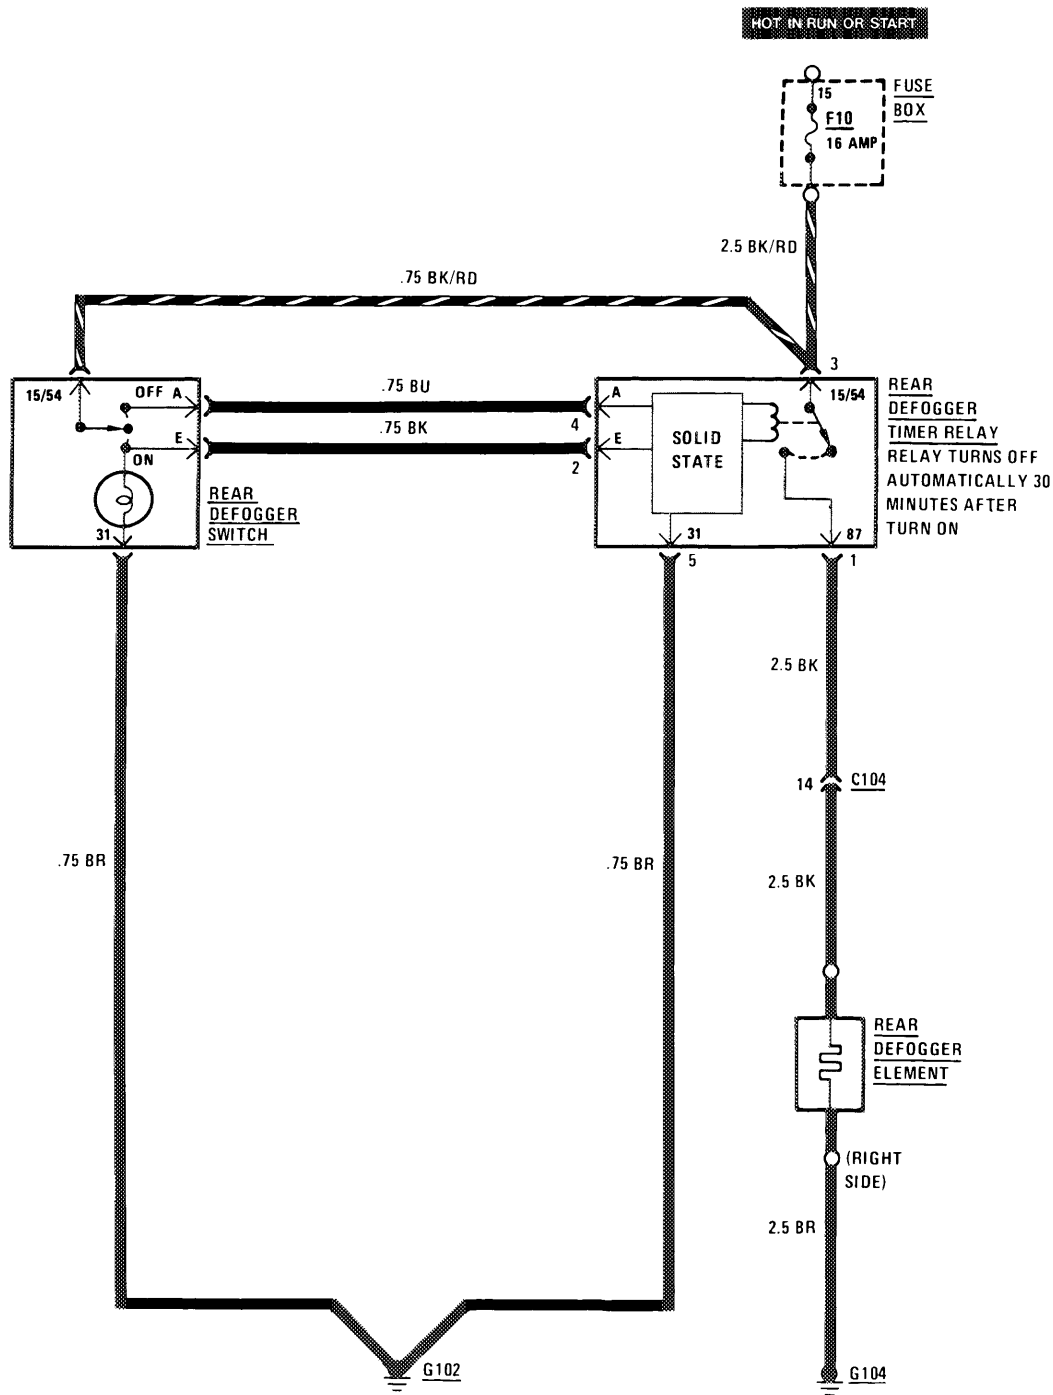


HORNS

(For Component Locations See Page 203)

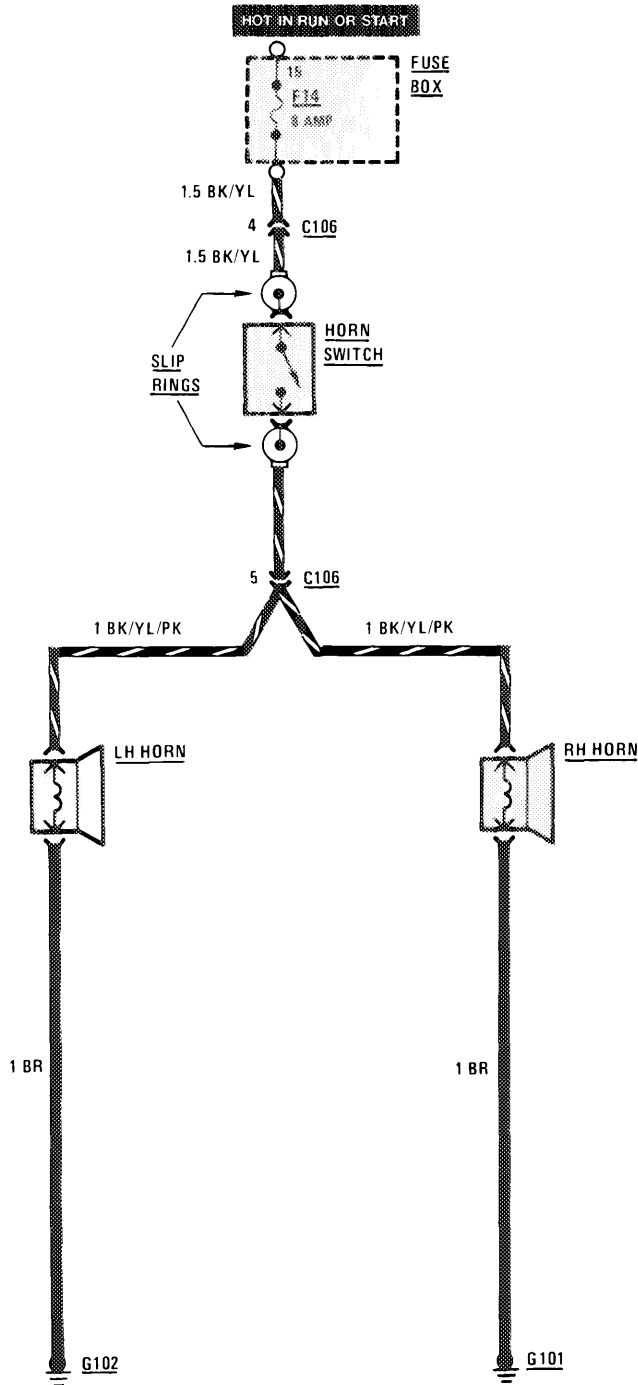


SLIDING ROOF

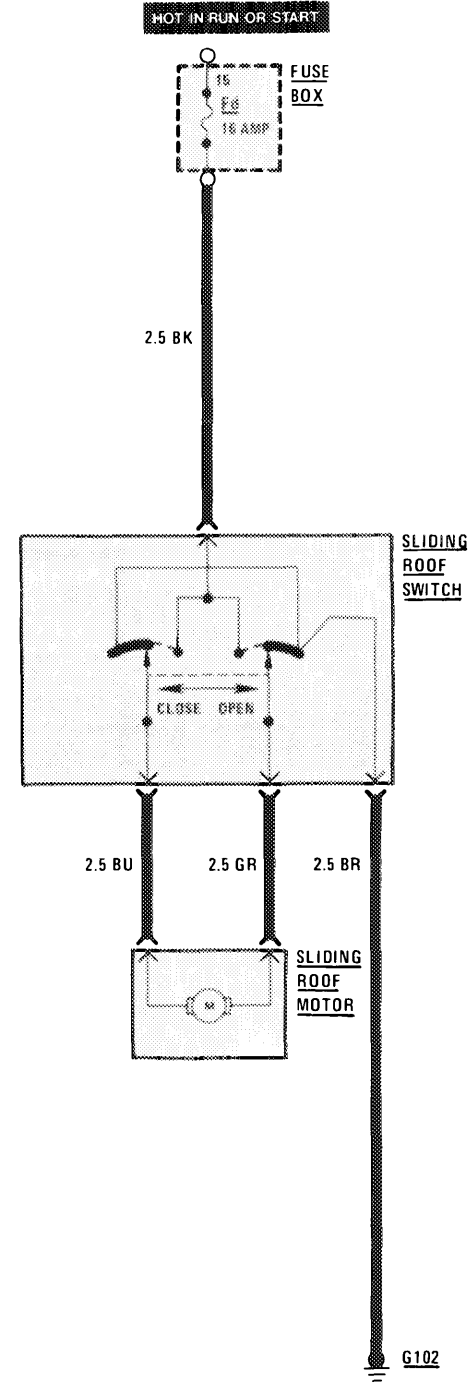

127
240
0

POWER WINDOWS

(For Component Locations See Page 204)

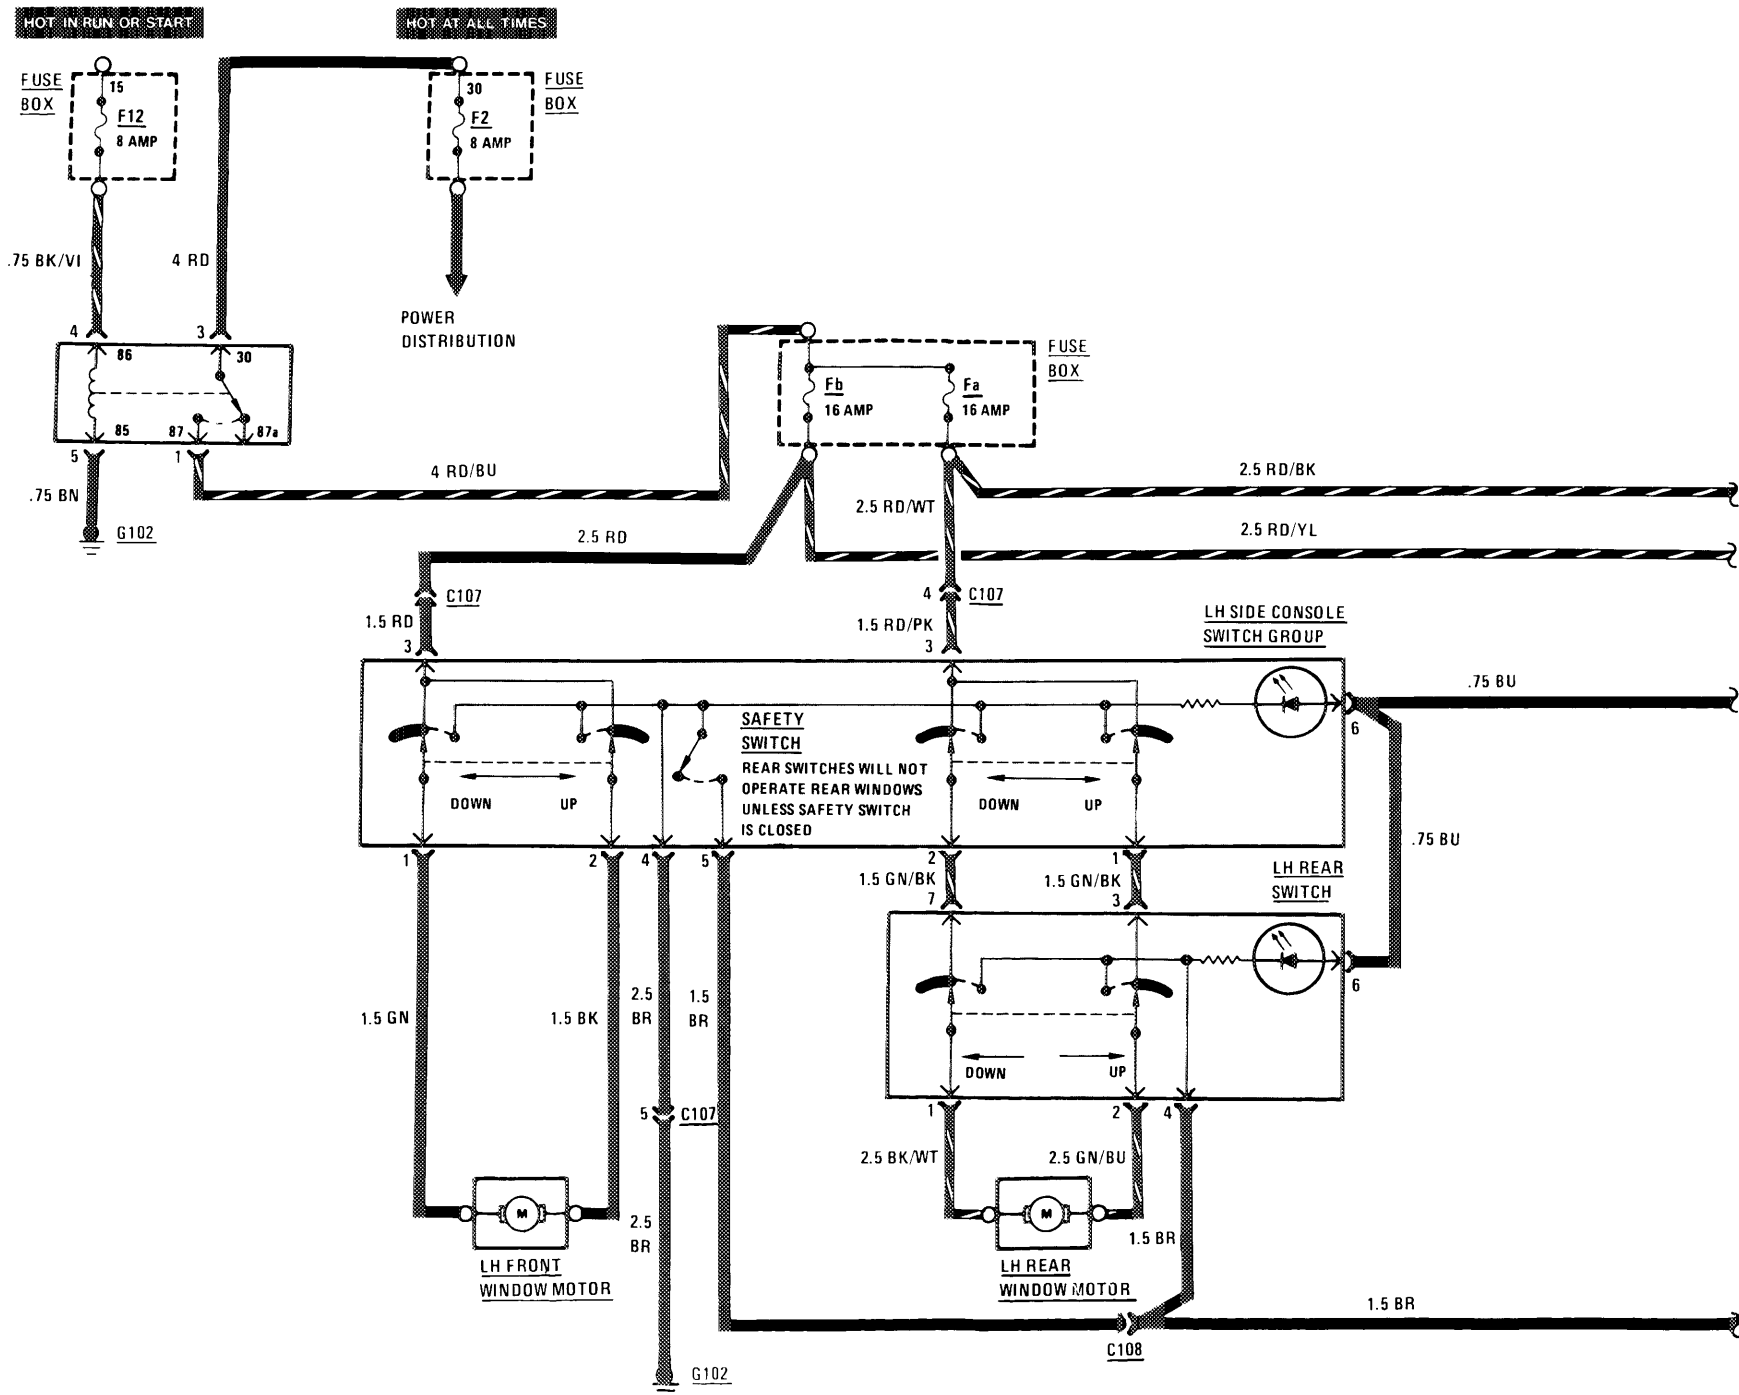


128
240
D

POWER WINDOWS

(For Component Locations See Page 204)


129
240
D

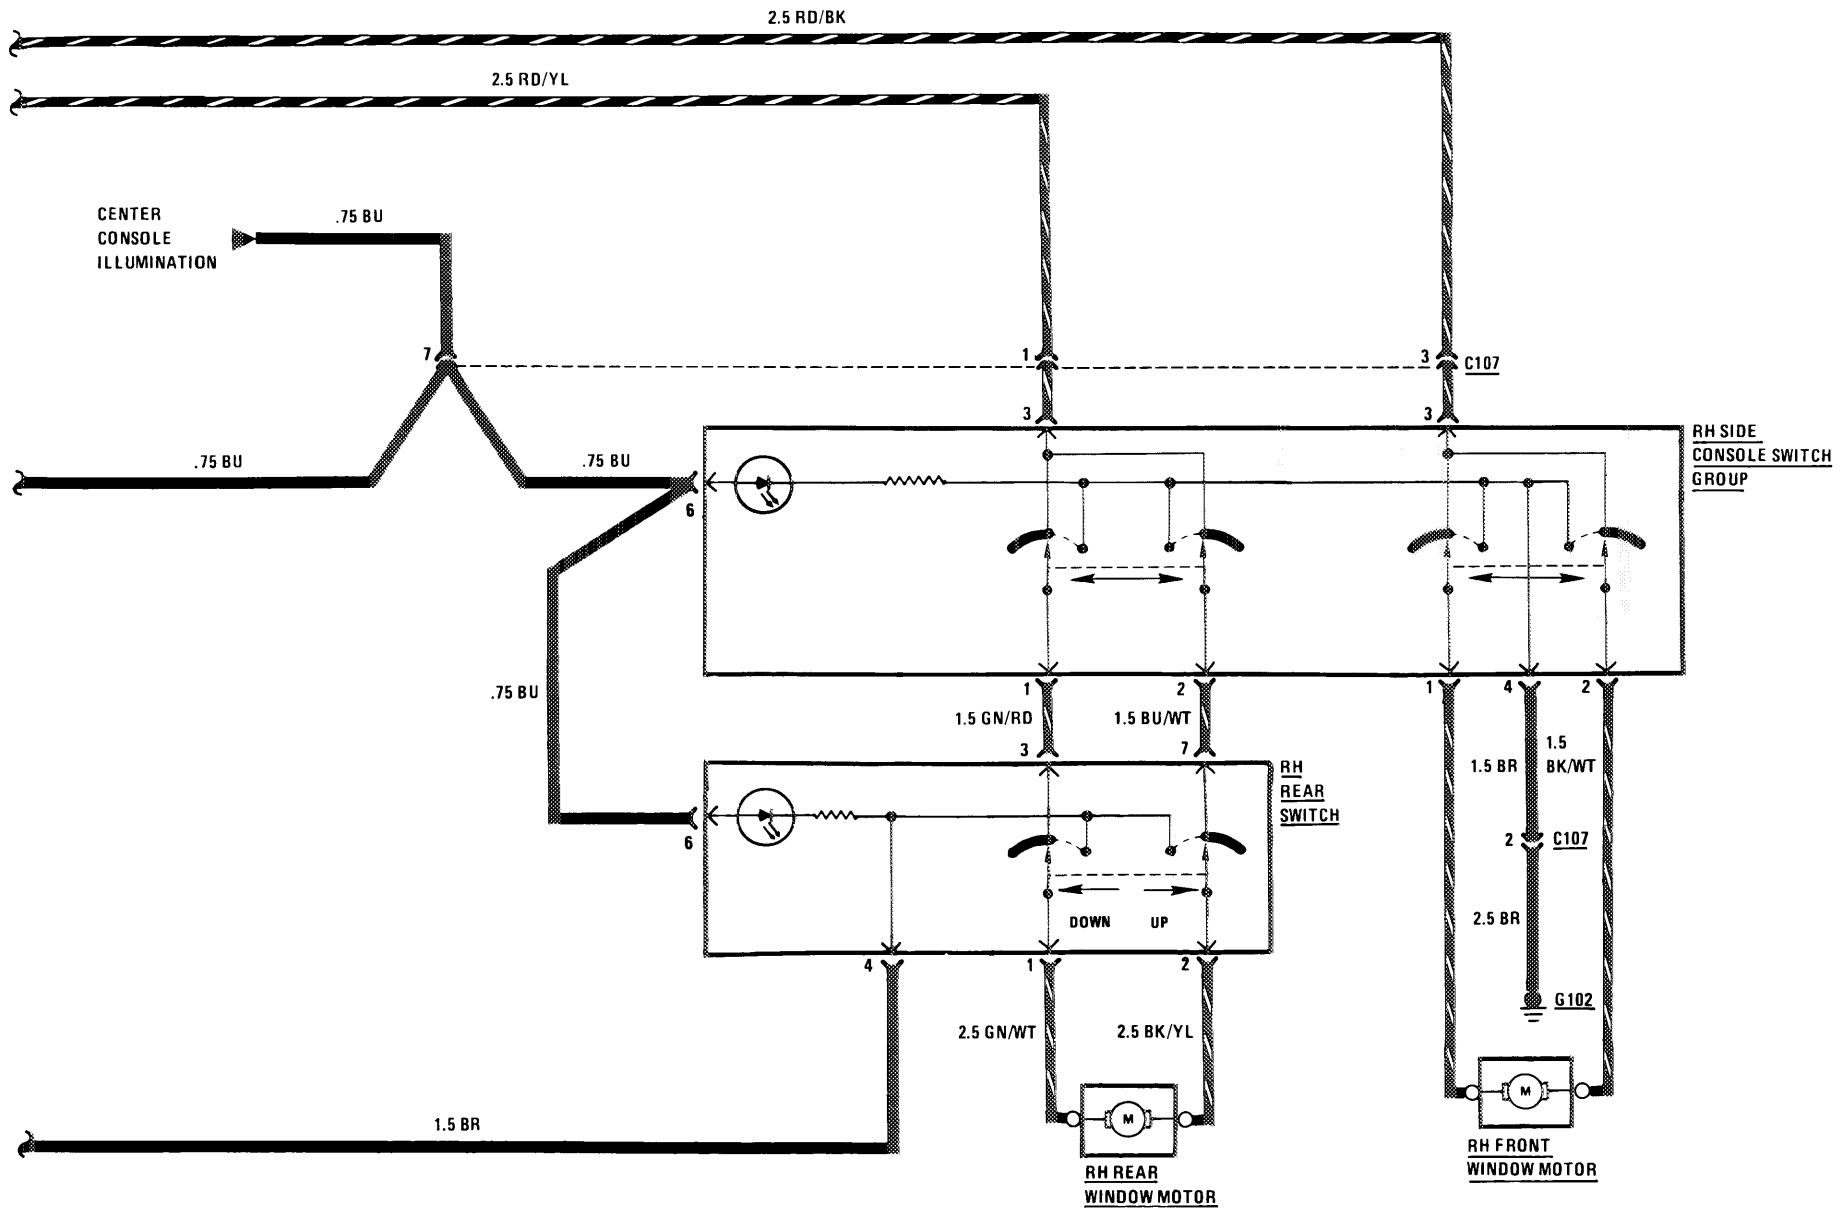

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA


(For Component Locations See Page 202)

130
240
D

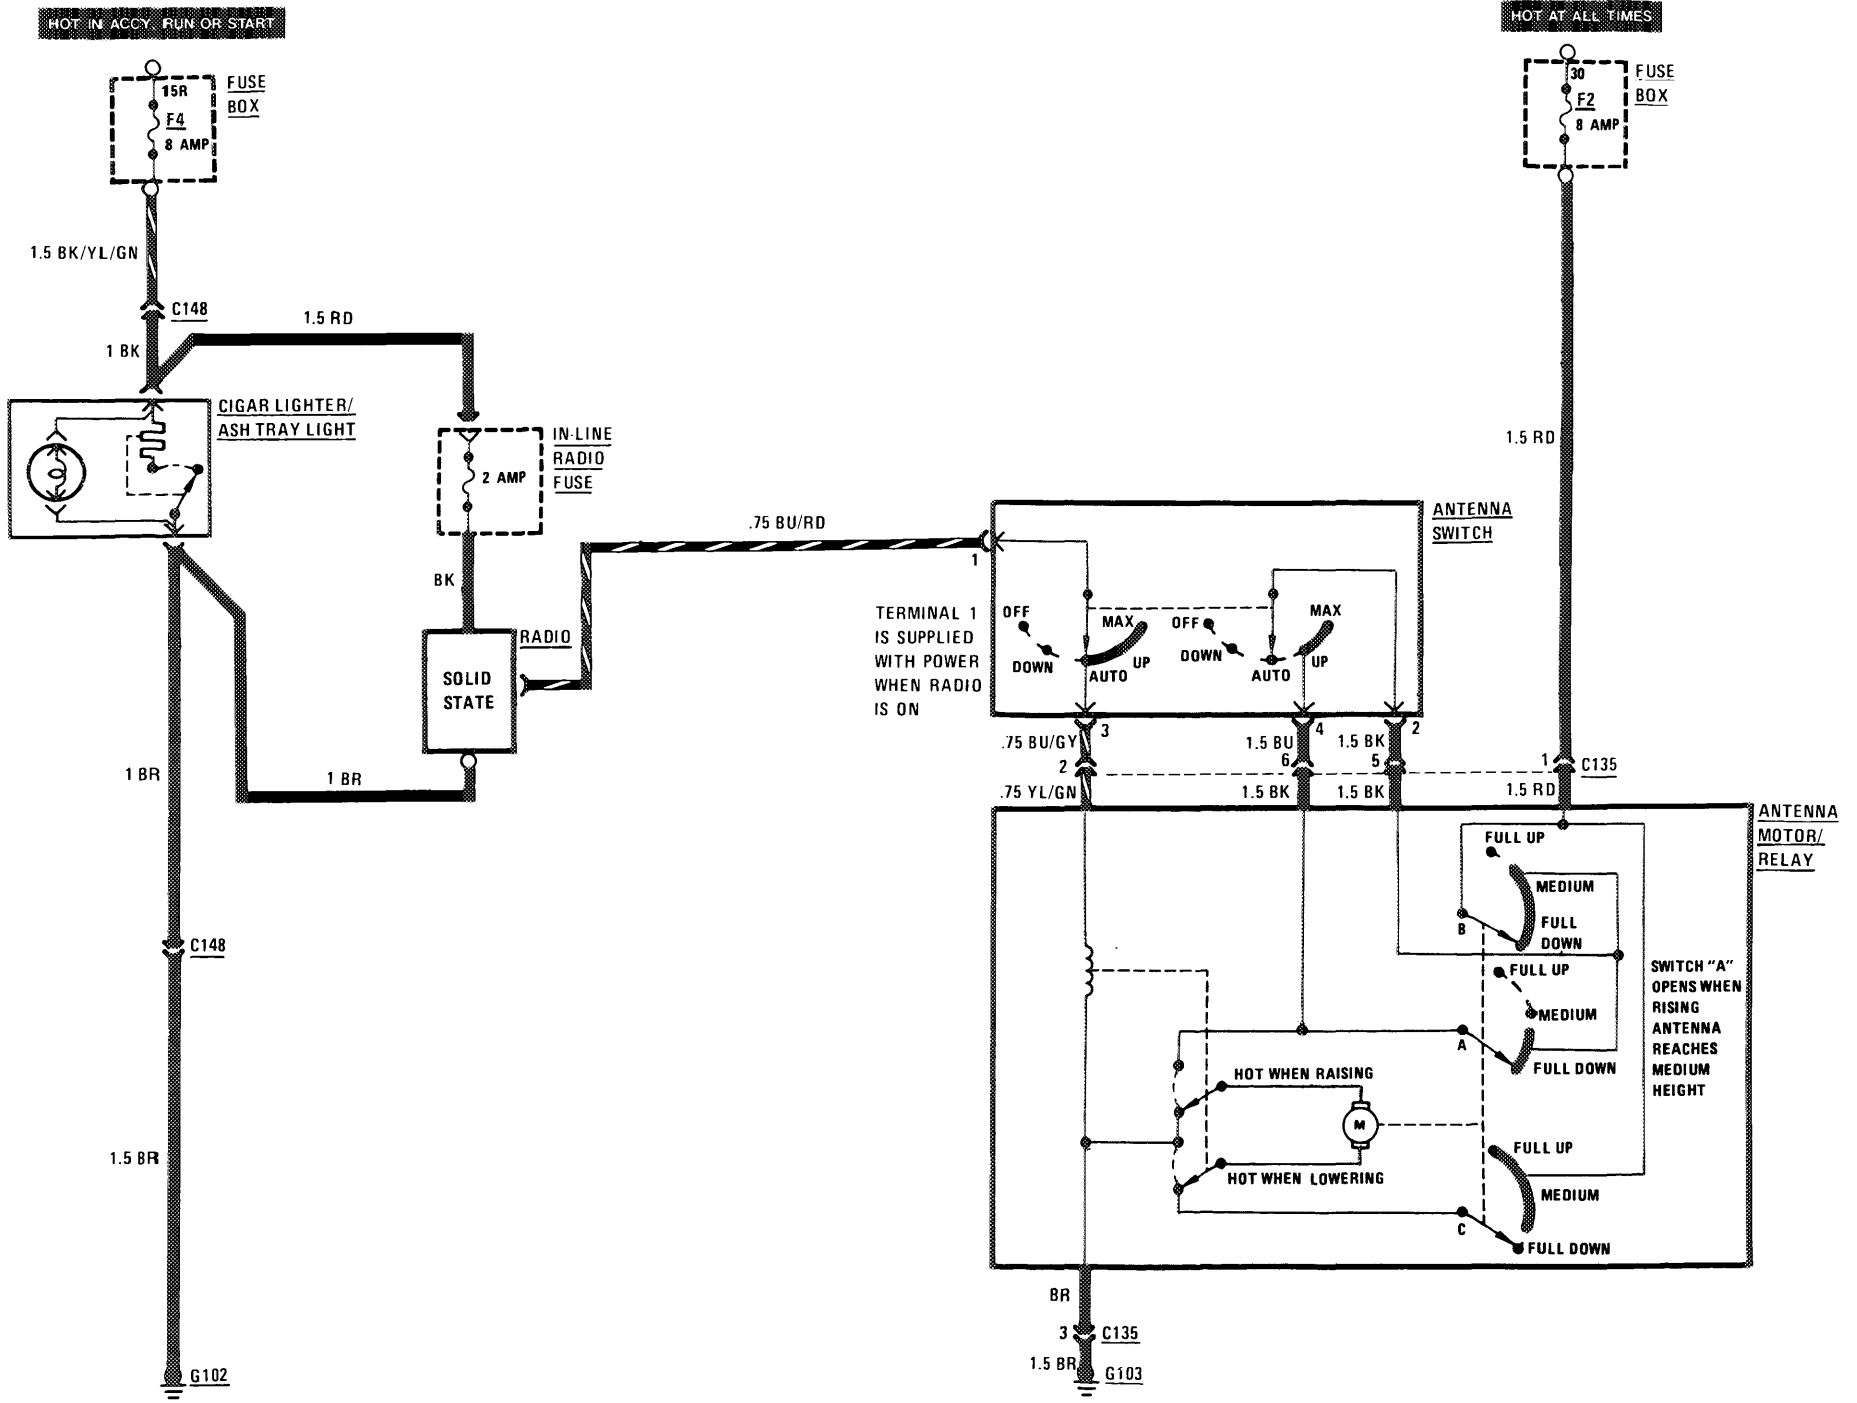

HEATED SEATS



(For Component Locations See Page 203)

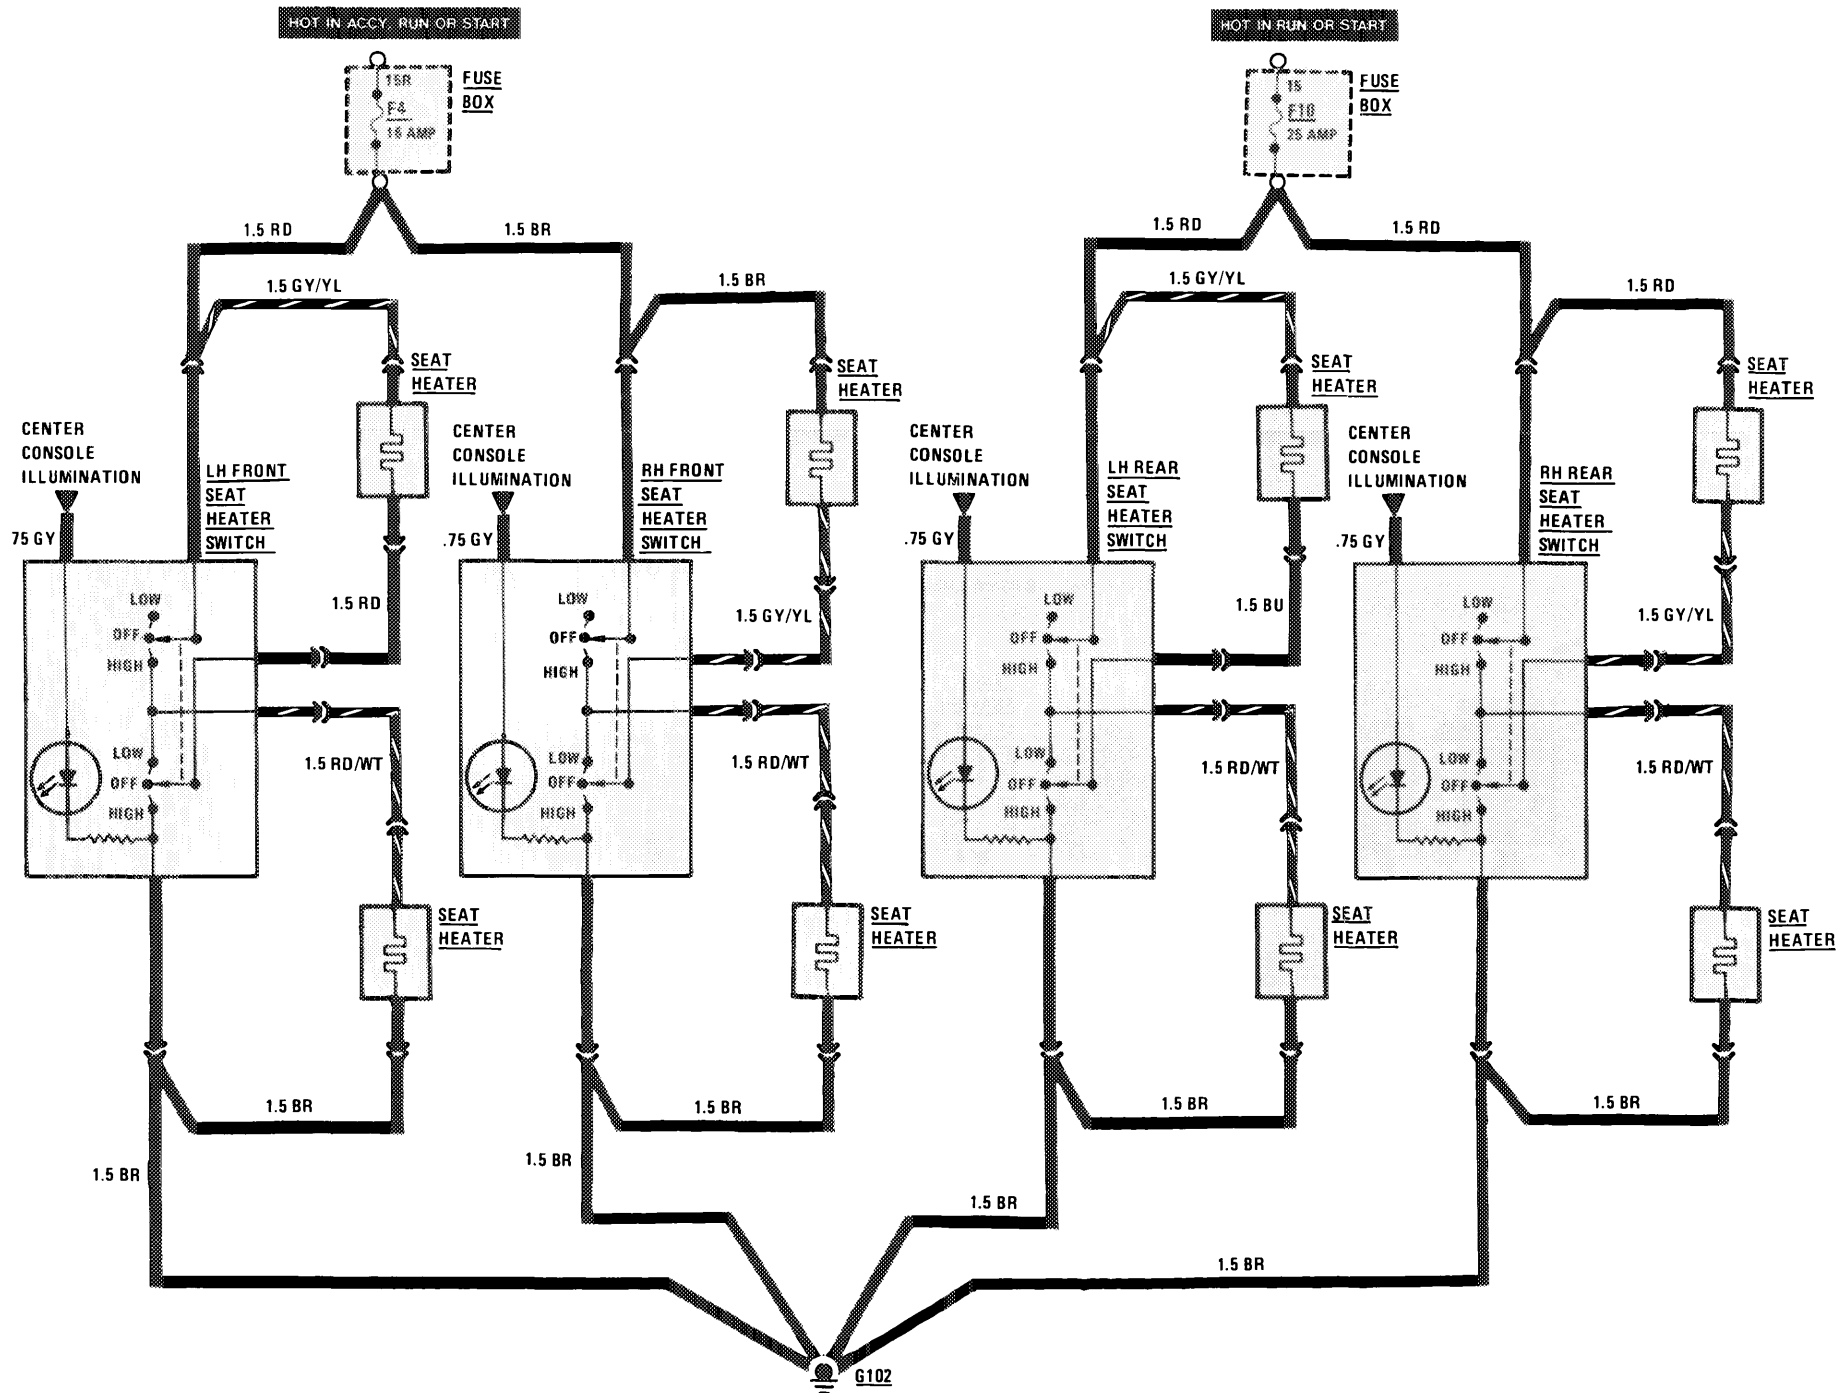


131
240
D

GROUND DISTRIBUTION

132
240
0

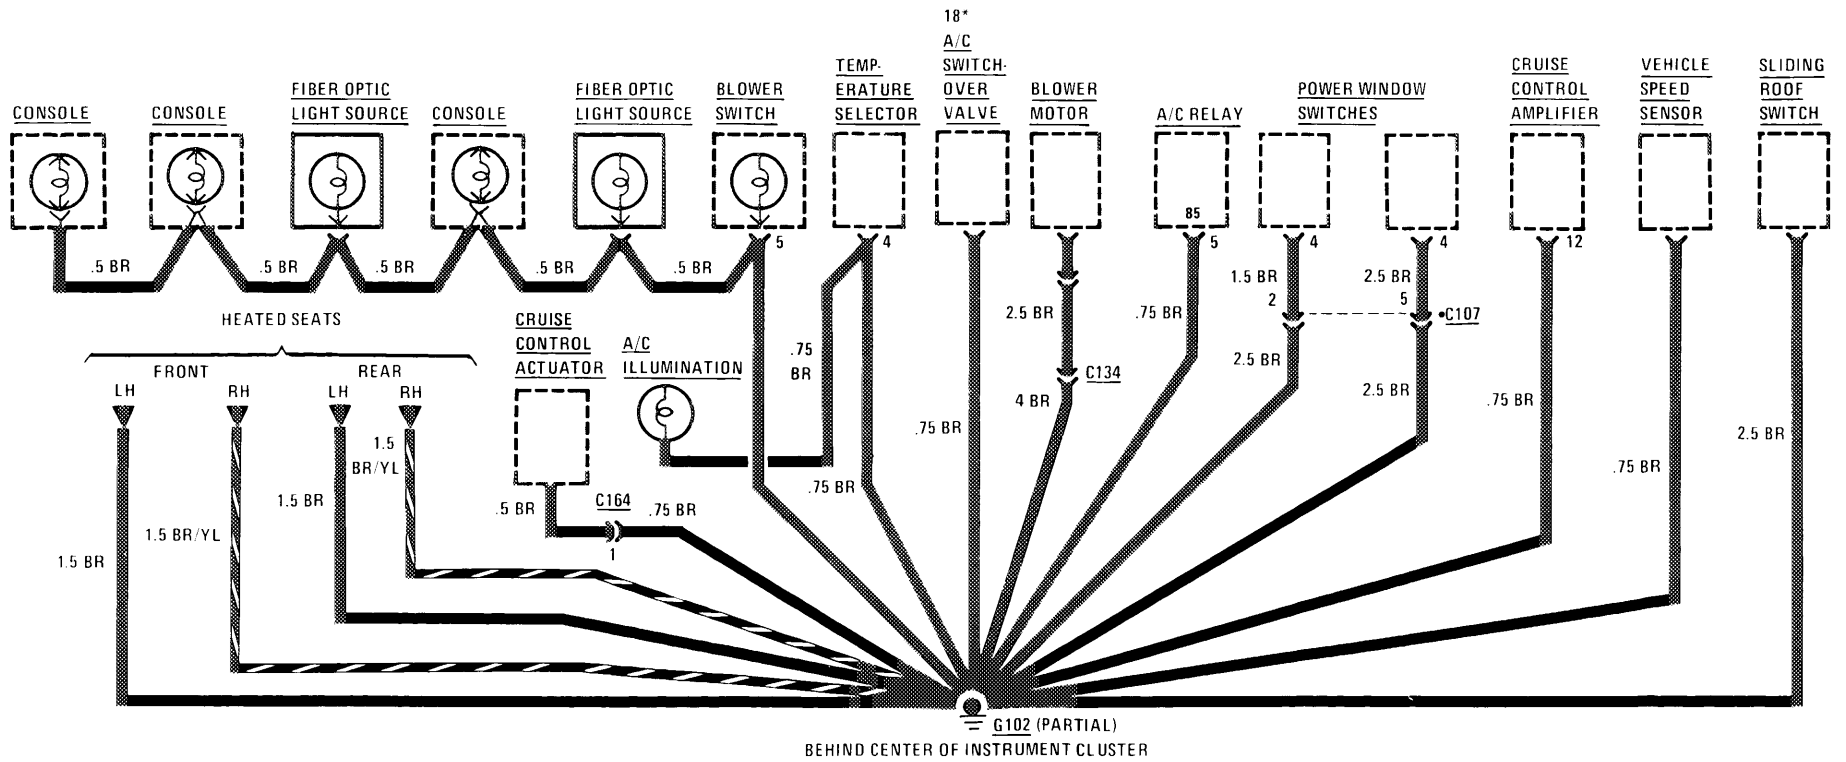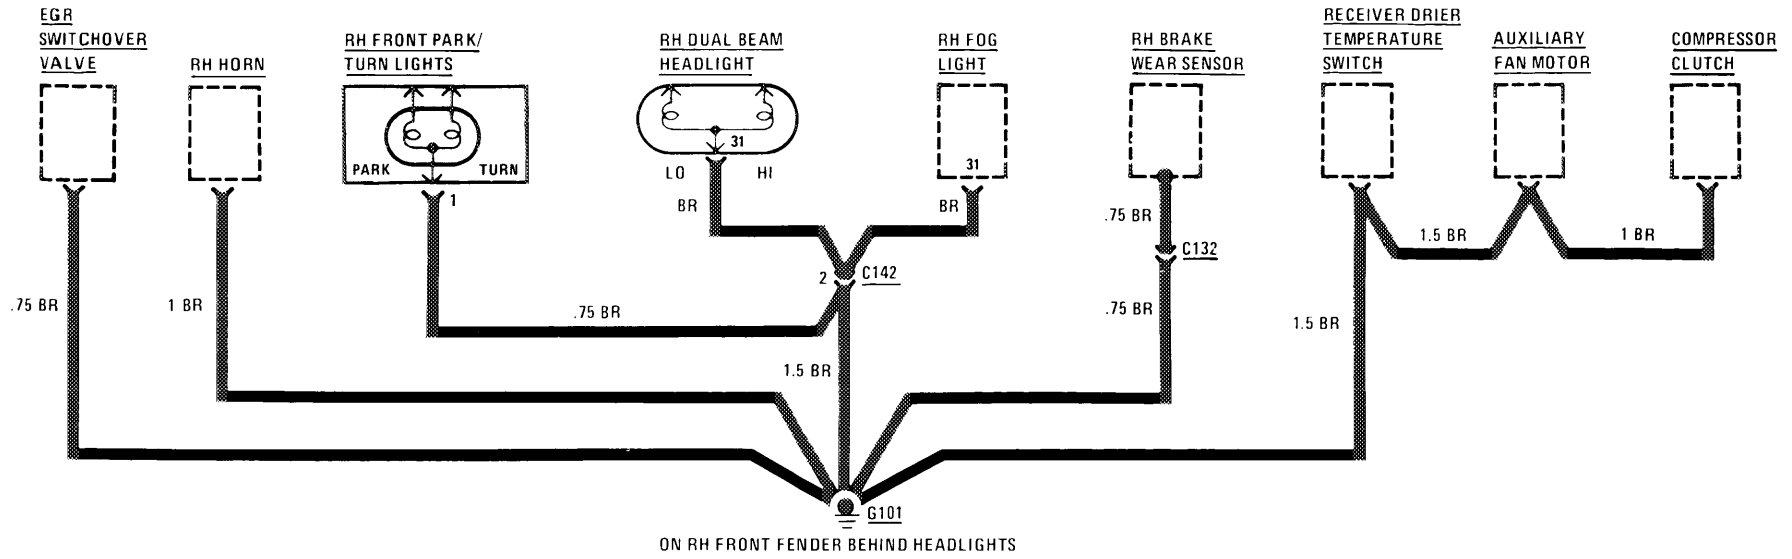


GROUND DISTRIBUTION

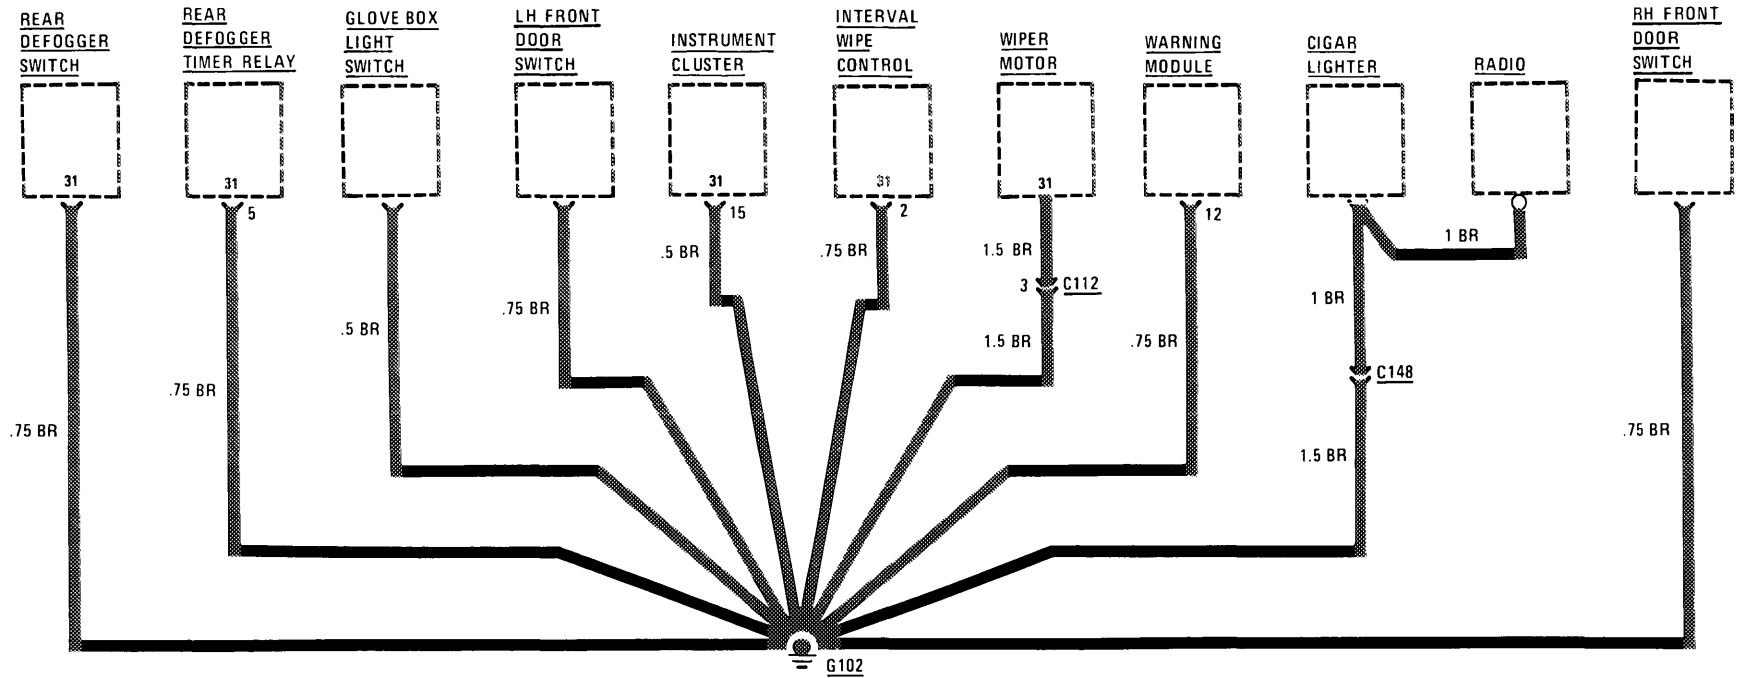

133
240
D


G102
BEHIND CENTER OF INSTRUMENT CLUSTER

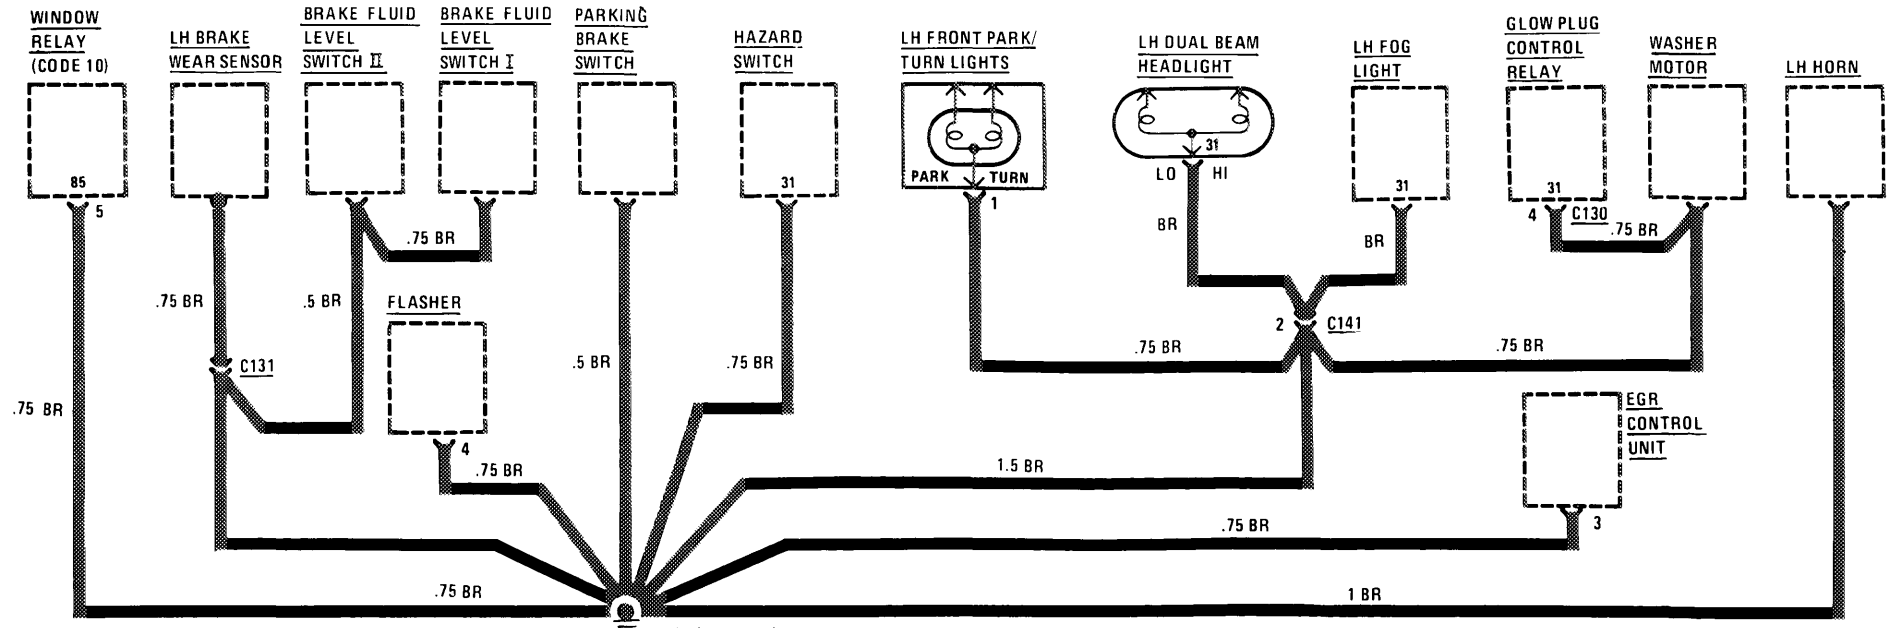


G102 (PARTIAL)
BEHIND CENTER OF INSTRUMENT CLUSTER

GROUND DISTRIBUTION

134
240
D

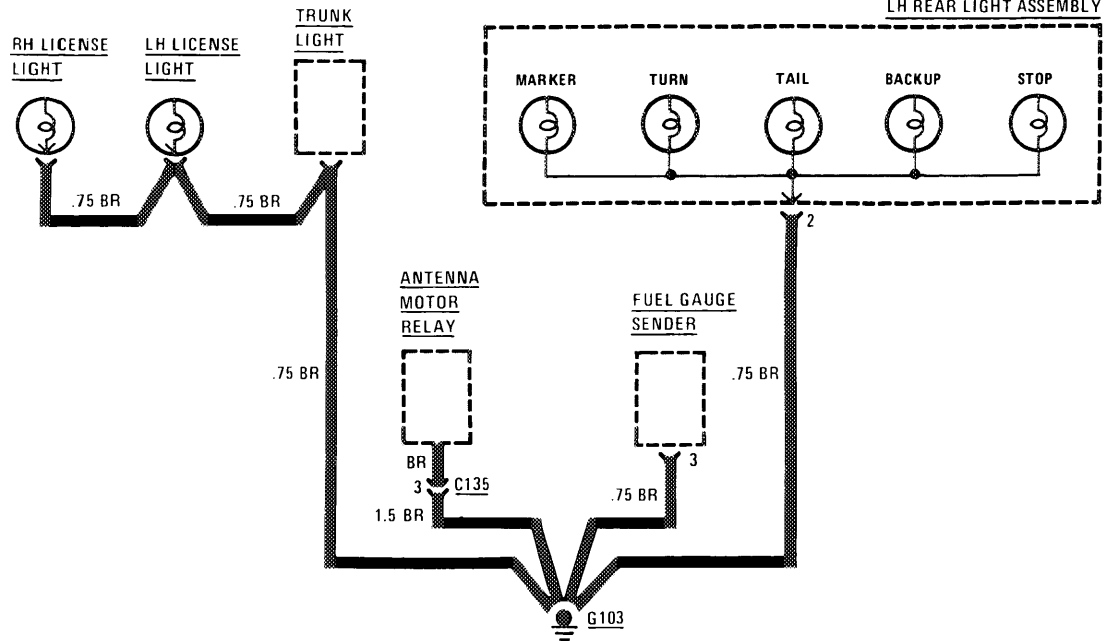

AT REAR OF LH REAR WHEEL WELL

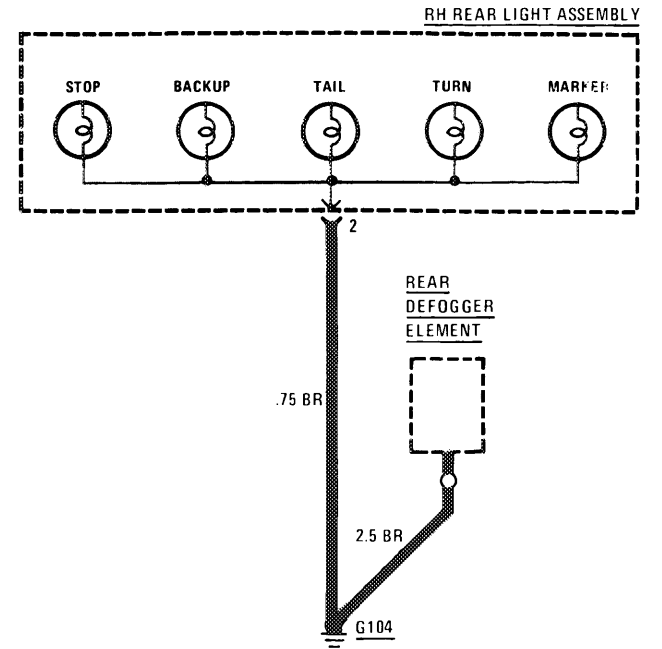

IN FRONT OF RH REAR LIGHT ASSEMBLY