

INDEX

MODEL	SALES DESIGNATION
123.133	300 D (Turbo)
123.153	300 CD (Turbo)
123.193	300 TD (Turbo)

CIRCUIT	PAGE	CIRCUIT	PAGE
Anti Theft Alarm System	137	Lights (continued)	
Automatic Antenna	115	—License	112, 114
Automatic Climate Control	119	—Marker	114
Auxiliary Fan	127	—Park	112
Charging System	108	—Stop	111
Cigar Lighter	115	—Tail	112
Clock	121	—Trunk	114
Cruise Control	111	—Turn Signal	116
Diagnostic Connector	120	Power Distribution	104
Engine Overload Protection	109	Power Windows	132
Exhaust Gas Recirculation	108/1	Pre-Glow System	106
Fuse Information	102	Radio	115
Gauges	120	Rear Defogger	130
Ground Distribution	141	Rear Wiper/Washer	129
Heated Seats	134	RH Outside Mirror	136
Horns	126	Seat Backrest Locking	
Lights		System	135
—Backup	109	Sliding Roof	126
—Center Console	124	Start/Stop (Ignition Switch)	107
—Courtesy	122	Supplemental Restraint System (SRS)	145
—Fog Lights	110	Transmission Kickdown	109
—Glove Box	109	Warning Indicators	120
—Hazard	116	Warning System	118
—Headlights	110	Wiper/Washer	128
—Instrument Cluster	121, 124		


FUSE-CIRCUIT LIST

Fuse		Circuits Protected	Page
No.	Amps(color)		
1	8(WT)	Illumination: Instrument Cluster/ Center Console Lights: Marker/License Lights: Park/Tail (RH) Warning System	124 114 112 118
2	8(WT)	Anti Theft Alarm System Automatic Antenna Clock Courtesy Lights Lights: Hazard Radio Seat Backrest Locking System Trunk Light Warning System	137 115 121 122 116 115 135 114 118
3	8(WT)	Lights: Park/Tail (LH)	112
4	8(WT) *16(PK)	Radio Cigar Lighter Glove Box Light RH Outside Mirror *With Heated Seats (Front)	115 115 109 140 134
5		NOT USED	
6	16(PK)	Headlights (Flash) Rear Wiper/Washer (TD only) Wiper/Washer	110 129 128
7	8(WT)	Headlights (RH High Beam)	110
8	25(BU)	Automatic Climate Control	119

Fuse		Circuits Protected	Page
No.	Amps(color)		
9	8(WT)	Headlight (LH High Beam & Indicator)	110
10	16(PK)	Rear Defogger (D & CD Only) Rear Defogger (TD Only)	130 131
11	16(PK)	Headlights (RH Low Beam)/Fog Lights	110
12	8(WT)	Lights: Turn Signal Power Windows Stoplights/Cruise Control Warning Indicators/Gauges	116 132 111 120
13	8(WT)	Headlights (LH Low Beam)	110
14	8(WT)	Anti Theft Alarm System Automatic Climate Control Auxiliary Fan Backup Lights/Transmission Kickdown Engine Overload Protection Horns Warning System	137 119 127 109 126 118
a	16(PK)	Power Windows (RF/LR)	132
b	16(PK)	Power Windows (LF/RR)	132
c	16(PK)	Auxiliary Fan	127
d	16(PK)	Sliding Roof	126
In-Line	80	Pre-Glow System (Part of Glow Plug Control Relay)	106
Radio In-Line Fuse	2(GLASS)	Radio (Part of Europa Cassette Radio)	

REVISIONS:

FUSE BOX

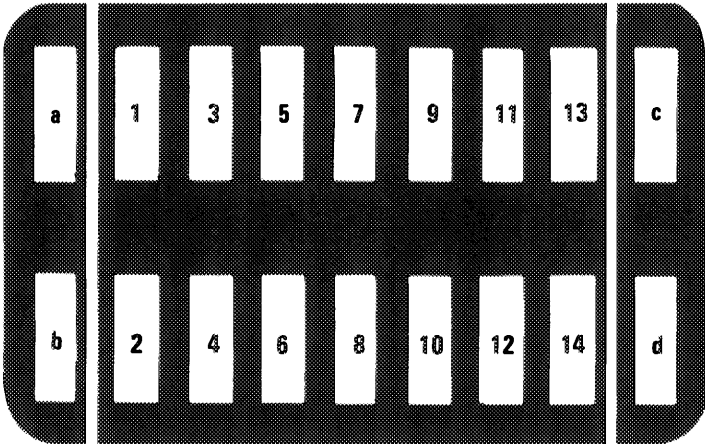

RELAY CODE	RELAY USE
6	Auxiliary Fan Relay
10	Window Relay

REVISIONS:

POWER DISTRIBUTION


(For Component Locations See Page 204)

MY 1983

104

123, 133, 153, 193

(CONTINUED ON PAGE 104/2)

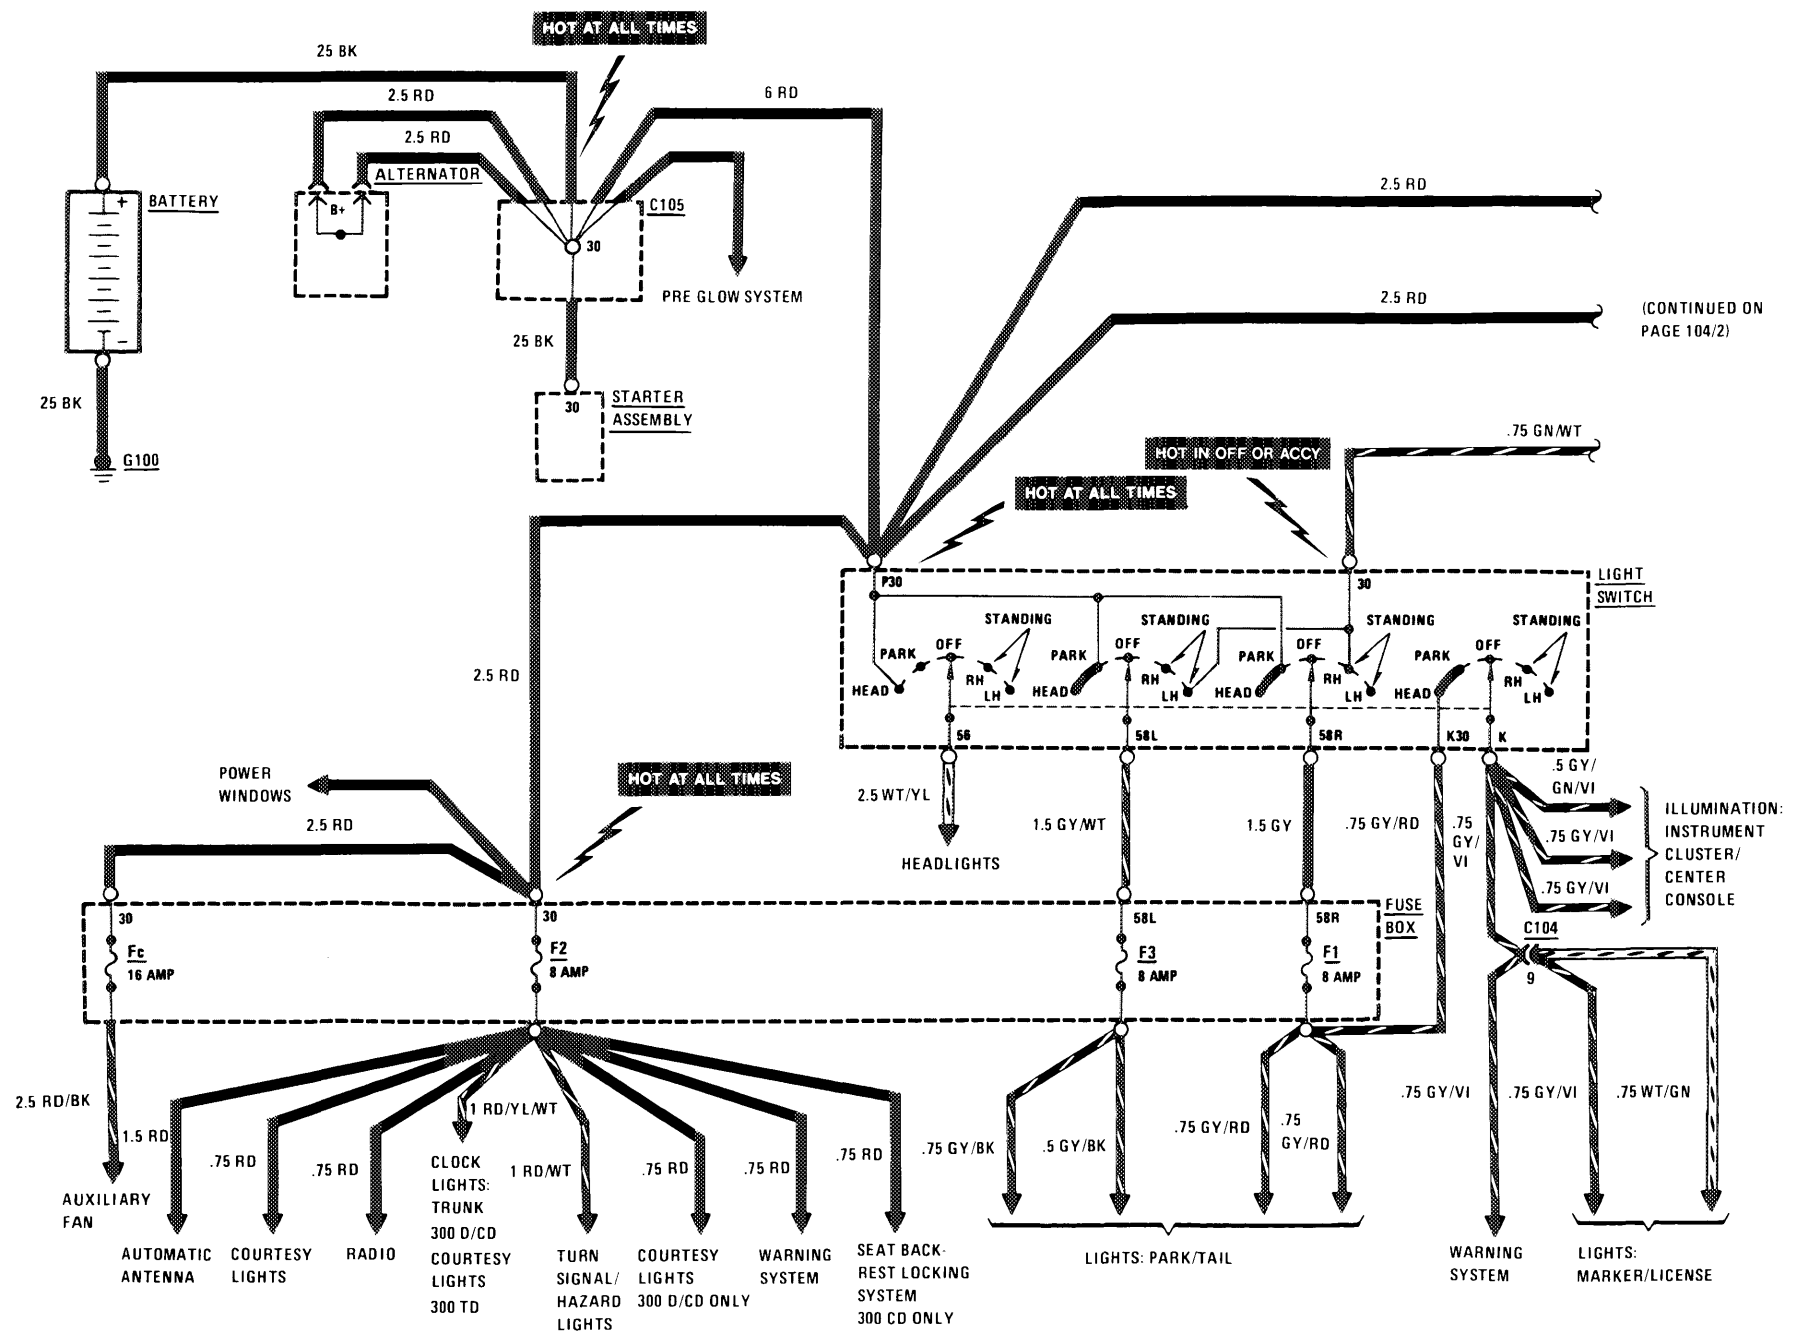

REVISIONS:


POWER DISTRIBUTION

(For Component Locations See Page 204)

AS OF MY 1985

3/85

123.133/.153/.193

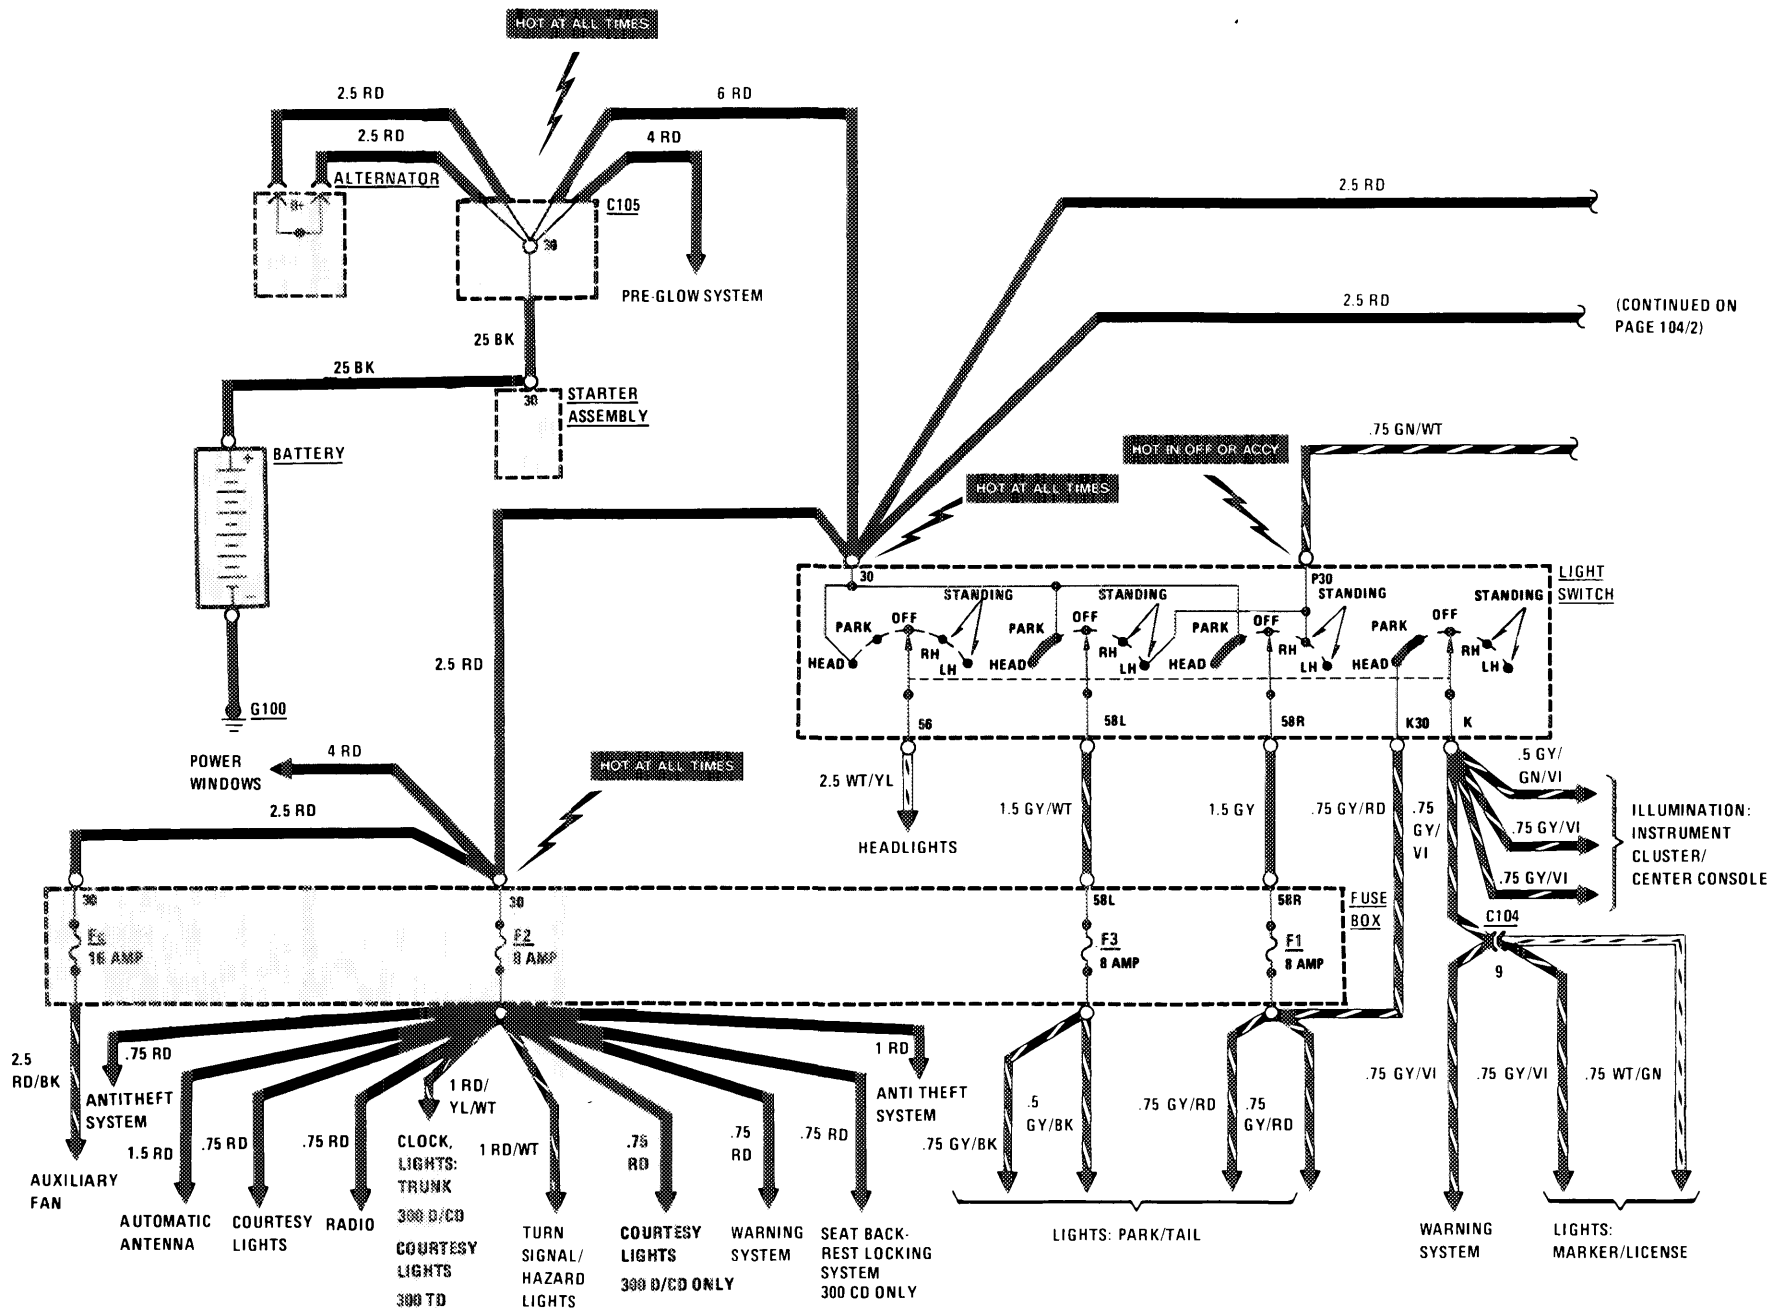

(CONTINUED ON PAGE 104/2)

REVISIONS:

104/1


POWER DISTRIBUTION

(For Component Locations See Page 204)

104/2

123.133/.153/.193

(CONTINUED FROM PAGE
104 AS OF 1983
104/1 AS OF 1985)

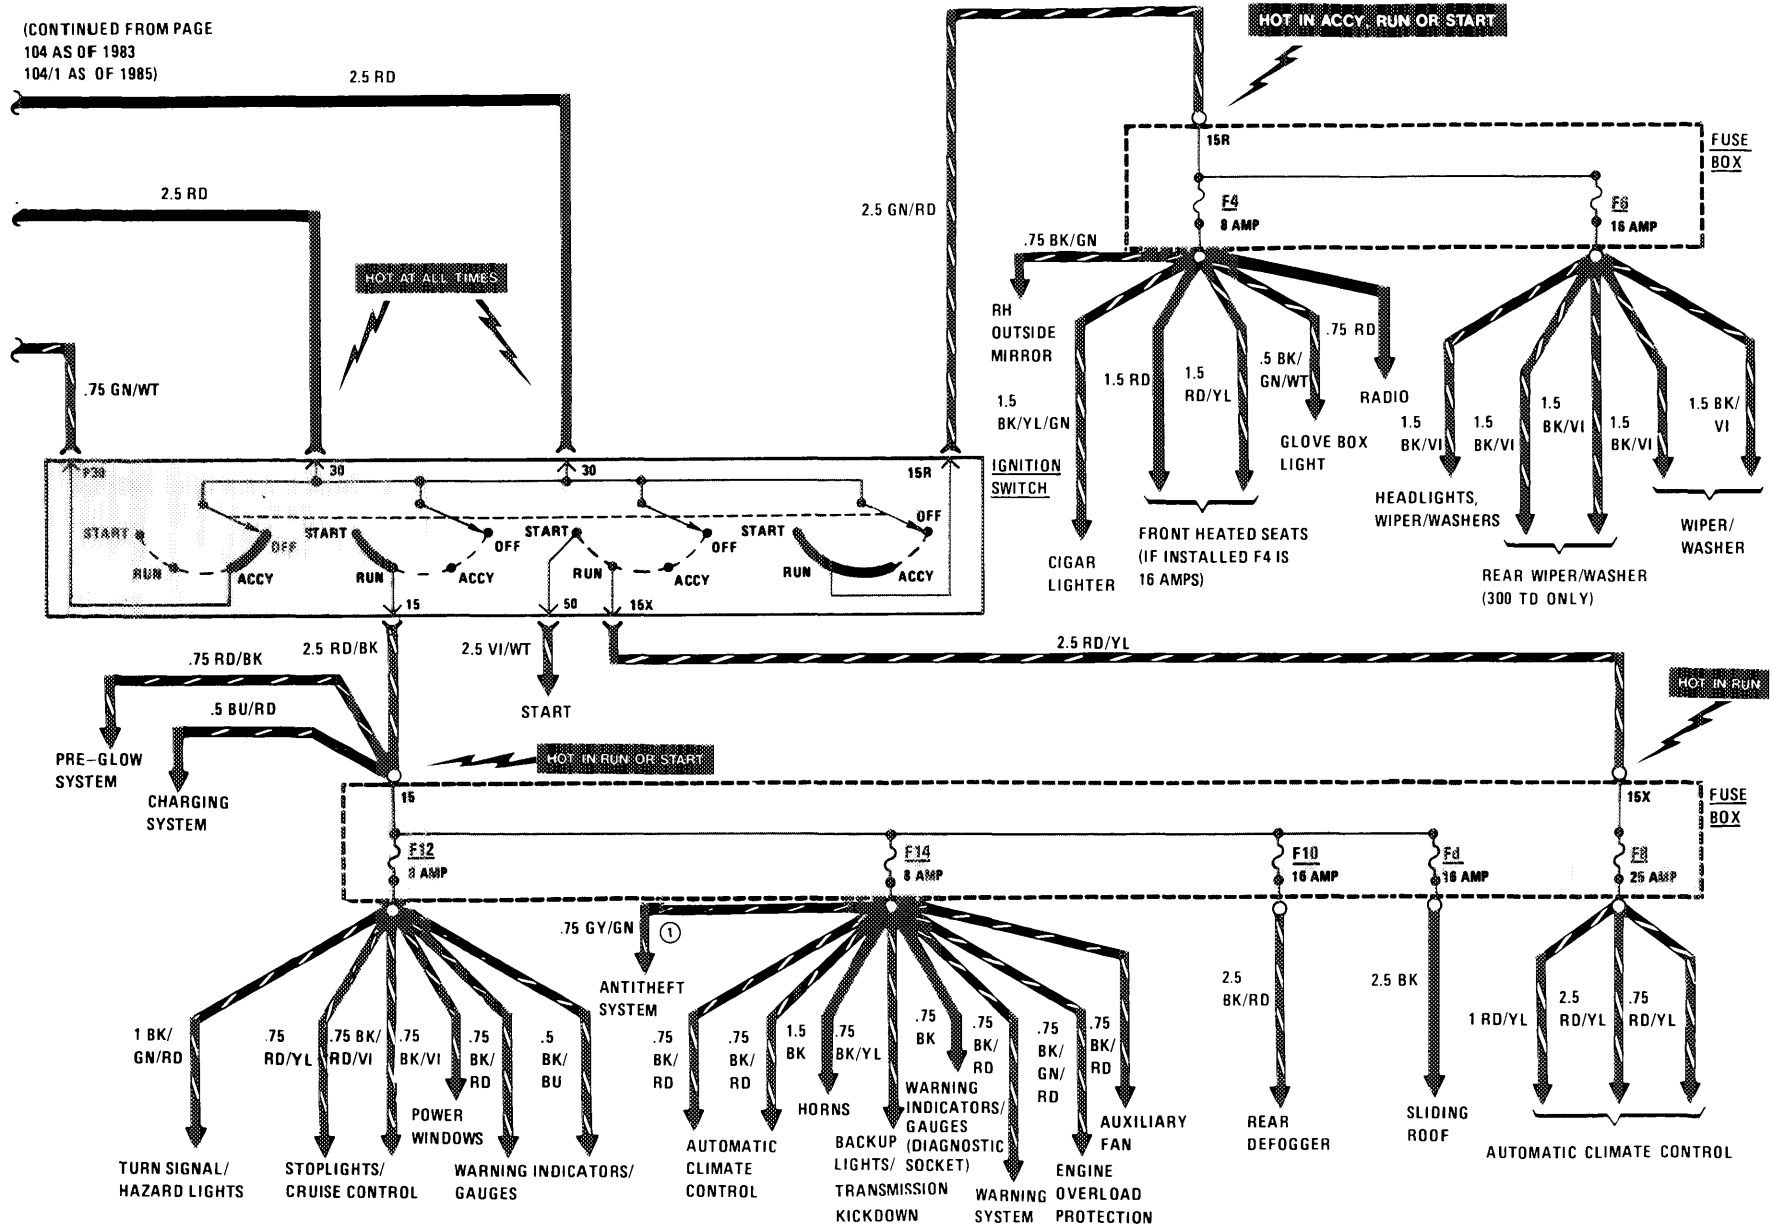

REVISIONS: ① AS OF MODEL YEAR 1985

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

PRE-GLOW SYSTEM

(For Component Locations See Page 205)

106

123.133/.153/.193

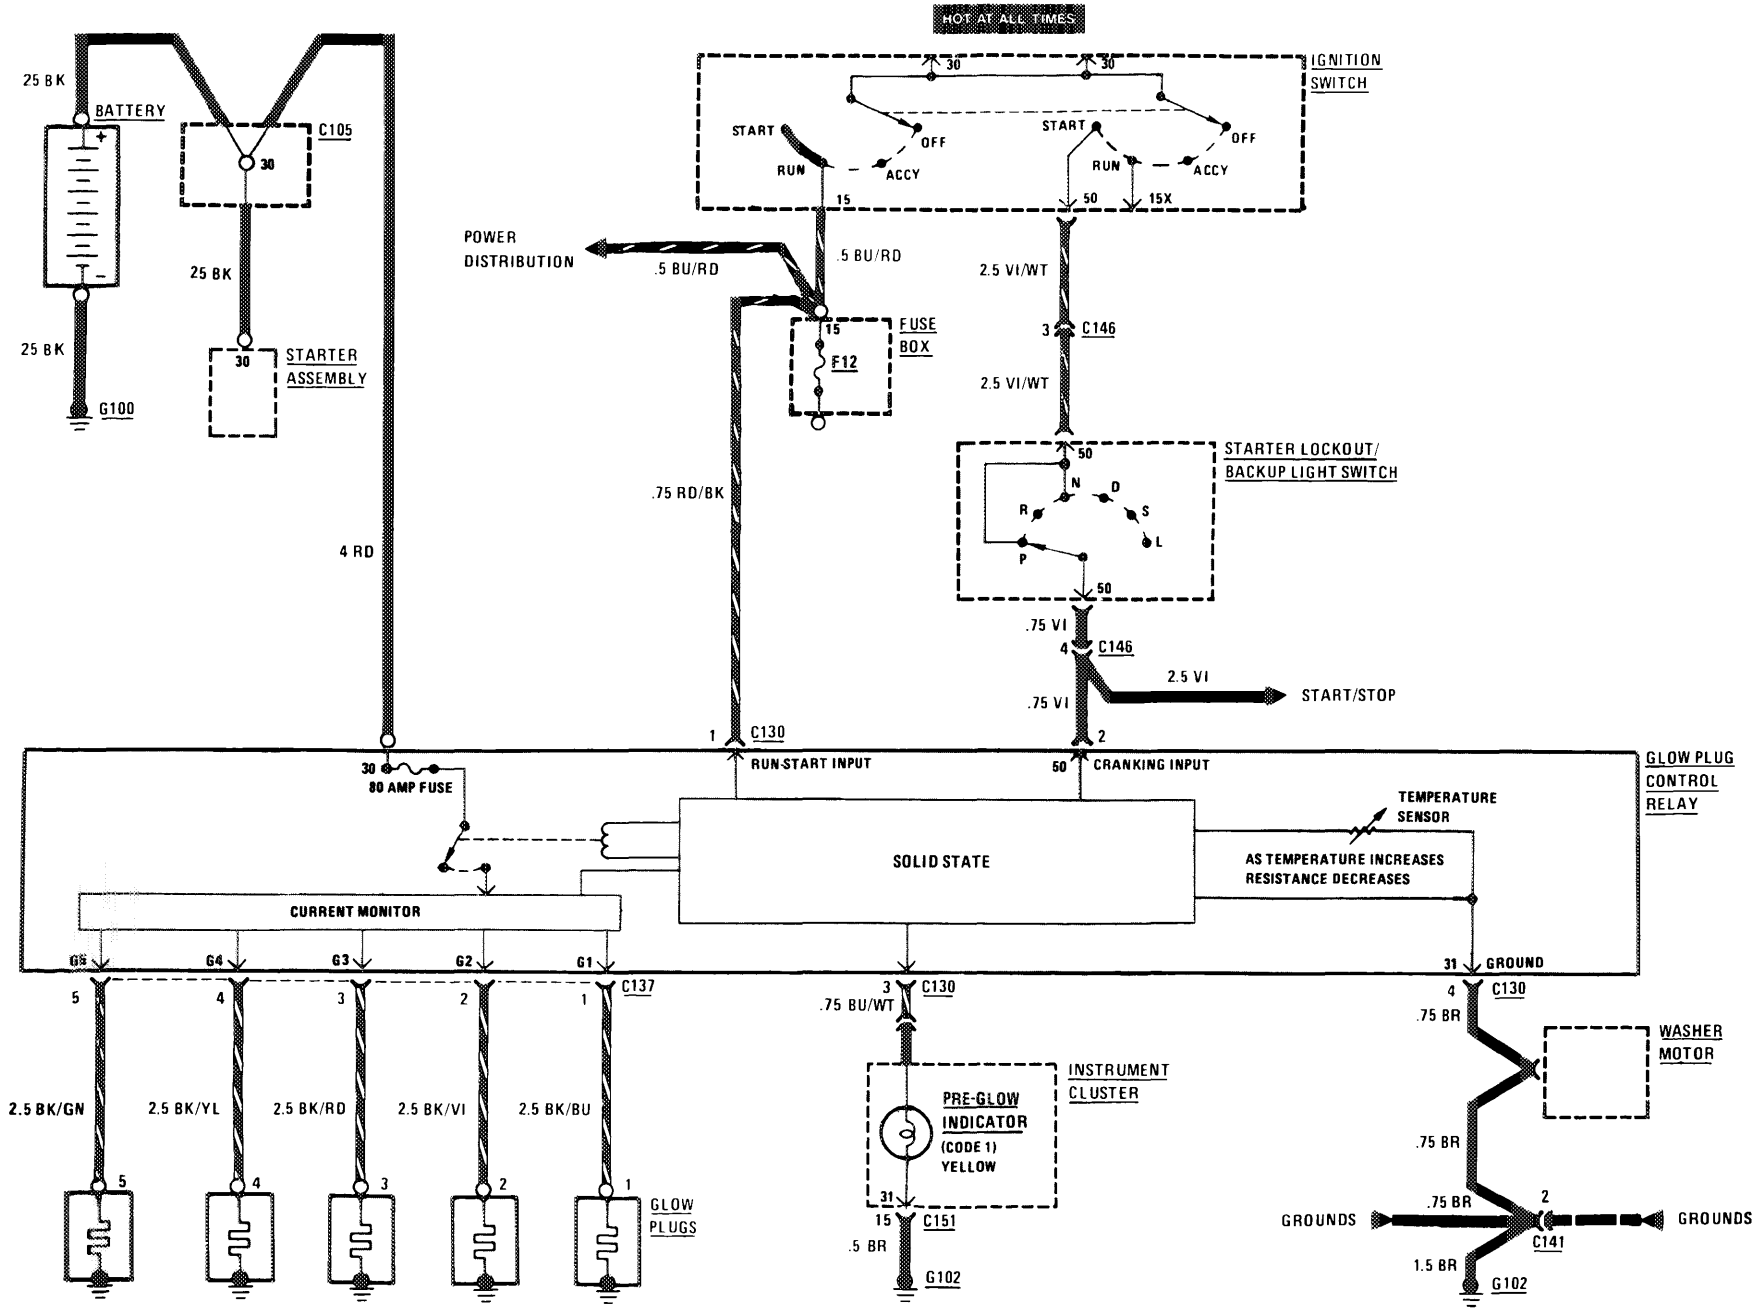

REVISIONS:

--	--	--

3184


PRE-GLOW SYSTEM

(For Component Locations See Page 205)

AS OF MY 1955

3.85

123.133/.153/.193

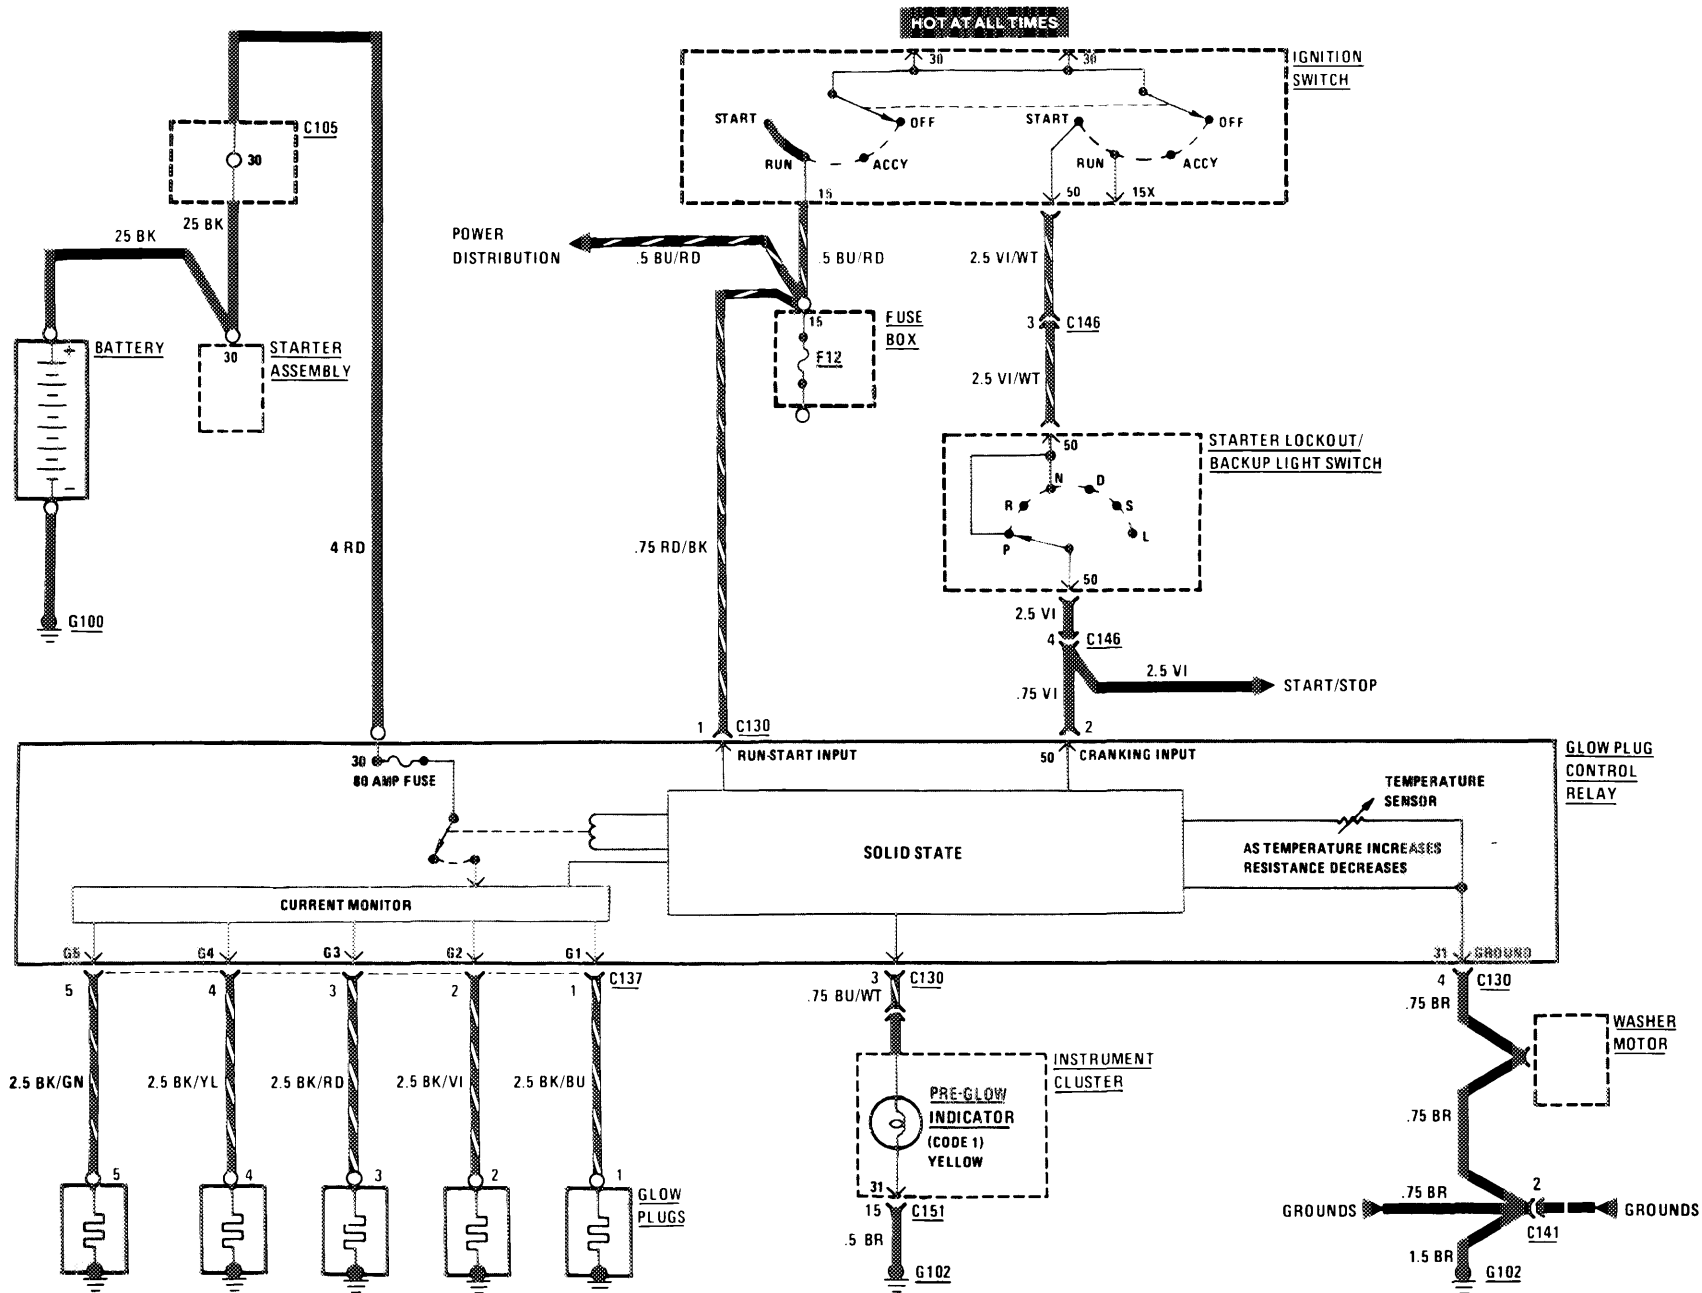

REVISIONS:

106/1


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

START/STOP (IGNITION SWITCH)

(For Component Locations See Page 206)

123.133/.153/.193

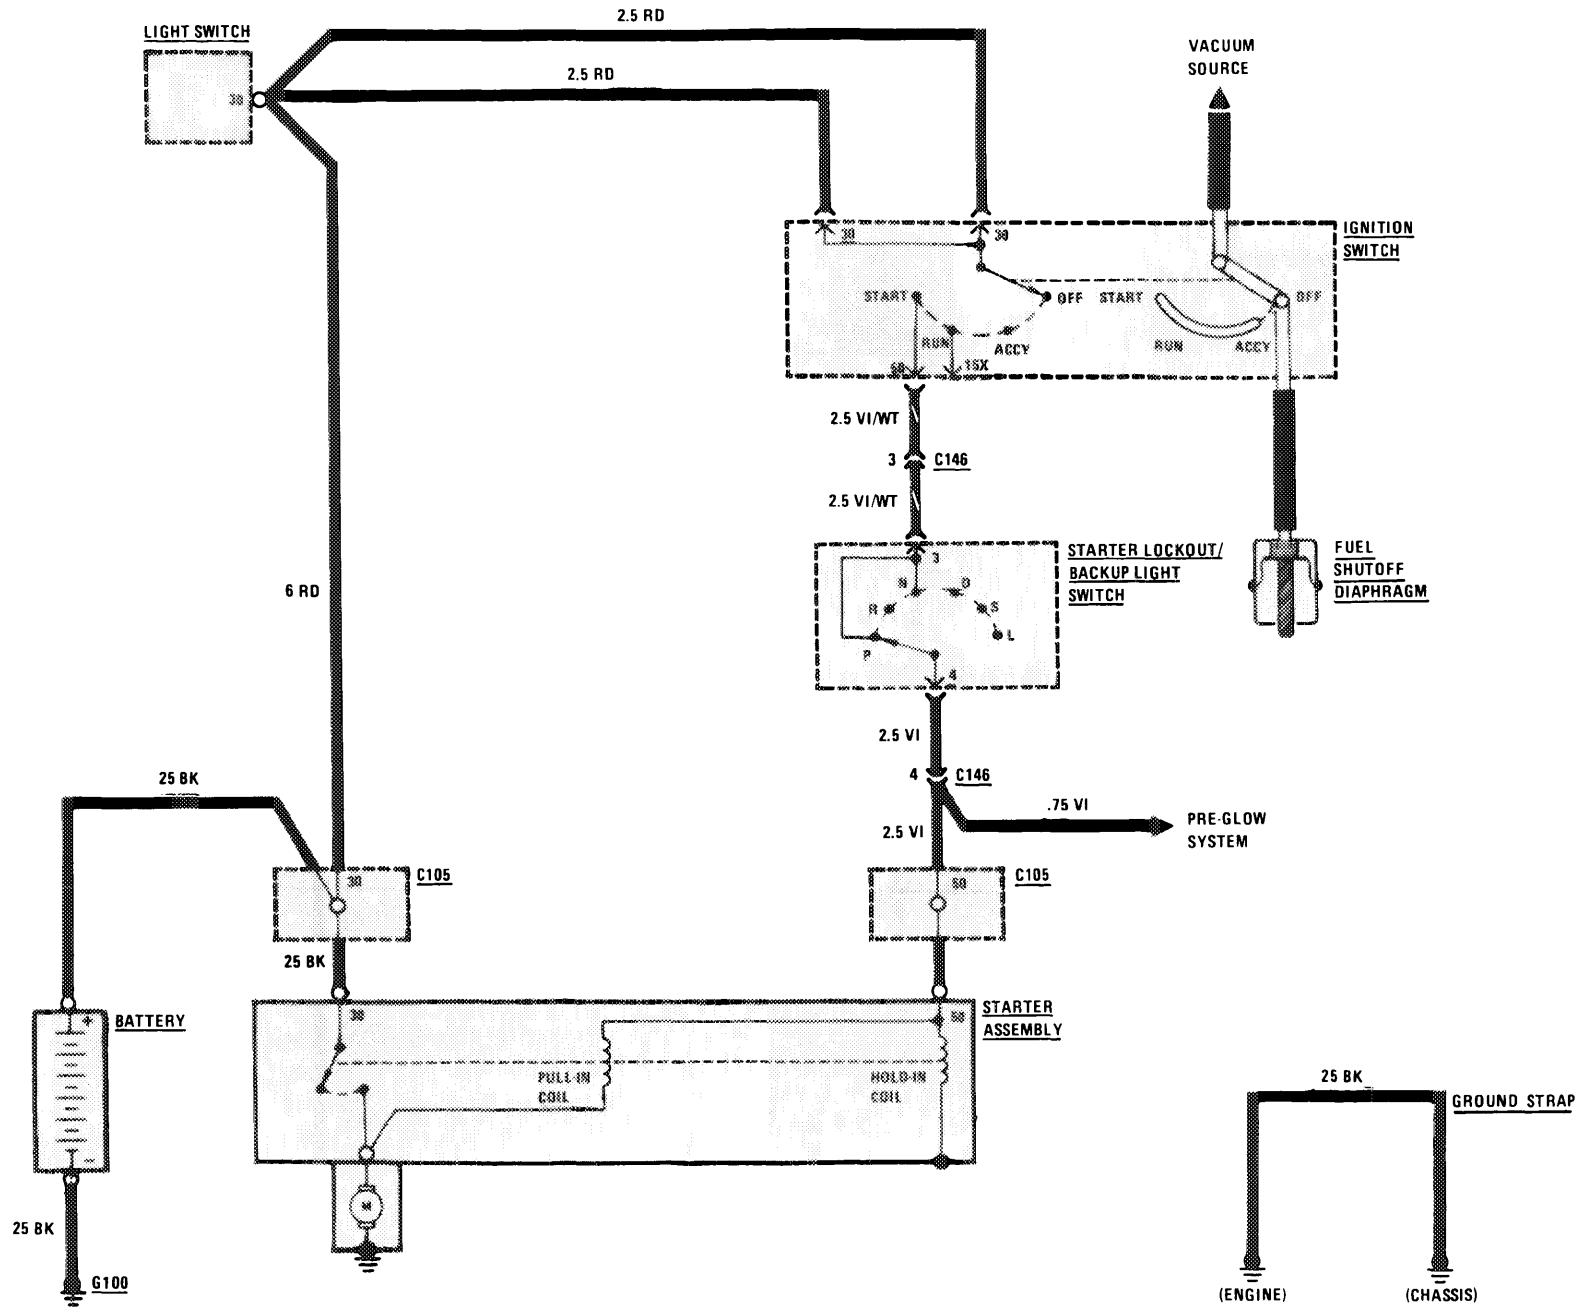

REVISIONS:


START/STOP (IGNITION SWITCH)

(For Component Locations See Page 206)

AS OF MAY 1985

107/1

123.133/.153/.193

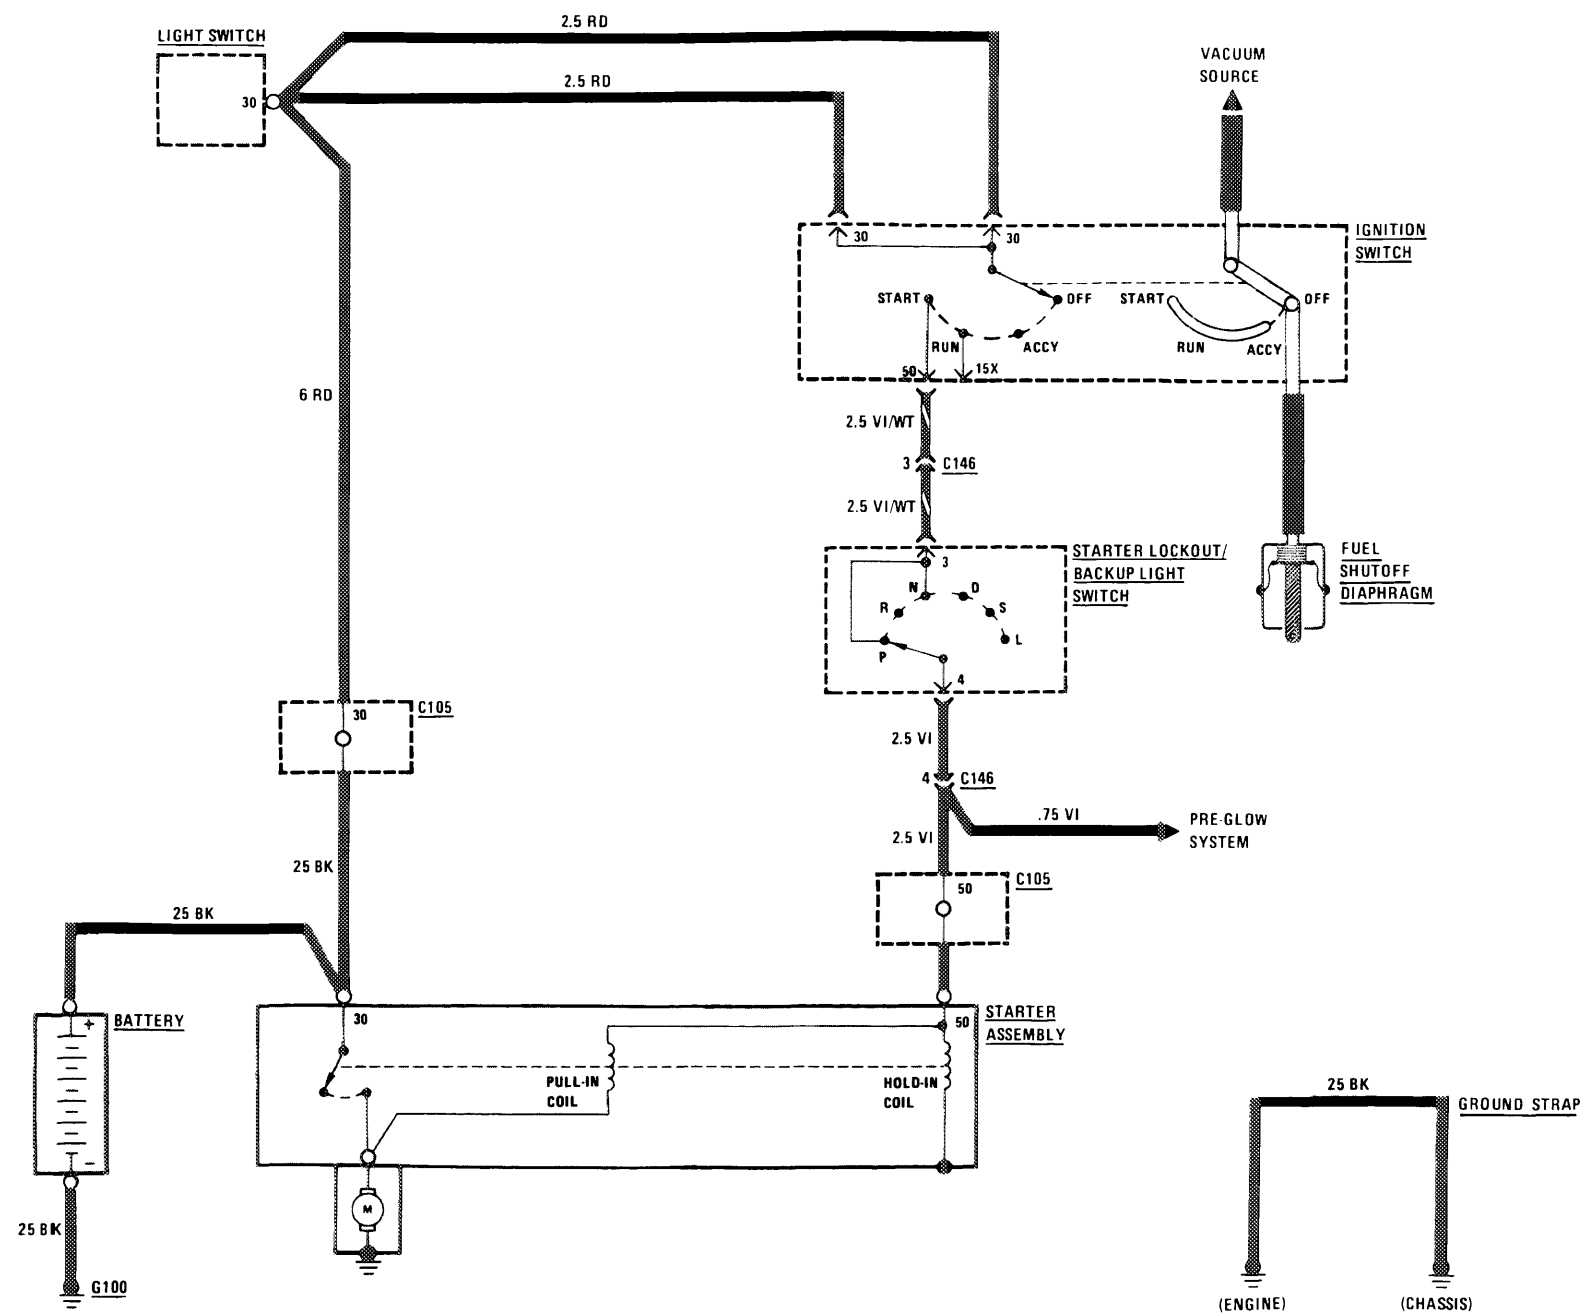

REVISIONS:


38

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

CHARGING SYSTEM

(For Component Locations See Page 202)

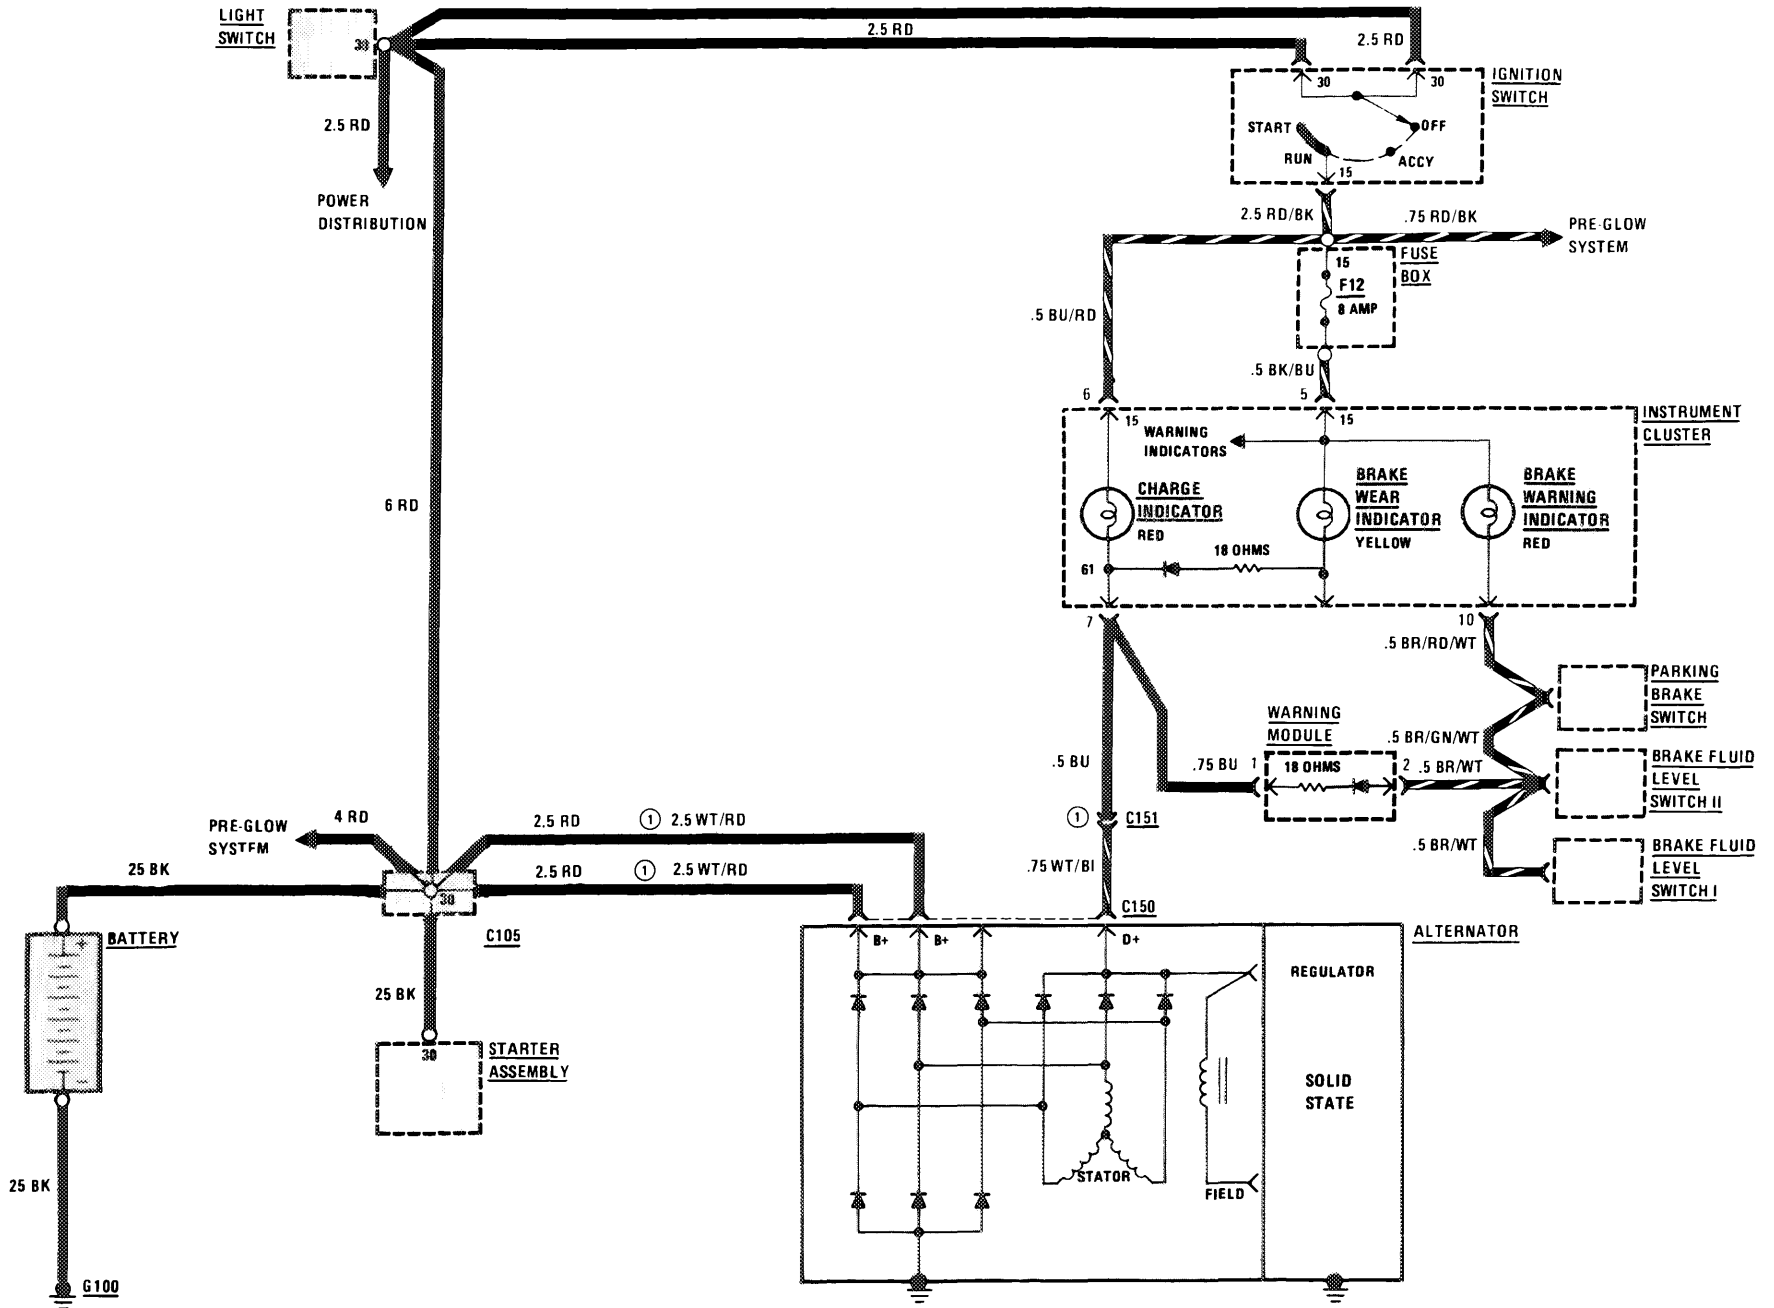


REVISIONS: ① AS OF MODEL YEAR 1985

EXHAUST GAS RECIRCULATION (CALIF. ONLY)

(For Component Locations See Page 203)

5/84

123.133/.153/.193

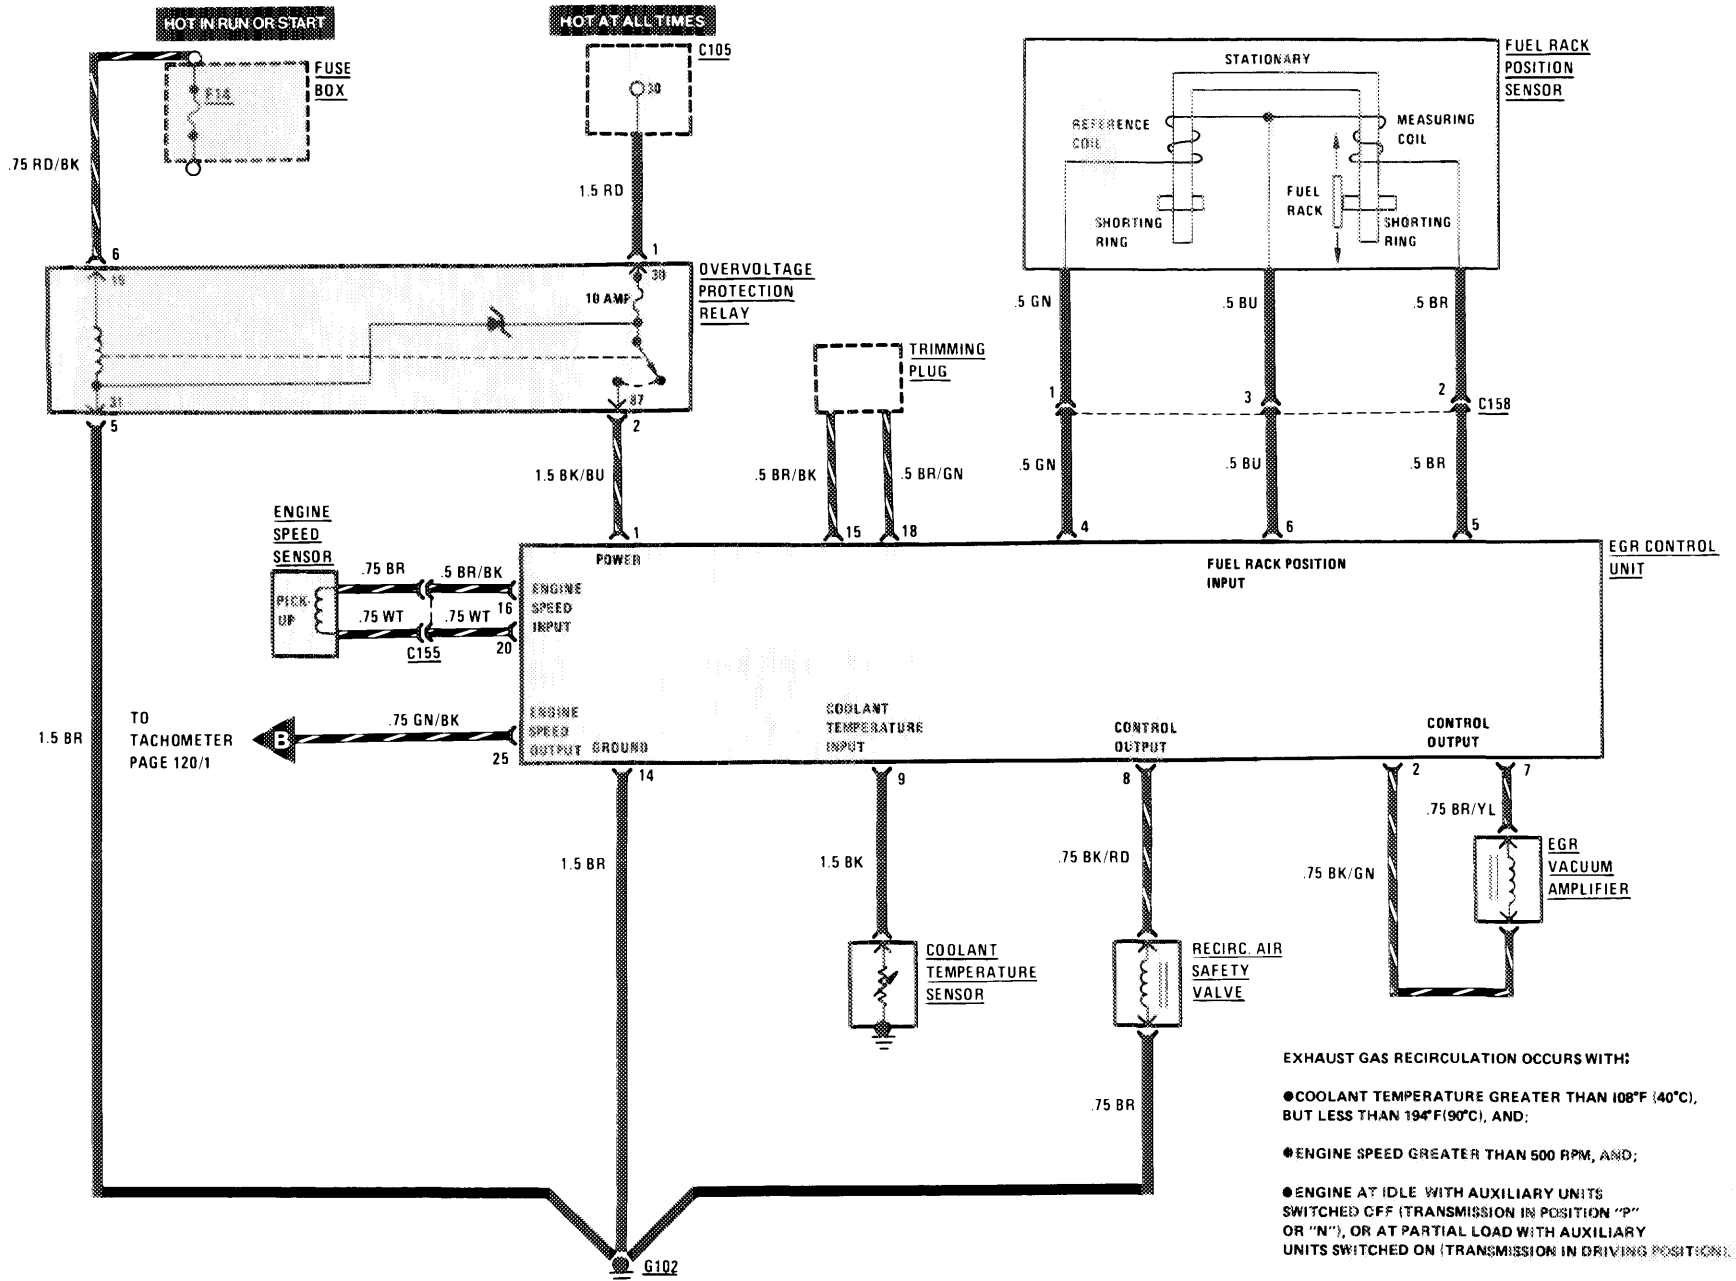

108/1

REVISIONS:


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ ENGINE OVERLOAD PROTECTION


(For Component Locations See Page 201)

AS OF MY 1903

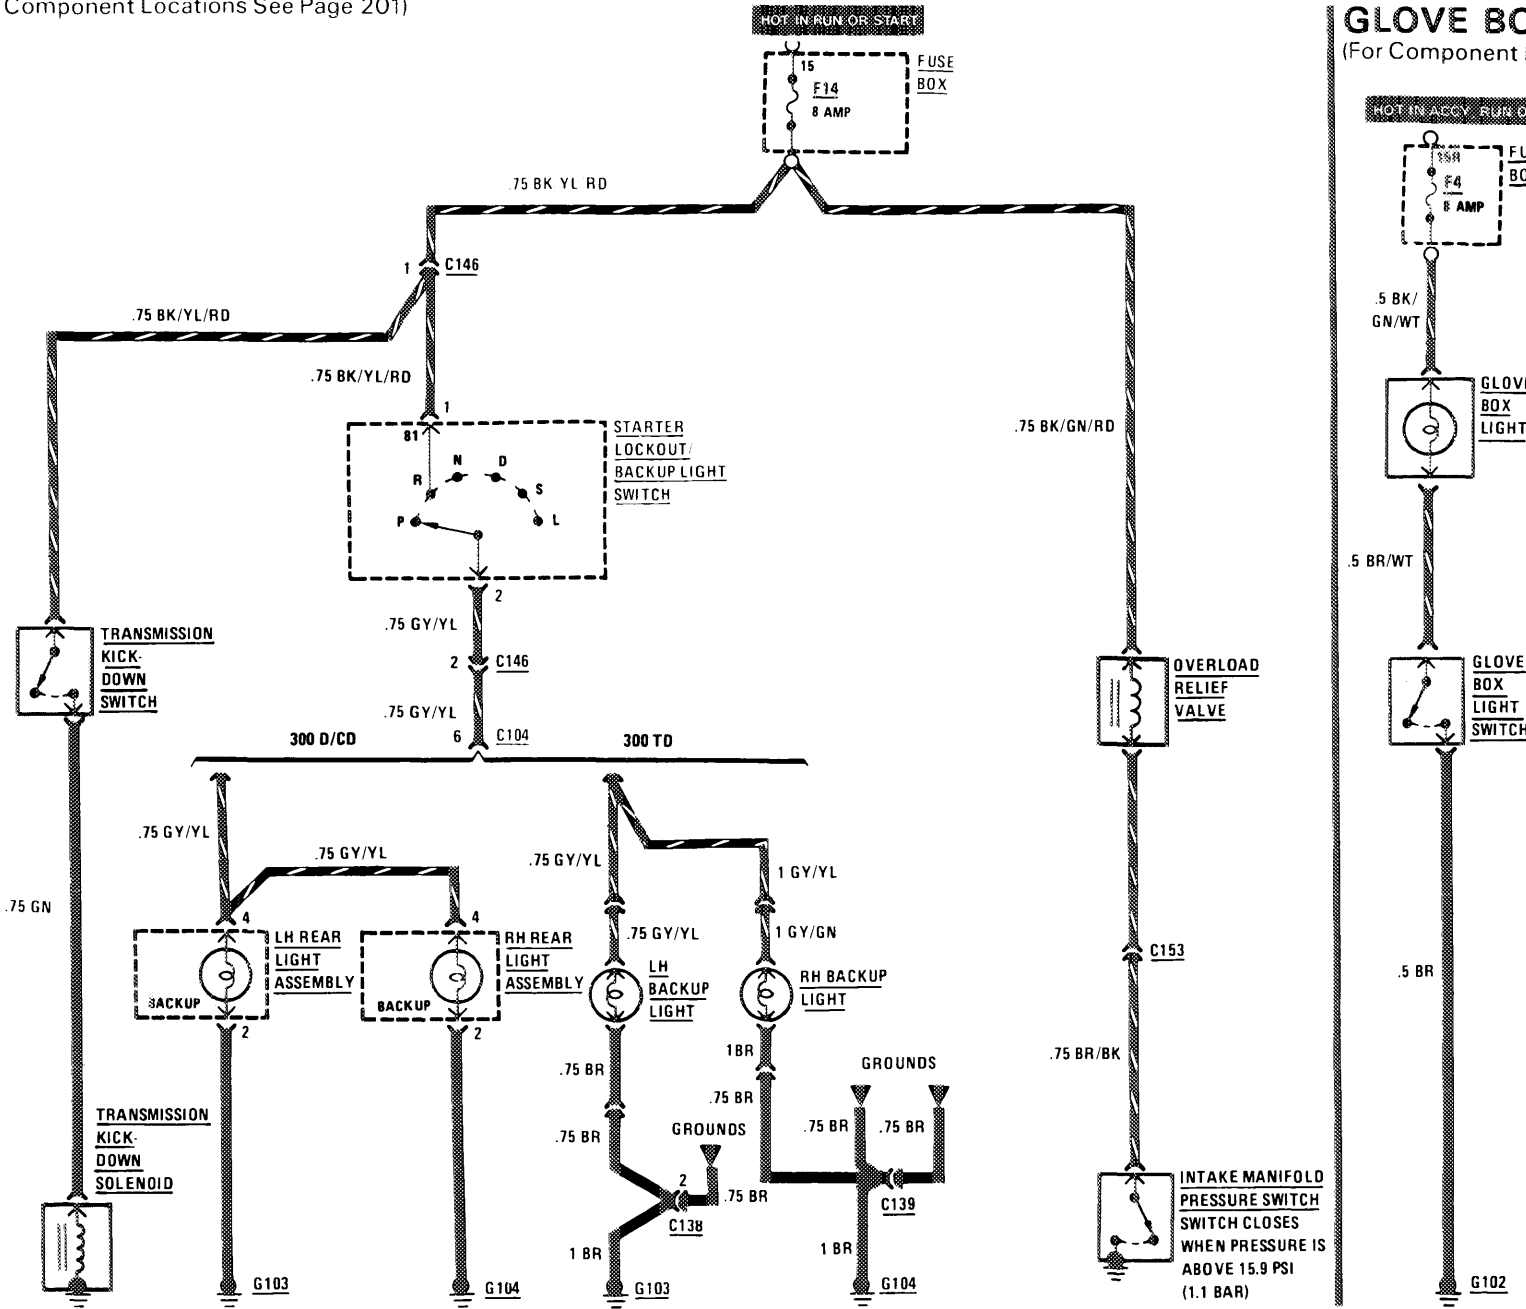

GLOVE BOX LIGHT

(For Component Locations See Page 201)

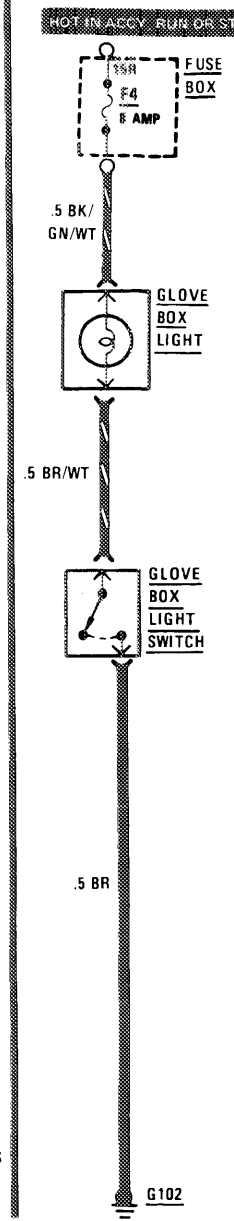


123.133/.153/.193

109

REVISIONS:

BACK OF LIGHTS/TRANSMISSION KICK DOWN/ ENGINE OVERLOAD PROTECTION


(For Component Locations See Page 201)

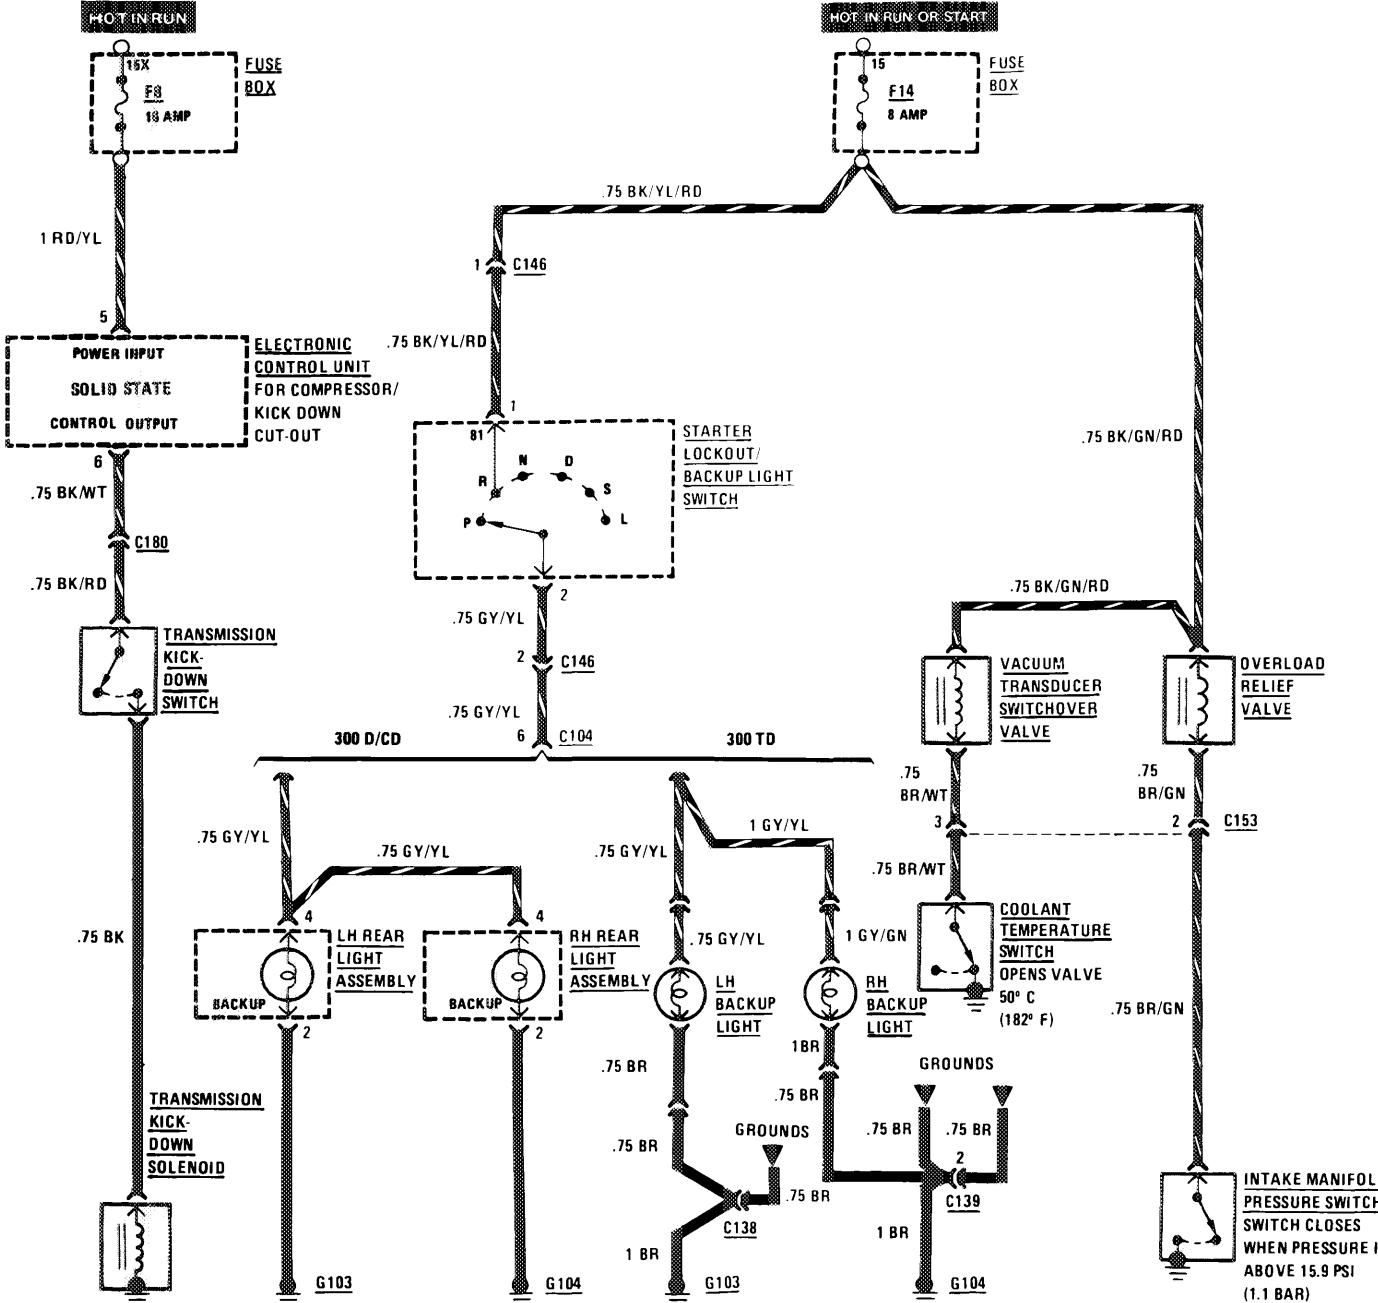

123.133/.153/.193

GLOVE BOX LIGHT

(For Component Locations See Page 201)

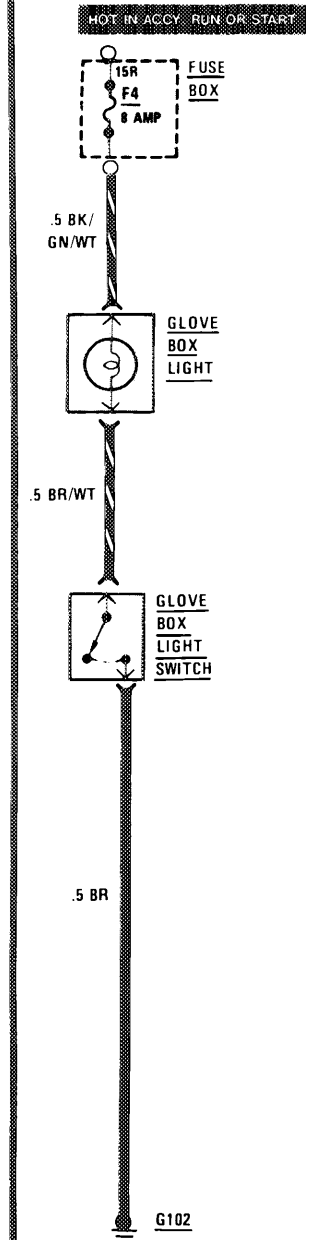

THIS PAGE LEFT BLANK INTENTIONALLY

3/85

123.133/.153/.193


109/:

REVISIONS:

HEADLIGHTS/ FOG LIGHTS

(For Component Locations See Page 203)


123.133/.153/.193

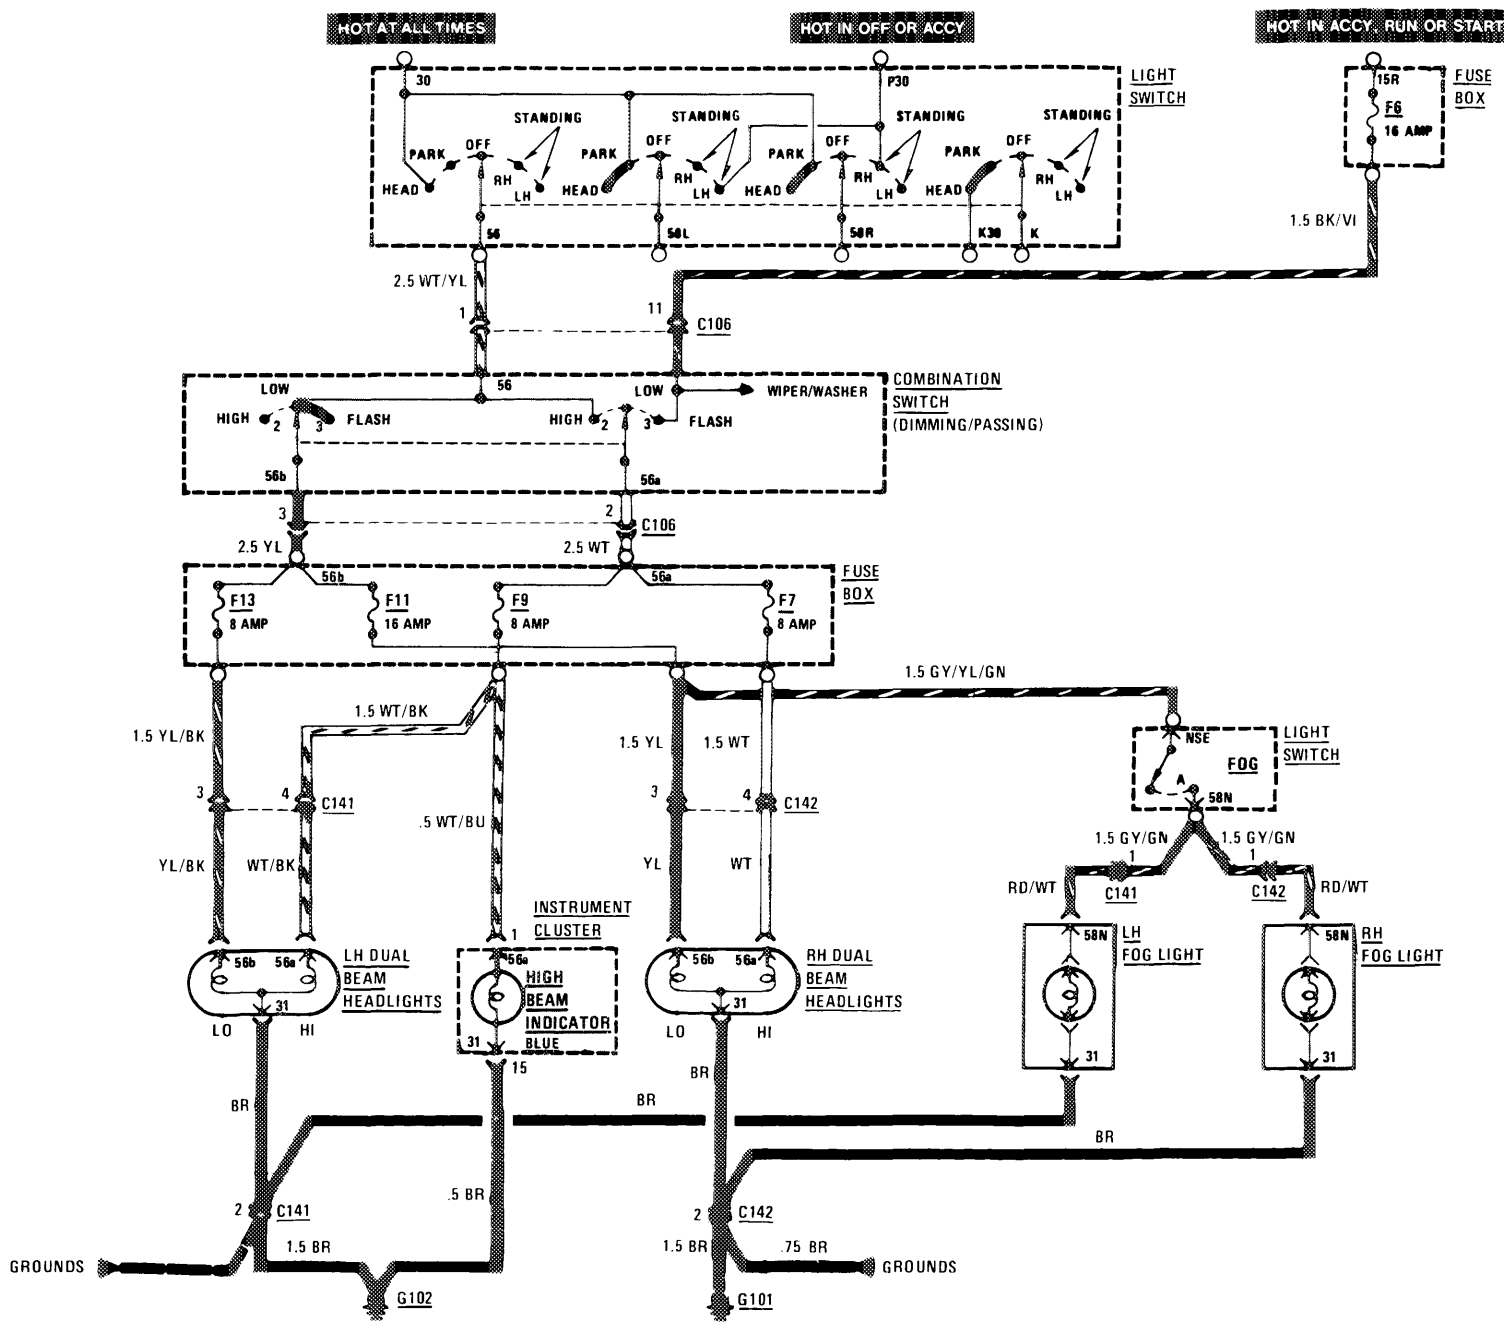

REVISIONS:

STOPLIGHTS/CRUISE CONTROL

(For Component Locations See Page 207)

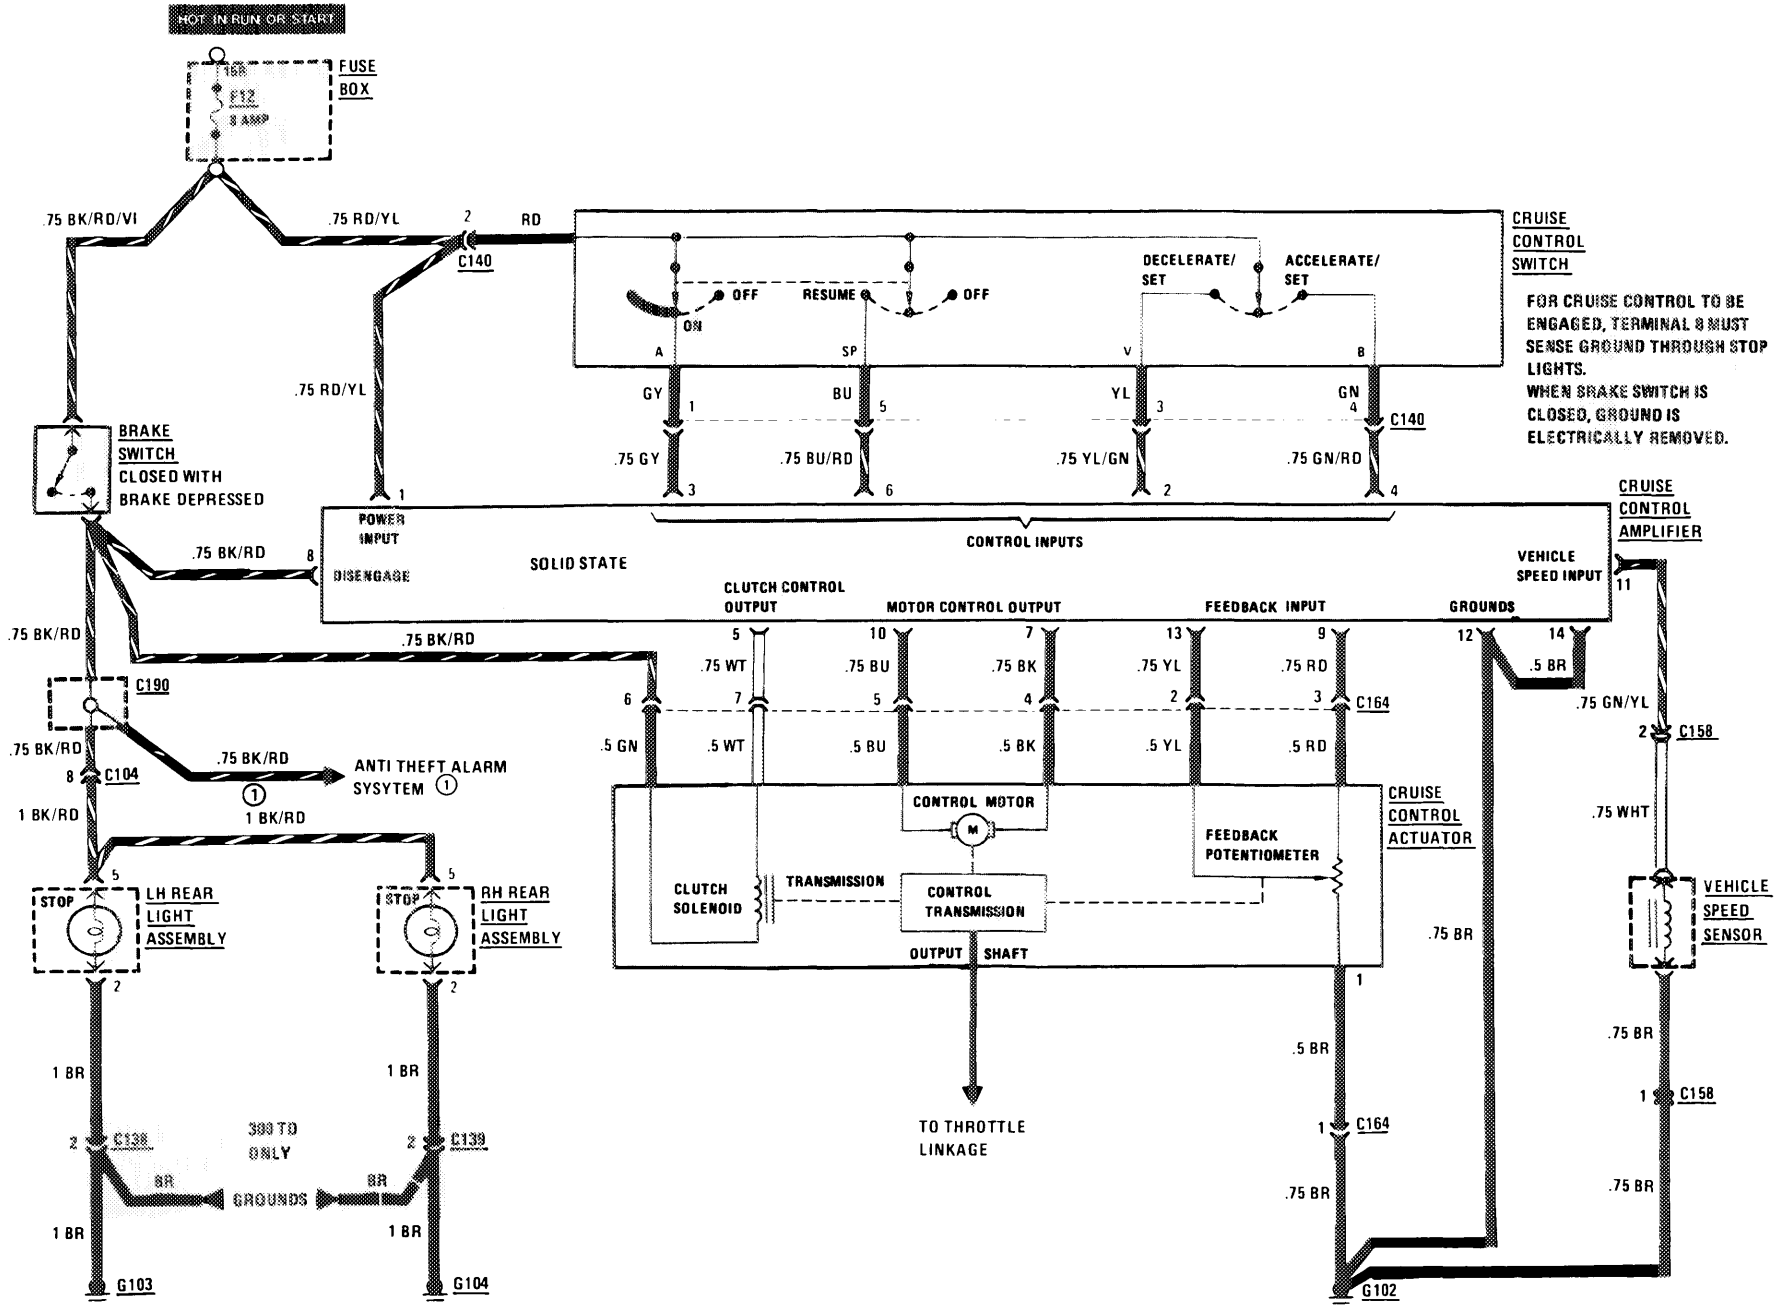

123.133/.153/.193


REVISIONS: ① AS OF MY MODEL 1985

LIGHTS: PARK/TAIL/LICENSE

(For Component Locations See Page 204)

300 TD

112

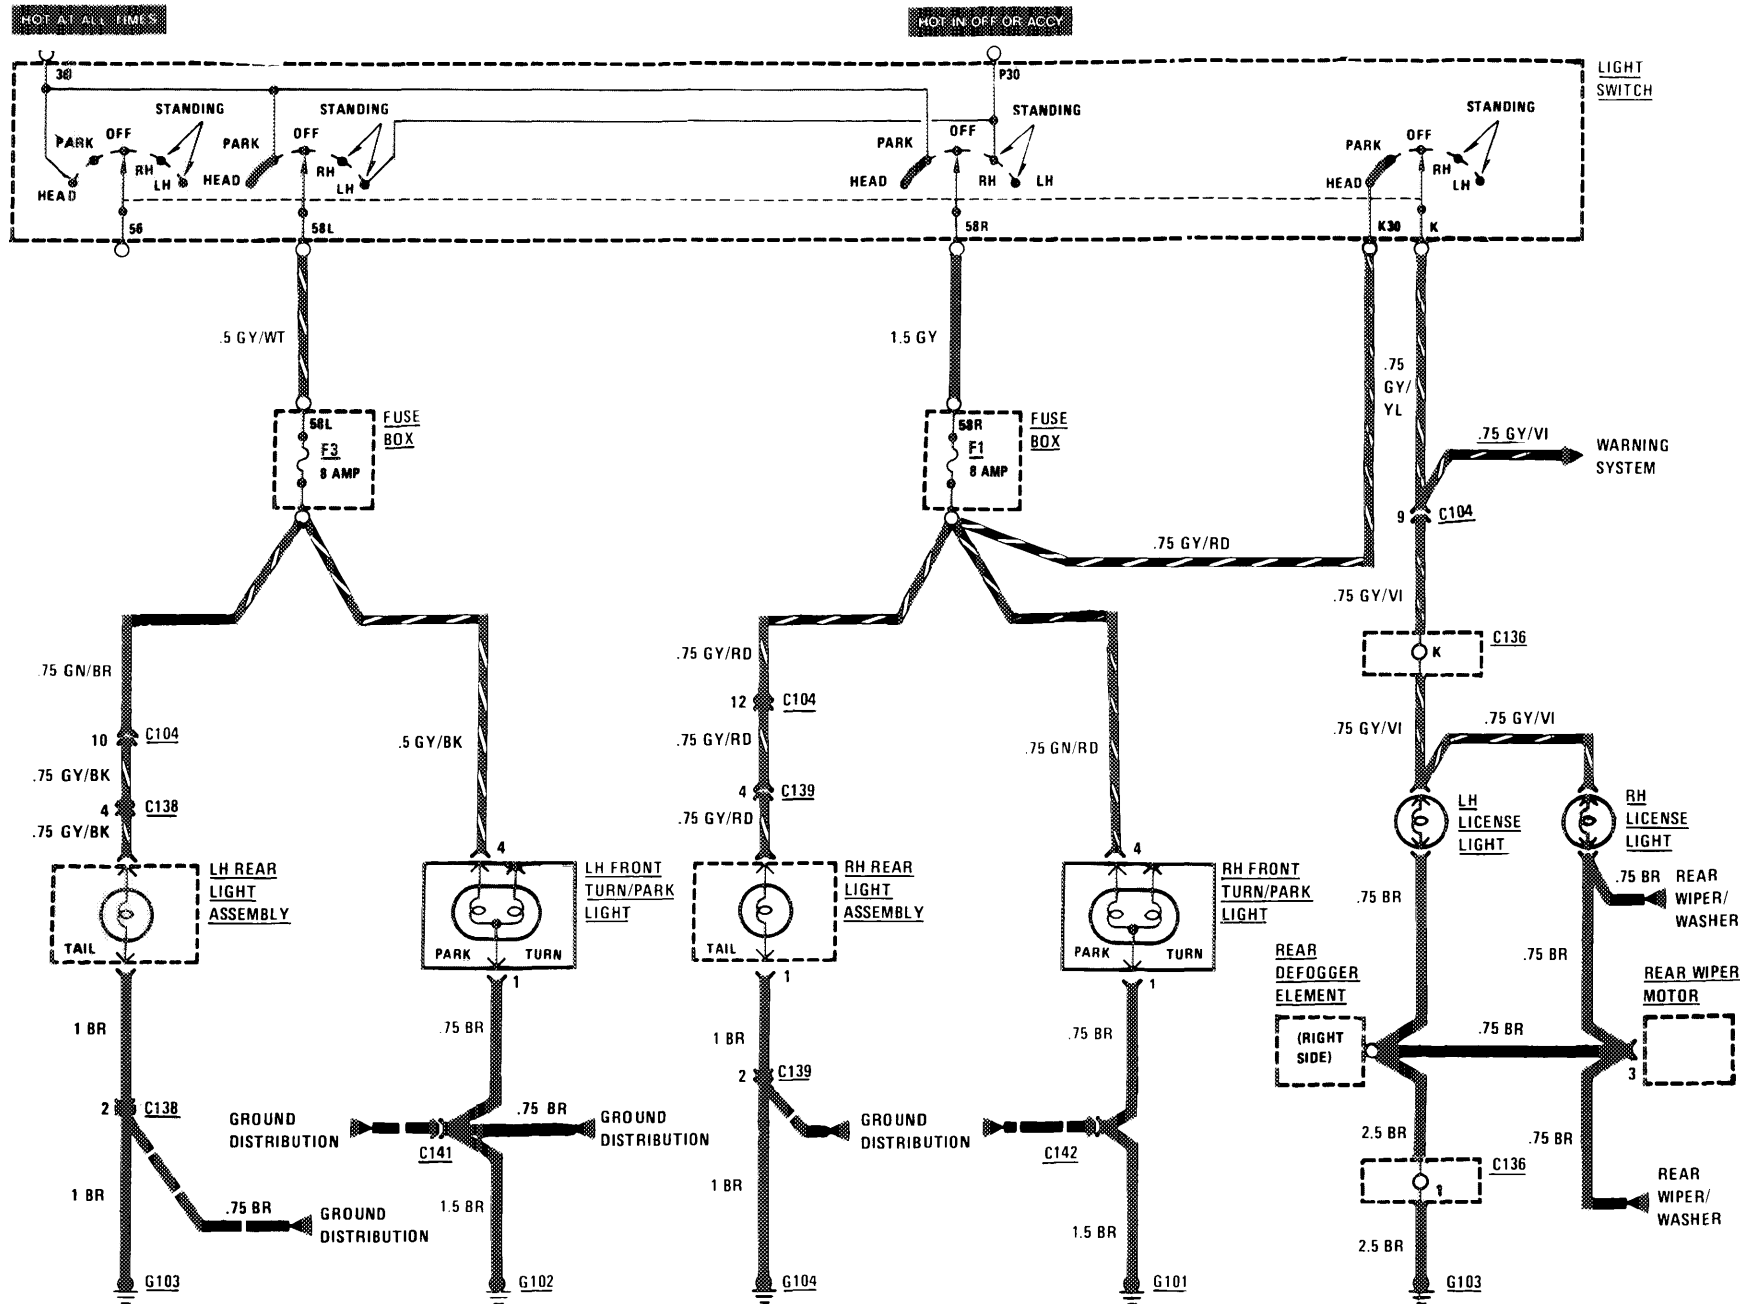


123.193

3/85

REVISIONS:

LIGHTS: PARK/TAIL

(For Component Locations See Page 204)

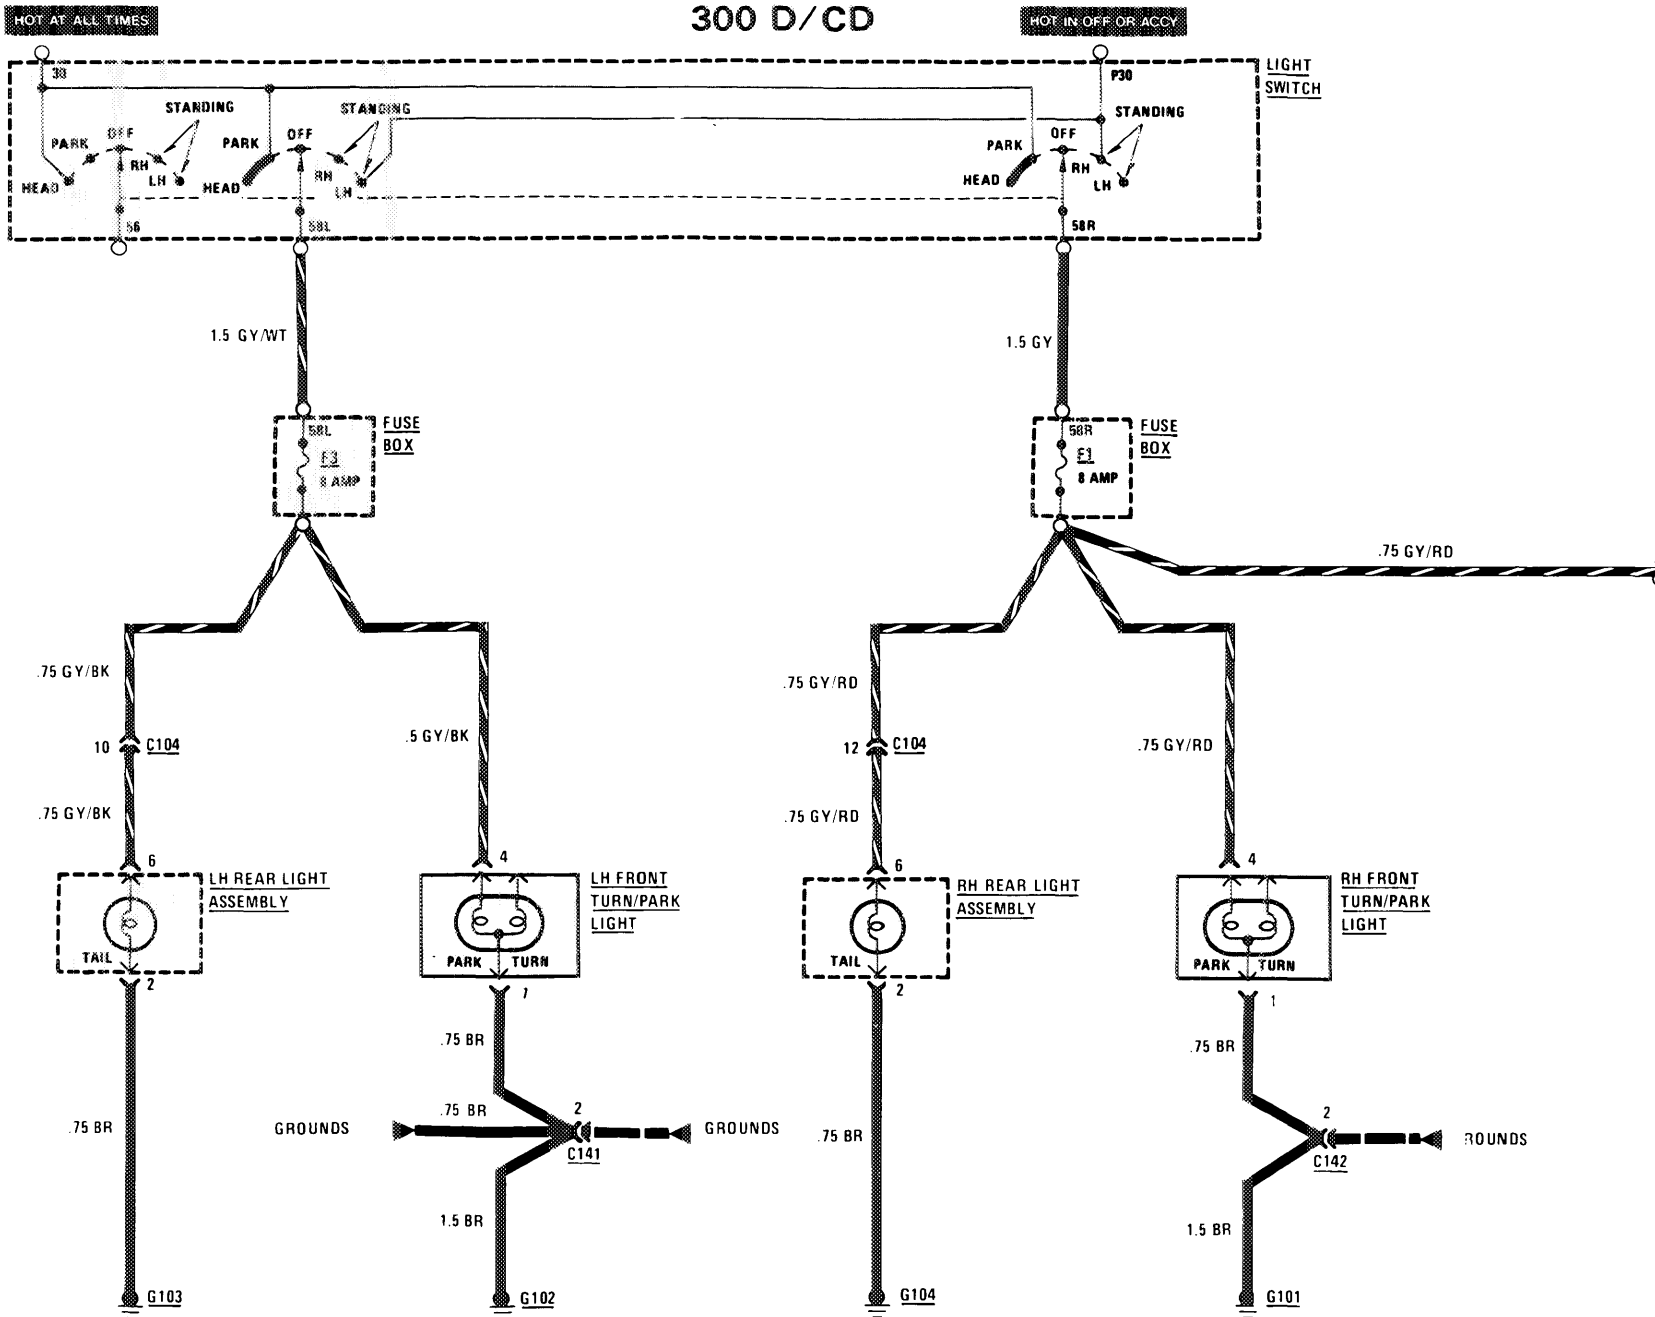

2/83

123.133/.153/.193

113

REVISIONS:


LIGHTS: MARKER/LICENSE/TRUNK

(For Component Locations See Page 204)

300 D/CD

114


123.133/.153

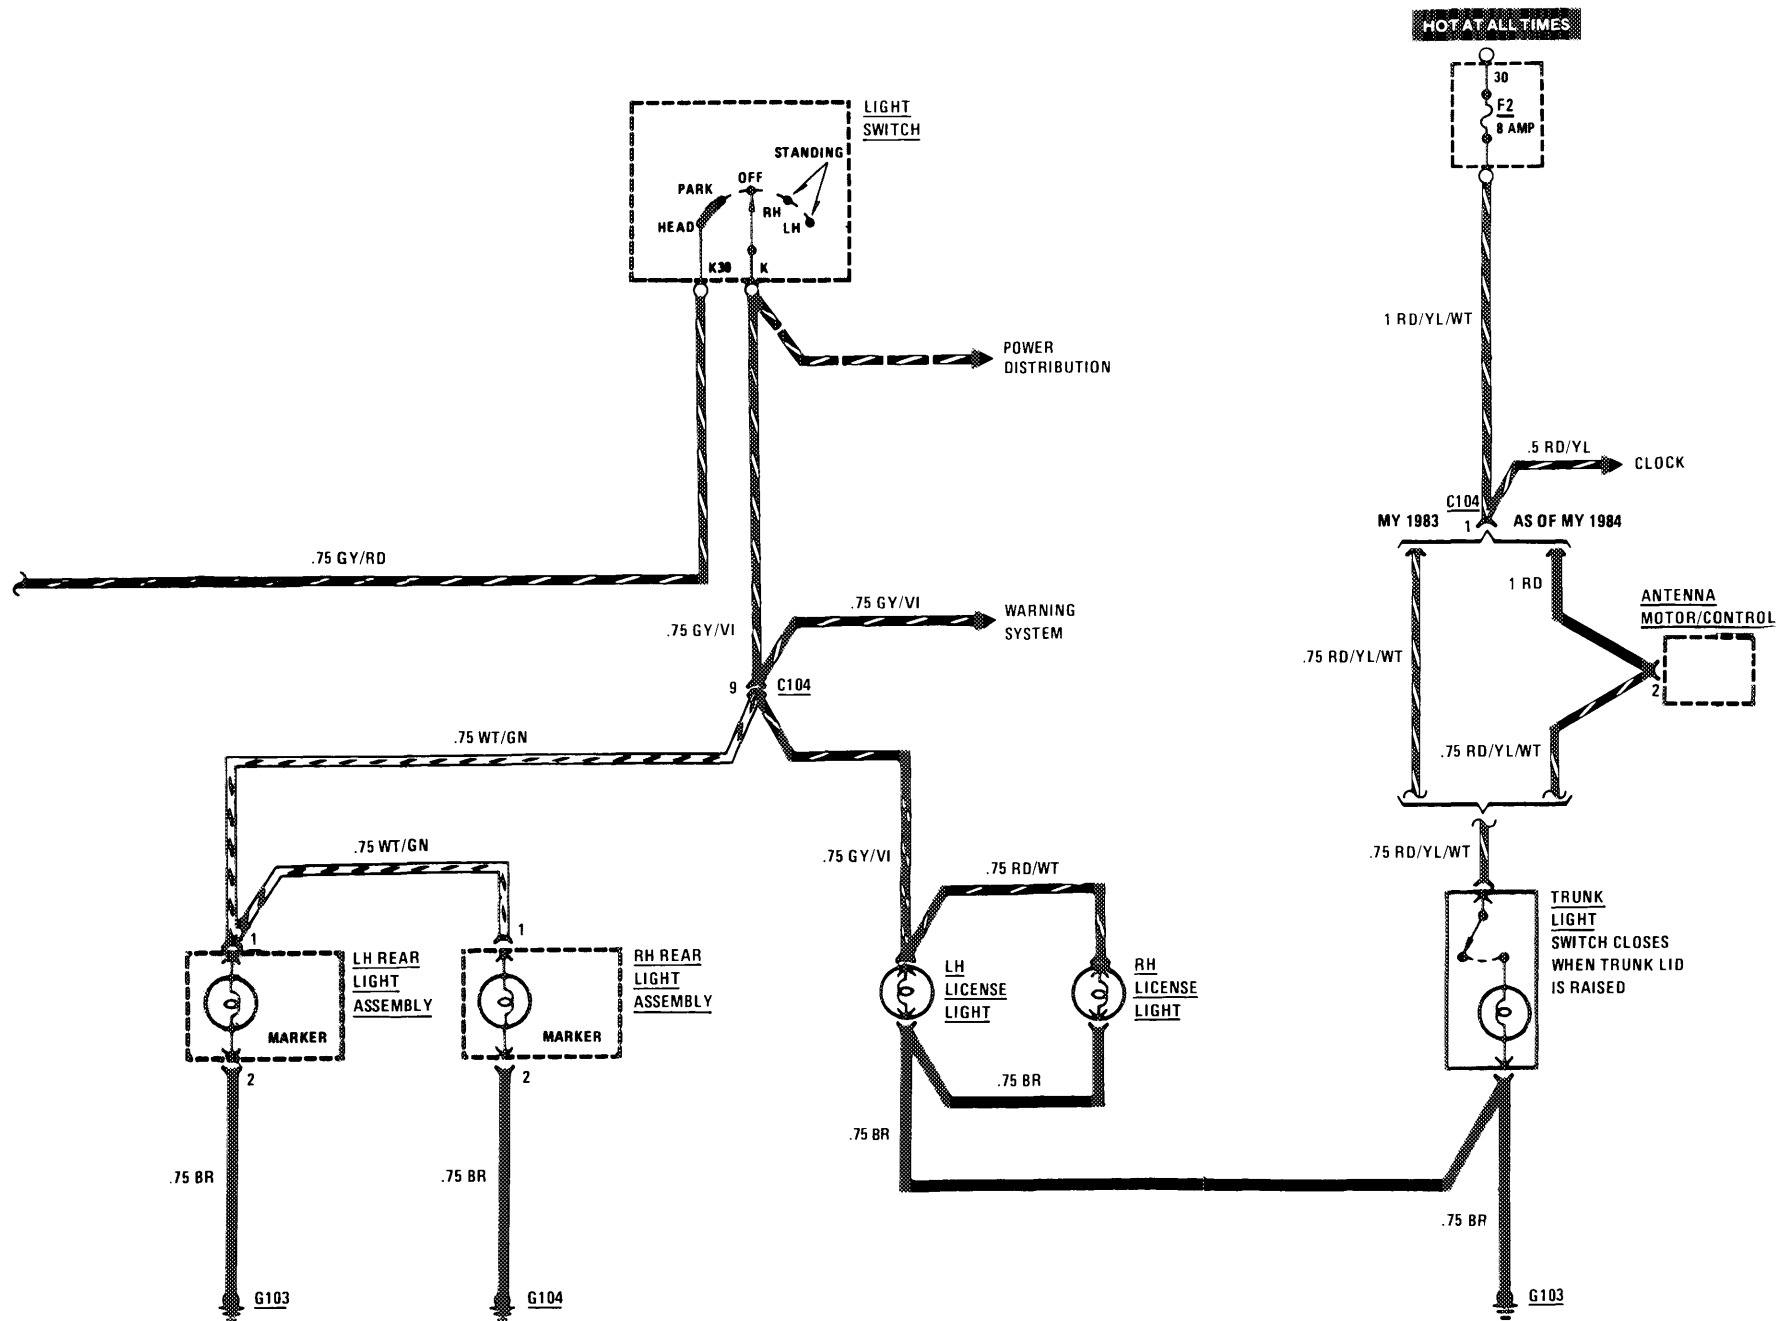

REVISIONS:

CIGA. LIGHTER/RADIO/AUTOMATIC ANTENNA

(For Component Locations See Page 202)

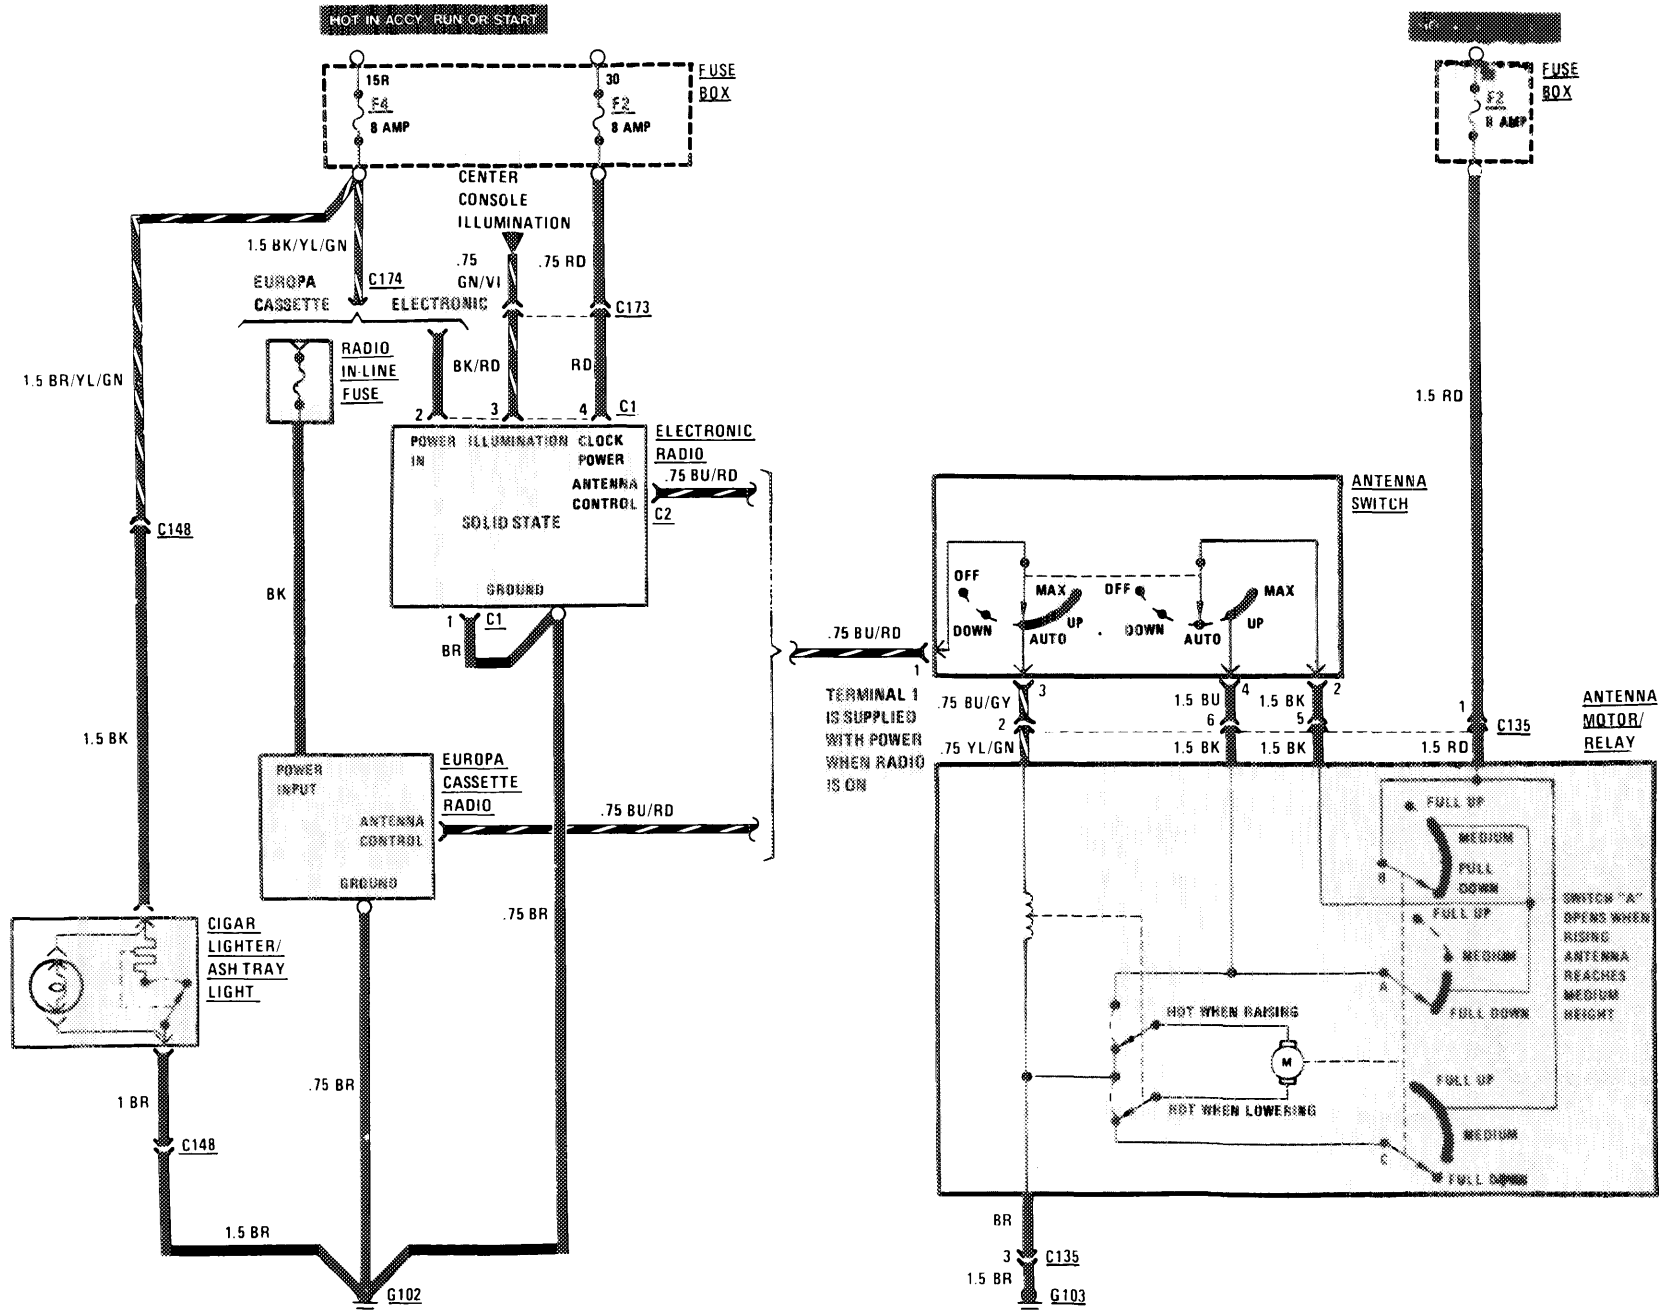


123.133/.153/.193

REVISIONS:

115/1

123.133/153

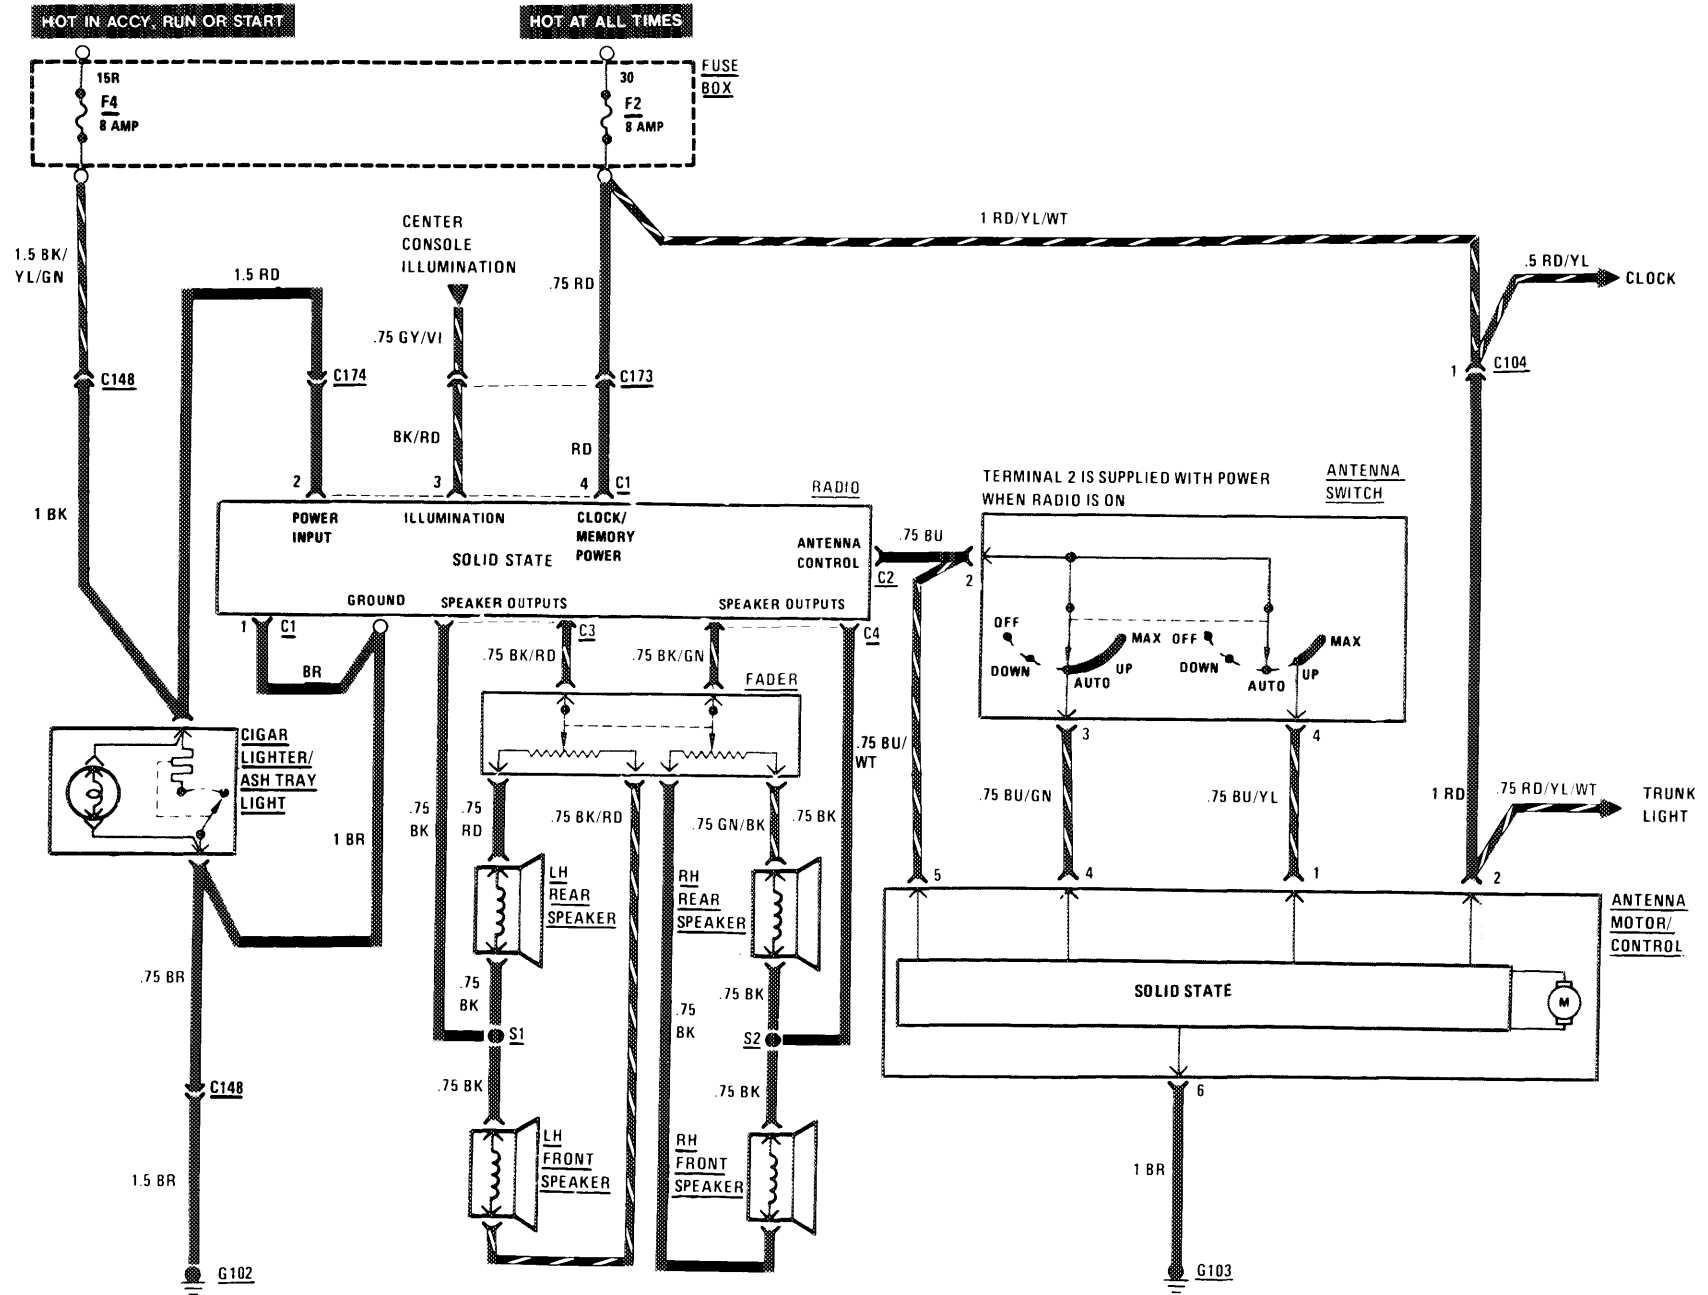

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:


TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 207)

300 D/CD

116


123.133/.153

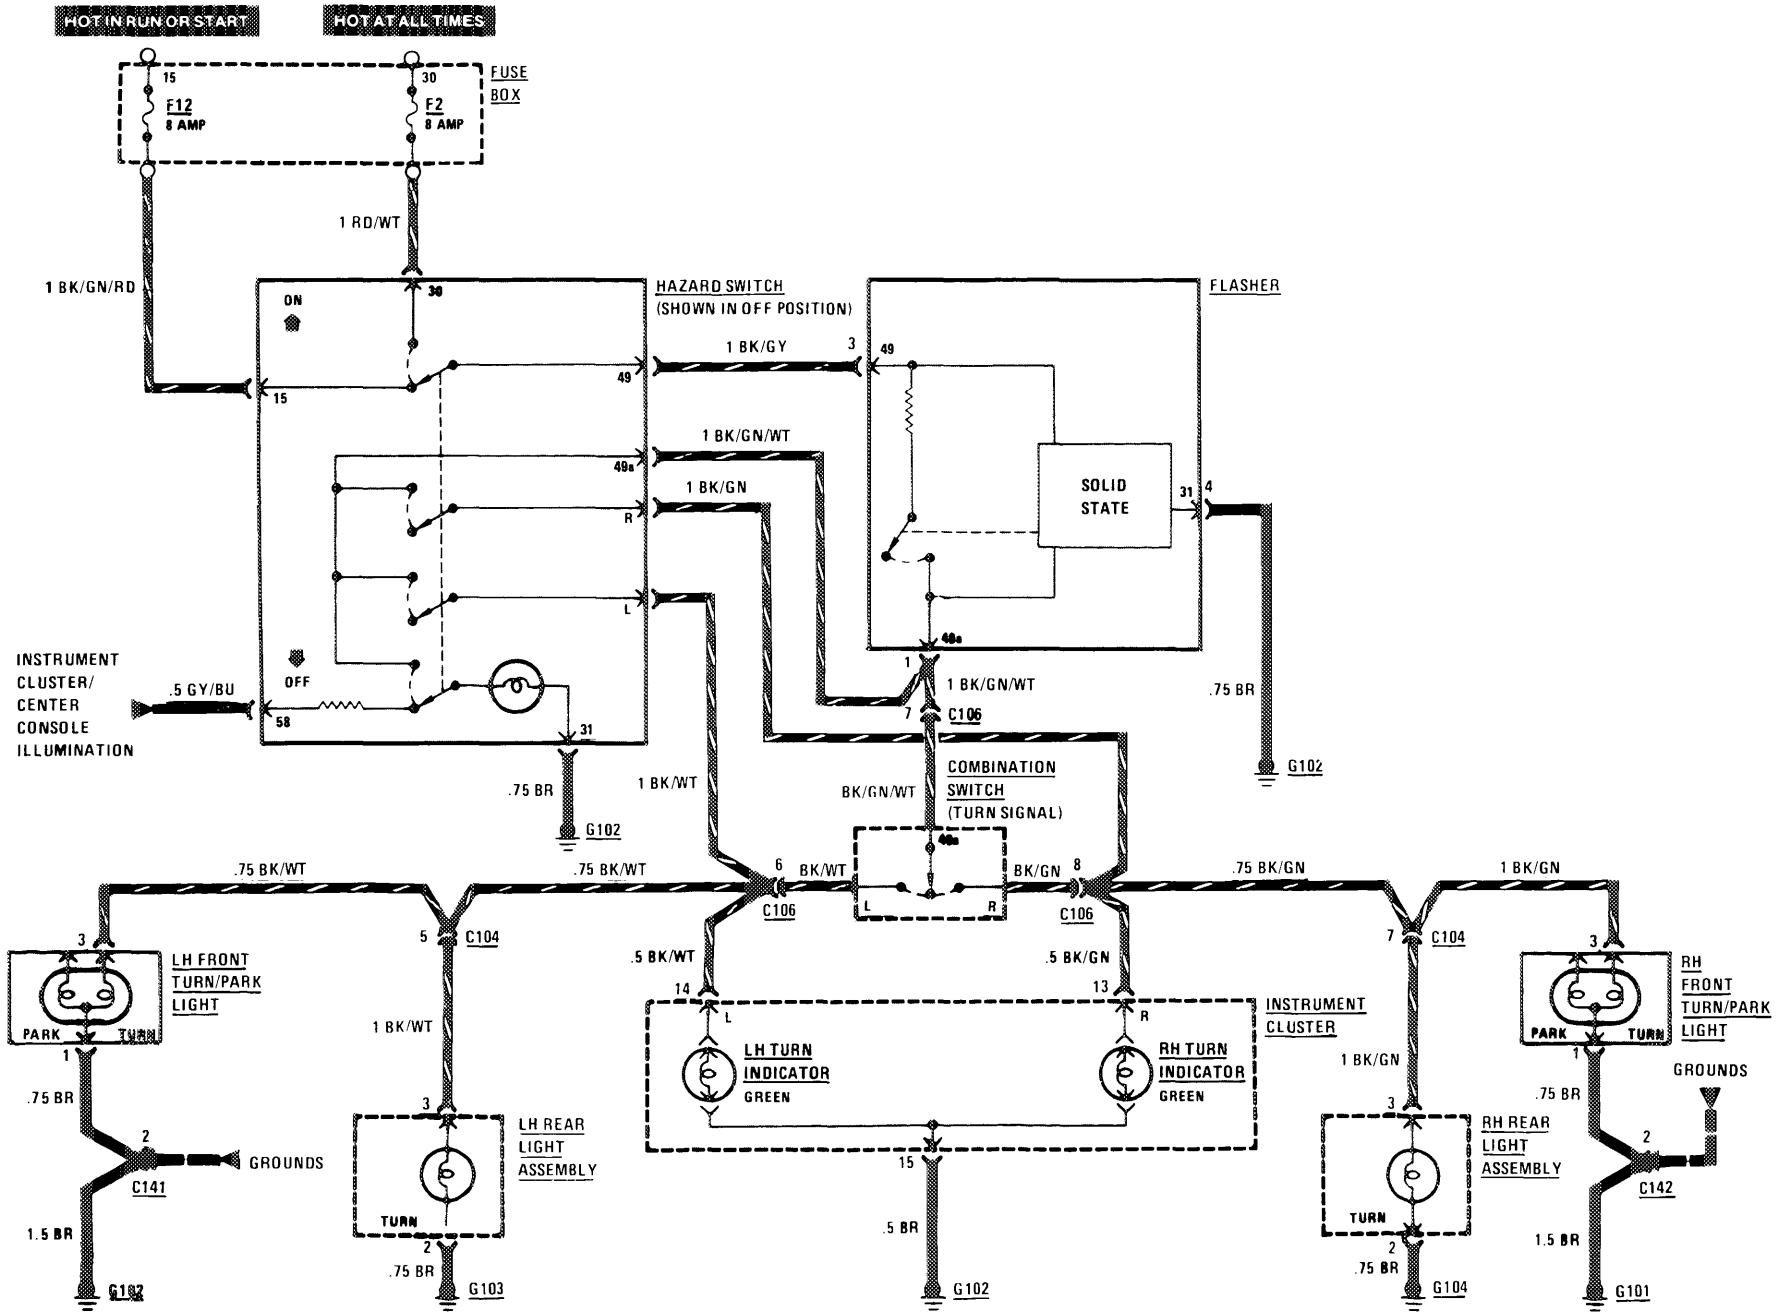

REVISIONS:

TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 207)

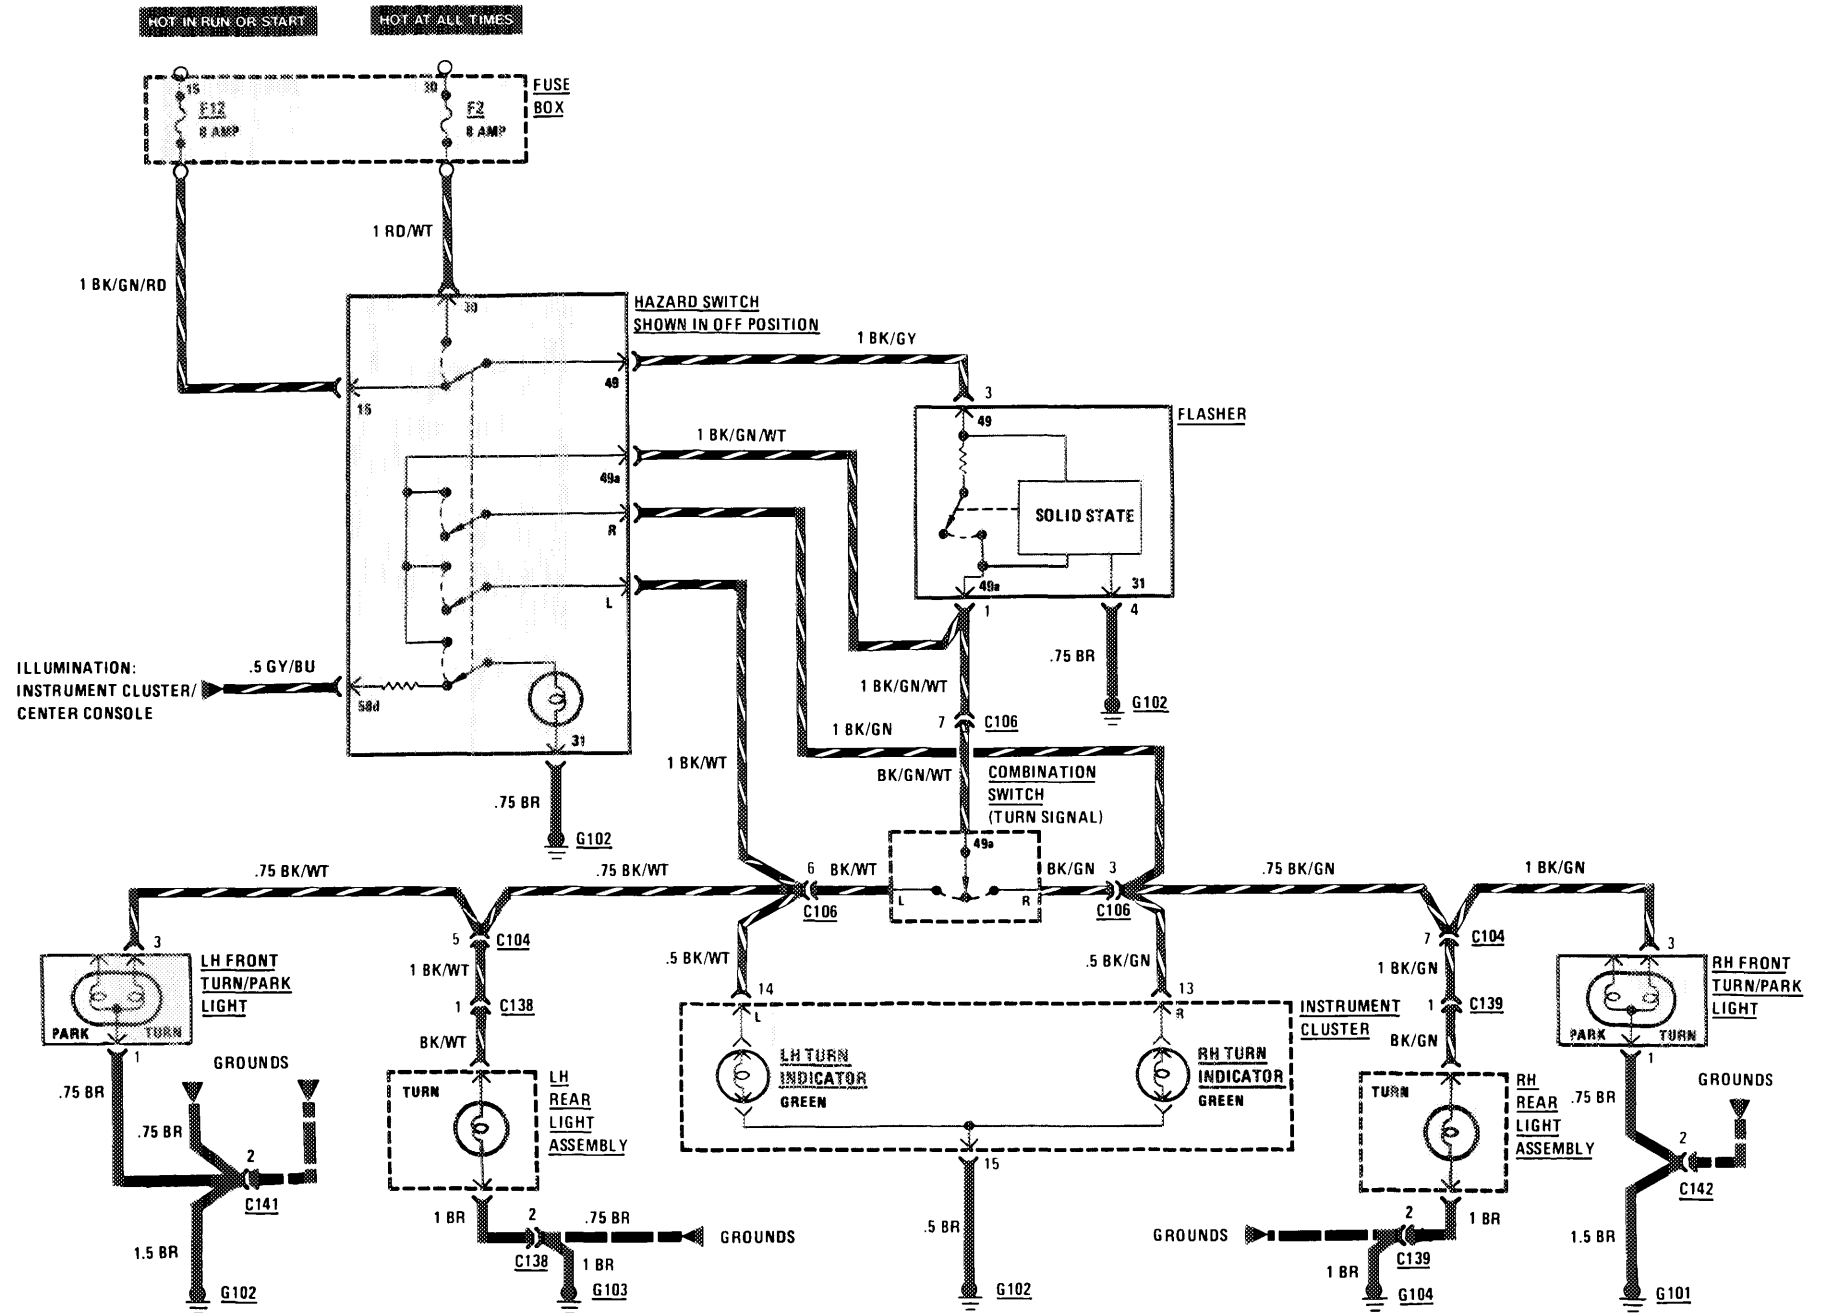


123.193

117

REVISIONS:

WARNING SYSTEM

(For Component Locations See Page 208)

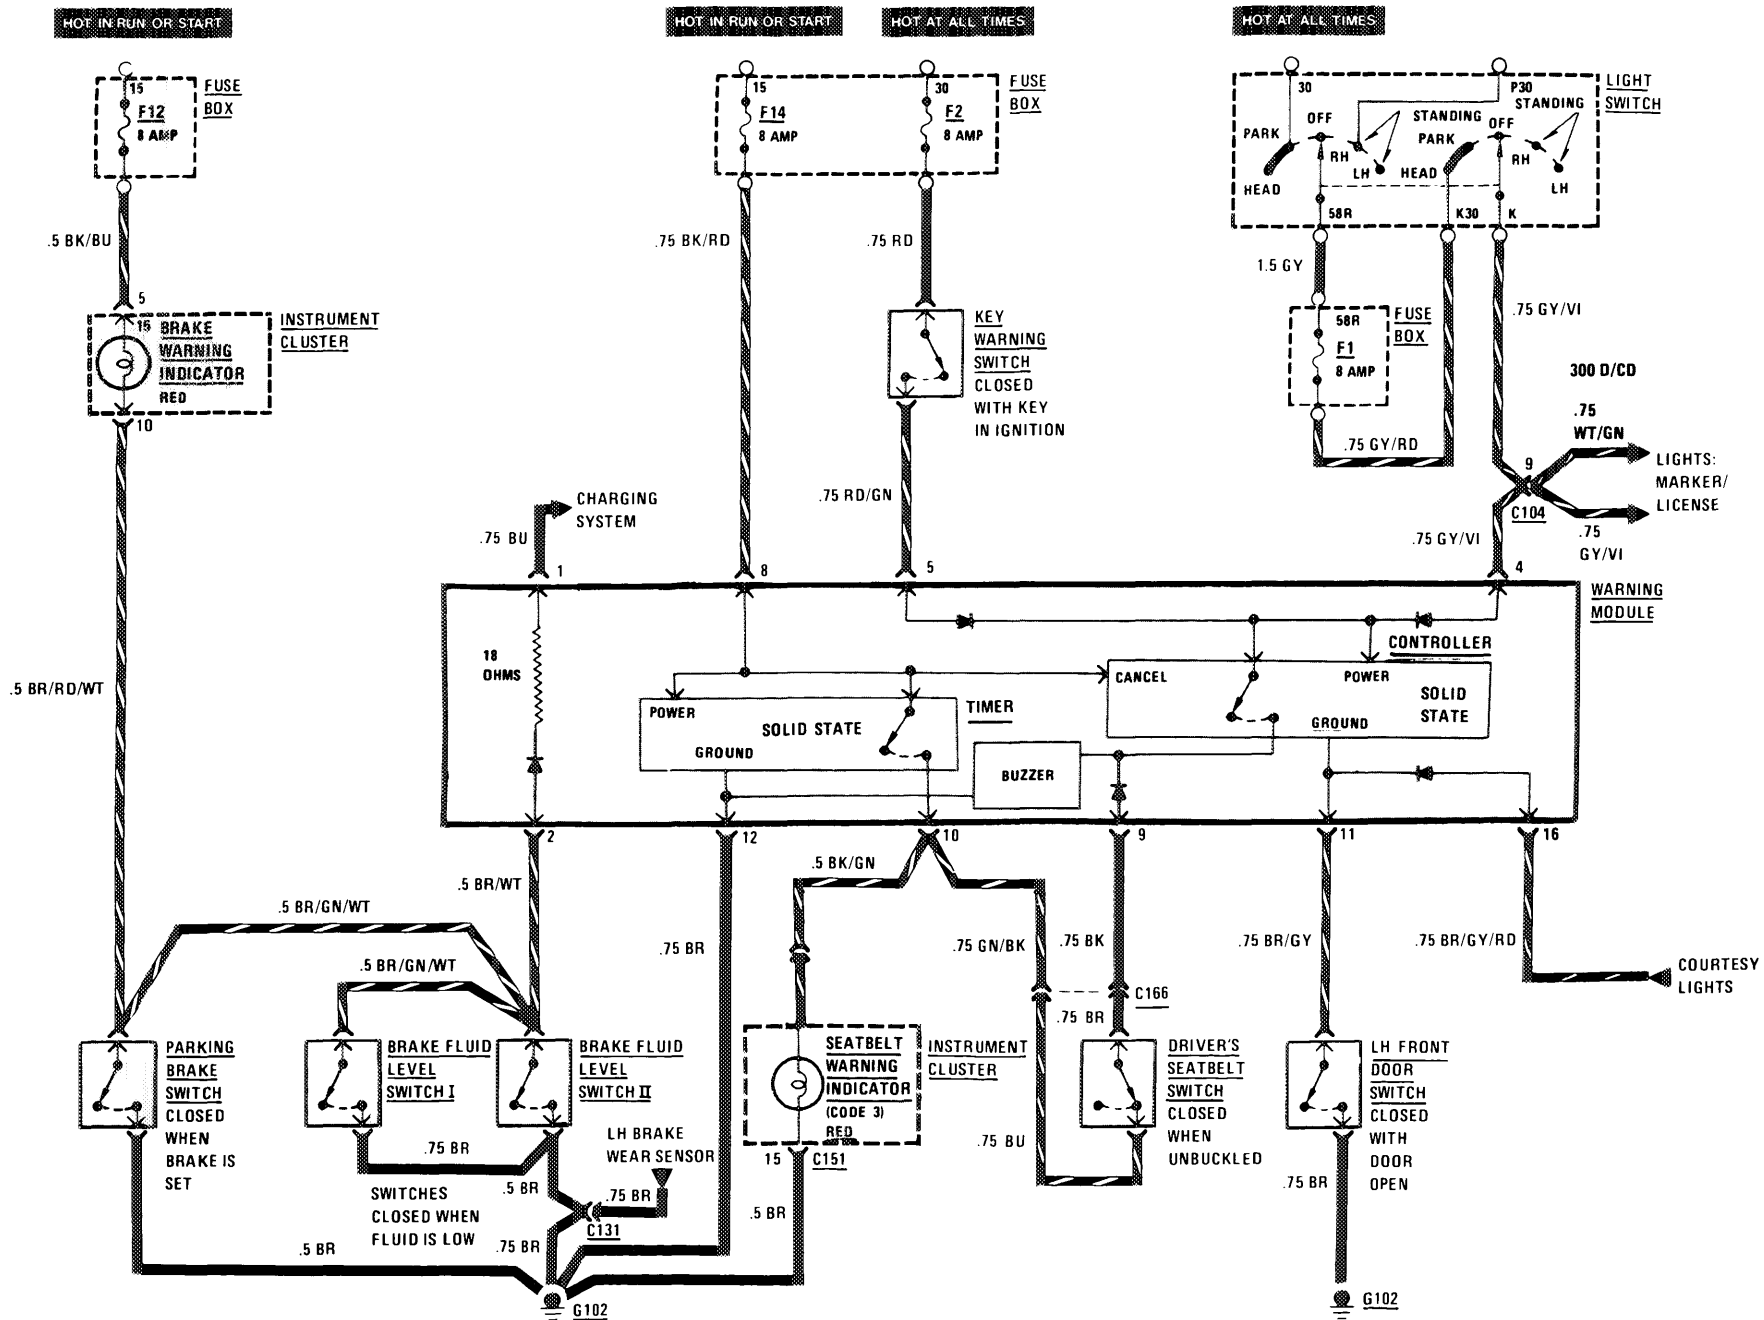

REVISIONS: