


### Removal

---

- 1 Unscrew all fuel connections.
- 2 Remove fuel pump after loosening both fastening nuts.
- 3 Clean fuel pump. Replace suction and pressure valves or replace fuel pump.

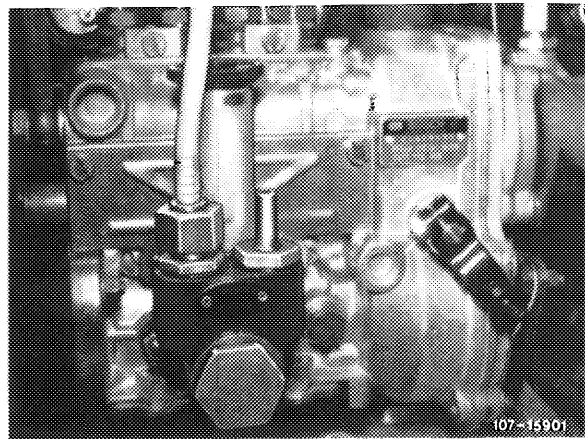

### Installation

---

- 4 Mount fuel pump with new gasket.
- 5 On M-injection pumps with pneumatic governor, correct oil level in injection pump. For this purpose, unscrew filter (2) on injection pump and add engine oil up to check bore (1).
- 6 Mount fuel connections and vent injection system (07.1–140).
- 7 Check fuel pump (07.1–145).

