

## 07.1–220 Replacement of vacuum control unit at injection pump


---

Job no. of flat rates or standard texts and flat rates data 07–8621.

### Removal

---

- 1 Unscrew vacuum control valve on injection pump.
- 2 Remove vacuum control unit after loosening 4 fastening screws.

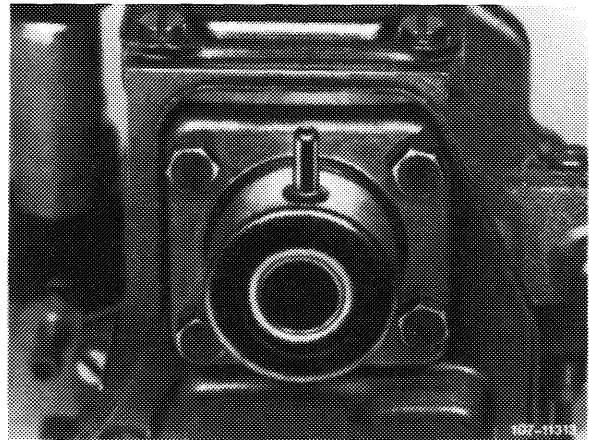


### Installation

---

- 3 Bolt vacuum control unit to governor cover, using 2 new gaskets (1).

Make sure that connecting rod of vacuum control unit latches onto control rod.

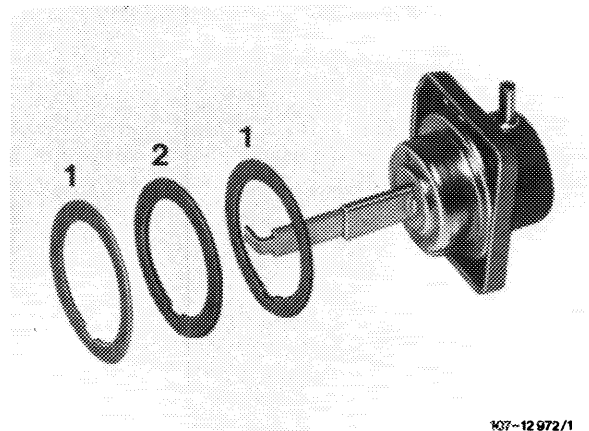

- 1 Gasket
- 2 Steel ring

107-12 972/1