


A. Models 107, 114, 115, 116 and 123

The steel plate wheel cover (5) is fastened by means of four holding springs (4) on steel plate and light alloy rim.


- 1 Rim
- 2 Balancing weight
- 3 Holding spring for balancing weight
- 4 Holding spring for wheel cover
- 5 Wheel cover

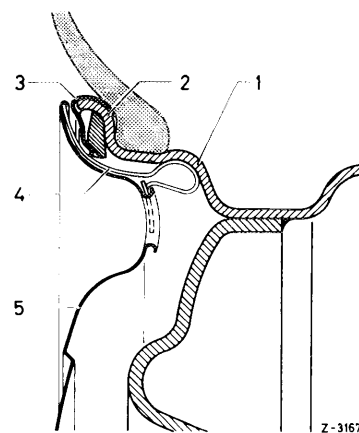

Removing wheel cover

Pull off wheel cover manually or by lever action by means of combination wrench for wheel assembly or push off outside on rim flange by means of a screwdriver.

- 1 Combination wrench for wheel assembly

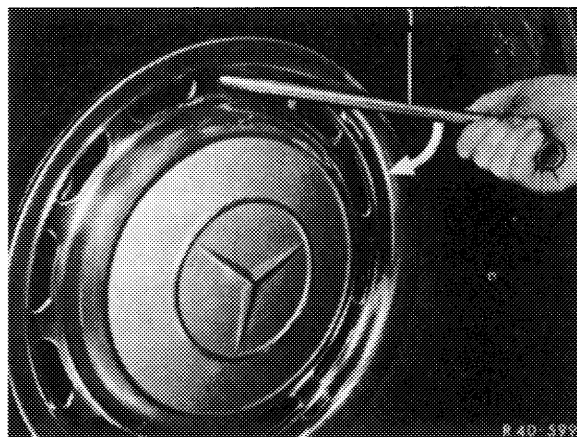

Mounting wheel cover

When mounting wheel cover, position cover against rim in such a manner that the valve is between two holding springs.

Then push-on ornamental wheel cover at first **vertically** to valve (*refer to arrow*) and then push-on at opposite side.

