




## Note

When cleaning brake disks while driving, always provide only one axle with cleaning pads. Do not operate brake in jerks, since the emery cloth might then be torn out of cleaning pads.

Owing to their low speed and the resulting insufficient cleaning effect, drum-type and brake dynamometers are not suitable for this purpose.

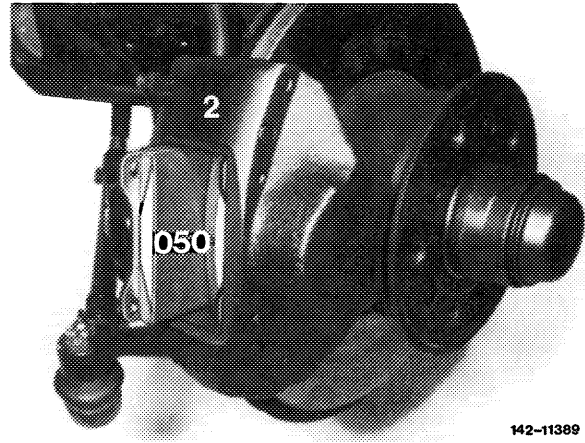

142-11389


## Front axle

- 1 Remove brake pads (42-160).
- 2 Install cleaning pads 115 589 00 28 00, 116 589 00 28 00 and 107 589 00 28 00 (050) according to brake caliper version, on front axle only.
- 3 Clean brake disks.
  - a) Drive the respective wheel by means of a suitable drive unit (e.g. Finish-Balancer made by Hofmann) and force the cleaning pads several times for a short moment against brake disk under slight foot pressure against brake pedal.
  - b) Drive vehicle at a speed of 30 km/h for a distance of 300 meters while forcing the cleaning pads for a short moment against brake disks at a slight foot pressure of approx. 50 N against brake pedal.
- 4 Remove cleaning pads.
- 5 Install brake pads (42-160).

## Rear axle

- 1 Remove brake pads (42-160).
- 2 Install cleaning pads 115 589 01 28 00 (050) only on rear axle.

Drive vehicle at a speed of approx. 30 km/h for a distance of 300 meters while forcing the cleaning pads for a short moment against brake disks at a slight foot pressure of approx. 50 N against brake pedal.

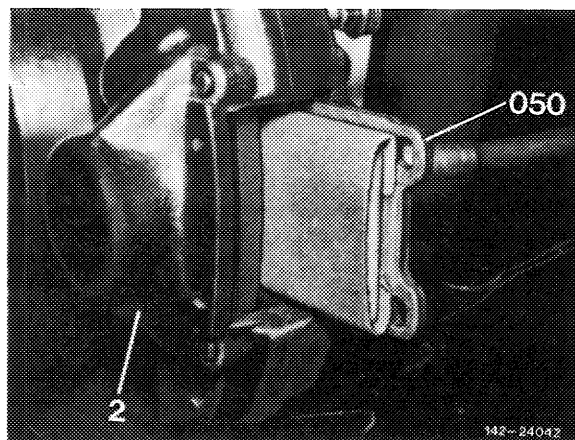

142-24042

**Attention!**

With the vehicle jacked up, be sure that the rear wheels are not driven by the engine or by means of another drive unit.

3 Remove cleaning pads.

4 Install brake pads (42–160).