


Attention!

Remove and install electronic control unit only with ignition switched off.

Removal

Note: The electronic control unit is located below leg support on side of front passenger.

- 1 Remove floor mat.
- 2 Loosen fastening screw on leg support and remove leg support (70).
- 3 Unscrew fastening screw (71), loosen clamp (23).

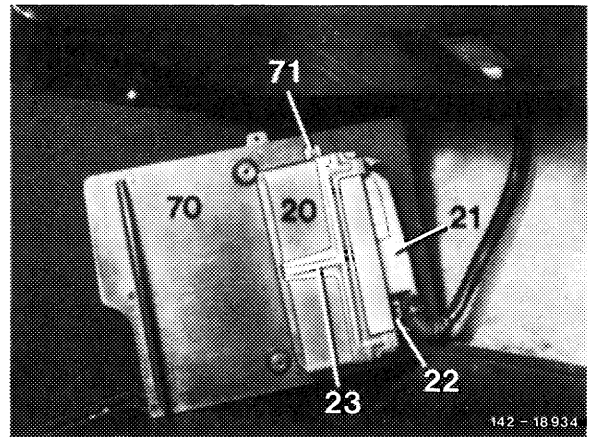

- 4 Remove electronic control unit (20) from leg support (70).
- 5 Actuate lock (22) and pull plug (21) from electronic control unit.



Installation

- 6 Mount plug (21) on electronic control unit (20). Make sure that plug engages audibly in lock (22).
- 7 Fasten electronic control unit with clamp (23) to leg support (70).
- 8 Install leg support. Put in floor mat.
- 9 Complete test program (42-720).

