

## 54-310 Removal and installation of combination switch

---

### Note


---

Steering wheel need not be removed for removal of combination switch.

### Removal


---

- 1 Remove rubber sleeve on combination switch.
- 2 Unscrew fastening screws (1).

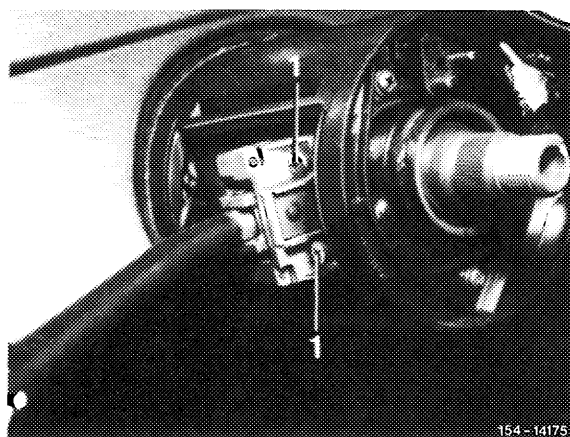

- 3 Slightly pull out combination switch, loosen screws (1) for cable connection of twin carbon contacts and pull out cable (2).

- 4 Remove cover under instrument panel left (68-150).

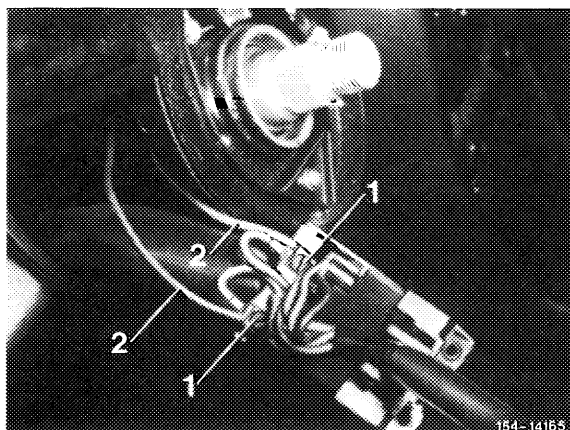

- 5 Pull off 14-point plug (arrow) and remove combination switch.

### Installation

---

- 6 For installation proceed vice versa.

