


## 54-391 Renewing bulb for ashtray light


---

1 Take ashtray out of holder.

2 Unclip ashtray top.

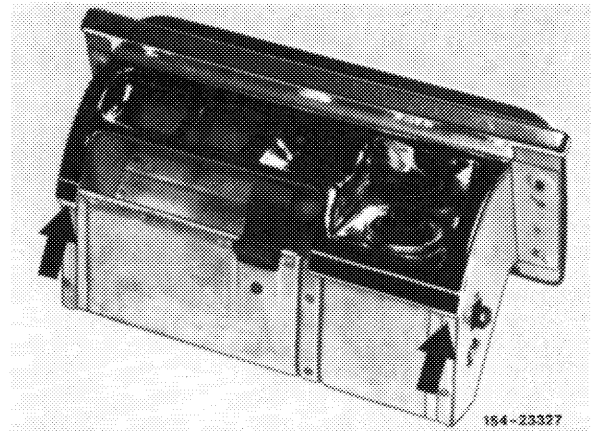

3 Slightly pull out ashtray top under covering strip and remove in upward direction.

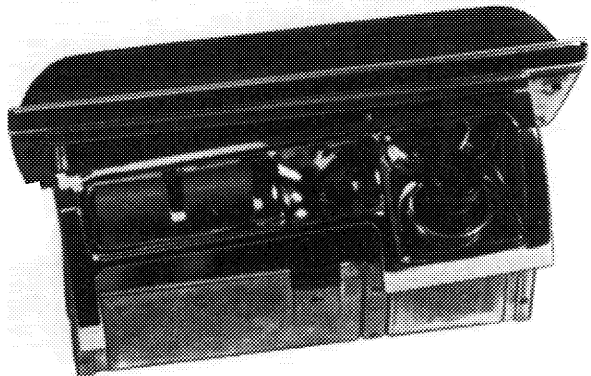

4 Pull socket with bulb out of blade receptable contact and exchange bulb.

5 For assembly of ashtray proceed vice versa.

