



Removal

- 1 For righthand cover only:

Remove glovebox (68–140) and loosen holder (5) for righthand air duct on cover.

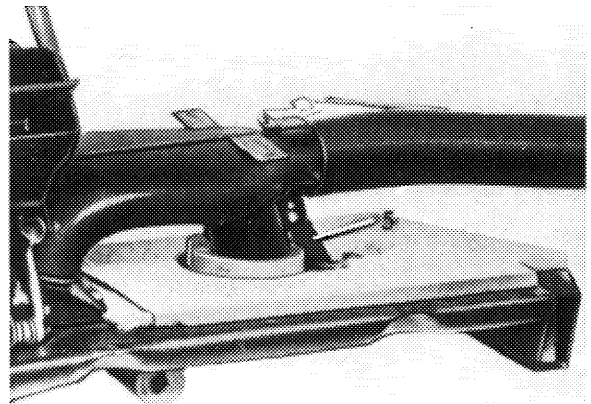

- 2 Remove legroom light (1) and pull plug.
- 3 Loosen snap fasteners (2).
- 4 Remove screw (3) on heater box.
- 5 Remove both screws (4) and remove cover.

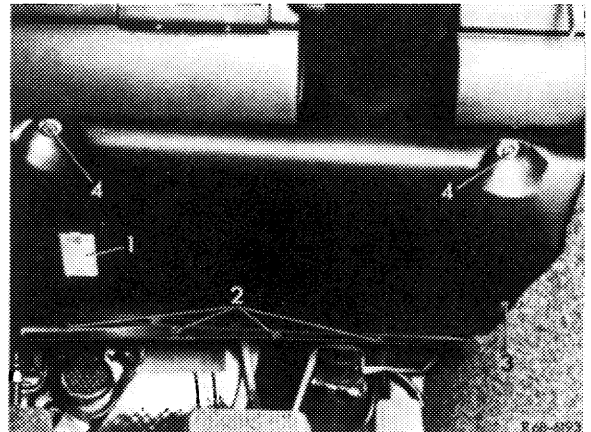

Installation

- 6 For installation proceed vice versa.

Note: The cover at left and right under instrument panel serves as an air duct between the heater box and the floor lining, which is designed as an air duct for the side windows.

Complete all installation jobs with the required care.